



# Manual 2-Way HDMI Selector Instruction Manual

SWM2X



# Contents

Important Safety Instructions .....	2
Features .....	2
Features and Controls .....	2
Operation .....	3
Guarantee .....	4

## Important Safety Instructions


Read all instructions before use and keep for future reference.

1. Naked flame sources, such as lighted candles, should not be placed on or near the apparatus.
2. Do not expose the unit to dripping or splashing liquids or place objects filled with liquids, such as vases, to be placed on or near the unit.
3. The unit should not be exposed to direct sunlight, very high or low temperatures, moisture, vibrations or placed in dusty environment.
4. Do not use abrasives, benzene, thinners or other solvents to clean the surface of the unit. To clean, wipe with a mild nonabrasive detergent and a clean soft cloth.
5. This product must not be disposed of with household waste.  
Please recycle where facilities exist. Check with your Local Authority for recycling advice. Some of the materials can be reused.
6. For indoor use only
7. Do not remove cover. There are no user replaceable parts inside, refer servicing to qualified service personnel

## Features

- Connects two HD or HD ready video and audio sources such as DVD players and games consoles to an HDMI compatible HDTV, LCD monitor or digital projector.
- The two Inputs are selectable via front panel push buttons
- Maintains 480p, 720p, 1080i and 1080P video formats
- Transmits digital video and audio signals through a single HDMI cable
- Supports HDCP
- HDMI-HDMI cables required for inputs and output - not supplied

# Features and Controls

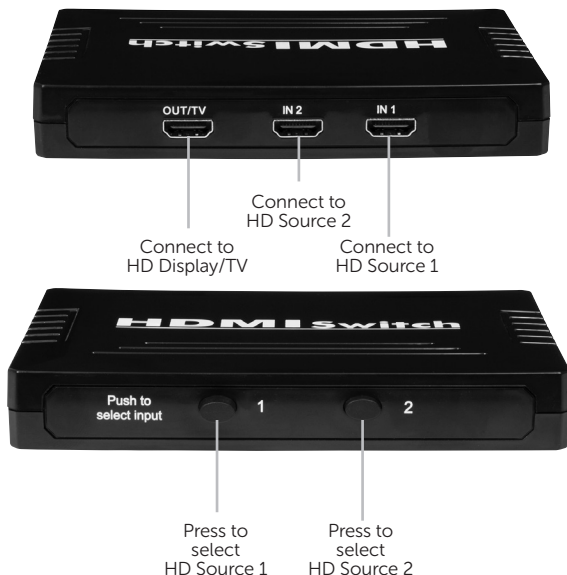

## Operation

1. Connect your HDTV, LCD monitor or digital projector to the "OUT/TV" HDMI socket on the back panel of the switch with an HDMI cable.
2. Connect your HD video and audio sources to the "IN 1" and "IN 2" HDMI sockets on the back panel of the switch with HDMI cables.
3. Switch on display and source equipment and press the buttons on the front panel to select the source you want displayed.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.



# ALBA

## PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be either replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provision:

- The guarantee does not cover accidental damage, misuse, cabinet parts knobs or consumable items.,
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd  
489 - 499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW