
PHOENIX 8 CUBE UNIT

Assembly Instructions - Please keep for future reference

147/5483

157/7130

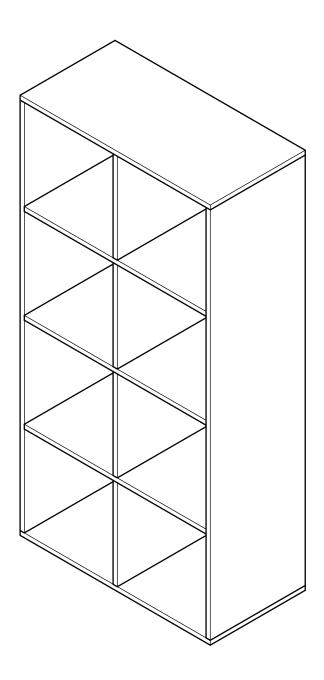

Dimensions

Width - 70cm

Depth - 35.5cm

Height - 140cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not use this item if any components are missing or damaged.

- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Assembly to be carried out by the competent adult only.
- During assembly children should be kept away from the product due to the potential risk of injury.



• We do not recommend the use of power drill/drivers *for inserting screws*.

as this could damage the unit.
Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

- Argos Ltd. MK9 2 NW.
- This product is suitable for children in the age 6 or above.
- Maximum load: 20 kgs.
- Regularly check all fastenings to ensure that they are properly tightened.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Please check you have all the panels listed below

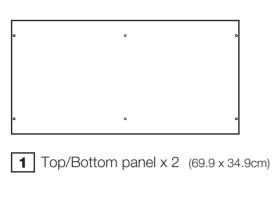

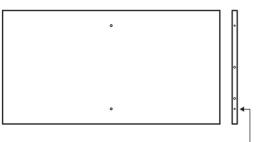




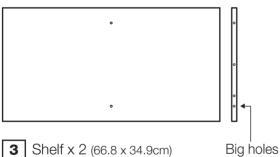


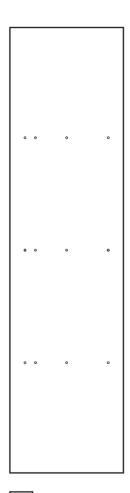

Side panel x 2 (34.9 x 137cm)

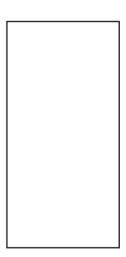

6 Back panel x 4 (34.5 x 69.5cm)

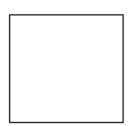

4 Middle support x 4 (33 x 34.9cm)

Components - Fittings

hammer or glue)

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.

A (====================================	B	
30mm Dowel x 24	50mm Dowel x 6	50mm Screw x 12
0	a 0	(This screw is included in the wall strap bag
Screw cover x 8	Nail x 40	Wall strap x 1 ⊕ x 1
(a) (a) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c	(B) (C) Sund	
14mm Screw x 1	Wall plug x 1	



Ruler - Use this ruler to help correctly identify the screws 0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170


Step 1

Attaching middle support panel

Note: It would be useful to ask someone to help you at this stage.


a: Use Dowels **B** to fix Middle supports **4** onto the Shelf **3**.

a:

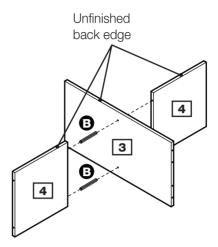


b: Use Dowels **B** to fix Middle supports **4** onto the Middle shelf **2**.

b:

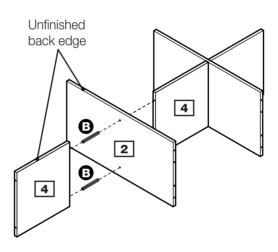

C: Use Dowels 3 to fix Middle supports 4 onto the Shelf 3.

Ci

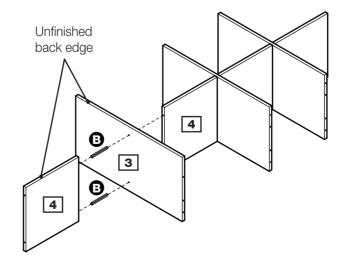


Continued on next page.

Step 1 - continued

d: Insert Dowels A into the Middle shelf 2, shelves 3 and Middle supports 4.

d:

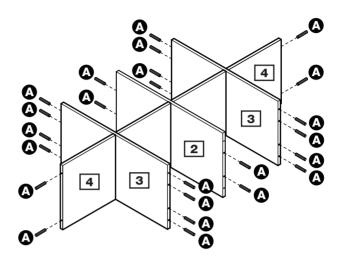


Step 2

Attaching side panels

Use Screws (c) to fix the Side panels (5) onto the unit.

Use Screw covers **D** to cover the screw heads.

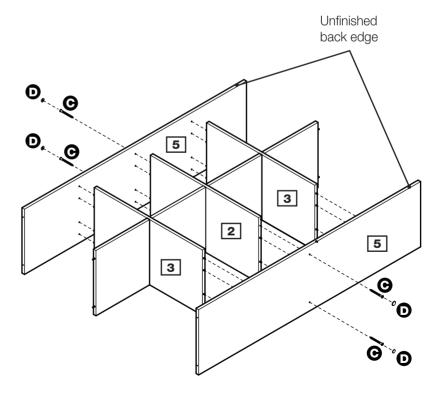

Step 3

Attaching top and bottom panels

Use Screws **©** to fix the Top and Bottom panels **1** onto the unit.

Use Screw covers **D** to cover the screw heads.


With help, carefully stand the unit upright.



Warning:

The unit is heavy.

Lift with care.

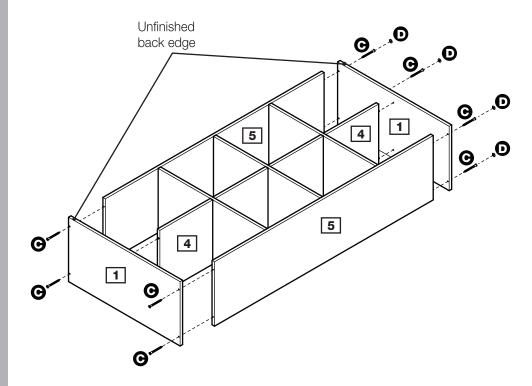

Step 4


Fixing back panel

Use Nails to fix the Back panels onto the unit.



Important:

The unit **MUST** be 'square' when the back is attached.

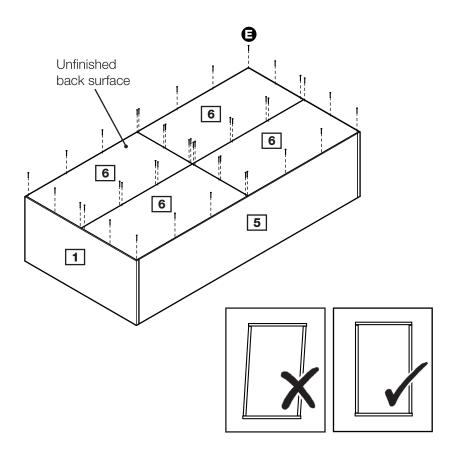

Step 5

Fixing to wall

It is recommended that the unit is fixed to a wall.

Fix Wall strap • to top panel using Screw •.

With help, move the unit into position.



Warning:
The unit is
heavy.
Lift with care.

Mark fixing hole on wall and remove unit.

Drill a hole and insert Wall pulg .




Warning: Before drilling, check wall for hidden pipes

and cables.

Reposition the unit and fix wall strap using Screw **•**.

Assembly is complete.

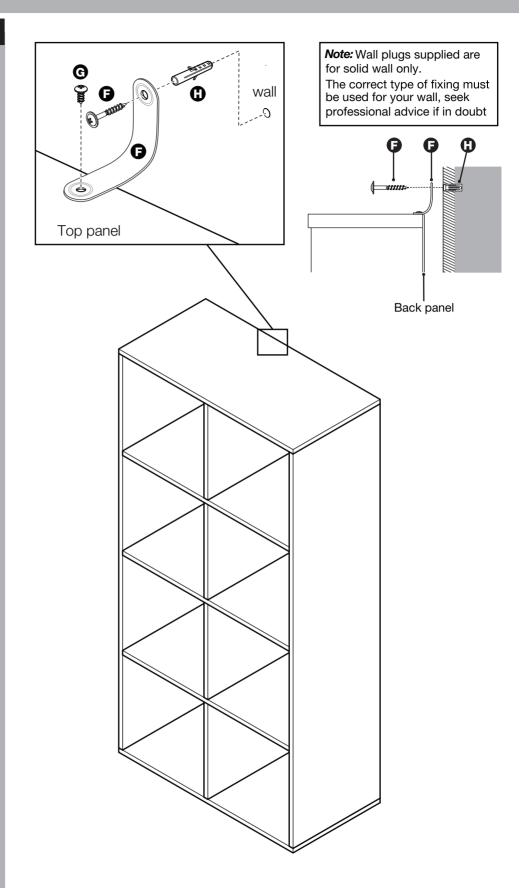

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- **2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- **5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

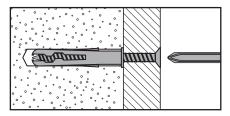


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

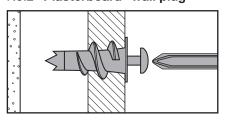


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

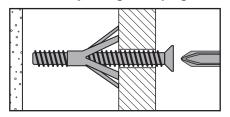


For use with plasterboard partitions or hollow wooden doors.

 No.4 "Cavity Fixing-Heavy Duty" wall plug




For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

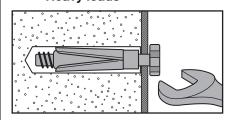

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.



Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.