


Babystart Pushchair With Uv30

User Guide

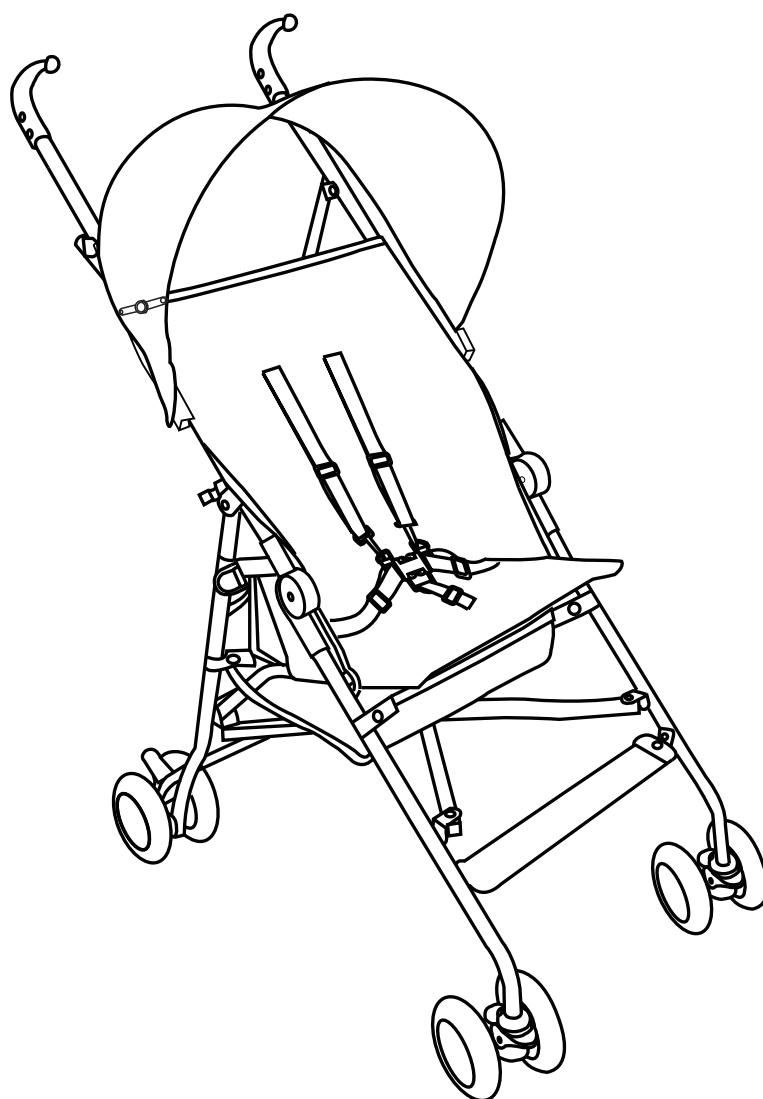

Helpline: 03456 400 800




Parts


If you have damaged or missing parts,
call the **Customer Helpline: 03456 400 800**

Please check you have all the parts listed below:

stroller X 1

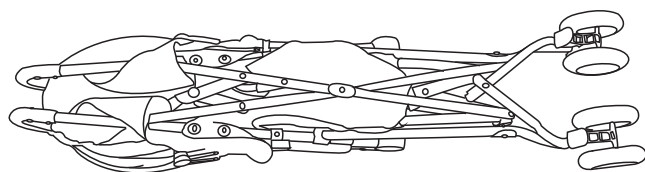

Rain cover X 1

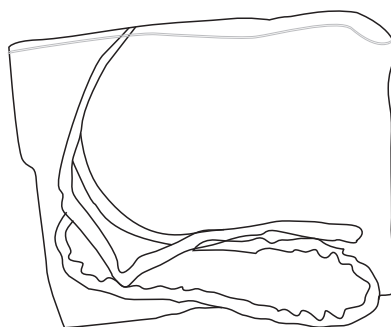

User instructions

IMPORTANT: KEEP FOR FUTURE REFERENCE


Thank you for choosing our product .Please always read all the instructions provided carefully before use and remember, Your child's safety may be affected if you do not follow these instructions. The stroller is suitable for 7-36 months old children.The max load of the stroller is 15kg, never overloaded.

- **WARNING:** Do not use if any part is broken,torn or missing .
- **WARNING:** Use a harness as soon as your child can sit unaided.
- **WARNING:** It may be danagerous to leave your child unattended.
- **WARNING:** This seat unit is not suitable for children under 6 months.
- **WARNING:** Avoid placing the stroller near naked heat sources such as electric bar fires, gas fires ,etc. or where a child could gain access to any other kinds of hazard.
- **WARNING:** Always use the crotch strap in combination with the waist belt.
- **WARNING:** Always use the harness provided and make sure the harness is correctly fitted.
- **WARNING:** Any load attached to the handle affects the stability of the stroller.
- **WARNING:** Ensure all locking devices are engaged before use.
- **WARNING:** This product is not suitable for running or skating .
- **WARNING:** To avoid injury ensure that your child is kept away when unfolding and folding this product.
- **WARNING:** Do not let your child play with this product.
- **WARNING:** An instruction that the parking device shall be engaged when placing and removing the children.
- **WARNING:** Only replacement parts supplied or recommended by the manufacturer/distributor shall be used.

Assembly Instructions

Step 1


- 1 Locate the locking catch on the right side of the stroller and release it.
- 2 Repeat on both sides and open out the stroller by lifting the handles upwards.
- 3 Using foot, push the rear locking catch down fully to engage the primary lock.
- 4 Place the stroller on a flat surface and ensure that the stroller moves freely .

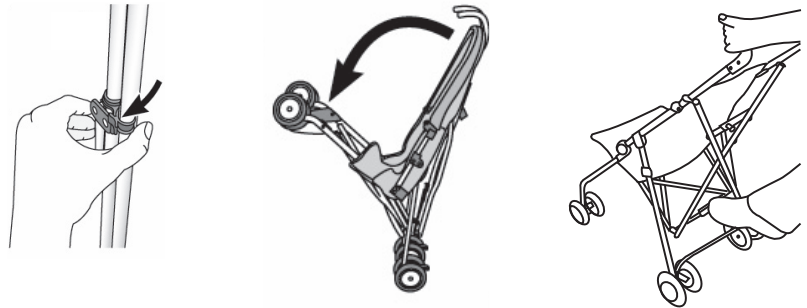

Step 2

To open the hood


- 1 Your hood can be opened or closed by lowering or raising canopy buckle.

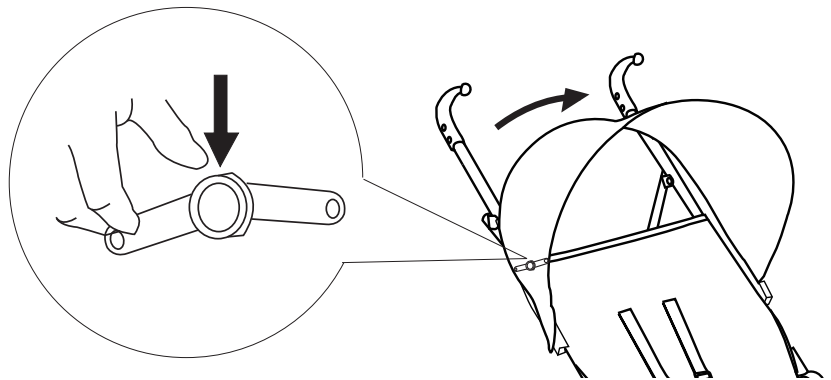

Step 3

To operate brakes


- 1 Your Deluxe stroller has a parking brake. To engage brakes simply press down on the link brake located on the rear wheels with foot.
- 2 To release brakes simply lift the link brake located on rear wheels.

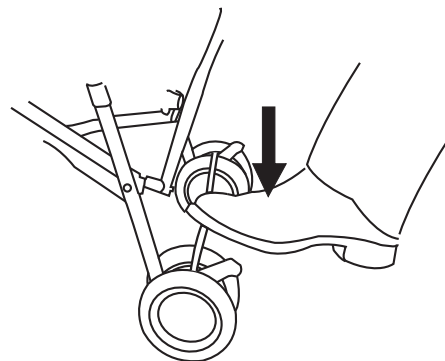

Step 4

front swivel locks

- 1 Your Deluxe stroller has front swivel wheels .
To lock swivels, align front wheels and press down on locking levers.
- 2 To unlock swivels, raise locking levers.

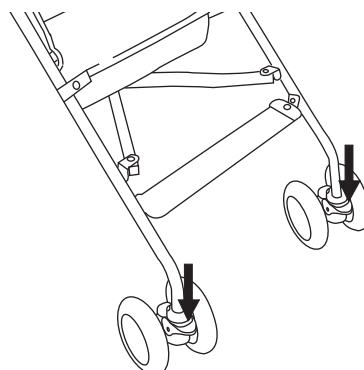


Assembly Instructions

Step 5

To operate harness


- 1 To fit harness insert both waist clips into clasp (D). Listen for the “click”.
- 2 To release the harness press the top and the bottom of the waist clips and pull apart .The shoulder straps can be unhooked from the waist clips if required.
- 3 Your harness is fully adjusted by moving the slide A,B,C, to make fitting easy .

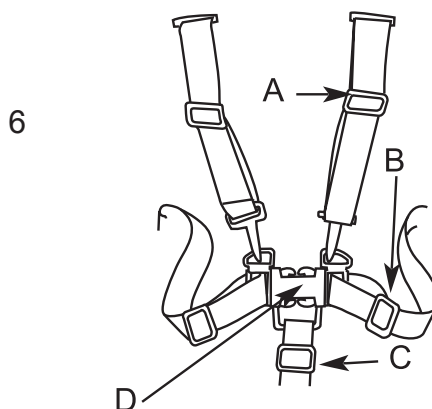

Step 6

To fold the stroller


- 1 See pic A, locate the rear locking catch(1), To unlock please push lever in and up with fingers. Then locate the second lock(2) and lift upwards gently by hands until the lock has released .
- 2 Grip handles and push forward on stroller(See pic B) .Compress folded stroller and ensure the locking catch (located the right side of the stroller) has engaged .

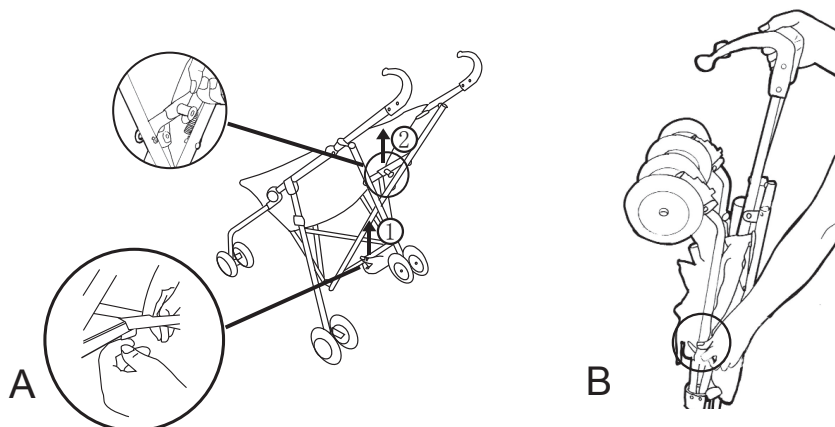

Step 7

To fit the raincover

Place the raincover over hood front.Fasten the velcro straps around the front legs to secure .

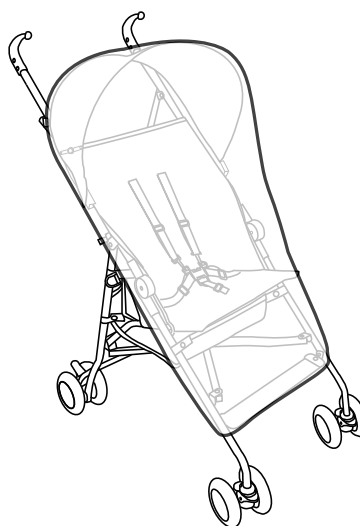

Care and Maintenance

General

This pushchair was designed and manufactured with quality materials and craftsmanship.

Always use the safety harness.

Always check your pushchair for bullet points.

Lubricate moving parts regularly, especially the wheels, and lower parts of the chassis that tend to collect dirt.

Inspect regularly for:

- Worn parts, torn materials or stitching .
- Loose screws , bent or broken frame parts .
- Broken, damaged or missing parts.

Should any of the above be evident do not use and contact the Helpline:03456 400 800 for advice.

Care and Maintenance:

Fabric parts may be cleaned in accordance with the fabric care labels. Do not machine wash.

Seat: Sponge clean only

Canopy/Basket:Hand wash only.

Do not leave the stroller exposed to heat i.e. by a radiator or in direct sunlight.

If the stroller chassis parts have been exposed to salt water we recommend that they be rinsed down with fresh (tap) water as soon as possible afterwards.

Do not fold or store the product while wet and never store in a damp environment as this can cause mildew to form.

If you need help or have damaged or missing parts, call the **Customer Helpline:03456 400 800**

This pushchair has been designed to comply with the EN1888:2012.

Country of origin: China

Argos LTD, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW