
Denbigh Desk

Assembly Instructions - Please keep for future reference

170/5720

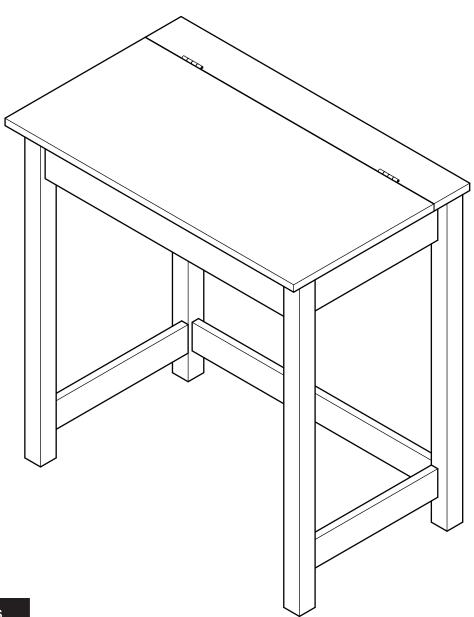

Dimensions

Width - 70cm

Depth - 43cm

Height - 72cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not use this item if any components are missing or damaged.

• Do not stand on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers *for inserting screws,*

as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the panels listed below

•	
 Large top panel (70 x 34cm) 	
2 Small top panel (70 x 8.6cm)	6 Right side panel (39.6 x 70.5cm)
o o 3 Bottom panel (59 x 34.2cm)	Pilot holes for guidance only
	7 Left side panel (39.6 x 70.5cm)
4 Front panel (59 x 10.5cm)	8 Bottom support (59 x 6cm)
0 0	
0 0	

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

	₿ ♦=>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>	C D DIIIIII
30mm Dowel x 2	39mm Locking pin x 6	40mm Screw x 6
		6
12mm Locking nut x 2	65mm Screw x 12	Screw cover x 16
G		
Spring hinge x 1	14mm Screw x 4	15mm Locking nut x 4
18mm Screw x 8	Hinge x 2	

Tools required



Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170


Step 1

Fitting dowels and locking pins a:


a: Insert Dowels (A) into the Bottom panel (3) and Back panel (5).

 


Note: Insert locking pins as far as shown. **Do not over tighten.**

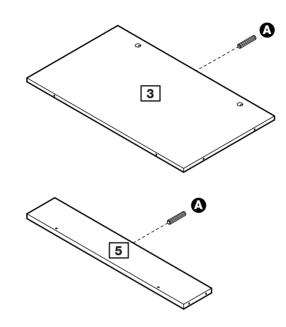



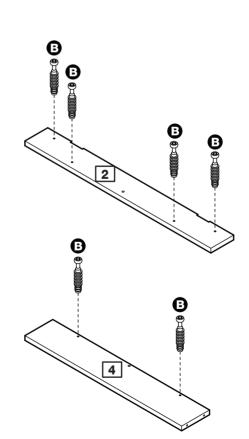




Step 2

Attaching bottom panel

a: Use Screws **O** to fix Back panel **5** onto the Bottom panel **3**. a:

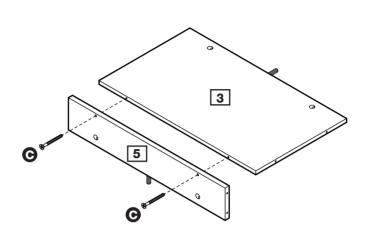


b: Then carefully locate the Front panel **4** onto the unit.

Insert 2 Locking nuts D into the unit.

Use a screwdriver to turn Locking nuts O clockwise to lock.



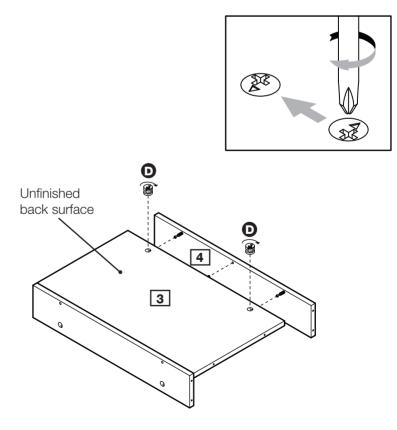


Step 3

Attaching side panels and bottom support

a: Use Screws **b** (65mm) and **c** (40mm) to fix Right side panel **6** onto the unit.


Use Screws (to fix Bottom support (8) onto the Right side panel (6) .

Use Screw covers **F** to cover the screw heads.

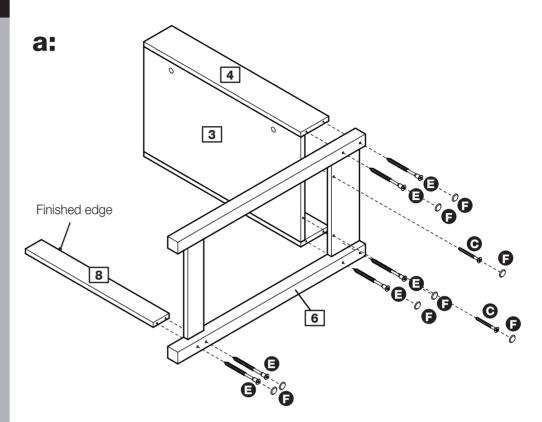




Use Screw covers **P** to cover the screw heads.

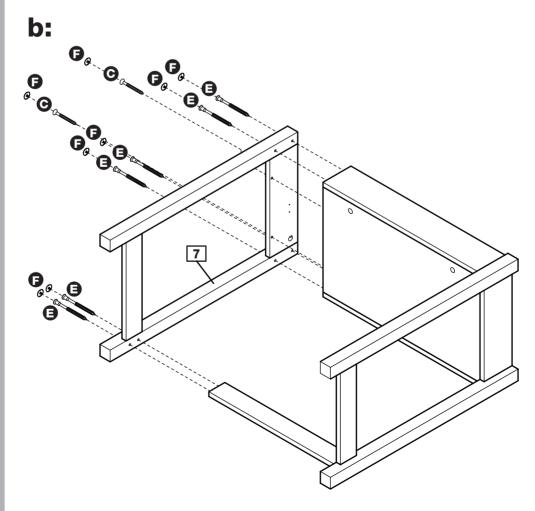

Step 4

Fitting hinges

Use Screws 🖰 to fix Spring hinge G onto the Left side panel 7.

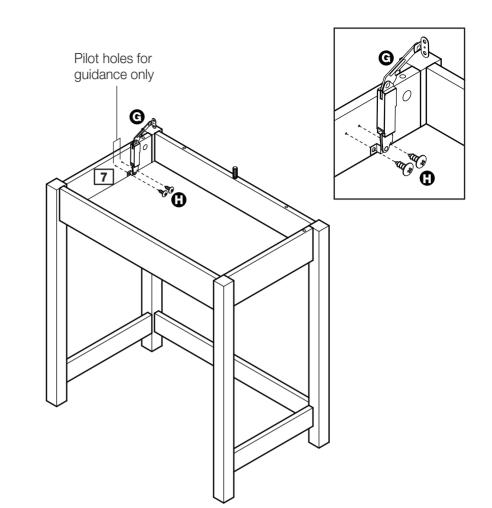


Step 5

Attaching top panels


a: Use Screws **J** to fix Hinges **C** onto the Large top panel **1**.




a:

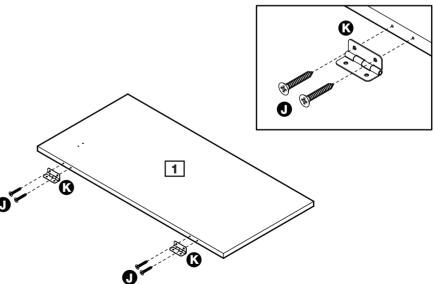

Continued on next page.

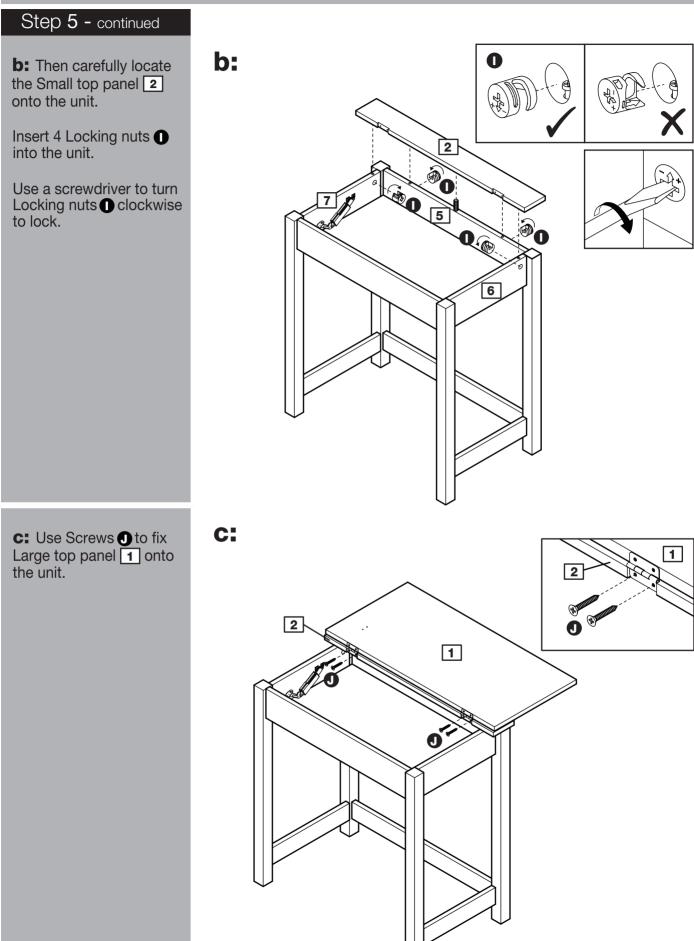

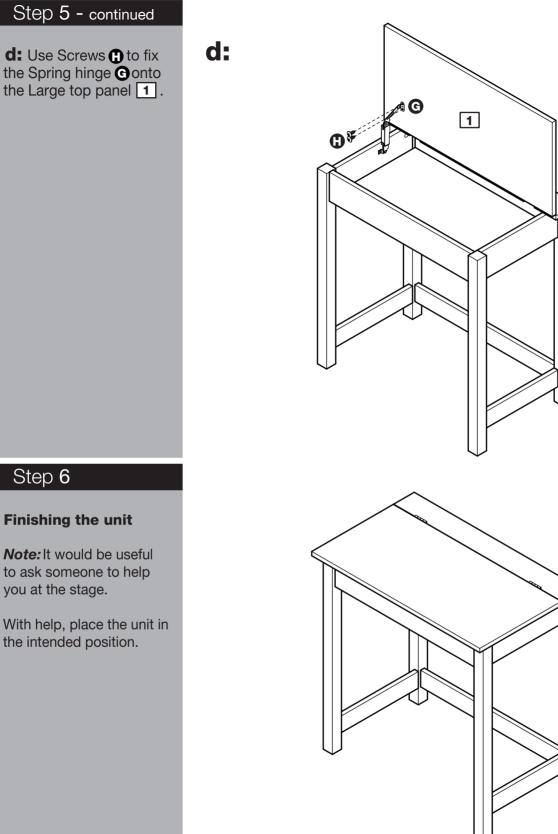

Assembly is complete.

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800