
Josephine 5ft Frame

Assembly Instructions - Please keep for future reference

247/9749

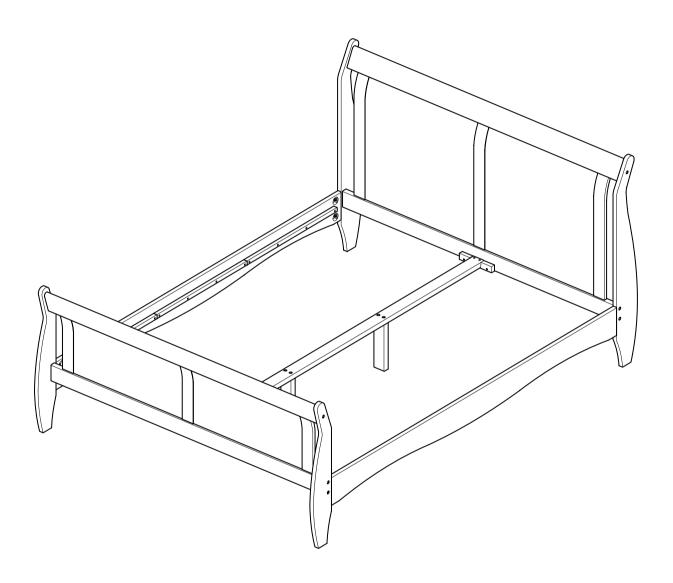

Dimensions

Width - 156cm Depth - 226cm Height - 102cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 640 0800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

- Improper use of electrical tools will crack the components.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the Customer Helpline: Argos = 0345 640 0800

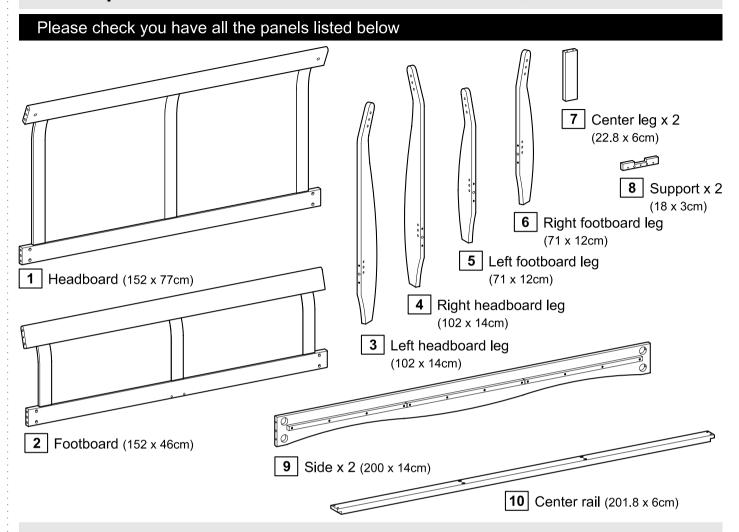


Components - Key Diagram

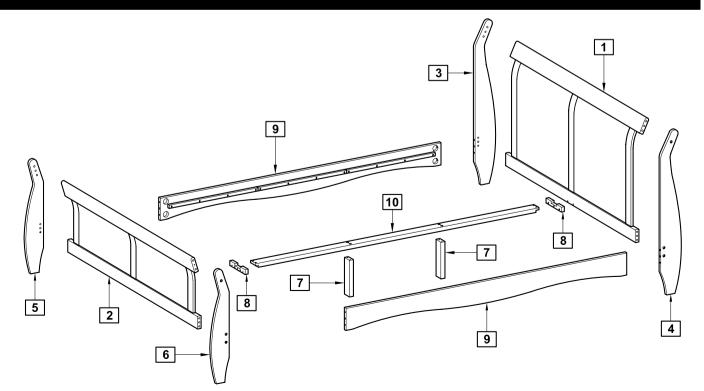



Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

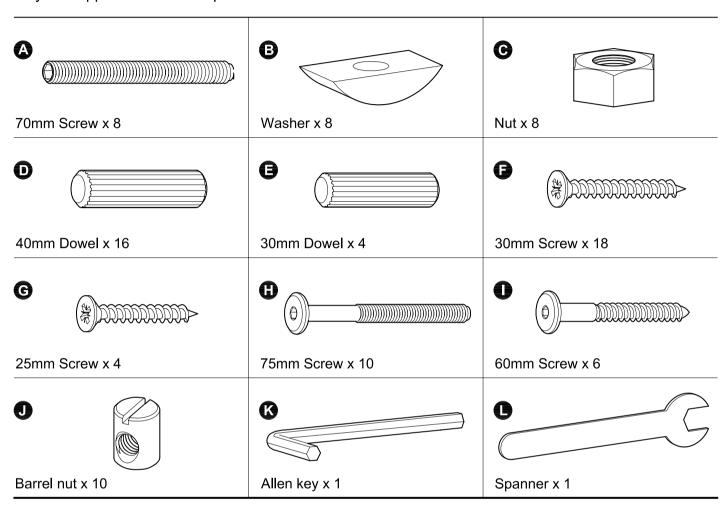

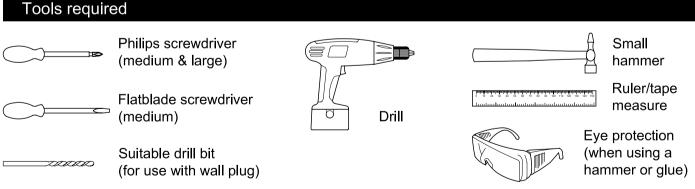

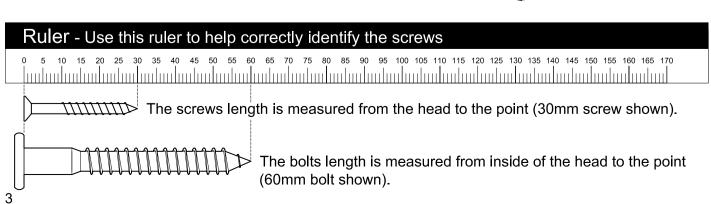

Step 1


Inserting the dowels to the sides.

Insert the dowels **①** into the holes indicated on the sides **③**.

Step 2

Inserting the dowels to the headboard and footboard.

Insert the dowels **①** into the holes indicated on the headboard **1** and the footboard **2**.

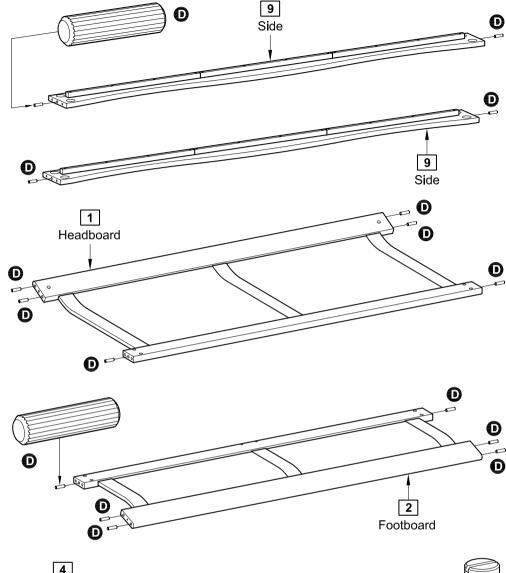


Step 3

Mounting the headboard legs to the headboard.

Place the barrel nuts onto the holes indicated on the headboard 1 and using screws to fix the right headboard leg 4 and the left headboard leg 3 onto the headboard 1, using allen key to tighten it.

Note the holes of barrel nuts pointing towards to the screws.

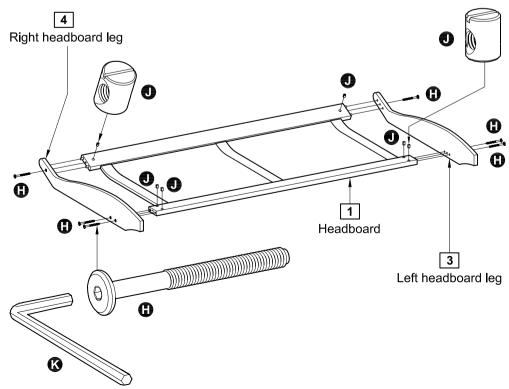


Step 4

Mounting the footboard legs to the footboard.

Place the barrel nuts onto the holes indicated on the footboard 2 and using screws and screws to fix the left footboard leg 5 and the right footboard leg 6 onto the footboard 2, using allen key to tighten it.

Note the holes of barrel nuts pointing towards to the screws.

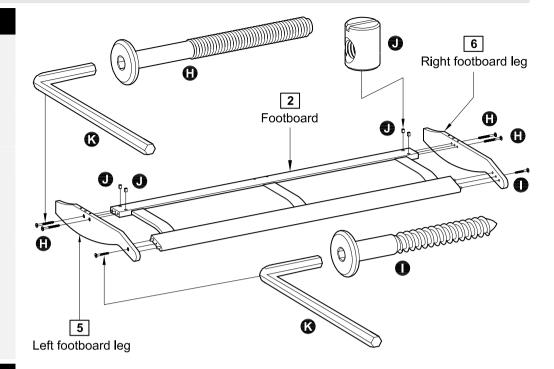


Step 5

Assembly the supports to the headboard and the footboard.

Insert the dowels into the holes indicated on the headboard and the footboard 2.

Attach the supports 8 to the headboard 1 and the footboard 2 using the screws 6.

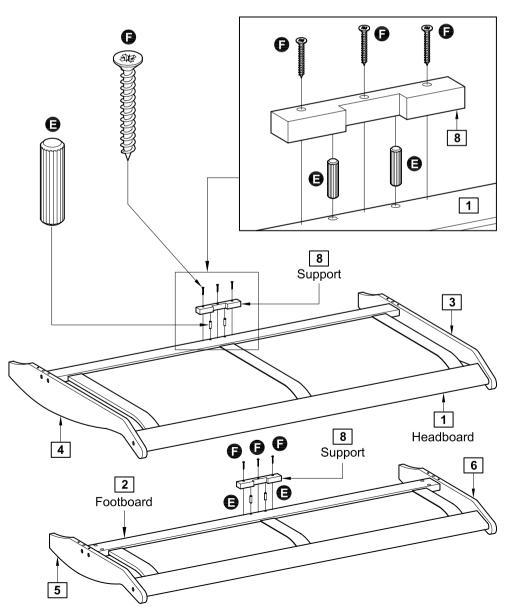

Step 6

Mounting the screws to the headboard legs and the footboard legs.

Mounting the screws (A) into the holes indicated on the headboard legs (3) and (4) and the footboard legs (5) and (6), using the allen key (6).

Note: Please make sure the length of screw **A** after tightening to the leg should remain 47 - 49 mm.

Step 7


Assembly the headboard legs and the footboard legs to the sides.

Fit the headboard legs 3,
4 and the footboard legs
5,6 into the holes
indicated on the sides 9.

Place the washers **3** onto the holes indicated on the sides **9**.

Using nuts **(G)** and spanner **(D)** to fix the headboard and footboard to the sides **(9)**.

Again please note the holes of nuts pointing towards to the screws.

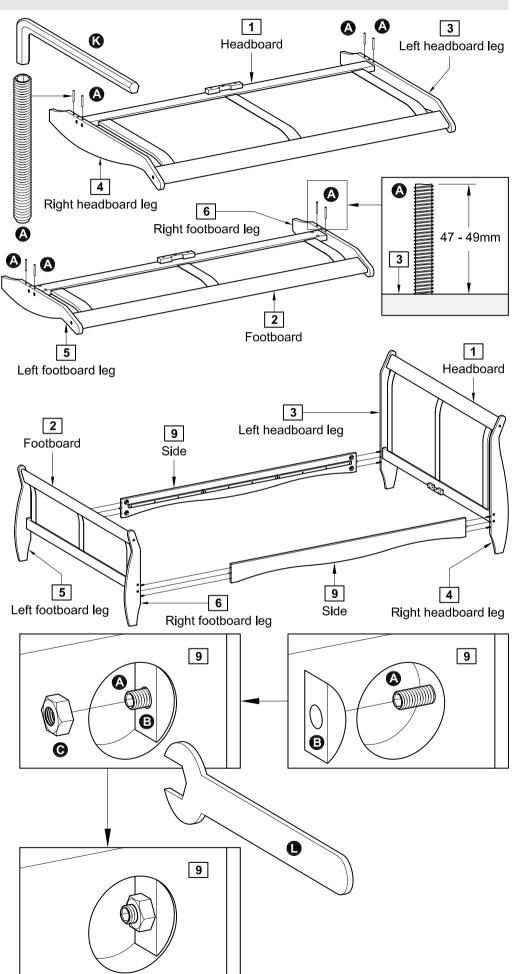

Step 8

Mounting the center legs onto the center rail.


Attach the center legs 7 onto the center rail 10.

Fix the center legs using screws and allen key through the holes indicated.

Step 9

Attach the center rail to the supports.

Attach the center rail 10 to the supports 8 using the screws **6**.

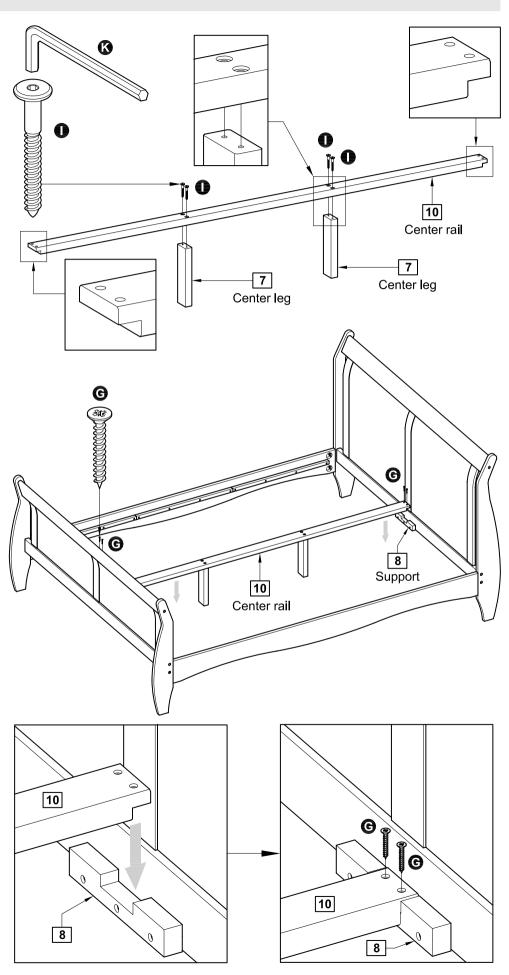

Step 10

Additional step to fix the slats.


Note: The slats are supplied separately.


Spreading the slats evenly onto the bed frame.

Fix the slats to the slatholders using screws

6.

Watch out! The screws attach the slatholders to the sides never collide to the screws that fix the slats to the slatholders.

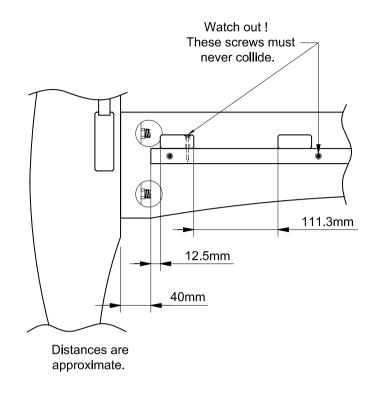

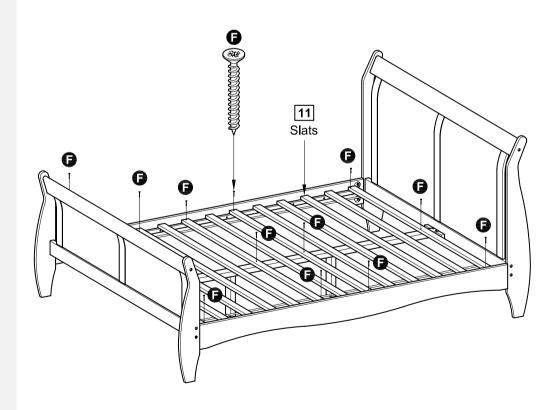

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline**: **Argos = 0345 640 0800**

Dear Customer.

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is place in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.

Any flexing that has occurred during transport will re-correct it self once this product is correctly assembled.

Tighten all joints of the furniture after six months.

Please keep these instructions in a safe place for future use.