 


# avignon 4 drawer chest

Assembly Instructions - Please keep for future reference

226/4394

255/6806

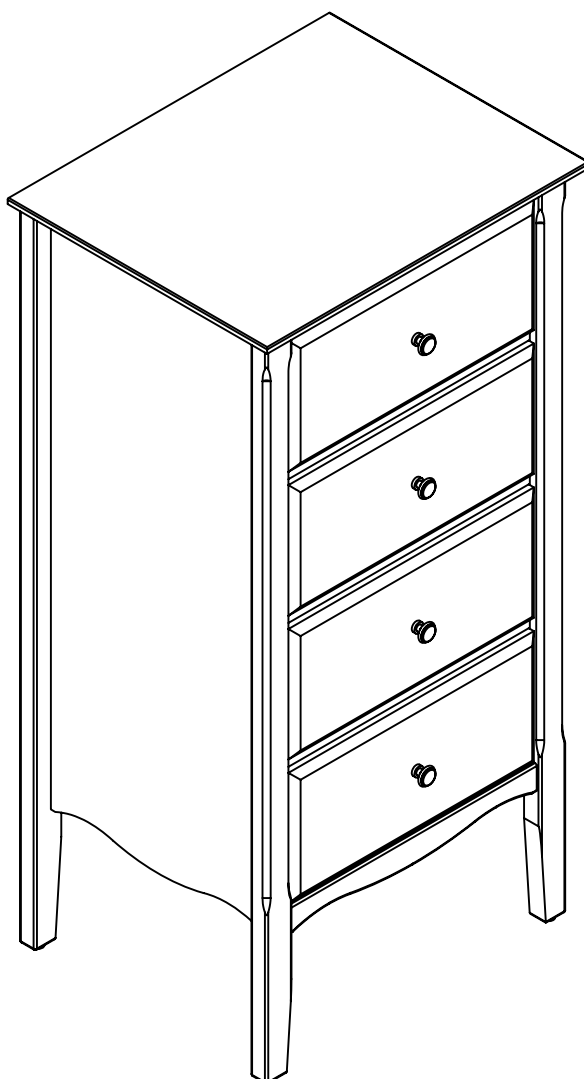

## Dimensions

Width - 56cm  
Depth - 45cm  
Height - 112.7cm

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the  
**Customer Helpline: Argos = 0345 6400 800**



# Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

 
- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

**Note:** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you have damaged or missing components, call the  
Customer Helpline: Argos = 0345 6400 800


Please check you have all the panels listed below

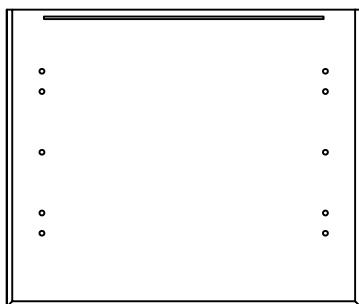


**1** Top ×1 (56 × 45cm)

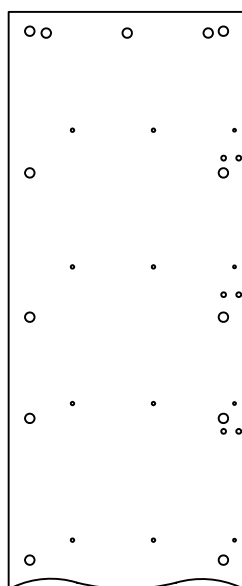 

 
**2** Side panel, right ×1  
(91.2 × 37.3cm)

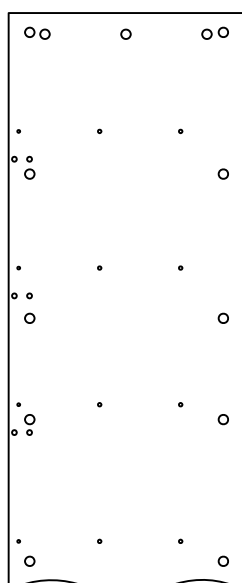

 
**3** Side panel, left ×1  
(91.2 × 37.3cm)




**4** Back leg, left ×1 (110.9 × 4.5cm)

 

 
**5** Front leg, left ×1 (110.9 × 4.5cm)



 
**6** Back leg, Right ×1 (110.9 × 4.5cm)



 
**7** Front leg, Right ×1 (110.9 × 4.5cm)




**12** Back panel ×1 (86.3 × 44.1cm)

 


**8** Cross bar, front x1 (43 × 2.4cm)

 

 
**9** Cross bar, front x3 (43 × 5.7 × 2.8cm)



 
**10** Cross bar, back x1 (43 × 5.7 × 1.8cm)



**11** Cross bar, front ×1 (43 × 4.5cm)

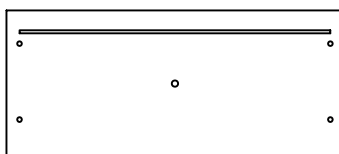 

**13** Drawer front ×4 (42.6 × 19.6cm)

 


**14** Drawer back ×4 (38.1 × 15.7cm)



**15** Drawer side, right ×4  
(35 × 16cm)



 **16** Drawer side, left ×4 (35 × 16cm)






 
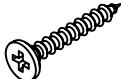
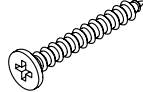
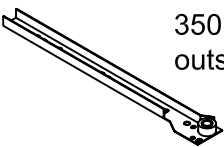
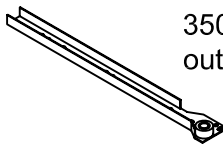
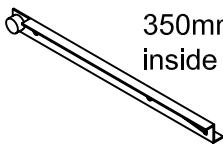
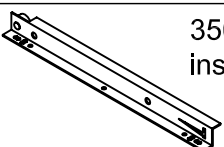
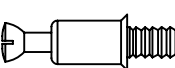









**17** Drawer bottom ×4 (39.2 × 34.9cm)




# Components - Fittings

 Please check you have all the fittings listed below

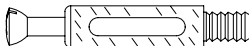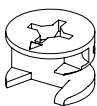**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
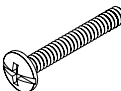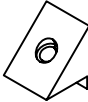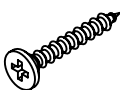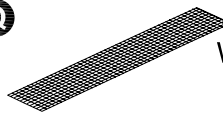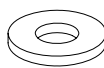
<b>A</b>  Large locking pin × 36	<b>B</b>  Large locking nut × 36	<b>C</b>  Wooden dowel × 22
<b>D</b>  Ø3.5 × 15mm Screw for Runner × 56	<b>E</b>  Ø3.5×25mm Screw × 16	<b>F</b>  Ø3.5×30mm Screw × 2
<b>G</b>  350mm Runner outside left × 4	<b>H</b>  350mm Runner outside right × 4	<b>I</b>  350mm Runner inside left × 4
<b>J</b>  350mm Runner inside right × 4	<b>K</b>  Small locking pin × 16	<b>L</b>  Small locking nut × 16
<b>M</b>  Handle × 4	<b>N</b>  Screw for handle × 4	<b>O</b>  Ø3.0×15mm Support for Back panel × 4
<b>P</b>  Ø3.0×20mm Screw × 4	<b>Q</b>  Wall strap × 1	<b>R</b>  washer × 1
<b>S</b>  Ø3.0×15mm Screw for Back panel × 1	<b>T</b>  Rubber bumper × 8	


## Tools required

 

Phillips screwdriver  
(medium & large)



 Rubber  
mallet



Flatblade screwdriver  
(medium)


**Ruler** - Use this ruler to help correctly identify the screws



# Assembly Instructions


 
## Step 1

Screw Locking pins **A** to the Top **1**, the side panels **2** and **3**.

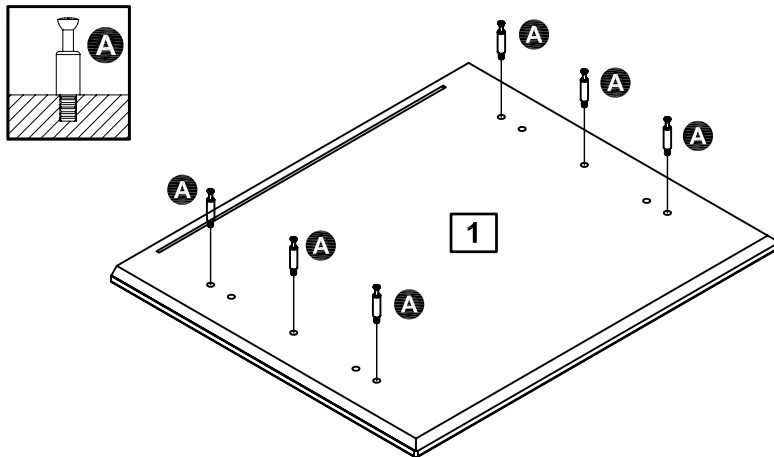


## Step 2

  Insert the Wooden dowels **C** to the Side panels **2** and **3**.

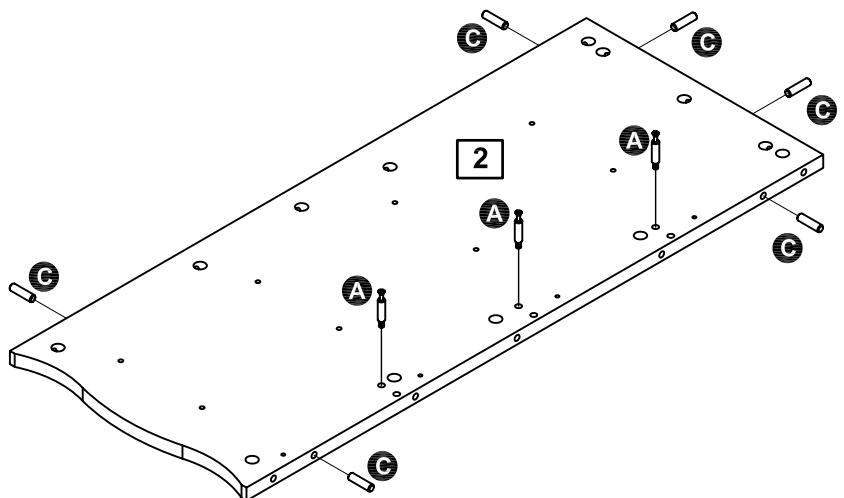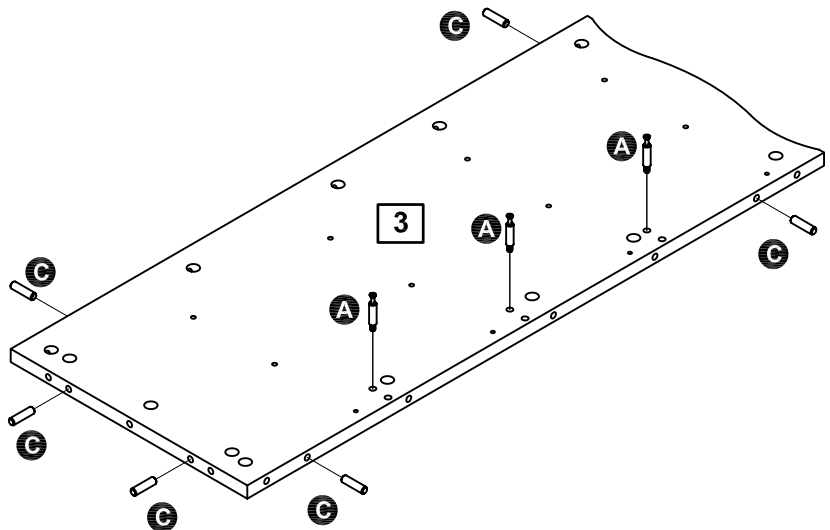

### Step 3

 Repeat Step 1 and Step 2 to the legs **4** **5** **6** **7**, and the Cross bars **9** **10** **11**.


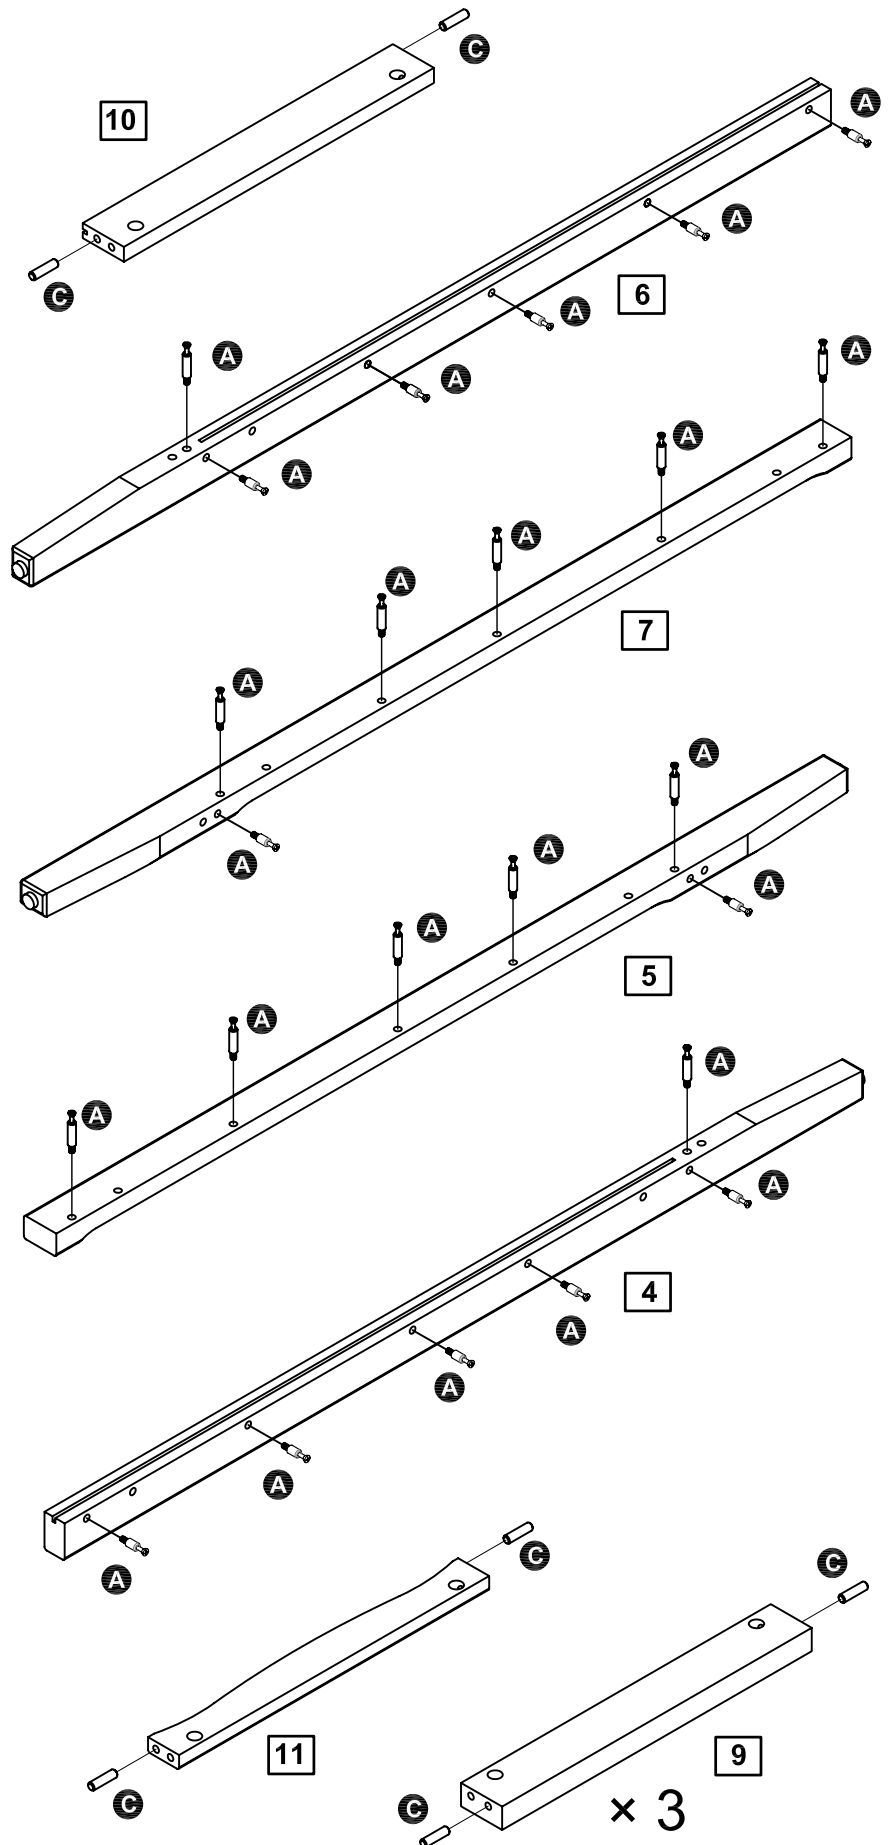


# Assembly Instructions

## Step 4


Attach the legs **6** and **7** to the Side panel **2**.

  Repeat above steps to the other Side panel **3**.

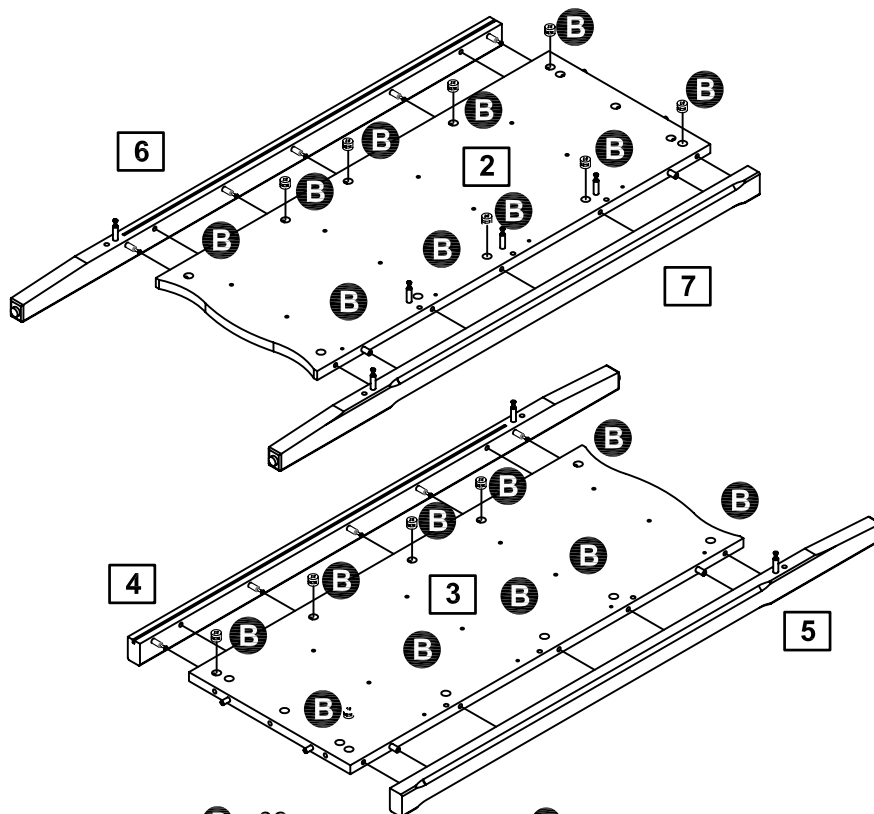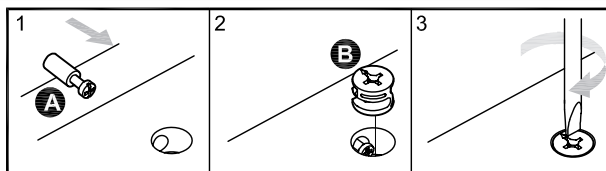

## Step 5

 Attach the Runner **G** to the Side panel **3**, and Runner **H** to the side panel **2**, fix them using Screw **D**.

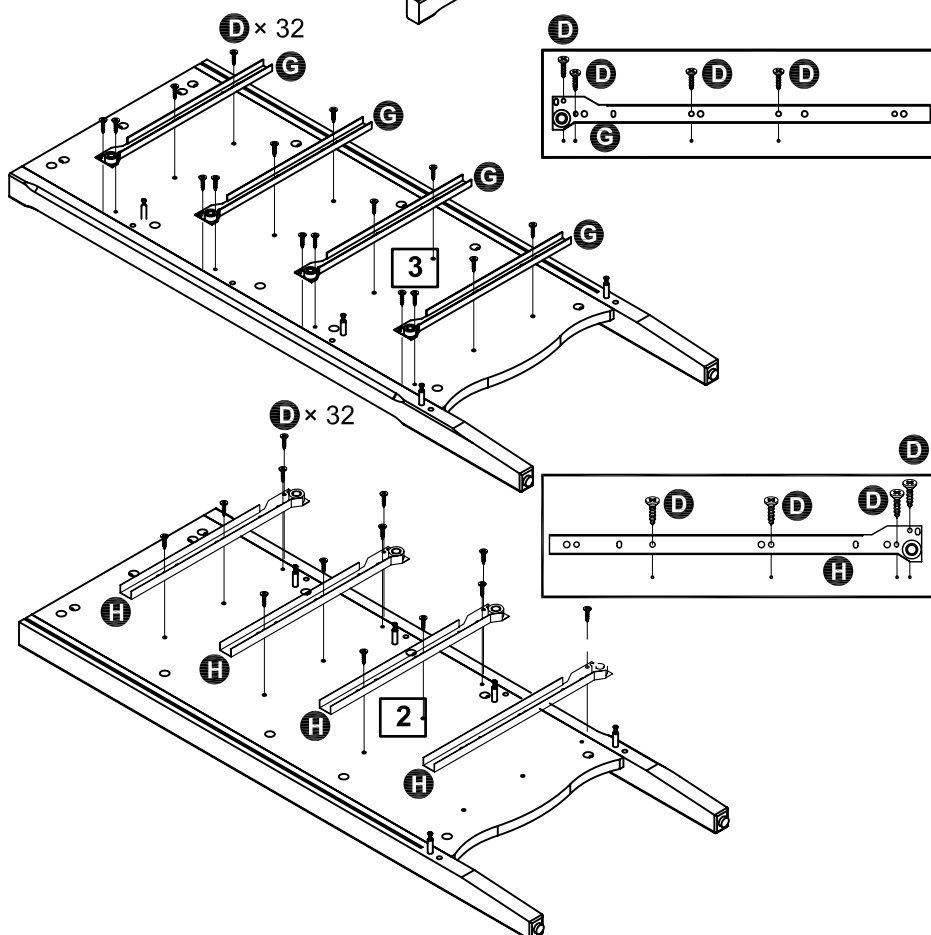


# Assembly Instructions

## Step 6



Screw 4 Locking pins into the Drawer front **13**, fix the Cross bar **8** to the Top **1** using Screw **F**, Fix the Wall strap **Q** using Washer **R** and Screw **S**.

 Attach the Rubber bumper **T** to the Drawer front.

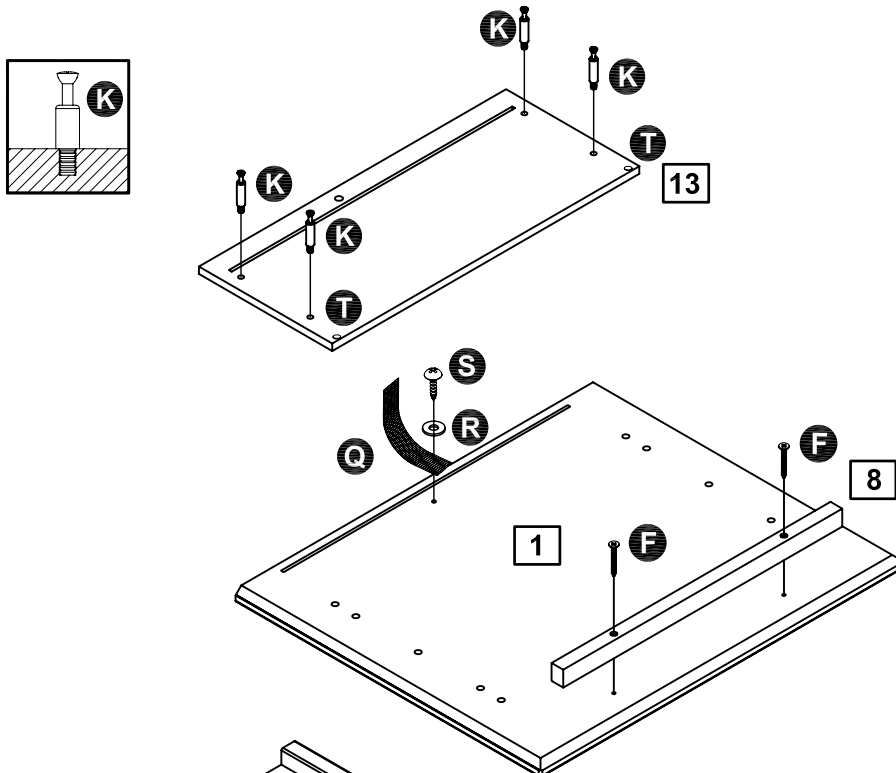

## Step 7

  Attach the side panels to these cross bars, fix them using Locking nut **B** and screwdriver.

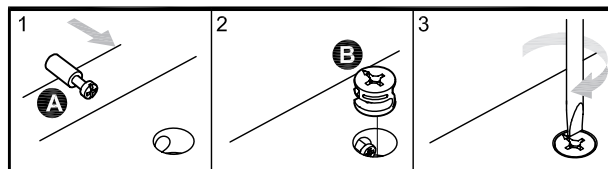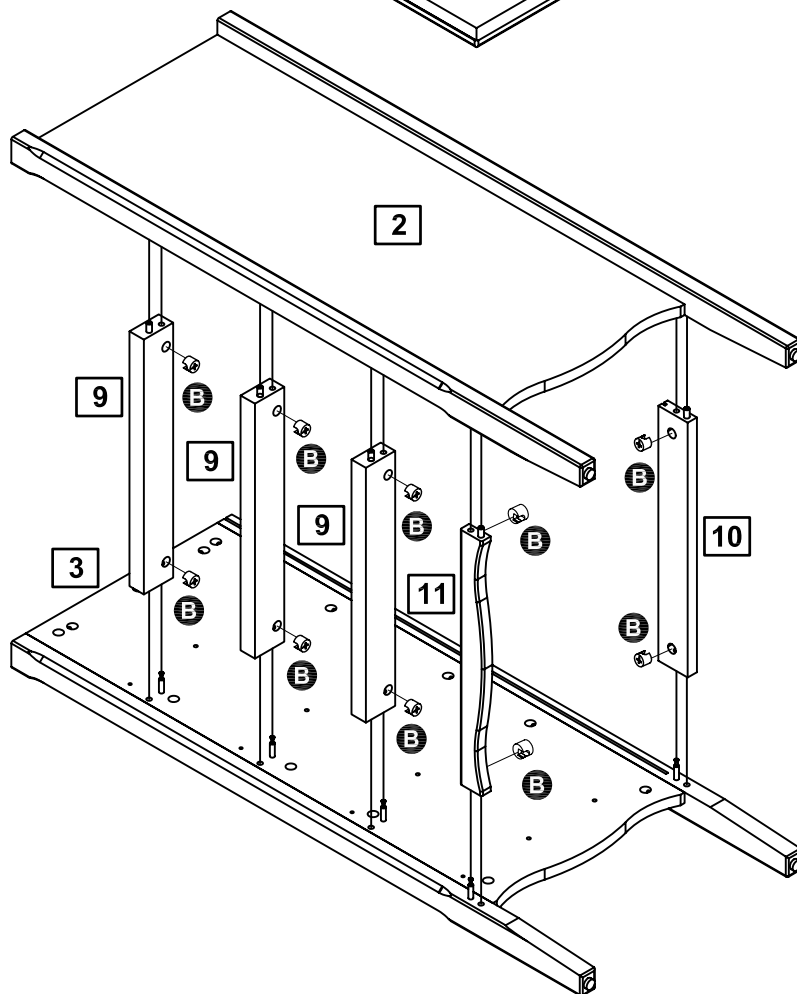




# Assembly Instructions



## Step 8

 Slip the Back panel **12** into the groove in the legs.

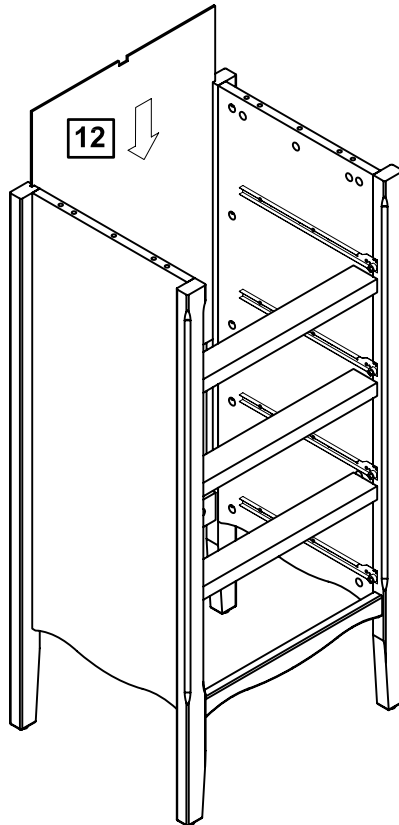

## Step 9

  Cover the Top panel **1** to the frame, fix it using Locking nut **B** and screwdriver.



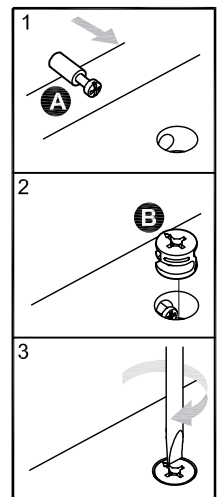
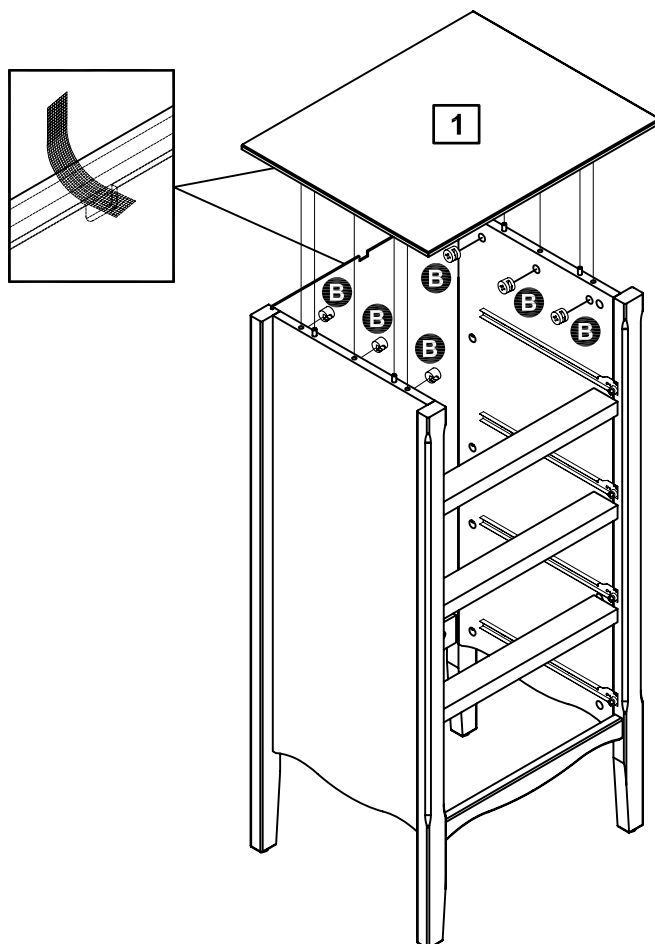


# Assembly Instructions

## Step 10

Attach Drawer side **15** and **16** to the Drawer front **13**. Fix them by Locking nuts **L** and screwdriver.

    Slip the Drawer bottom **17** into the groove in the drawer side, cover the Drawer back **14**, fix it by Screw **E**.

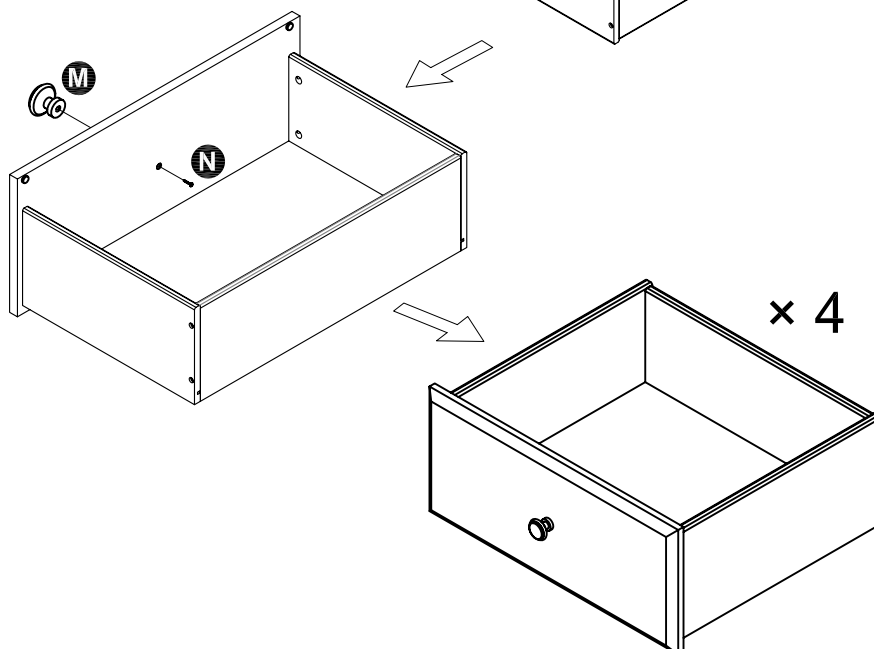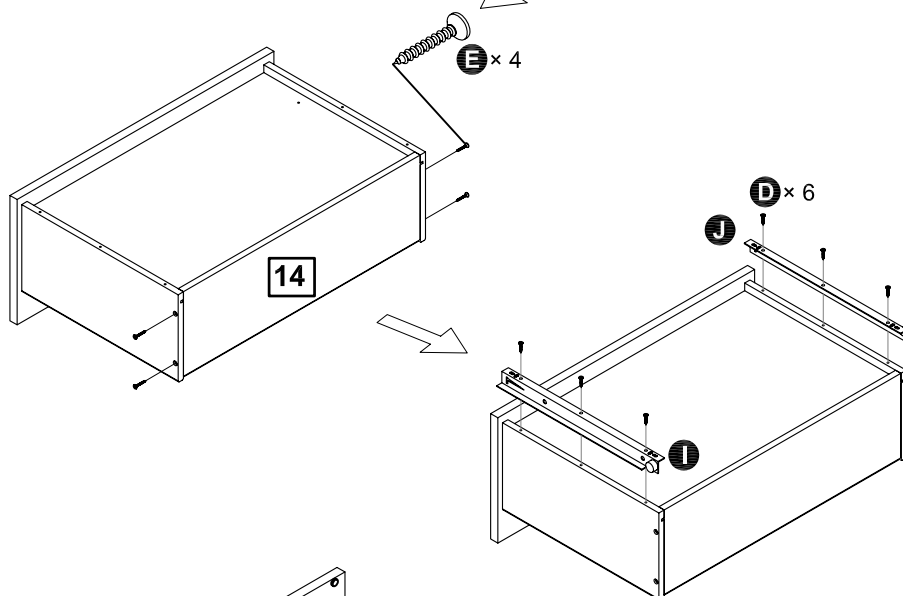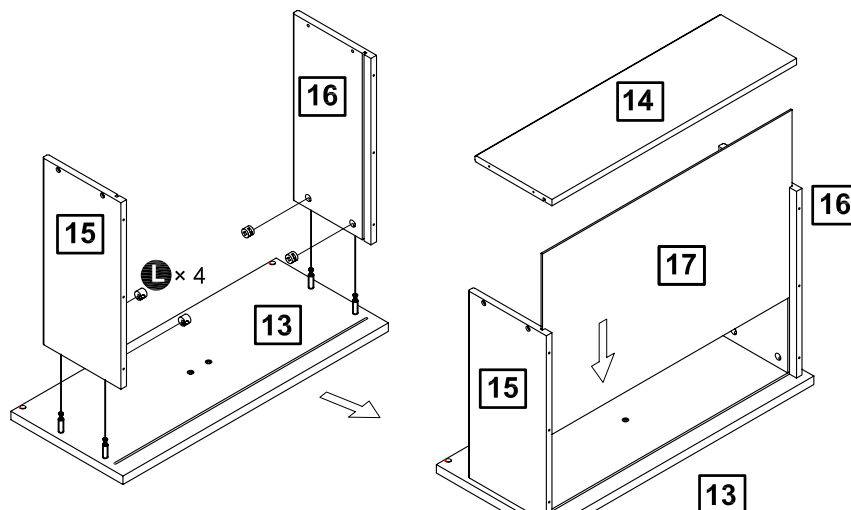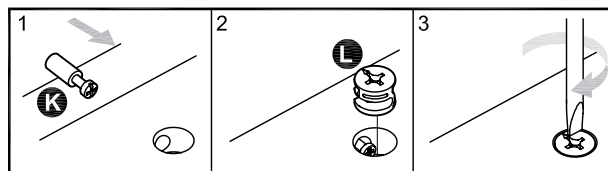


## Step 11

Fix the Runner **I** and **J** to the Drawer side using Screw **D**.

 
Fix the Handle **M** to the drawer front using Screw **N**.

# Assembly Instructions

## Step 12

Fix the Support  to the back panel using Screw

 .

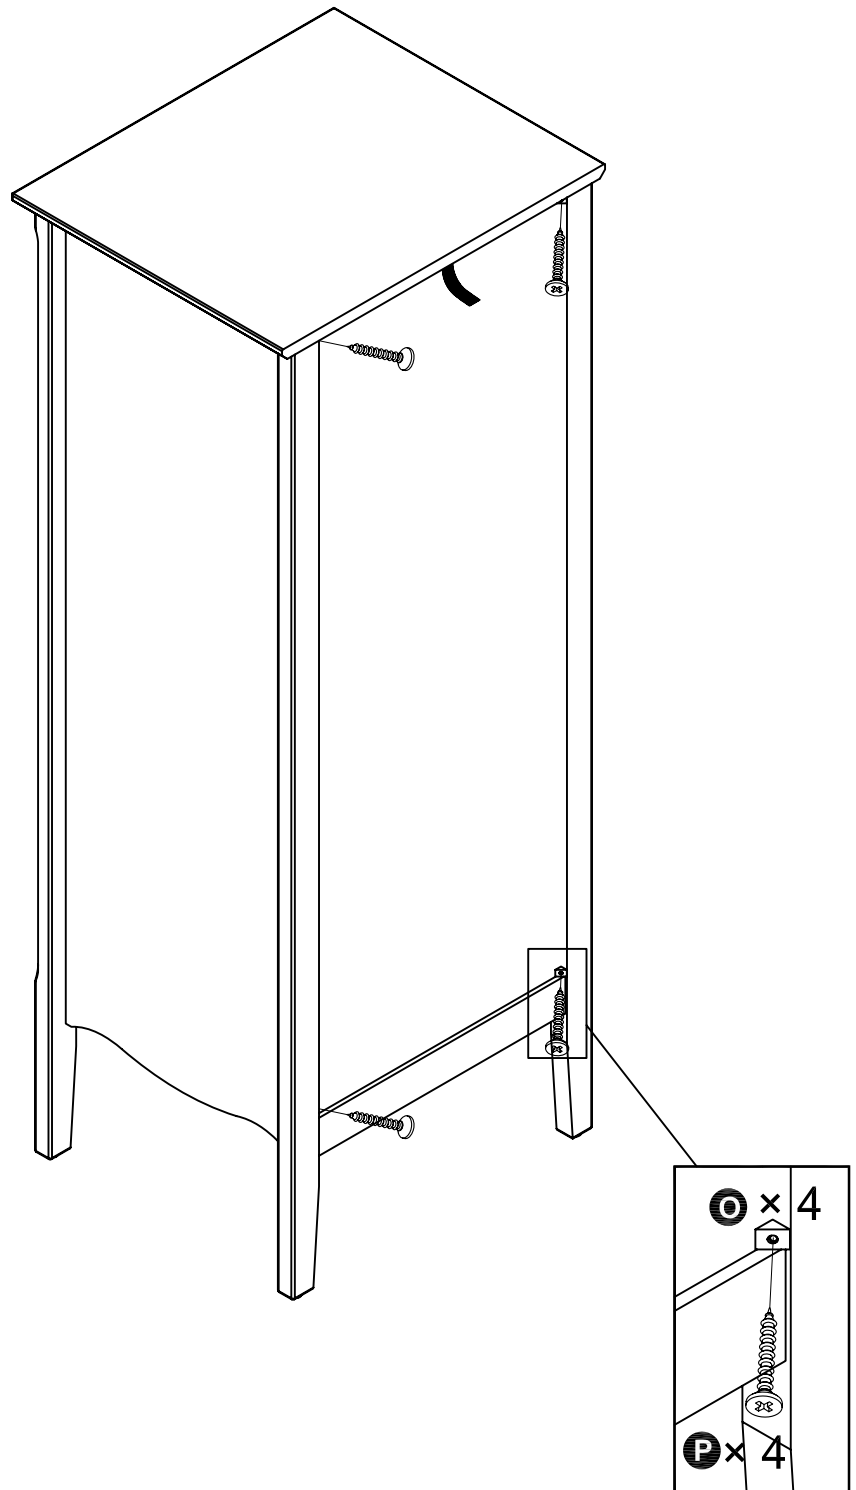

# Assembly Instructions

## Step 13

Slip the drawers to the chest.

### Fixing to wall

It is recommended that the Bookcase is fixed to a wall.

With help, move the Bookcase into position.

 
 
 
Mark fixing hole on wall and remove Wardrobe.

Drill hole and insert wall plug.



**Warning:**  
Before drilling, check wall for hidden pipes and cables.

Reposition Bookcase and fix wall strap using screw.

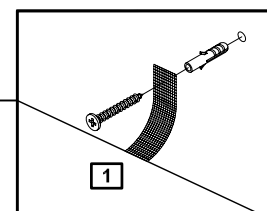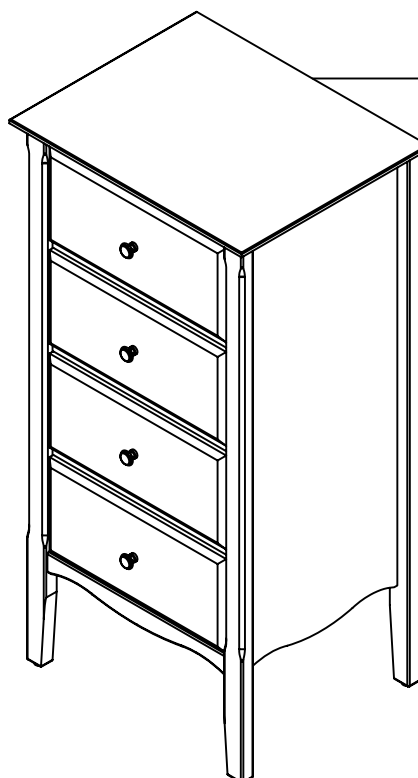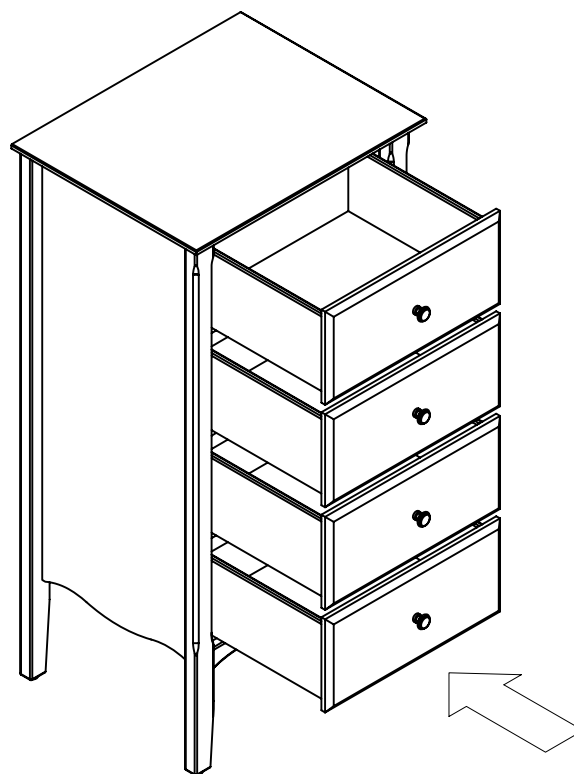

**Assembly is complete.**

If you need help or have damaged or missing parts, call the  
**Customer Helpline: Argos = 0345 6400 800**

# A Guide to - Wall Mounting & Fixings

## Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.



**Important:** When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
## Hints:

- 1: General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

## Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

### No.1 "General Purpose" wall plug

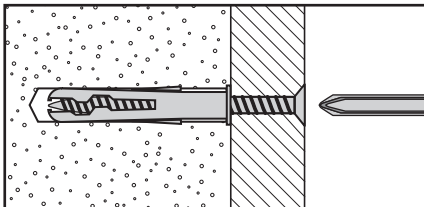


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

### No.2 "Plasterboard" wall plug

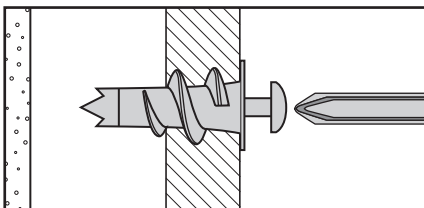 


For use when attaching light loads on to plasterboard partitions.

### No.3 "Cavity Fixing" wall plug

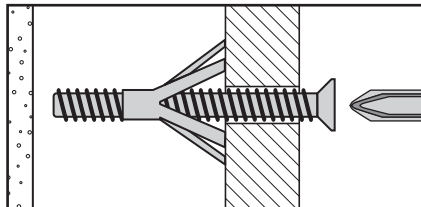 


For use with plasterboard partitions or hollow wooden doors.

### No.4 "Cavity Fixing-Heavy Duty" wall plug

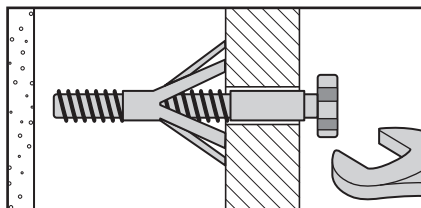 


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

### No.5 "Hammer Fixing" wall plug

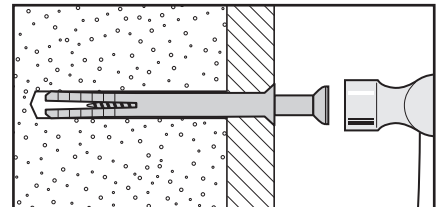 

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

### No.6 "Shield Anchor" wall plug Heavy loads

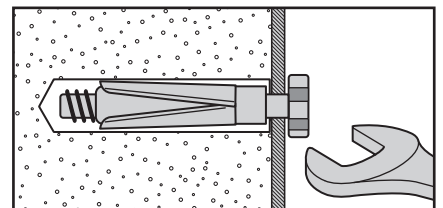 

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



## Care & Maintenance

**Safety:** Always check the fitting and location to ensure your safety in and around the home.

**Fitting:** From time to time check the fitting to ensure the wall plugs or screws do not become loose.