


## 说明书技术要求

图纸名称:	说明书
单 号:	TO215X01302G
客户名称:	雅哥仕
型 号:	KWS1009J-H10R
客 型:	129/8770
尺 寸:	A5
材 质:	105g 铜版纸
颜 色:	黑白印刷
备 注:	同 TO214X03774G单
设 计:	
采 购:	
供 方:	
数 量:	见订单
日 期:	

# COOKWORKS

Instruction Manual - Please keep for future reference

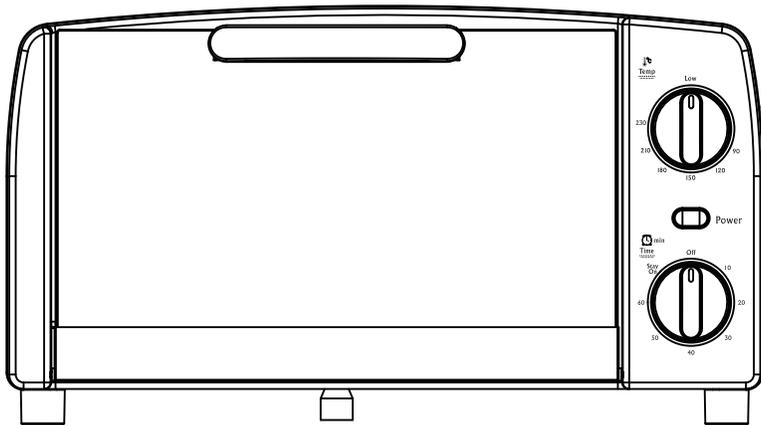

KWS1009J-H10R

## IMPOR TANT SAFETY INSTRUCTIONS

Read all the instructions carefully before using and retain this for further reference.

The temperature of accessible surfaces may get hot when the appliance is operating especially the metal top area and the warming rack if any.

This appliance is not intended for use by young children and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved by a person responsible for their safety. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years.

Children should be supervised to ensure that they do not play with the appliance.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

# IMPORTANT SAFETY INSTRUCTIONS



**Read all instructions before use and keep for future reference.**



## **WARNING**

- Misuse or modification of this appliance may result in breakdown or injury.
- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.



## **IMPORTANT INFORMATION**

- The appliance is intended for household use only.
- The appliance should always be turned to OFF before plugging or unplugging from socket. Never yank cord to disconnect from socket; instead, grasp plug and pull to disconnect.
- Check that the voltage on the rating plate of your product corresponds with your local electricity supply which must be A.C. (Alternating Current).
- If the mains sockets in your home are not suitable for the plug supplied with this product, check with a qualified electrician for replacement.
- This product may emit some odour/smoke the first time it is used. This is NORMAL and will not continue following further use.



## **FOR OPTIMUM PERFORMANCE**

- Do not use in environments which are extremely hot, cold, dusty or humid.
- Keep the unit free from dust and clean with a dry cloth.
- Do not use in areas exposed to direct sunlight or where it can become extremely hot.
- Keep away from sources of strong magnetism - such as televisions or speakers.
- Avoid placement where there is a lot of movement, vibration or on an unstable surface.



## **FOR SAFETY**

### **DO NOT:**

- Attempt to disassemble this unit or carry out repairs.
- Attempt to modify the unit in any way.
- Make sure that foreign objects do not get inside the unit.
- Place naked flame sources - such as lit candles on or near the unit.
- Place objects filled with liquids - such as vases, on or next to the unit.
- Cover the unit - allow the unit to be well ventilated.
- Drop the unit or subject it to strong shocks.
- Use parts not recommended by the manufacturer.
- Use if any parts damaged - replace before further use.
- Use with programmer, timer or any other device that switches it on automatically.

# IMPORTANT SAFETY INSTRUCTIONS



**Read all instructions before use and keep for future reference.**



## CHILDREN

- Children do not always understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.
- Children should be supervised to ensure that they do not play with the appliance.



## POWER SUPPLY

- If the unit uses a mains supply, ensure that the plug is securely inserted into the mains socket, and it is easily accessible.
- Protect the power lead from sharp objects, excessive heat and damp or wet locations. Check the power lead periodically, and replace if damaged.
- Check that the voltage on the rating plate of your product corresponds with your local electricity supply which must be A.C. (Alternating Current).
- Any repairs should only be carried out by a fully qualified electrician or an authorised service agent.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), THERE ARE NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



## SPECIFIC SAFETY INSTRUCTIONS

- To protect against any electrical hazards, DO NOT place unit or cord in water or any other liquids.
- Do not touch any hot surfaces. Use oven mitts for removing or touching any hot parts. Always place Toast Oven on heat protected surface.
- Leave about 100-150mm open space all around the exterior of this appliance. Place the appliance on a dry, horizontal surface.
- Unplug the unit from outlet when not in use and before cleaning. Always allow to cool before attaching or removing any parts.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Always pull the plug out from the wall – never pull the cord. Remove the plug from the wall before moving the appliance. Use both hands to move the appliance.
- Do not let cord hang over edge of table or counter, or touch hot surface.
- Do not place the Toaster Oven inside an heated oven or near a hot flame or electric burner.

# IMPORTANT SAFETY INSTRUCTIONS



**Read all instructions before use and keep for future reference.**

- Do not use outdoors
- If the electric circuit is overloaded with other appliances, this appliance may not operate properly. The Toaster Oven should be operated on a separate electrical circuit from other operating appliances.
- The temperature of accessible surfaces may be high when the appliance is operating.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Store only the accessories provided with this unit inside the oven when not in use. Do not store any other materials.
- A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not put any items on top of the appliance when in operation.
- Do not place any cardboard, paper or plastic inside the oven.
- All containers placed inside the oven must not be airtight. Also, they need to have enough room to allow for expansion of fluids.
- Clean this appliance regularly as build – up of grease may cause a fire. Make sure that this appliance is not placed near curtains, any drapery, or other flammable material.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
- In order to prevent accidental burns, always use the handle and knobs to operate this appliance.
- The temperature of the door or outer surface may be high when the appliance operating.
- Oversize foods or metal utensils must not be inserted in a toast oven as they may create a fire or risk of electric shock.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- This appliance is not intended for use by persons (including children ) with reduced physical, sensory or mental capabilities. Or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- The rear surface of appliance shall be placed against a wall.

# CONTENTS

<b>Know Your Machine</b> .....	5
<b>Operation</b> .....	6
Before Using Your Oven.....	6
About Control Settings.....	8
How To Use The Oven.....	10
How To Use .....	11
<b>Care and Cleaning</b> .....	16
<b>Specifications</b> .....	18

WARNING: This appliance includes a heating function. Surfaces, other than the functional surfaces may develop high temperatures. Since temperatures are perceived differently by different people, this device should be used with CAUTION. Hold the appliance exclusively to grip surfaces intended to hold and use such heat protection measures as heat protection Gloves or pot holders. Areas which are not intended to grips must be given sufficient time to cool.




The temperature of accessible surfaces may be high when the appliance is operating.

# CONTENTS

Know Your Machine-----	5
Operation-----	6
Before Using Your Oven-----	6
About Control Setting-----	8
How to Use The Oven-----	10
How to Use-----	11
Care and Cleaning-----	16
Specifications-----	18

## KNOW YOUR MACHINE

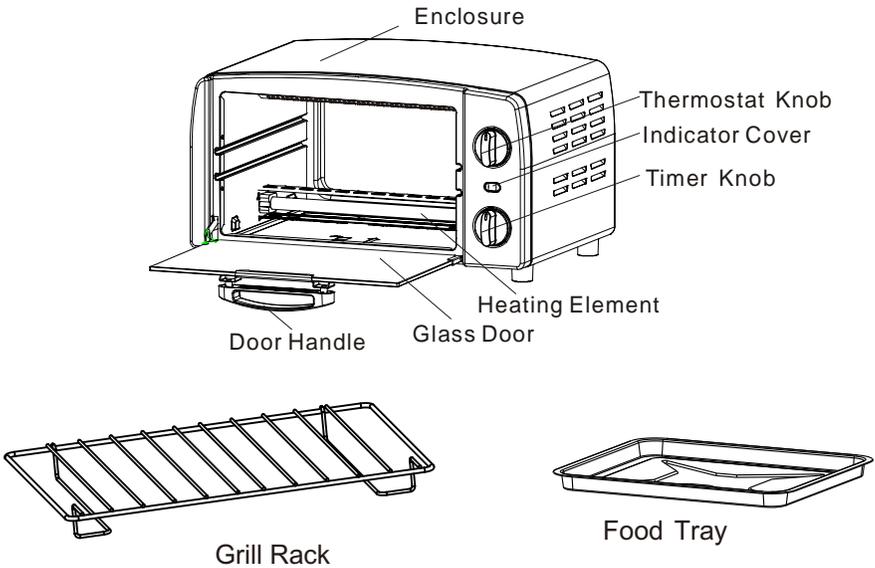

## OPERATION

**IMPORTANT:** Please read the important safety instructions before use.

# BEFORE USING YOUR OVEN

—before using your oven :

- 1、 Make sure oven is unplugged and Timer knob is in the OFF position. See fig.1.
- 2、 Remove all racks and trays. Wash in hot soapy water or in dishwasher.
- 3、 Thoroughly dry all accessories and re-assemble in oven.
- 4、 Place Oven on a flat counter or other stable surface.

**NOTE : Do not operate on the same circuit with another appliance.**

- 5、 Position the Oven so that it is at least 10cm from any surrounding object. Ensure that nothing has been placed on top of the Oven. Plug the Power Cord into the mains socket.

**NOTE : Make sure your local voltage is 230V/240V~ , 50HZ**

- 6、 After re-assembling your oven, turn the Temperature Knob to 220°C and turn the Timer Knob to 15 minutes to eliminate any oil coatings on parts after production. See fig.2.

**NOTE : The oven may smoke during this process. This is normal for a new Oven and will not last more than 15 minutes.**

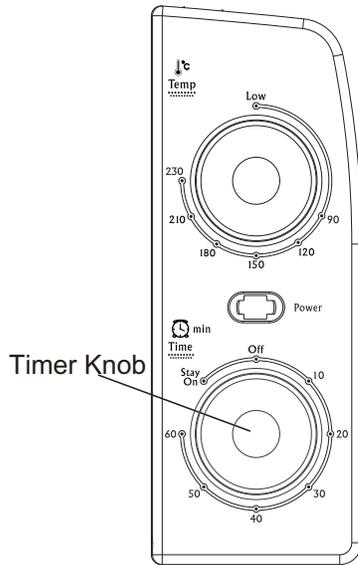


fig.1.

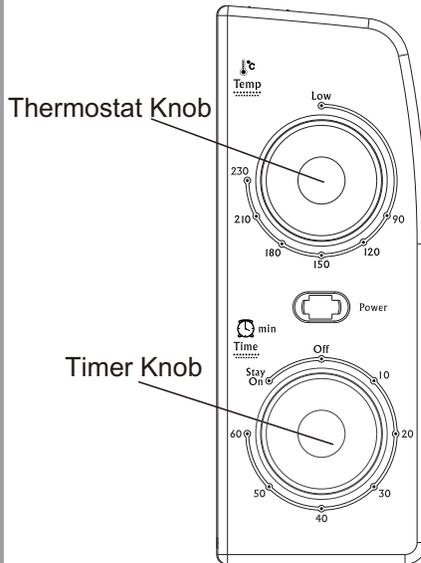


fig.2.

# ABOUT CONTROL SETTINGS

## Time Setting

—Time range 0-60minutes: The Timer can

be set up to 60 minutes. The oven will not

turn “Stay on” without the timer being set.

When the Timer Knob is in the “off” position, the oven will not operate. To set the time, turn the Knob to the desired time. Indicator Light is lit only when Time has been set.

When the Timer reaches the off position, a bell will sound and the oven will switch off automatically.

### IMPORTANT NOTE:

**Stay on time-**If you have not finished cooking you can set the Time Knob to “Stay On” and the oven will stay on. It will not Turn Off automatically. To turn off you need to manually turn the Timer Knob to the off position until you hear the bell ring. See fig.3.

**Adjusting Time-**The Timer can be changed during cooking. Adjust the timer to the desired time and continue cooking. For cooking times which are under ten minutes, first set to a longer time and then turn the switch back to the time you require.

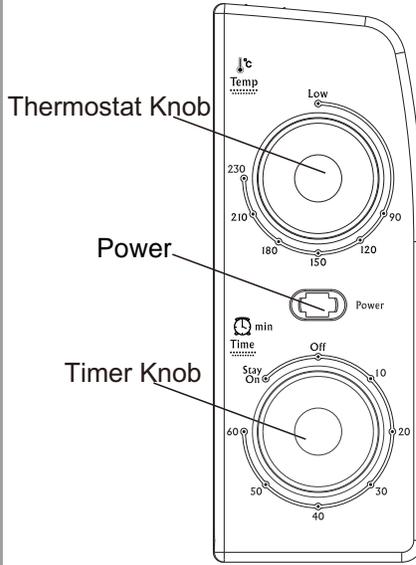


fig.3.

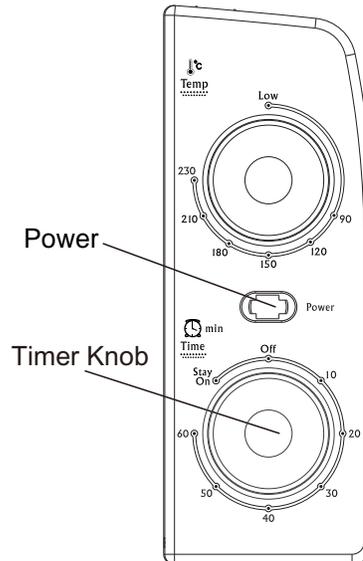


fig.4.

# ABOUT CONTROL SETTINGS

## Temperature Setting

—Turn the Temperature Knob to the desired temperature setting. The temperature can be set from 70°C to 220°C. See fig.3.

## Indicator Light

—The Indicator Light will light up when the oven is operating. When the Timer Knob is in the "OFF" position, the indicator Light will not be lit. See fig.4.

## HOW TO USE THE OVEN

**CAUTION :** The oven surfaces will be hot during and after use.

### General Instructions

1. Place the Grill Rack in position that will accommodate the height of the food to be cooked. See fig.5.
2. Place the food on the Rack. Make sure that you always use an ovenproof container in the oven.

**NOTE :** Never use plastic or cardboard containers in the Oven.

**NOTE :** Never use plastic or ceramic pans or lids.

**NOTE :** DO NOT let juices run to the bottom of the oven. Use the Food Tray when cooking. See fig.6.

3. Set the temperature as suggested by the recipe or as desired.
4. Securely shut the door and set the cooking time to begin operating the oven.

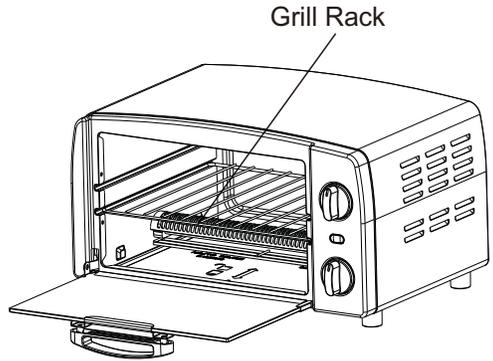


fig.5.

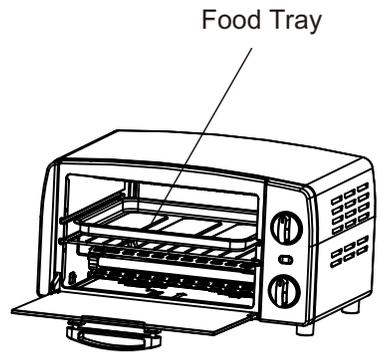


fig.6.

# HOW TO USE

## Toasting

1. Turn the Temperature Knob clockwise to 220°C. See fig.7.

2. Open the Oven Door and place sliced bread on the Grill Rack Place one slice of bread in the center of Grill Rack or 4 slices side by side. See fig.8.

**NOTE :** The thermostat will only activate when turned to an angle greater than 45°-75°.

3. Time Setting—Select the length of time to toast your chosen food. It is advisable to test the toasting function by starting at a short time, increasing it to suit your toasting preferences.

**NOTE :** To set the timer for 5 minutes or less, turn the Timer to over 5 minutes, then back to your chosen time. This ensures that the timer is accurately set.

4. When toasting is finished the bell will ring and the electrical power is automatically turned off. To stop the cycle at any time, turn the Timer Knob clockwise to "off" position and the bell will ring. See fig.9.

**NOTE :** The bread may catch fire if the toasting time is too long. Close supervision is necessary during toasting.

**NOTE :** Do not set the Timer for long periods of time.

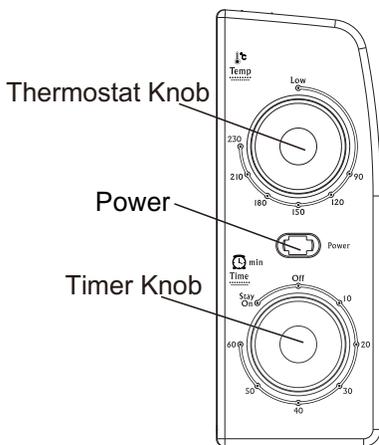


fig.7.

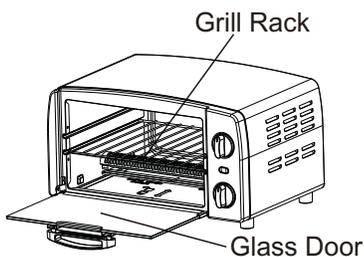


fig.8.

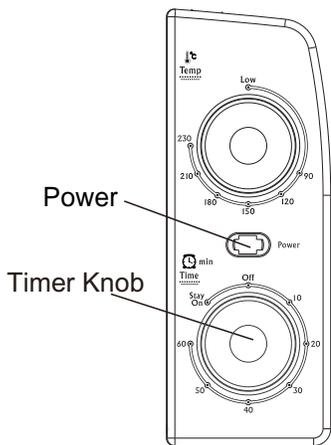


fig.9.

# BROILING

1、 Slide in the Food Tray under the Grill Rack.

Always use the Food Tray when broiling food like chicken wings or drumsticks which contain fat. See fig.10.

2、 Place food on the Grill Rack.

NOTE : We always suggest preheating oven about 3-5minutes before cooking the food.

1、 Turn the Temperature Knob to 200°C. See fig.11.

2、 Depending on the food you are cooking, set an appropriate time with the Timer Knob.

If you need to cook food longer than 60 minutes, set the Timer to the Stay On setting. See fig.11.

NOTE : When using the Stay On setting, you must manually stop the timer.

NOTE : Always check the food when using this setting to prevent overcooking. If required, turn the food over for even cooking.

NOTE : Food and tray will become very hot.

Use suitable oven gloves to prevent burning to hands.

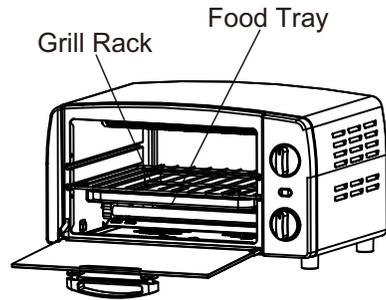


fig.10.

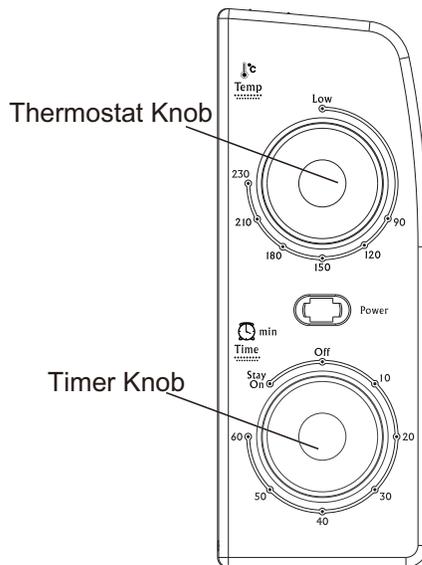


fig.11.

# Baking

- 1、 Slide the Food Tray into the bottom rack level. See fig.12.
- 2、 Turn the Temperature Knob clockwise to 220°C。 See fig.13.
- 3、 Depending on the food you are cooking, set an appropriate time with the Timer Knob. If you need to cook food longer than 60 minutes, set the Timer to the Stay On setting. See fig.13.

NOTE : When using the Stay On setting, you must manually stop the timer.

NOTE : The thermostat will maintain an even temperature for baking.

## ABOUT THE RACK LEVEL

— — There are two rack levels. The Food Tray or Grill rack should be inserted on either level, depending on your cooking requirements. See fig.14.

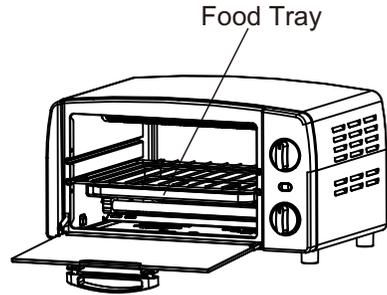


fig.12.

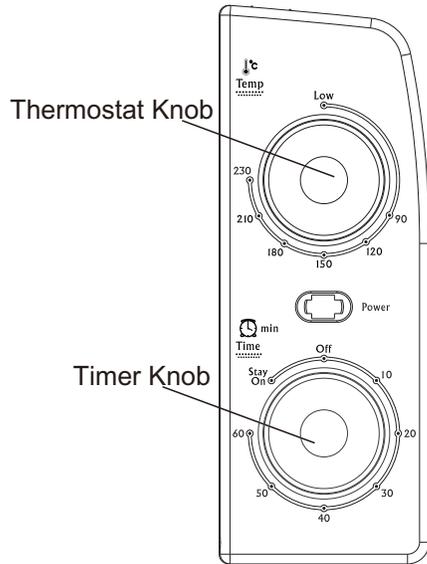


fig.13.

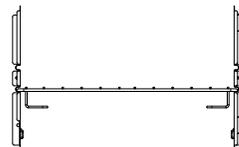


fig.14.

# CARE AND CLEANING

NOTE : Always unplug and allow to cool before cleaning.

- 1、 Before cleaning unplug the toaster oven and allow it to cool completely.
- 2、 Wash all the attachments with mild,soapy water including the rack and the baking tray.
- 3、 Do not use abrasive cleaners, scrubbing brushes and chemical cleaner as this will cause damage to the coating of baking tray.
- 4、 Use a wet cloth to wipe the inner surfaces of the oven.
- 5、 Clean the door by using a wet cloth and detergent or soap.
- 6、 Never immerse the unit in water or other liquid.

## CLEANING CRUMB TRAY

—Open the oven door, take out the crumb tray to clean with a wet cloth. See fig.16.

—Put it back after cleaning.

## TO STORE

—Unplug until, allow to cool and clean before storing. Never wrap cord tightly around the appliance, use the Cord Storage area on the back of the oven. Do not pull on the cord where it enters the until, as this could damage the cord.

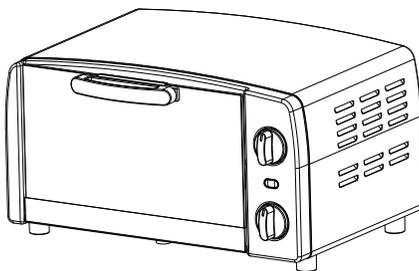


fig.15.

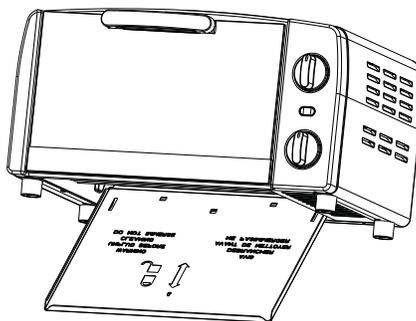


fig.16.

# SPECIFICATIONS

## Technical Data

Model:	KWS1009J-H10R
Power Supply:	220-240V~50Hz
Power Consume:	1050W

## Connecting to Power

Check that the voltage marked on the product corresponds with your supply voltage. This product is fitted with a 13A plug complying with BS1363. If this plug is unsuitable or needs to be replaced, please note the following:

## Plug Replacement

If you need to replace the fitted plug.



### WARNING :

Never connect live or neutral wires to the earth terminal of the plug.  
Only fit an approved 13 Amp BS1363/A plug and the correct rated fuse.  
If in doubt, consult a qualified electrician.

This unit is a Class 1 Appliance and must be fitted with an Earth plug fitted with a 13A fuse.


The wires in this mains lead are colored as follows :

Yellow & Green-Earth

Blue-neutral

Brown-Live

As the colors of the wires in the mains lead of this apparatus may not correspond with the colored markings identifying the terminals in your plug, proceed as follows:

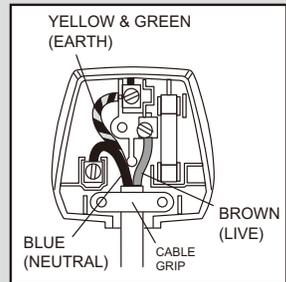

The wire which is Colored Yellow & Green must be connected to the terminal which is marked E or colored Yellow & Green. The wire which is colored blue must be connected to the terminal which is marked L or colored brown. Always ensure that the plug cord grip is fastened correctly. If a 13A (BS 1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved. If in doubt contact a qualified electrician.



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.



## PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd  
489 - 499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW