


# London Clock C O M P A N Y

Thank you for your purchase of this alarm clock. Please read these instructions carefully and keep the manual for future reference.

## INSTALLATION

1. Place your clock face down on a flat and soft surface.
2. Remove the battery cover at the back of the clock.
3. Insert 2 x new AA batteries into the battery compartment by observing the correct "+" and "-" polarity.
4. Replace the battery cover.

## FUNCTIONS

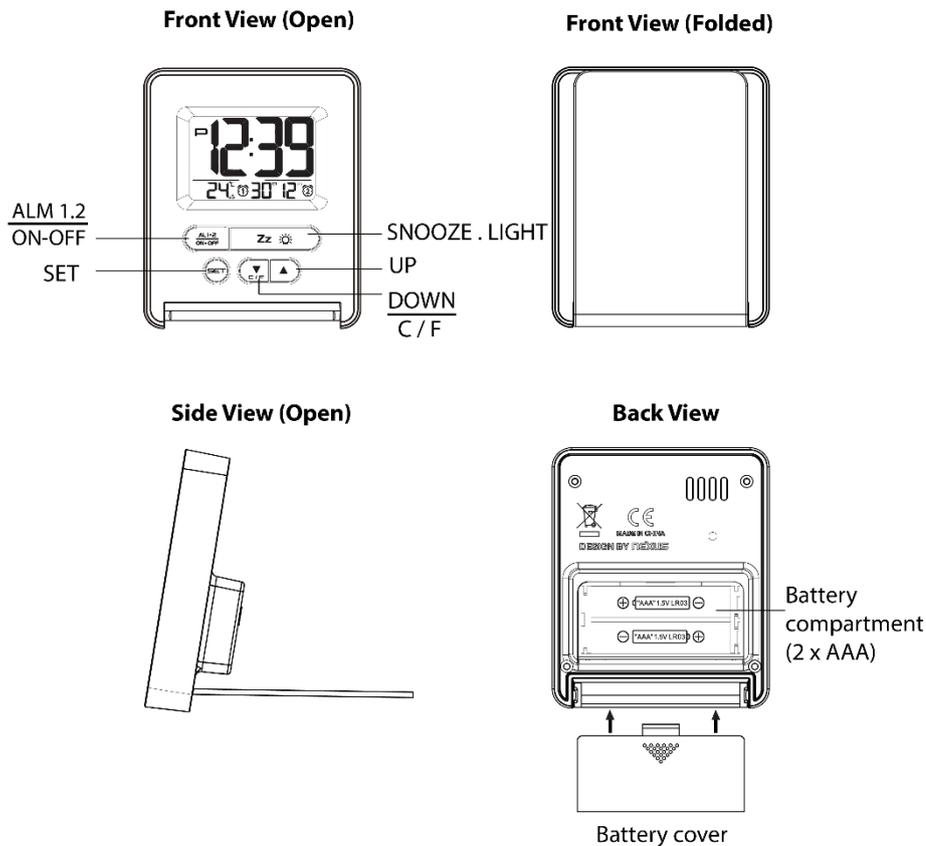

## TO SET TIME, 12/24HR AND SNOOZE DURATION

Please note that during the below process, if the clock is left untouched for 10 seconds, the clock will return to normal time display mode.

1. Press and hold the "SET" button on the front of the clock for 5 seconds until the hour digit begins to flash. Use the ▲ and ▼ buttons on the front of the clock to select the correct hour. (Press and hold the ▲ and ▼ buttons to accelerate setting). Press the "SET" button to confirm.
2. The minute digits will now flash. Use the ▲ and ▼ buttons on the front of the clock to select the correct minute. (Press and hold the ▲ and ▼ buttons to accelerate setting). Press the "SET" button to confirm.
3. The time digits will now flash 24Hr. Use the ▲ and ▼ buttons on the front of the clock to select 12Hr or 24Hr. If you select 12Hr format, P will appear on the left hand side of the display to indicate afternoon time. There is no AM indicator. Press the "SET" button to confirm.
4. The year will now flash. Use the ▲ and ▼ buttons on the front of the clock to select the correct year. (Press and hold the ▲ and ▼ buttons to accelerate setting). Press the "SET" button to confirm.
5. The month digit will now flash. Use the ▲ and ▼ buttons on the front of the clock to select the correct minute. (Press and hold the ▲ and ▼ buttons to accelerate setting). Press the "SET" button to confirm.
6. The date digit will now flash. Use the ▲ and ▼ buttons on the front of the clock to select the correct date. (Press and hold the ▲ and ▼ buttons to accelerate setting). Press the "SET" button to confirm.

# London Clock C O M P A N Y

7. The snooze duration can be changed at this stage – press the “SET” button again and **05** and **5**  will appear on the display. The default snooze duration is 5 minutes and it can be changed to between 5 and 60 minutes. Use the ▲ and ▼ buttons on the front of the clock to select the desired snooze duration. (Press and hold the ▲ and ▼ buttons to accelerate setting). Press the “SET” button to confirm and return to normal time display.

## TO SET ALARM 1

Please note that during the below process, if the clock is left untouched for 10 seconds, the clock will return to normal time display mode.

1. With the clock in normal time display, press the “SET” button on the front of the clock once, **6:00** and **A 1** will appear on the display.
2. Press and hold the “SET” button for 5 seconds until the hour digit flashes. Use the ▲ and ▼ buttons on the front of the clock to select the desired hour for Alarm 1. (Press and hold the ▲ and ▼ buttons to accelerate setting). If you have selected the alarm to sound in the afternoon, P will appear on the display. Press the “SET” button to confirm.
3. The minute digit will now flash. Use the ▲ and ▼ buttons on the front of the clock to select the desired minute for Alarm 1. (Press and hold the ▲ and ▼ buttons to accelerate setting). Press the “SET” button to confirm.

## TO SET ALARM 2

Please note that during the below process, if the clock is left untouched for 10 seconds, the clock will return to normal time display mode.

1. With the clock in normal time display, press the “SET” button on the front of the clock once, **6:00** and **A 2** will appear on the display.
2. Press and hold the “SET” button for 5 seconds until the hour digit flashes. Use the ▲ and ▼ buttons on the front of the clock to select the desired hour for Alarm 2. (Press and hold the ▲ and ▼ buttons to accelerate setting). If you have selected the alarm to sound in the afternoon, P will appear on the display. Press the “SET” button to confirm.
3. The minute digit will now flash. Use the ▲ and ▼ buttons on the front of the clock to select the desired minute for Alarm 2. (Press and hold the ▲ and ▼ buttons to accelerate setting). Press the “SET” button to confirm.

## TO TURN ALARM 1 AND 2 ON AND OFF

With the clock in normal time display:

1. Press the “ALM ON.OFF” button on the front of the clock once to activate Alarm 1,  will appear to indicate Alarm 1 is activated.
2. Press the “ALM ON.OFF” button once again to activate Alarm 2,  will appear to indicate Alarm 2 is activated.
3. Press the “ALM ON.OFF” button once more to activate both Alarm 1 and 2. Both  and  will appear to indicate both Alarm 1 and 2 have been activated.
4. Press the “ALM ON.OFF” button once more to deactivate all alarms. Both  and  will disappear to indicate both Alarm 1 and 2 have been deactivated.

## TO STOP AND RESET THE ALARM TO COME ON THE NEXT DAY

When Alarm 1 or 2 is sounding, the related alarm icon will flash. Press the “ALM ON.OFF” button once to stop the alarm and reset it for the following day. Both  and/or  will remain on the display.

## TO ACTIVATE THE SNOOZE FUNCTION

When the alarm is sounding, press the **Zz • ** button on the front of the clock once to snooze the alarm. Please note that if Alarm 2 activates while Alarm 1 is sounding or in snooze mode, Alarm 2 will override Alarm 1 and Alarm 1 will reset to come on the next day.

## TO ACTIVATE THE BACKLIGHT

# London Clock C O M P A N Y

With the clock in normal time display, press the **Zz • ☀** button on the front of the clock to activate the backlight. The backlight will be activated for 5 seconds.

## TEMPERATURE

1. There is a temperature display function on this clock.
2. With the clock in normal time display, press the **▼ C / F** button on the front of the clock to switch the temperature between Celsius and Fahrenheit.

## TROUBLESHOOTING

If your clock displays irrelevant time or does not function properly, reset the clock by removing the batteries and reinstalling them by observing the correct polarity. The clock will reset to default settings and you will need to set it again.

### Care instructions

- Wipe clock with a soft dry cloth only.
- Replace battery every 12 months or when the clock stops.

### Battery safety & disposal

- Dispose of batteries and electrical products responsibly at local authority household waste recycling facility.
- **DO NOT dispose of batteries in a fire as the batteries may explode or leak.**
- Never use rechargeable batteries.
- Replace all batteries at the same time; NEVER mix new and used batteries, different types or brands.
- Never try to dismantle batteries.
- Never short circuit batteries.
- Exhausted batteries must be removed from the clock promptly.
- Remove batteries from the product before extended storage.



This symbol  indicates that this product, and any batteries, should not be disposed of in normal household waste but taken to appropriate local recycling centres, where available. Never throw batteries in a fire or attempt to open outer casing.