 


Mia 2 Door Wardrobe

Assembly Instructions - Please keep for future reference

White 2463834

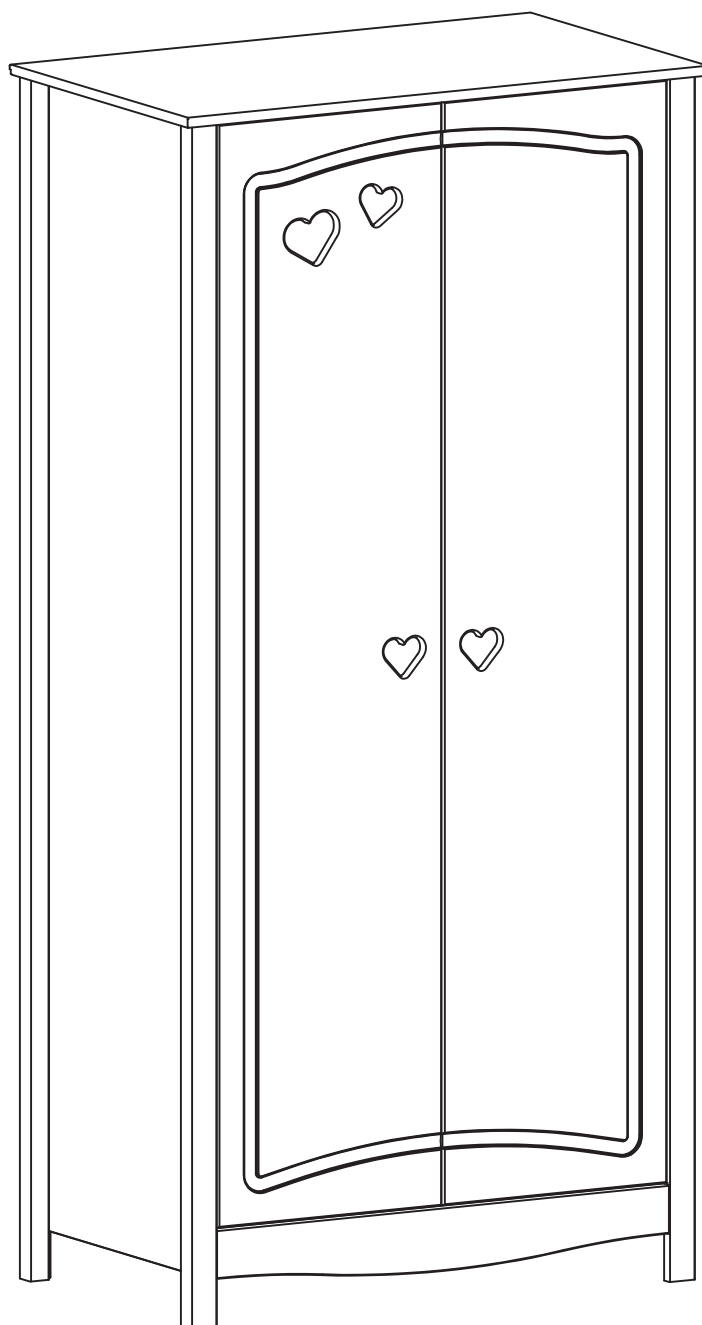

Dimensions

Width : 88.5 cm

Depth : 52.3 cm

Height: 181.2 cm

Assembly Instructions - Please keep for future reference

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 0845 640 30 30**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

 
- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Argos Customer Helpline: 0845 640 30 30**

Please check you have all the panels listed below

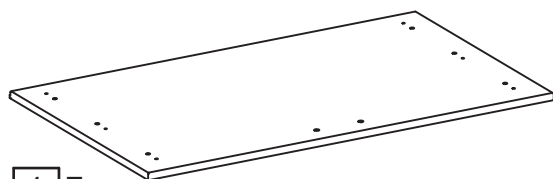

1 Top
(88,5 cm x 52,3 cm)

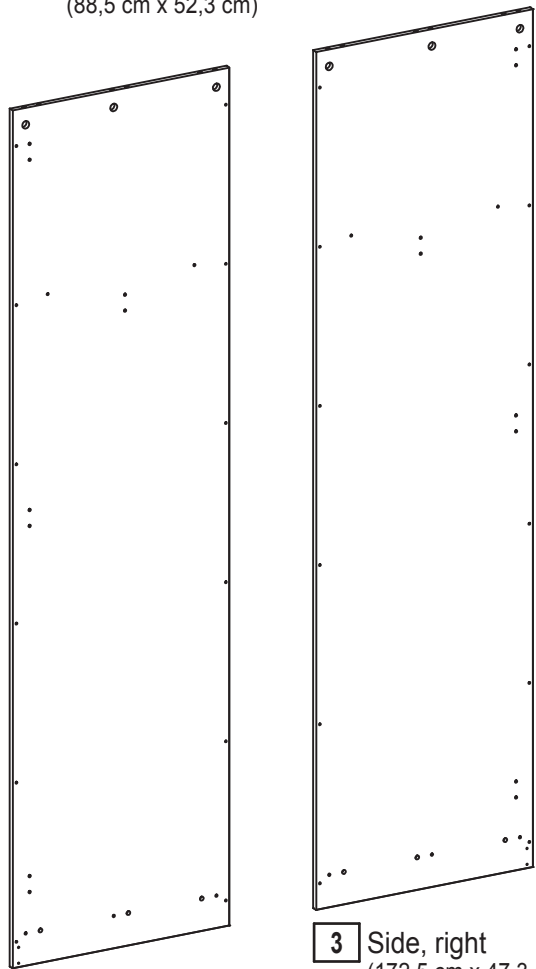 


2 Side, left
(172,5 cm x 47,3 cm)


3 Side, right
(172,5 cm x 47,3 cm)



 
4 Post x 4
(179,7 cm x 4,4 cm)

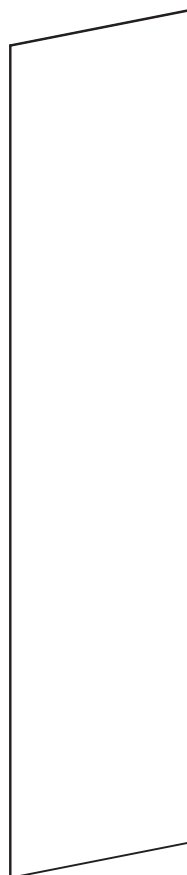


5 Back x 2
(167,3 cm x 39,5 cm)

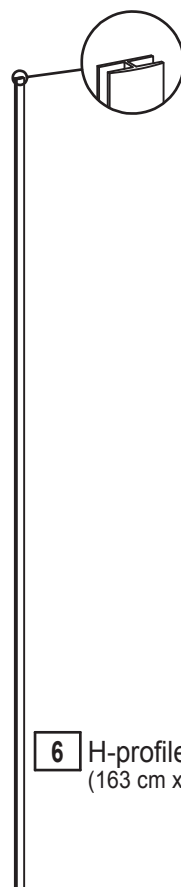 


6 H-profile
(163 cm x 1,7 cm)

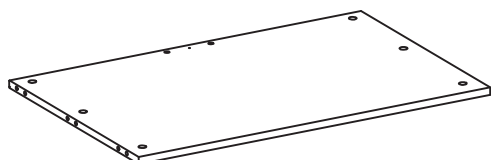 

7 Bottom
(76,7 cm x 48,9 cm)

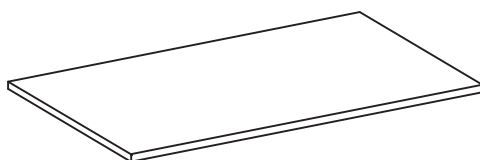 


9 Shelf
(76,7 cm x 46,5 cm)

 


8 Front rail
(76,7 cm x 9,5 cm)



 10 Hanging rail
(75,7 cm x 2,2 cm)

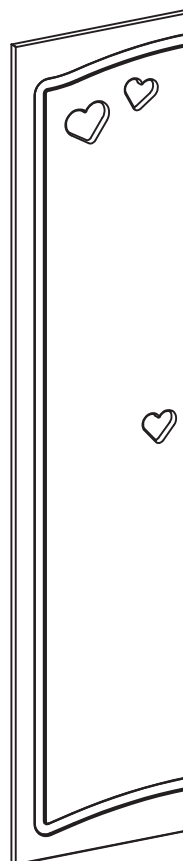

11 Door, left
(164,6 cm x 37,9 cm)

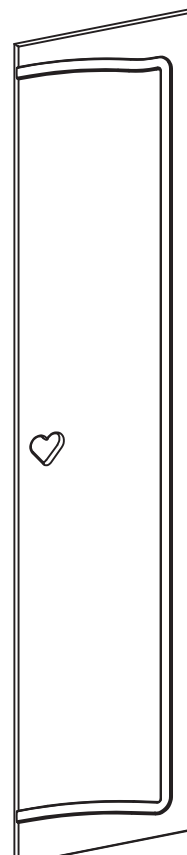 














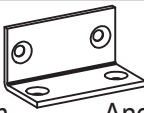



12 Door, right
(164,6 cm x 37,9 cm)

Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

Aa  ø7.8 x 40mm Wooden dowel x 12	Bo  ø3 x 12mm Screw x 20	Ca  ø15 x 10.5mm Cam x 12
Cb  ø5 x 8, cc34mm Bolt x 12	Di  1.2 x 15mm Nail x 50	Fh  Wall strap and instruction x 1
Fl  Support for hanger rail - 15mm x 2	Fr  Shelf support x 4	
Jb  ø4 x 25mm Screw x 24	Kb  ø5.8 x 8mm Screw x 4	Ko  ø4,2 x 9,5mm Screw x 8
Mc  0mm Crossplate x 6	Mf  ø26mm Cup hinge x 6	Pc  Magnet, adjustable x 4
Pd  35 x 12 x 1mm Magnet catch x 4	VI  44 x 23 x 23mm Angle x 2	Vn  Angle 23 x 23 x 24mm x 1

Tools required



 Phillips screwdriver
(Medium & large)



Hammer



Flatblade screwdriver
(Medium)

 
 
Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Assembly of the wardrobe.

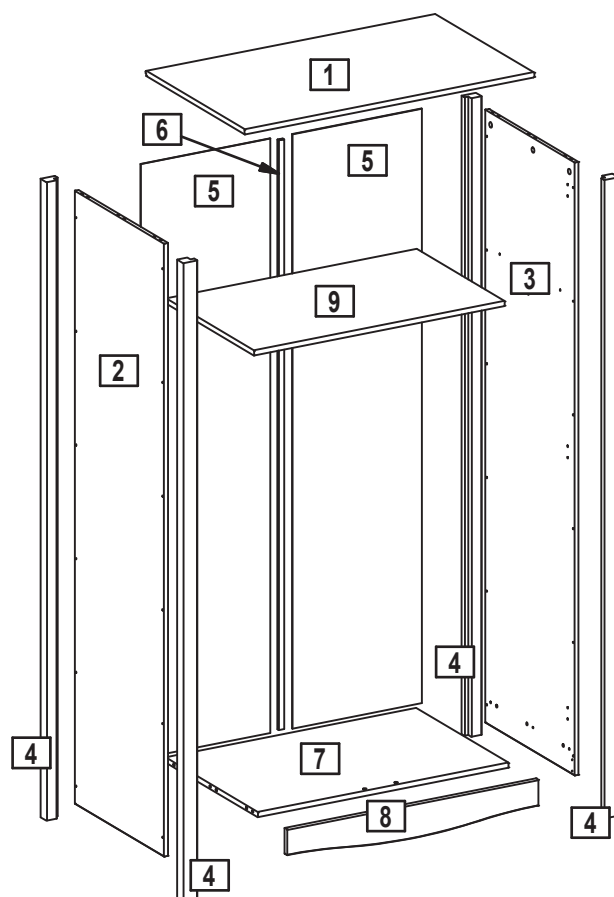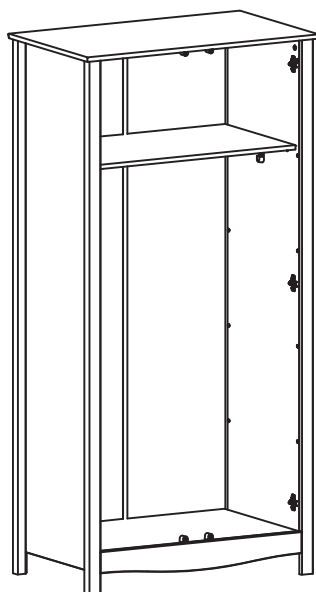

Step 1.1

 
Fix the posts **4** onto the sides **2** and **3** using screws **Jb** into the holes indicated.

The top of the posts **4** and the sides **2** and **3** must be flush.

Jb



ø4 x 25mm Screw x 24

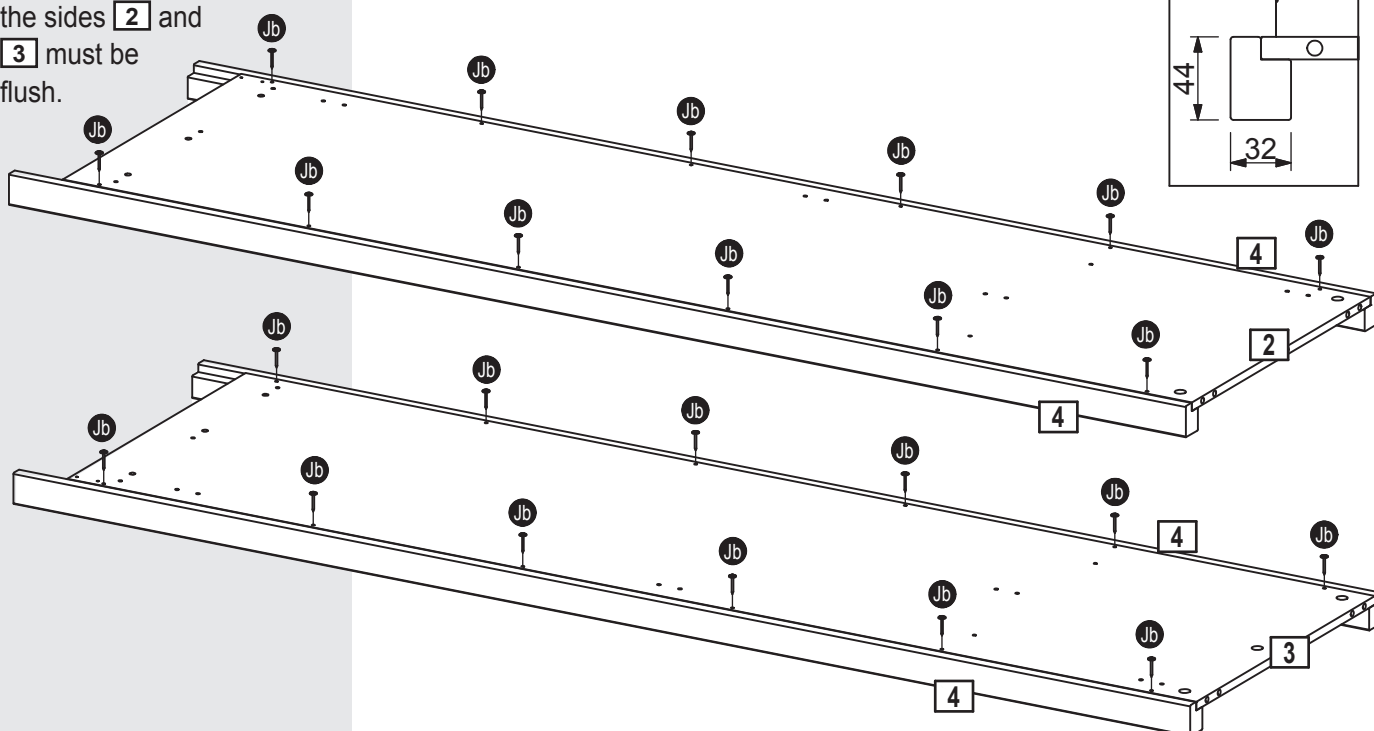

Assembly Instructions

Step 1.2

Knock the dowels **Aa** into the holes indicated on the sides **2** and **3**.

Use a small hammer.

Screw the bolts **Cb** into the holes indicated on the sides **2** and **3**.

Aa

 


ø7.8 x 40mm Wooden dowel x 6

Cb



ø5 x 8, cc34mm Bolt x 6

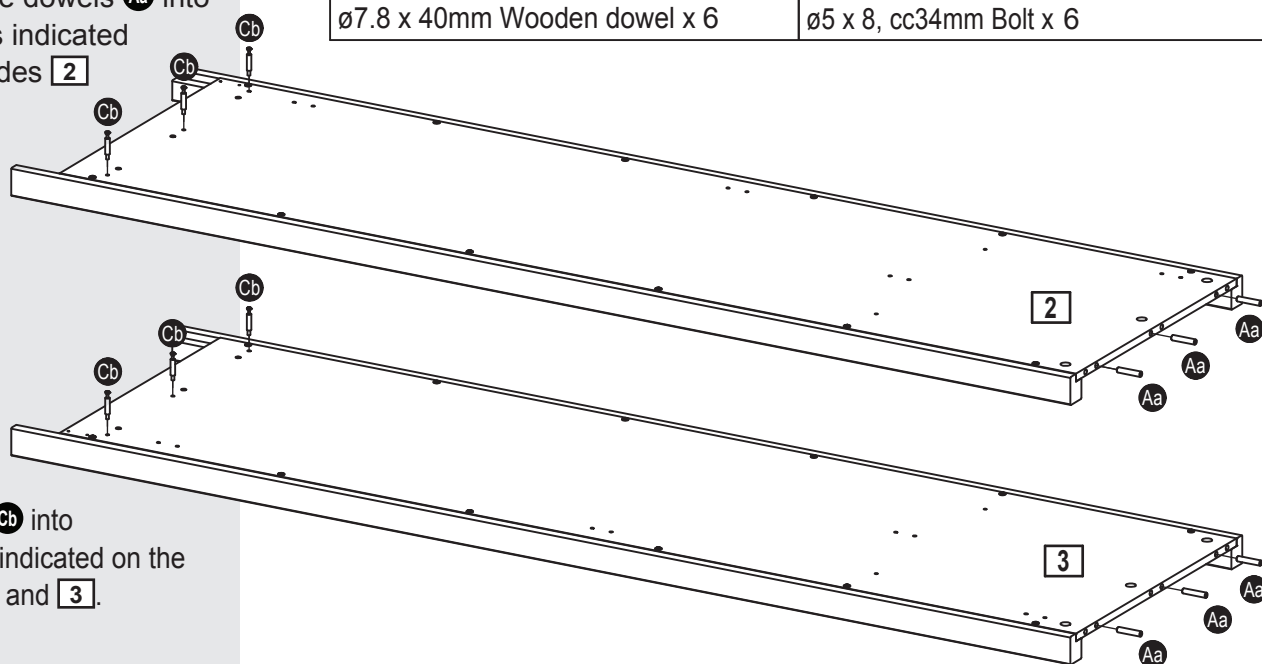

Step 1.3

Fix the Crossplates **Mc** to the sides **2** and **3** using the pre-mounted screws.

Note the details.

Position the Crossplates **Mc** exactly as shown.

Fix the supports for hangerrails **Fi** onto the sides **2** and **3** using screws **Bo**.

Bo



ø3 x 12mm Screw x 2

Fi

 


Support for hanger rail - 15mm x 2

Mc



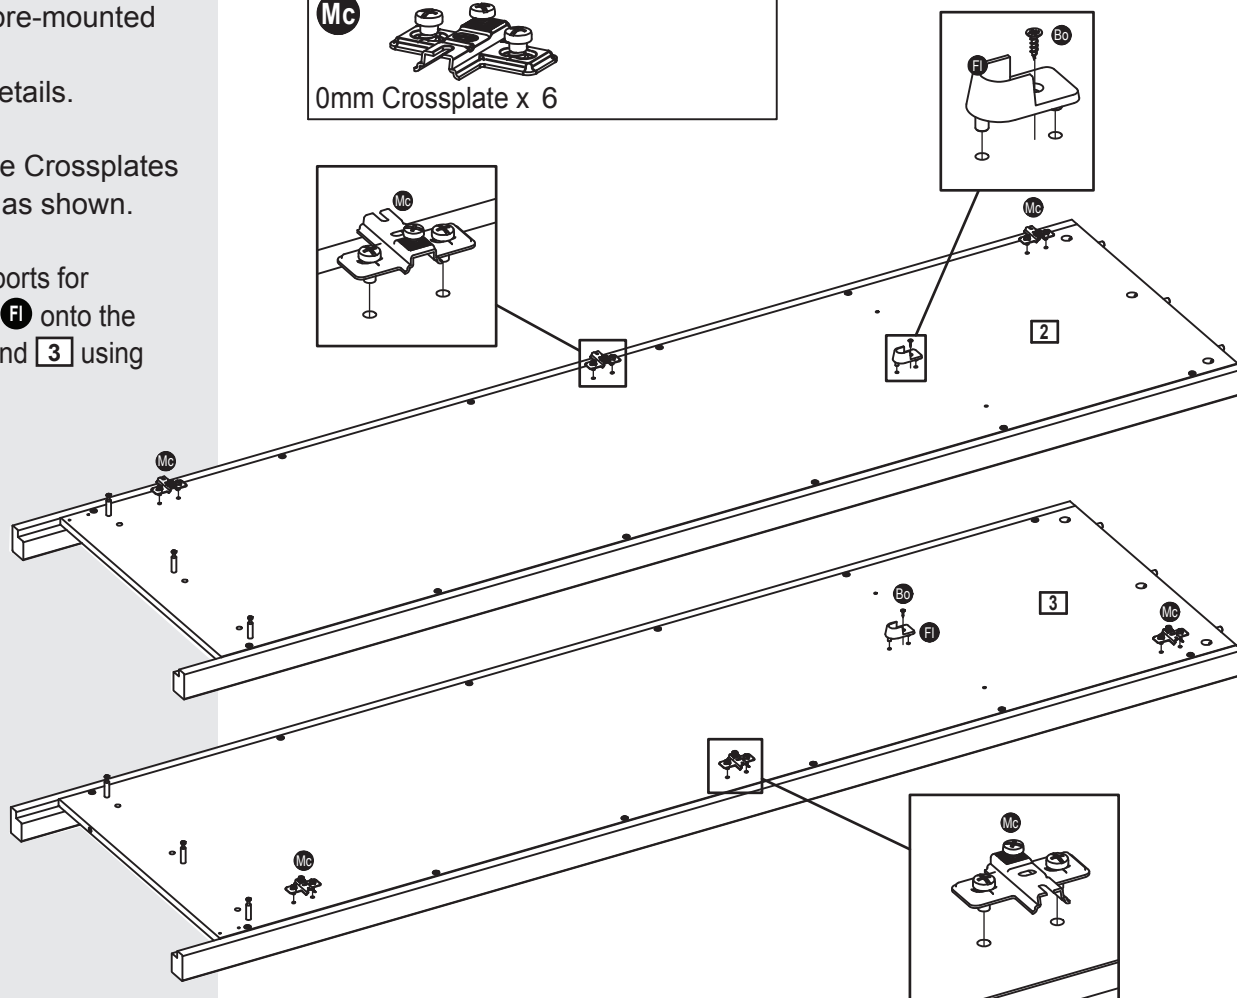



0mm Crossplate x 6




Assembly Instructions

Step 1.4

 Fix the angles **VI** using screws **Ko** into the holes indicated on the front rail **6**.

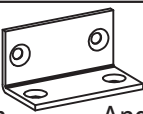

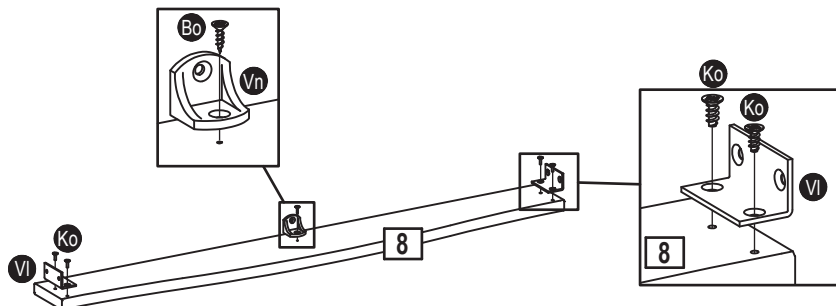Bo  ø3 x 12mm Screw x 1	Ko  ø4,2 x 9,5mm Screw x 4
VI  44 x 23 x 23mm Angle x 2	Vn  23 x 23 x 24mm x 1




Step 1.5

Knock the dowels **Aa** into the holes indicated on the bottom **7** using a small hammer.

Press the magnets **Pc** into the holes indicated on the bottom **7**.

Aa  ø7.8 x 40mm Wooden dowel x 6	Pc  Magnet, adjustable x 2
--	--

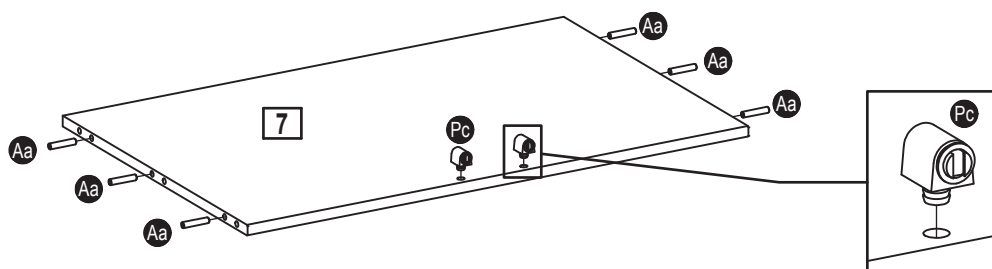 


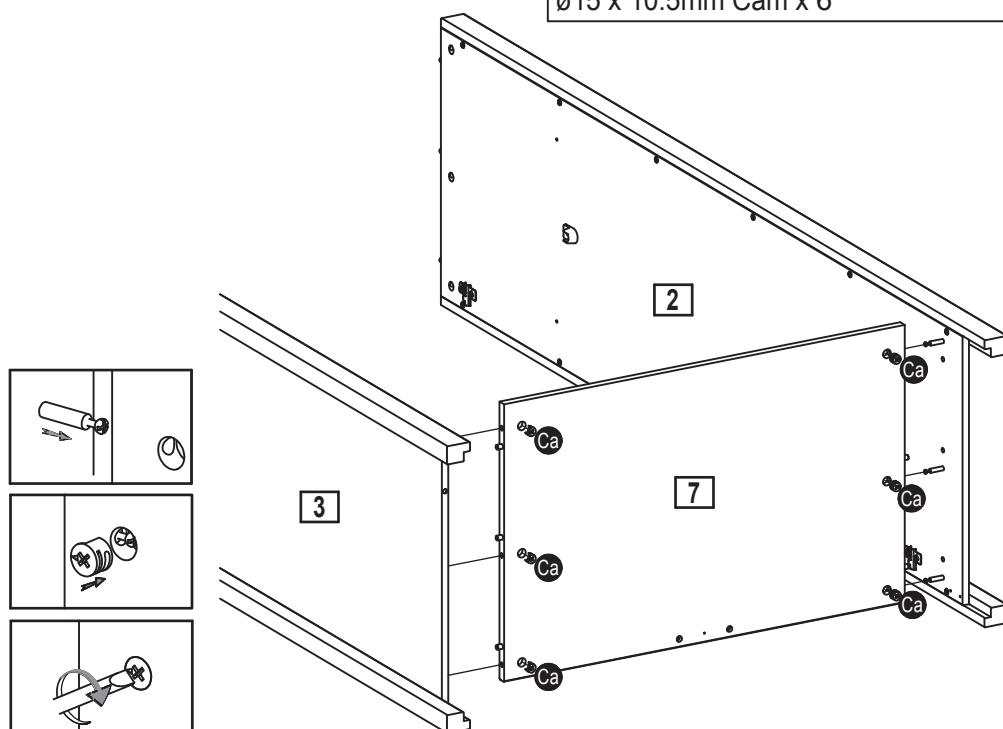 
Step 1.6

Place the sides **2** and **3** onto the bottom **7**.

Push cams **Ca** into the holes indicated on the bottom **7**. Arrows pointing towards the sides **2/3**.

Turn the cams **Ca** to the right to fix the sides **2** and **3**.

Ca  ø15 x 10.5mm Cam x 6
--

 


Assembly Instructions

Step 1.7

Screw the bolts **Cb** into the holes indicated on the top **1**.

Press the magnets **Pc** into the holes indicated on the top **1**.

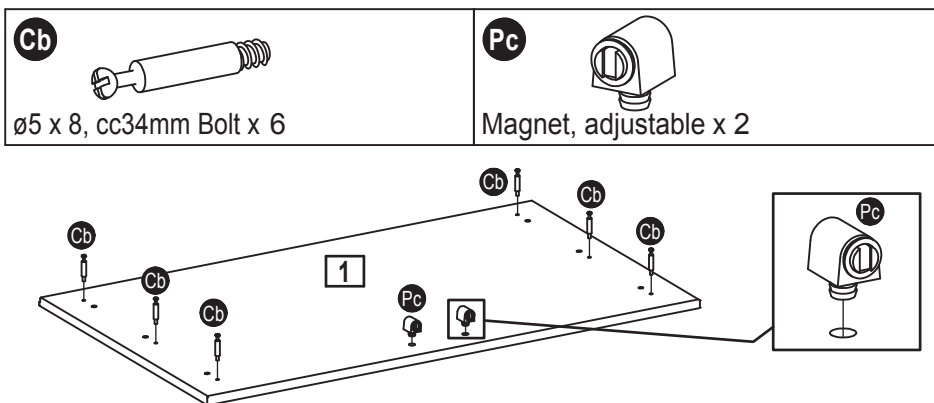


Step 1.8

Place the top **1** onto the sides **2** and **3**.

Push cams **Ca** into the holes indicated on the sides **2** and **3**.
Arrows pointing towards the top **1**.

 Turn the cams **Ca** to the right to fix the top **1**.

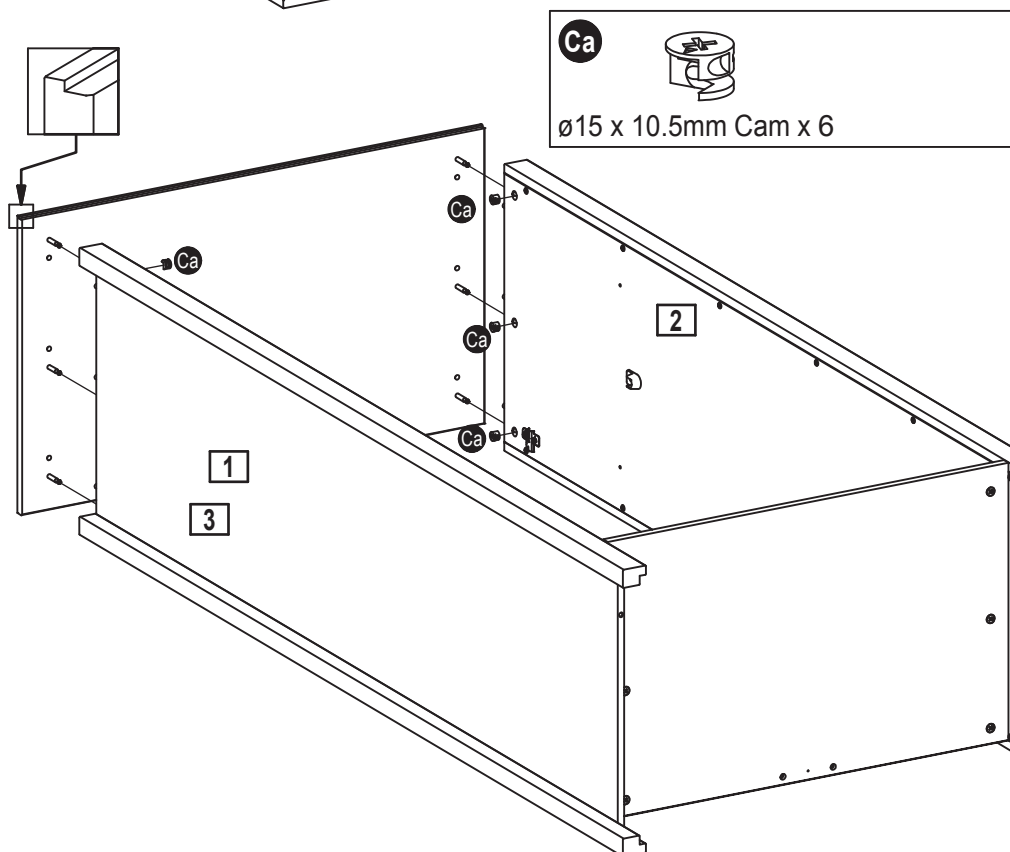


Step 1.9

Place the front rail **8** as shown.

Fix the angles **VI** to the sides using screws **Ko**.

 See detail.

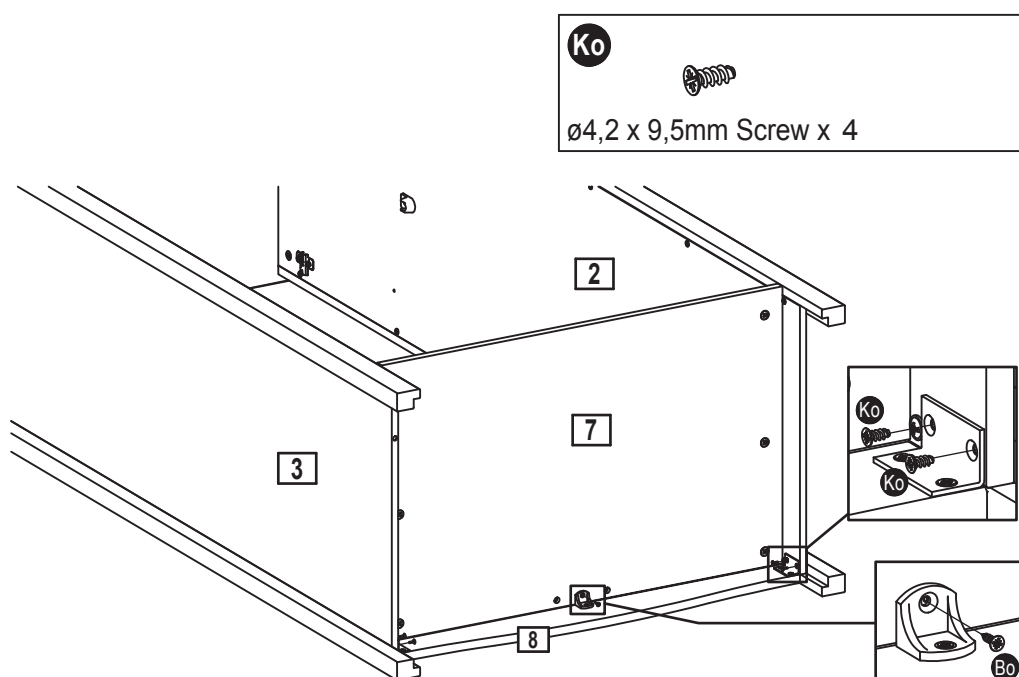

Assembly Instructions

Step 1.10

Place the backs **5** into the rabbet on the top **1** into the H-profile **6** and onto the posts **4**.

 


Important!

Make sure the angle between the top **1** and the posts **4** is 90° when the backs **5** is attached.

Fix the backs **5** to the top **1**, the posts **4** and the bottom **7** using nails **Di**.

Use a small hammer.

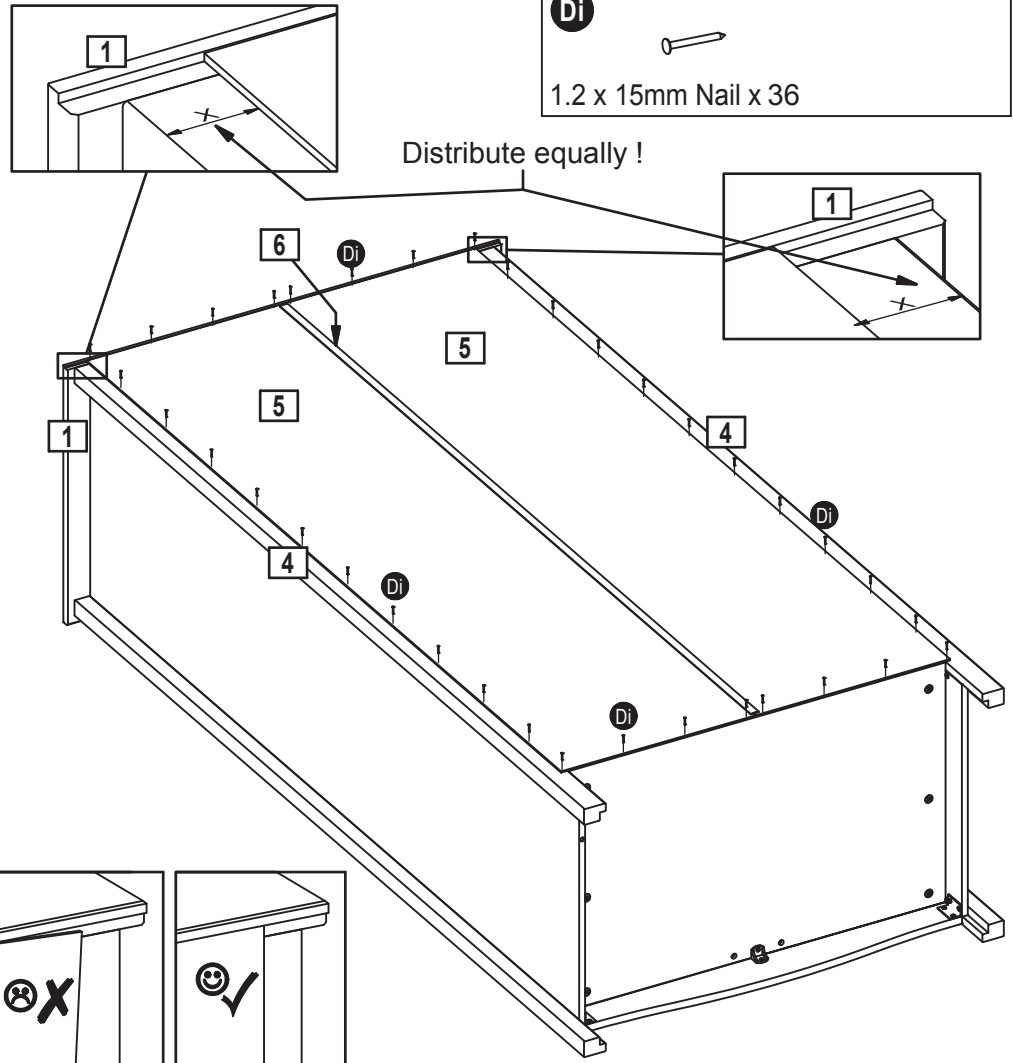

Step 1.11



Important!

 
The wardrobe is heavy. Lift with care.

It's recommended that the wardrobe is fixed to the wall.

Use the fittings **Fh**. Follow the instructions included with the fittings.

Fix the shelf supports **Fr** to the **2** and **3** using screws **Kb** into the holes indicated.



Lower the shelf **9** onto the shelf supports **Fr**.

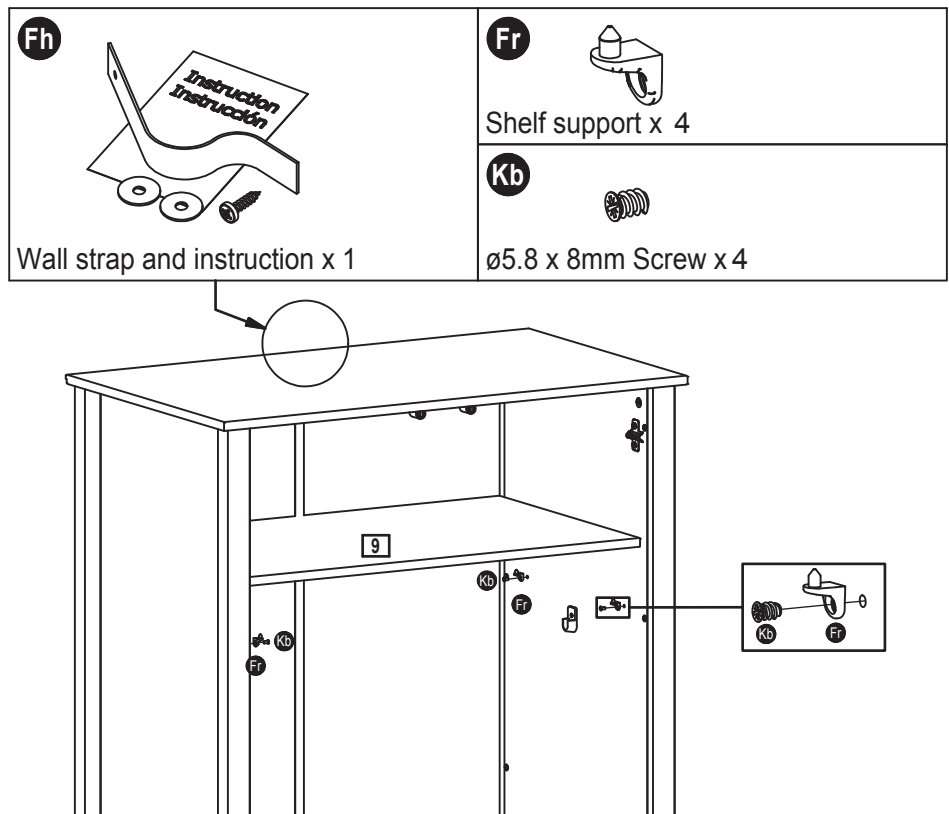

Assembly Instructions

Step 2

  Assembly of the doors.

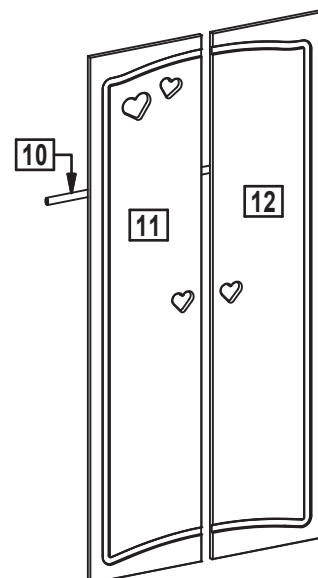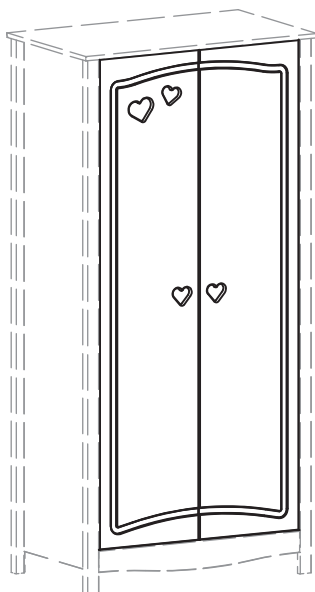

Step 2.1

Place the cup hinges **Mf** into the holes indicated on the doors **11** and **12**. Fix the hinges using screws **Bo**.

Fix the magnet catches **Pd** using screws **Bo** into the holes indicated.

Bo



ø3 x 12mm Screw x 16

Mf



 
ø26mm

Cup hinge x 6

Pd



35 x 12 x 1mm Magnet catch x 4

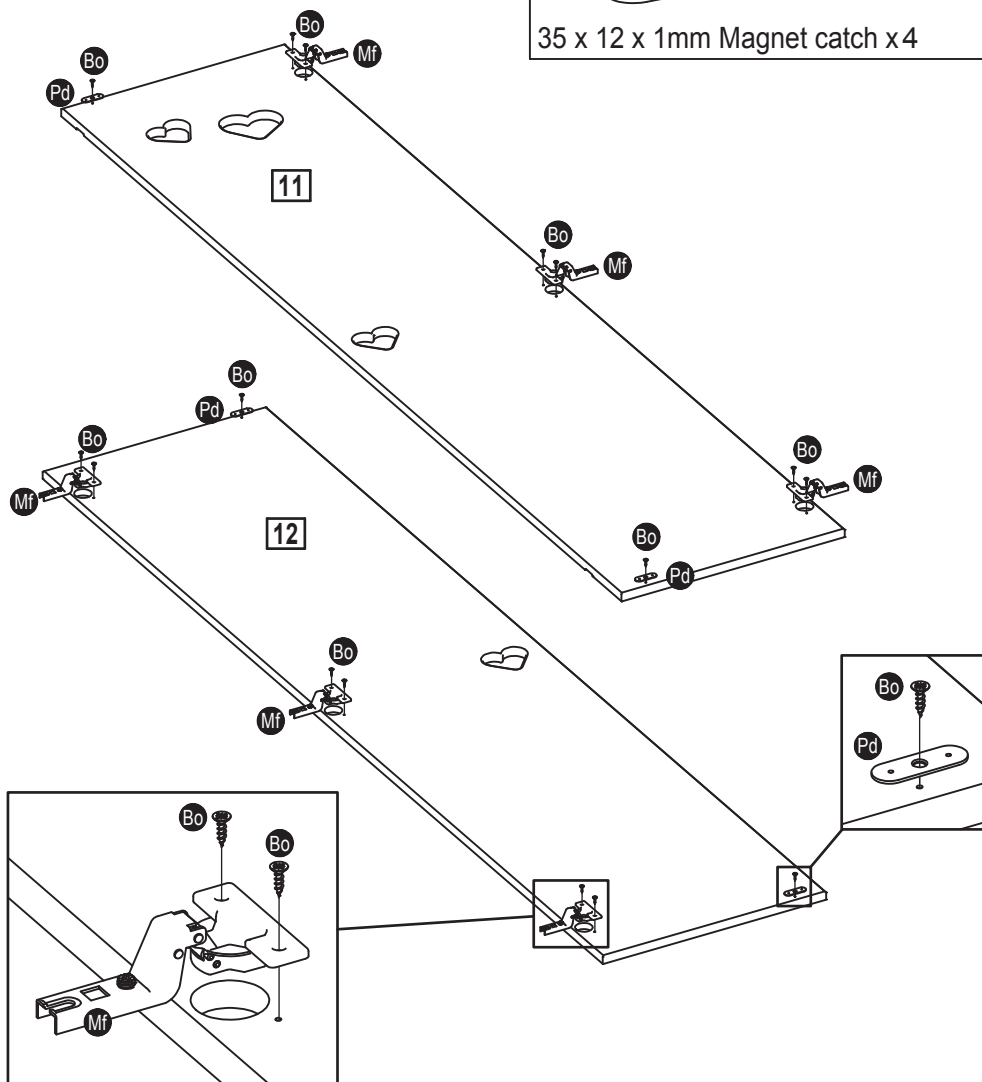

Assembly Instructions

 
 
 
Step 2.2

Place the hanger rail **10** into the supports **FI**.


Slide the cup hinges **Mf** onto the crossplates **Mc**.

Fix the hinges using the premounted screw in the crossplates.

See details below on how to fit the cup hinge **Mf** onto the cross plate **Mc**.

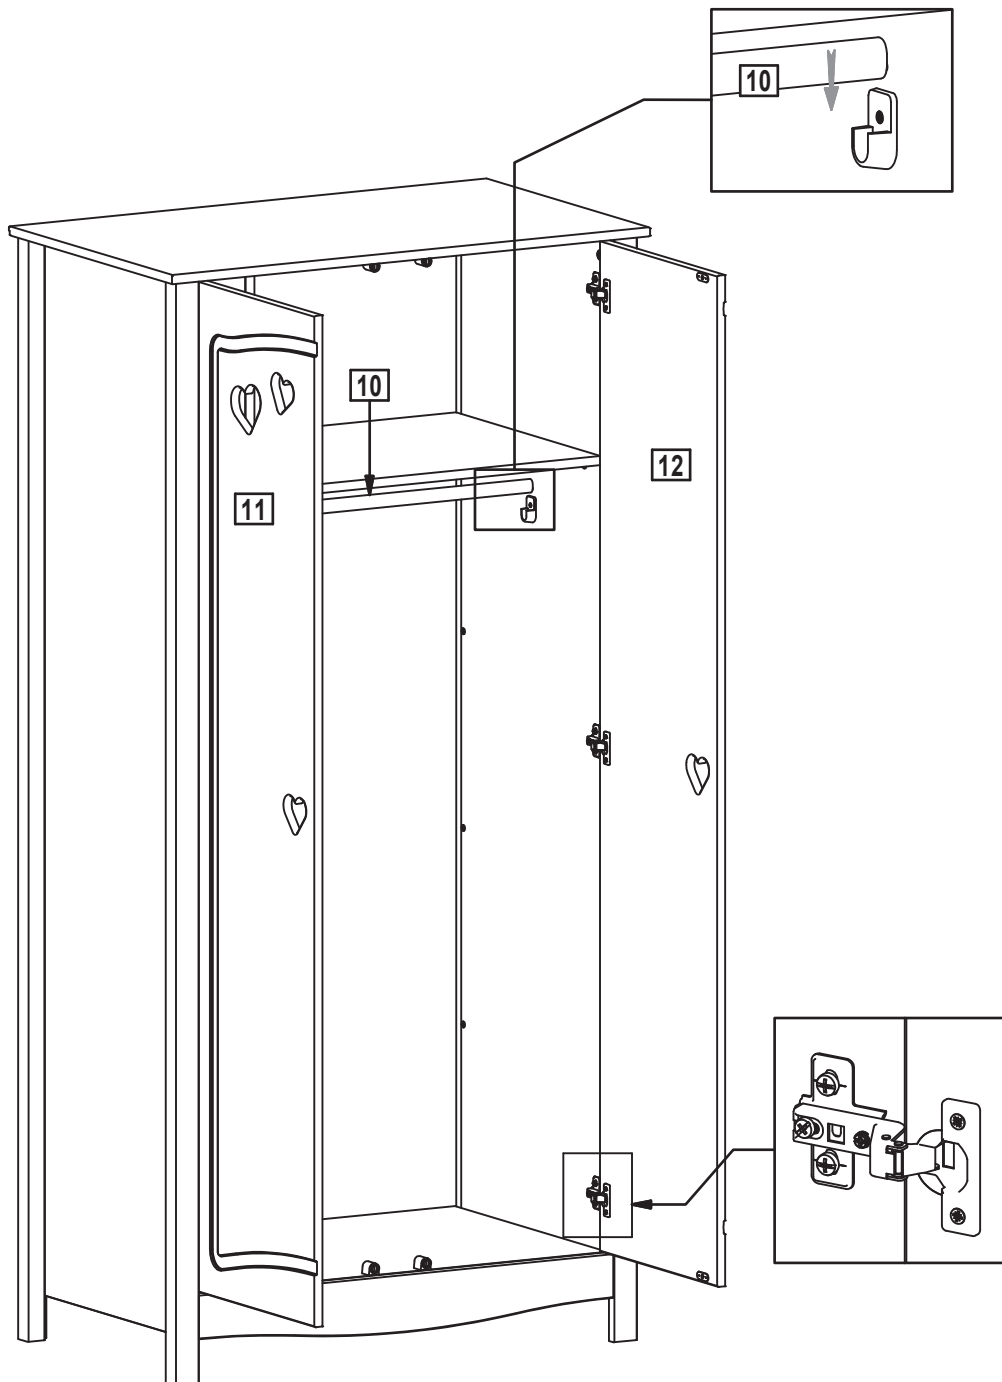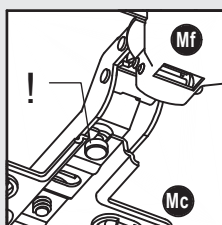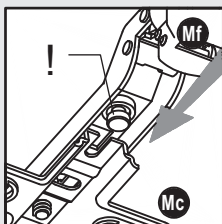

Adjust the magnets **Pc**.

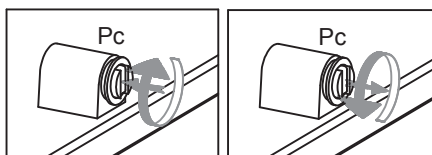 




Assembly Instructions

Step 2.3

Adjusting the doors left/right.

a:
To adjust the door towards the left hand side - turn the adjusting screw to the right.

   b:
To adjust the door towards the right hand side - turn the adjusting screw to the left.


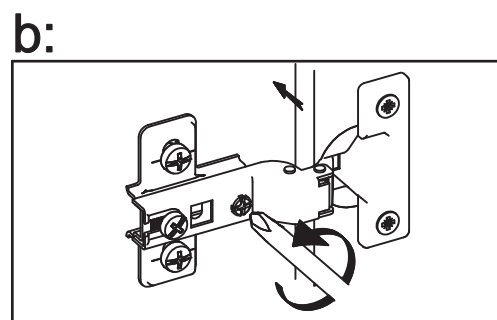
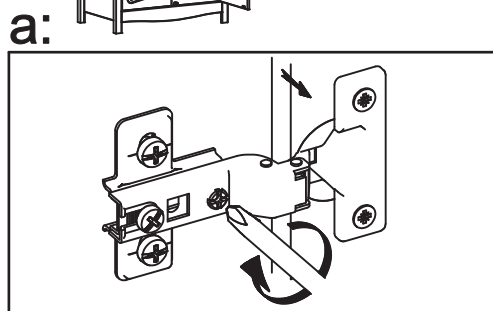
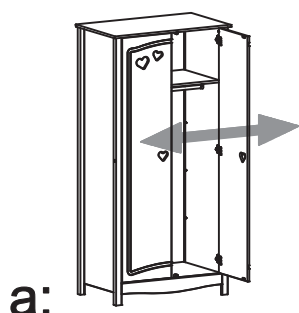


Adjusting the doors forwards/backwards.

a:
Loosen the fixing screw.

b:
Push the cup hinges / the door forwards OR backwards to adjust.

    c:
Tighten the fixing screws of ALL the crossplates.

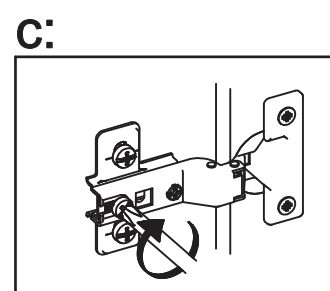
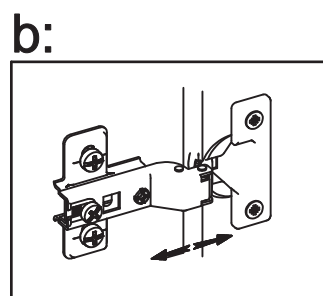
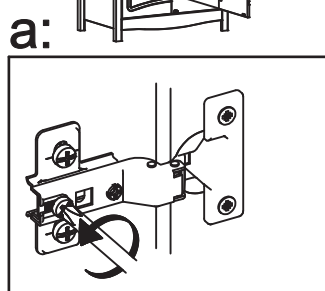
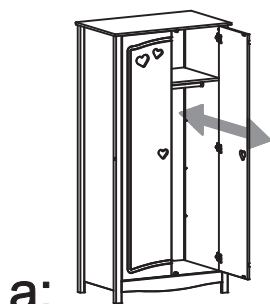


Adjusting the doors up/down.

a:
Loosen the two pre-mounted screws of each crossplate, BUT ONLY as much as it will allow the cross plate to move up and down.

b:
Push the the door up OR down to adjust.

    c:
Tighten the pre-mounted screws of ALL the crossplates.

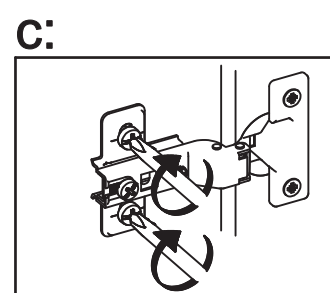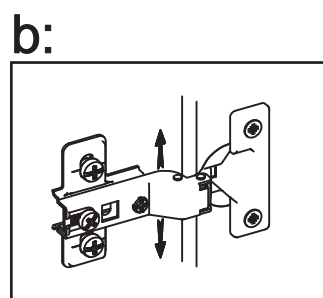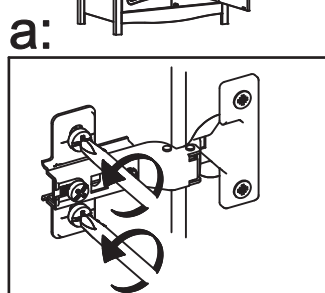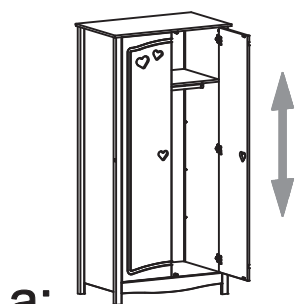

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 0845 640 30 30**
Home Retail Group - 489-499 Avebury Boulevard - Saxon Gate West - Central Milton Keynes MK9 2NW