
# pair of upholstered skirted chairs

Assembly Instructions - Please keep for future reference

258/1905

237/9791

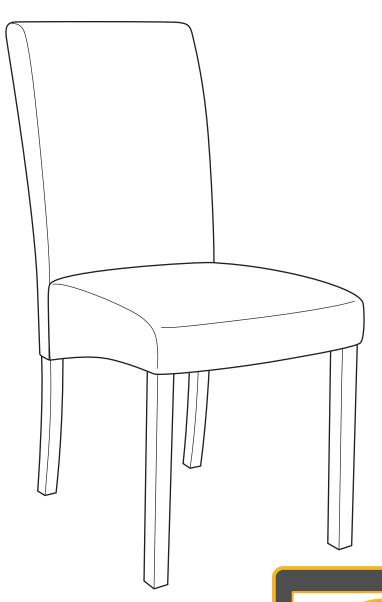



#### **Dimensions**

Width - 44cm

Depth - 56cm

Height - 95cm

### Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 640 0800** 

Stabilyne seat:
Patented, Recyclable & just plain **TOUGH!** 



## Safety and Care Advice

### Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- · Do not stand on the chair.
- Do not use the chair as a step ladder.
- Unit weight: 6.1 kgs.
- Maximum safe weight of user: 110kgs.



 To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

#### **Care and maintenance**

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


### **Handy Hints**

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.

## Components - Parts

If you have damaged or missing components, call the Customer Helpline: Argos = 0345 640 0800


### Please check you have all the parts listed below

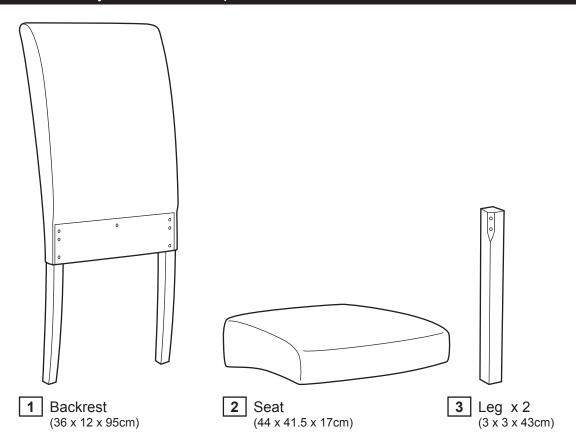

# Components - Fittings

### Please check you have all the fittings listed below

 **Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.




## **Assembly Instructions**

## Step 1

### **Opening cloth cover**

Place the backrest 2 on a flat protected surface.

Carefully peel off bottom cloth cover of seat by pulling the cloth from the back side of the seat as shown.

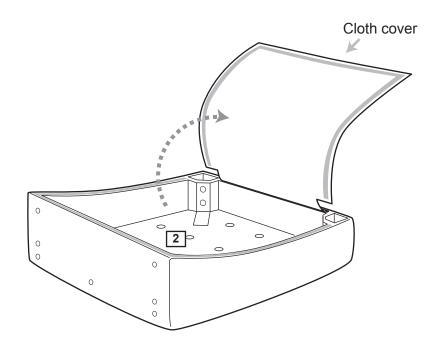

## Step 2

#### **Attaching legs**


Insert the legs 3 into the holes of the seat 2 as shown and fix using bolts with spring washers & flat washers **A**.



#### Important:

Fasten bolts using allen key but do not fully tighten at this stage.

Use oval head of allen key when tigthening bolts on corner positions.

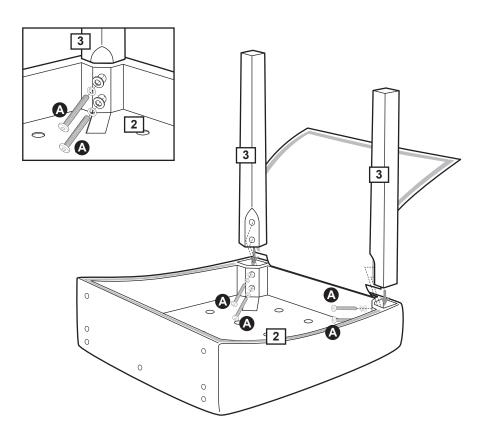

## Assembly Instructions

## Step 3

### Attaching the seat

Place the backrest 1 on a flat protected surface as shown.


Position the seat 2 on the backrest 1 as shown and fix using bolts with spring washers & flat washers **A**.



### Important:

Fasten bolts using allen key **B** but do not fully tighten at this stage.


Use oval head of allen key when tigthening bolts on corner positions.

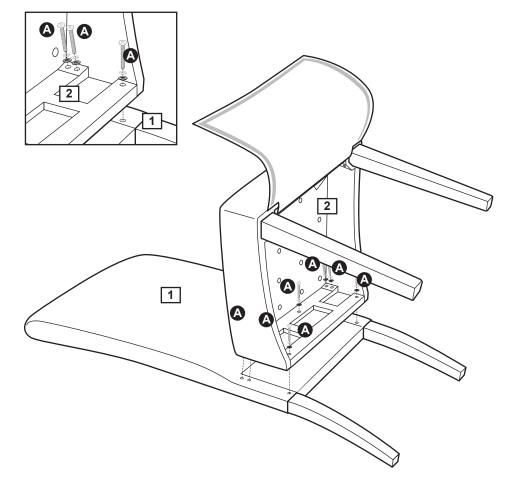

## Step 4

#### **Attaching foot pads**

Remove backing from foot pads **©** and carefully position on the bottom of the legs **1** & **3** as shown.

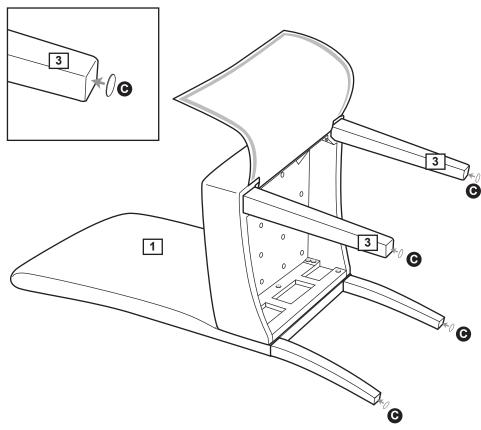

## **Assembly Instructions**

## Step 5

## Aligning & securing the legs

Carefully turn the chair upright and place on a flat surface.

**a:** Tighten all bolts using allen key **B**.

**Note:** Use oval head of allen key when tigthening bolts on corner positions.

**Note:** This step is essential to prevent the chair from wobbling due to uneven legs.

**b:** Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.

**C:** After the sitting test, re-tighten bolts again if any adjustment is needed.

**Note:** It is highly recommended to re-tighten all bolts after using the chair for 7 days.


**Note:** Keep allen key to re-tighten bolts when required.

## d: Re-attaching the bottom cloth cover


Re-attach the bottom cloth cover as shown.

Assembly is complete.




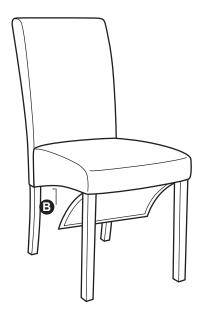



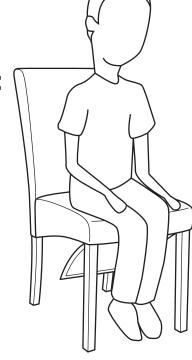

C:

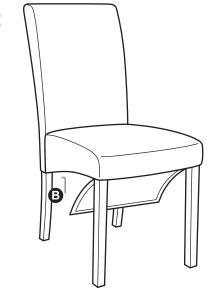





If you need help or have damaged or missing parts, call the **Customer Helpline**: **Argos = 0345 640 0800**