
Solid Pine Shoe Rack And Mirror

Assembly Instructions - Please keep for future reference

346/0348

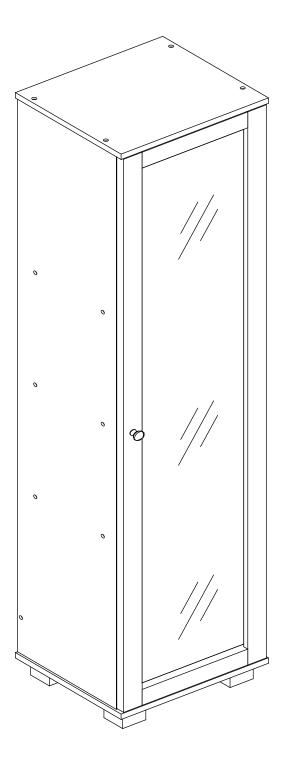

Dimensions

Width - 50cm Depth - 37cm Height - 161cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:** Argos = 0345 6400800

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

To reduce
the likelihood of
damaging your
product please
ensure that your

power drill is set on a low torque setting.

Safety Warning Information

 Do not place very hot or very cold items against or in close proximity to mirror surface unless an adequately thick insulating material is used to prevent such items from coming into contact with the mirror. • Do not strike the mirror with hard or pointed items.

• When cleaning glass panels or mirrors use a damp or leather with washing up liquid or soft soap if necessary; do not use washing powders or any other substance containing abrasive since these substances scratch glass.

• It is essential that this unit is fixed to a wall with the fixings provided.

Catalogue Number:<u>346/0348(D)</u> Manufacture date:_____ Retailer: <u>Argos</u> Retailer address: <u>MK9 2NW</u> • This unit contains film back mirror of nominal thickness of 3mm.

• If a mirror is chipped or broken, stop using the product and replace with mirror of the type described on this label. Consult the manufacturer, retailer, or agent with regard to obtaining a manufacturing specification and shape for replacement mirror glass quoting the model number, and batch number or date of manufacture.

Care and maintenance


 Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

 From time to time check that there are no loose screws on this unit. • This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

If you have damaged or missing components,call the **Customer Helpline: Argos = 0345 6400800**


Please check you have all the panels listed below

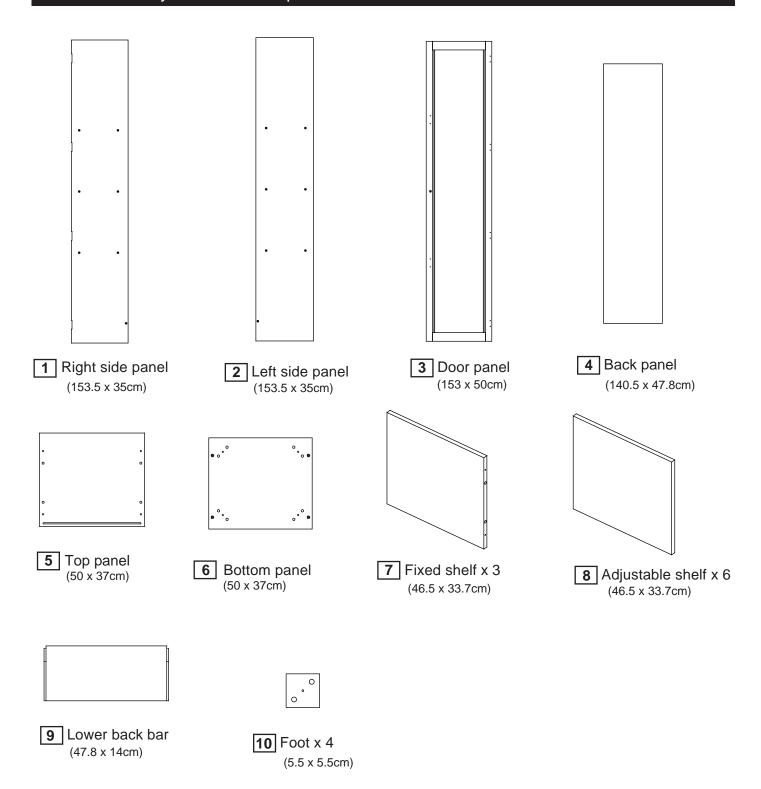


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

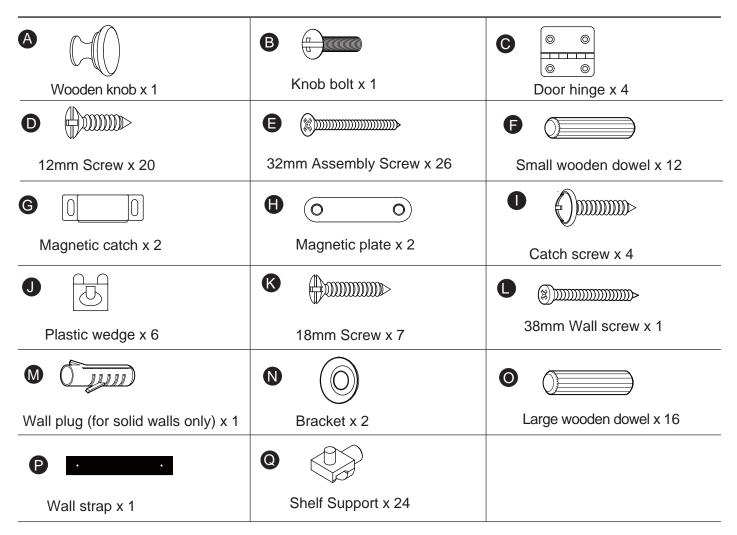

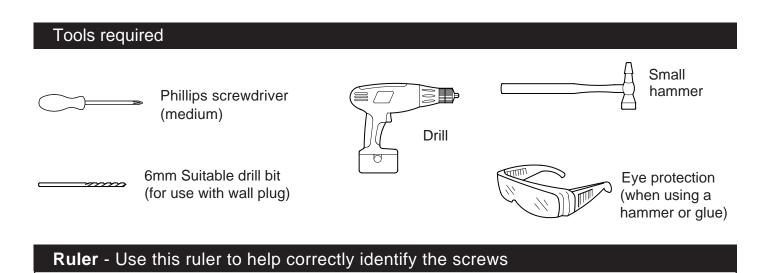

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170


Assembly Instructions

Step 1

Fixing magnetic catch and door hinge

Fit the magnetic catch **G** onto the left side panel **2** with screw **1**.


Fit the door hinge **O** onto the right side panel **1** with screw **D** as shown in the figure.

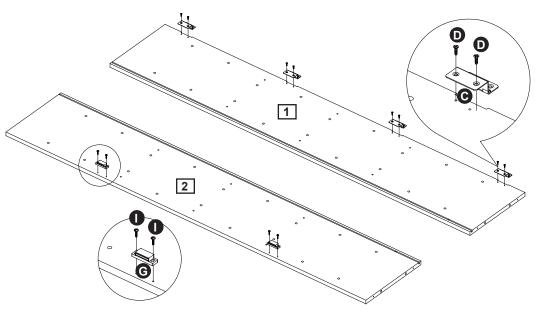

Step 2

Fitting wooden dowel

Insert wooden dowel (F) into shelves (7) as shown in figure.

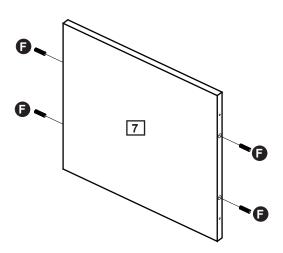


Assembly Instructions

Step 3

Attaching shelves


Attach the shelves 7 to the left side panel 2 with wooden dowel **(F**), then use assembly screw **(E**) to tight the shelf **7**.

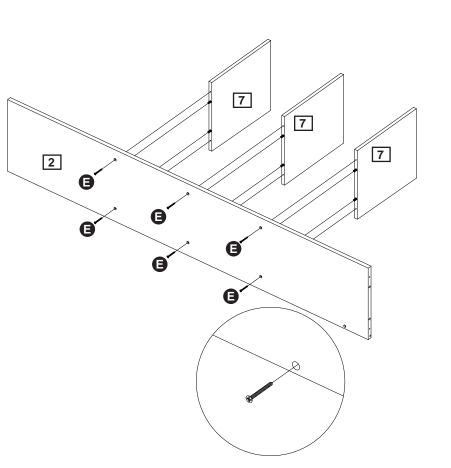

Step 4

Attaching right side panel

Attach the right side panel 1 to the assmebled unit with wooden dowel **()**, then use assembly screw **()** to tight the shelf **(7)**.

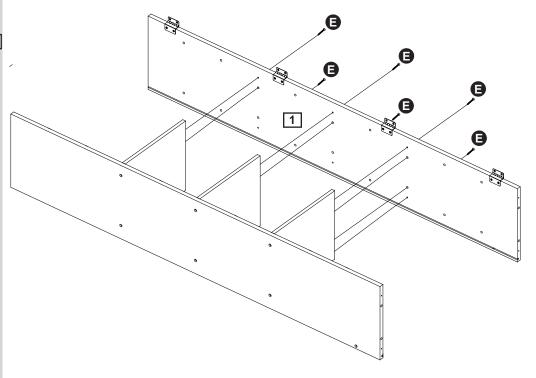


Attaching lower back panel

Slide the lower back panel into the unit through the grooves of the side panels using assembly screw to tight.

Step 6


Attaching the foot

Attach the foot 10 to the bottom panel 6 with large wooden dowel **O** and assembly screw **B**.

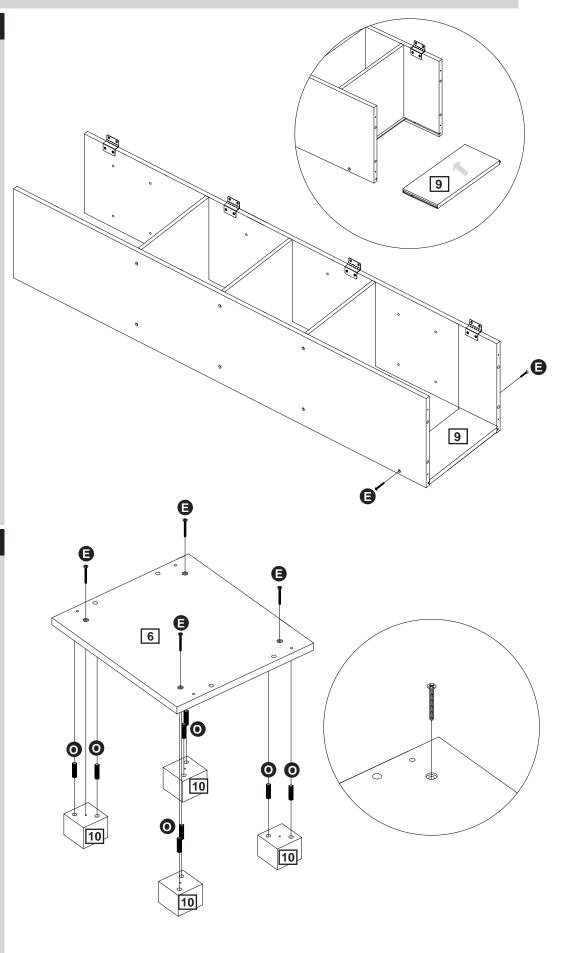

Attaching bottom part


Attach the bottom part to the assembled unit with small wooden dowel **O** and assembly screw **E**.

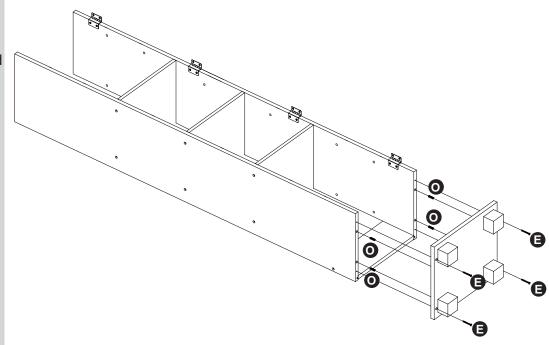

Step 8


Attaching back panel

Attach the back panel 4 into the unit by sliding into the grooves of the side panels.

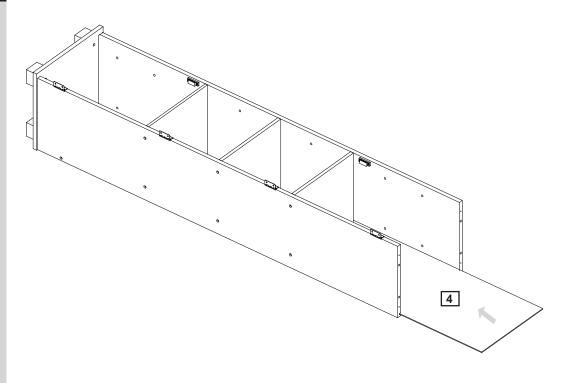

Attaching top panel

Attach the top panel 5 to the assembled unit with small wooden dowel O and assembly screw E.

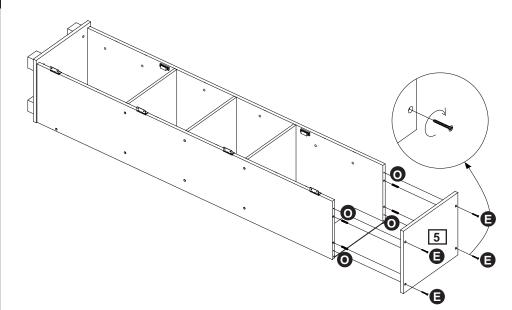


Step 10

Fitting magnetic plate and door knob

Fit the megatic plate to the door panel 3 with screw **D**.

Fit the door knob \triangle to the door 3 with knob bolt \square .

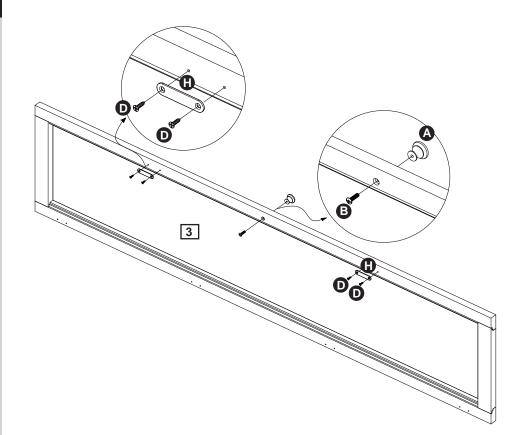


Two persons are required here


Fitting door hinge Fit the another half of door hinge (C) to the door (3) with screw (D).

Fitting adjustable shelf Insert the shelf support into the holes of side panels. Then put the adjustable shelves 8 onto supports.

Step 12

Fitting plastic wedge Fit the plastic wedge ① to the back panel with screw ③.

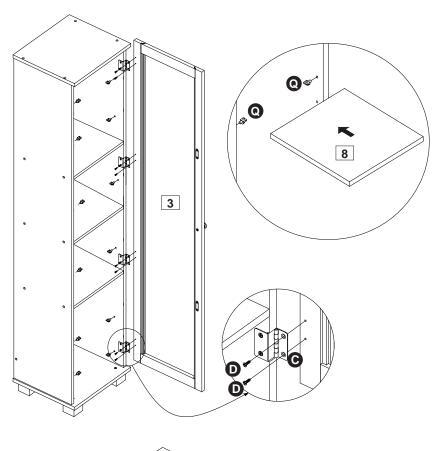

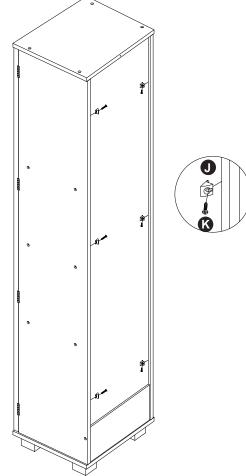

Fitting wall strap

Fit the wall strap \mathbf{P} to the top panel with bracket \mathbf{N} and screw \mathbf{K} .

Step 14

Fixing to wall It is recommended that the unit is fixed to a wall .

Mark fixing hole on wall and remove the assembled unit.


Drill 6mm hole and insert wall plug \mathbf{M} .




Warning:

Before drilling, check wall for hidden pipes and cables.

Position the unit close up to the wall, then insert the wall screw ①through the bracket N and wall strap Pinto the wall plug M.

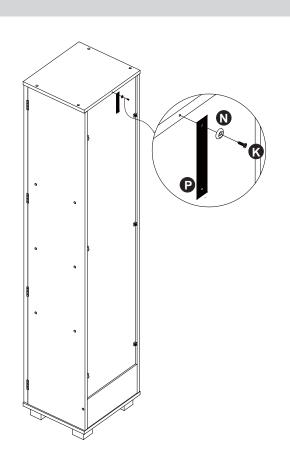

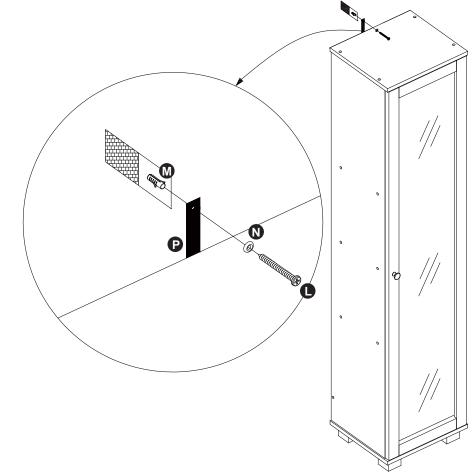

If you need help or have damaged or missing parts, call the **Customer Helpline:** Argos = 0345 6400800

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- **1: General rule:** Always use a larger screw and wall plug if you are not sure.
- **2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

You can use one of the following types of wall plug if your walls are made


5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls

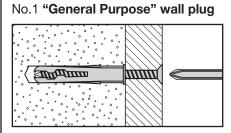

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 
No.2 "Plasterboard" wall plug



For use when attaching light loads on to plasterboard partitions.




of brick, breeze block, concrete, stone or wood.

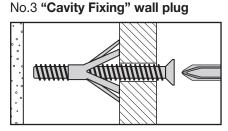

 For use with plasterboard partitions or hollow wooden doors.






For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.


Safety: Always check the fitting and location to ensure your safety in and around the home.

 No.5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads



For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.