


Components for one pack

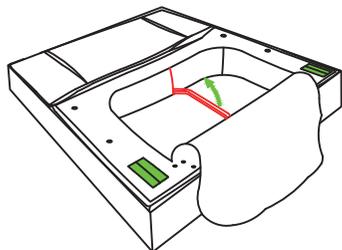


Fittings for one pack

HARDWARE LIST:

A:		2 PCS	C:		6 PCS
B:		2 PCS	D:		4 PCS
G:		1 PCS	E:		4 PCS
H:		1 PCS	F:		1 PCS

Open bottom packing

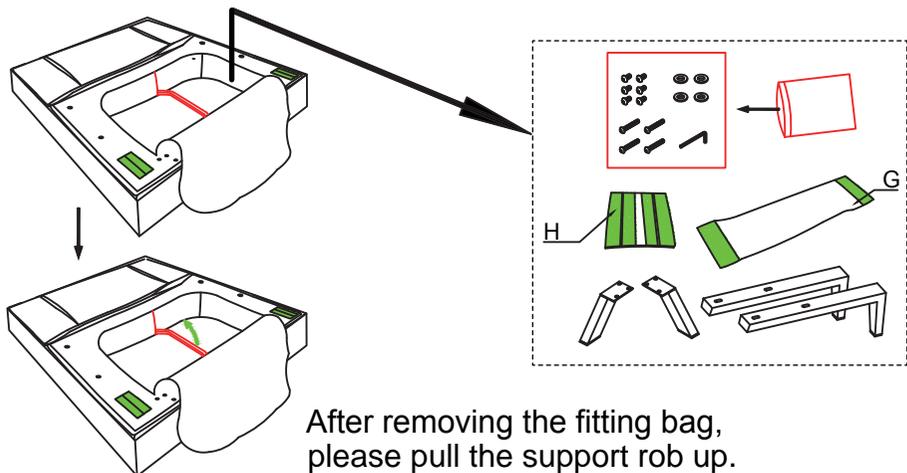


After removing the fitting bag, please pull the support rod up.

DUO CLIC CLAC SOFABED

Simple Assembly Instructions – Please keep for future reference

3553657
3689284
3432022

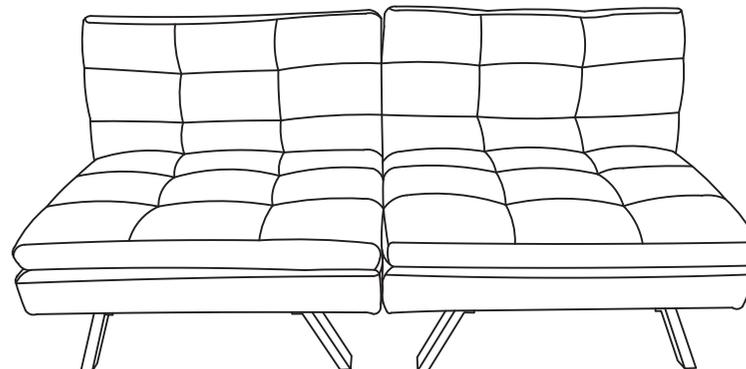


Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 640 0800

1. Read these instructions carefully and familiarise yourself with the procedure before assembling the unit.
2. Check that you have all the component parts following the list on the back cover and familiarise yourself with each part before proceeding.
3. Take all the fittings out of the plastic bag and separate them into their groups.
4. Ensure you have enough space to lay out all the parts before assembly.
5. To avoid scratching it is recommended that you assemble the unit on a soft level surface.


Assembly Instructions

Stage 1 - Fitting the Sofabed

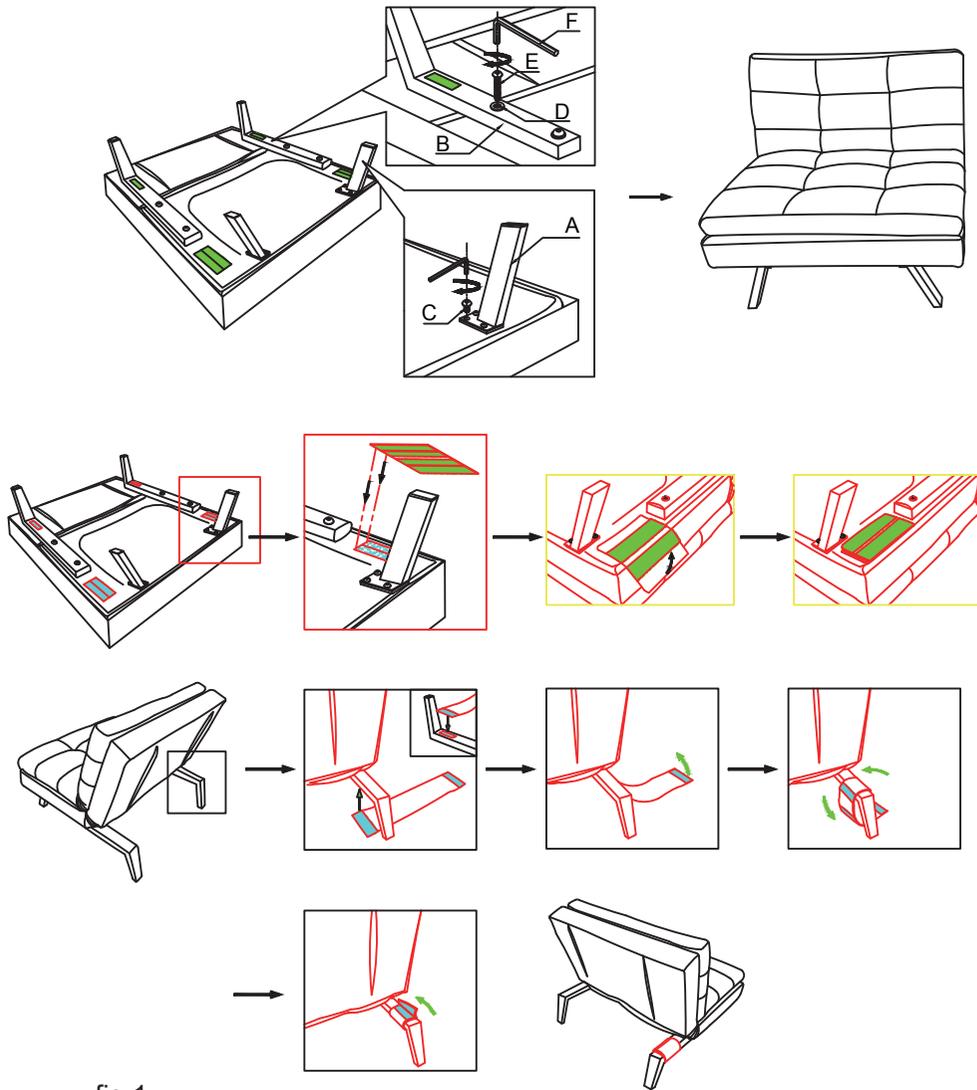

Assembly Instructions

Stage 2 - Finishing the unit

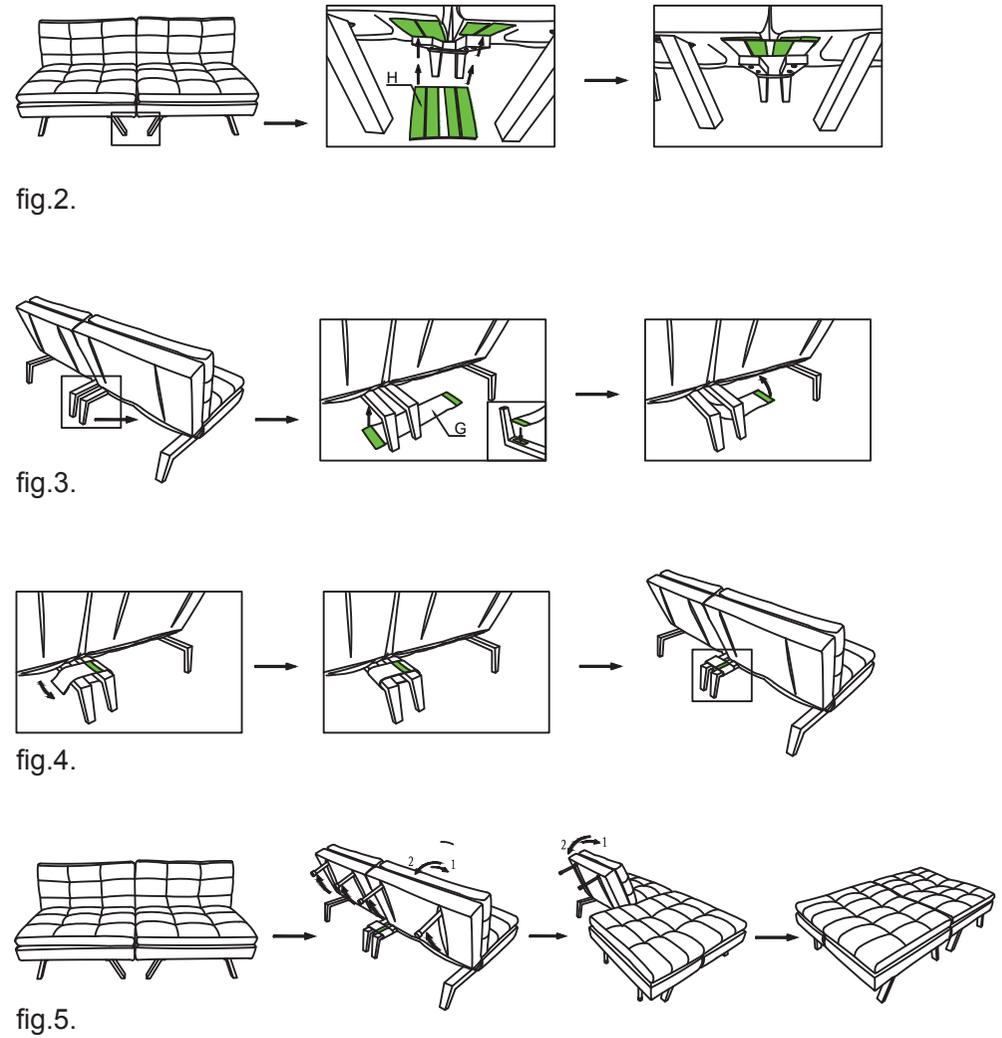

Assembly Instructions

Stage 3 - Fitting the Sofabed

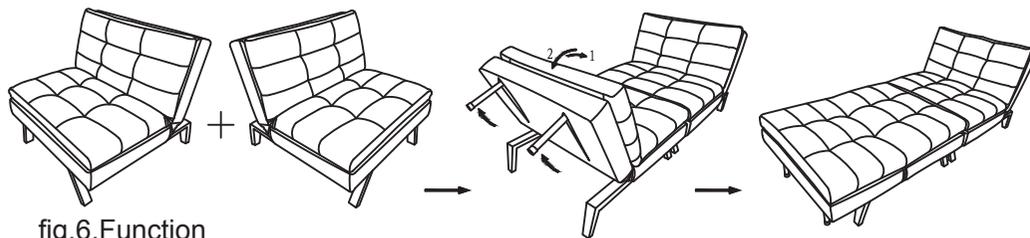


fig.6.Function

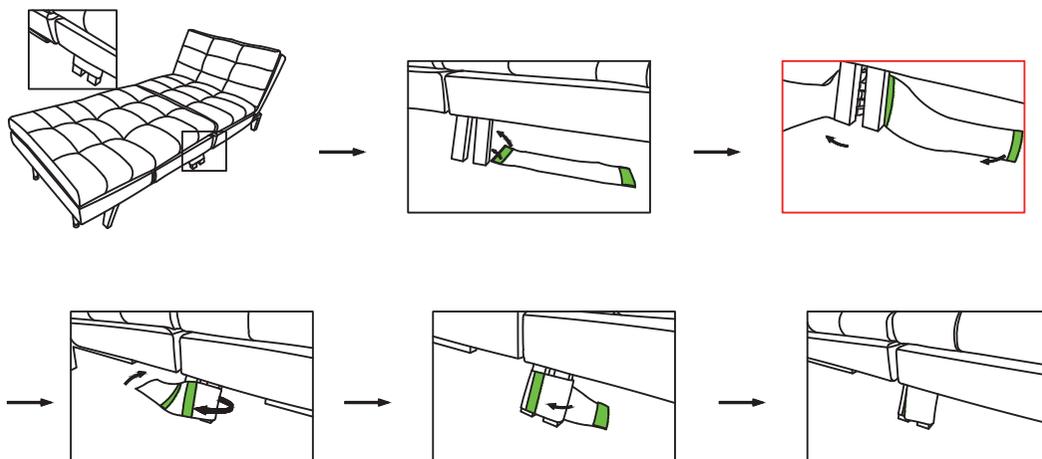


fig.7.(fixing strap in side leg)

Assembly Instructions

Stage 4 - Finishing the unit

Carefully place the unit in the desired location.




CAUTION:

-Beware of entrapment.Keep hands and fingers clear of mechanism when operating the controls.

-Ensure that children or pets are not playing or lying in the way when the mechanism is operated.

-Prevent children from playing on the furniture or with the controls.

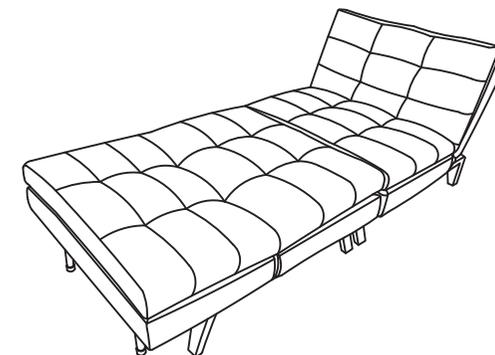

Care and Maintenance

Safety

To avoid any risk of suffocation to animals or children dispose of the plastic bags immediately.

Cleaning

As with all surfaces clean with a damp cloth and mild detergent ,do not use bleach or abrasive products.

Fitting

From time to time please ensure there are no loose screws on the product.

If you need help or have damaged or missing parts,call the Customer Helpline:

0345 640 0800

489-499 Avebury Boulevard Milton Keynes MK9 2NW,Argos Limited