
Classic Two Tone - Chest of Drawers

Assembly Instructions - Please keep for future reference

3774292

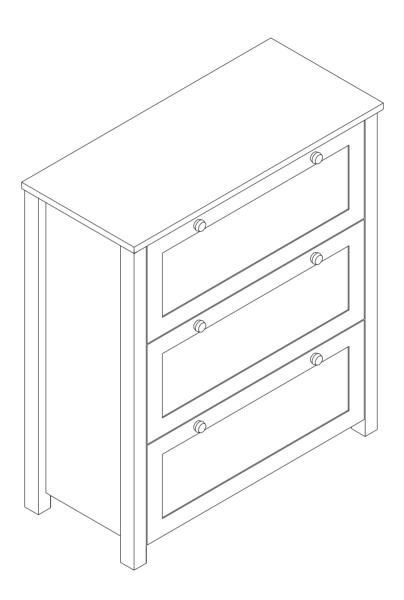

Dimensions

Width - 82cm

Depth - 37cm

Height - 92,8cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400 800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- · Assemble on a soft level surface to avoid damaging the unit or your floor.

- This product contain
 Natural timber; you may
 notice some variation in the grain
 and colour of different component
 parts which is normal for furniture
 produced using natural wood and
 is not the result of any
 manufacturing fault.
- Do not stand or put weight on the product, this could cause damage.
- · Assemble the item as close to its final position (in the same room) as possible.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.


Care and maintenance

- Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.
- · Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

Please check you have all the panels listed below

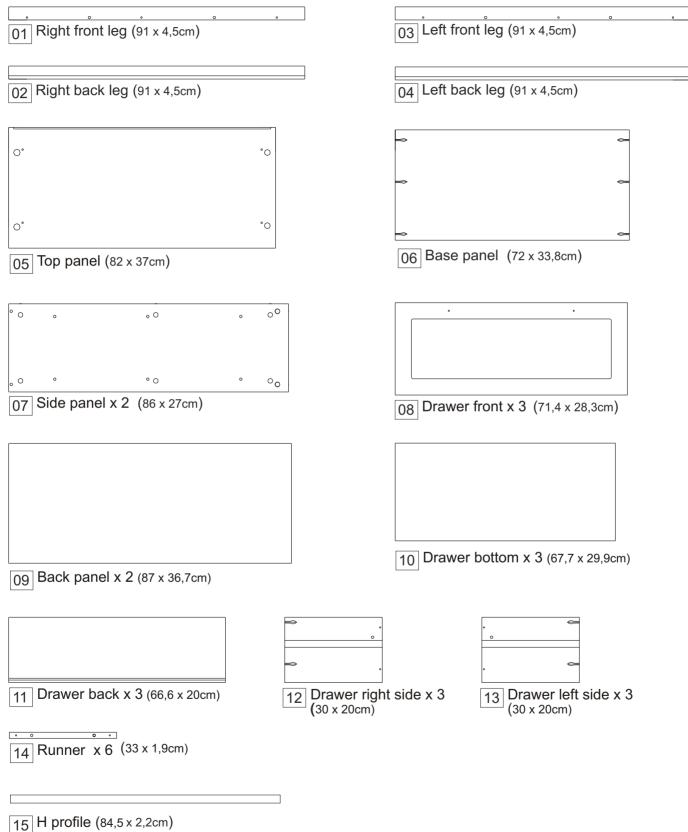



Components - Fittings


If you have damaged or missing components, call the Customer Helpline: **08456 400 800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A		©
8,0 x 30mm Wooden dowel X 36	3,5 x 30mm Screw X 48	10 x 10 Nail X 24
Plastic pin X 06	Handle X 6	Foot pad X 4
G (3,5 x 16mm Screw X 1	Wall strap X 1	Washer X 2
8,0 x 20mm Wooden dowel X 12	Locking nut X 16	Metal dowel X 16

Tools required

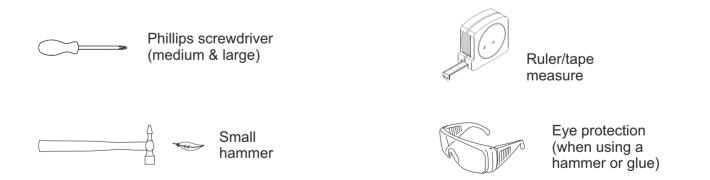

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170


Step 1

Parts 01, 02, 03 and 04 are labeled for easier identification.

Insert wooden dowels A into legs 01,02,03 and 04 as shown.

Screw metal dowels ointo legs 01,02,03 and 04.

Do note over tighten metal dowels. Fully insert wooden dowels.

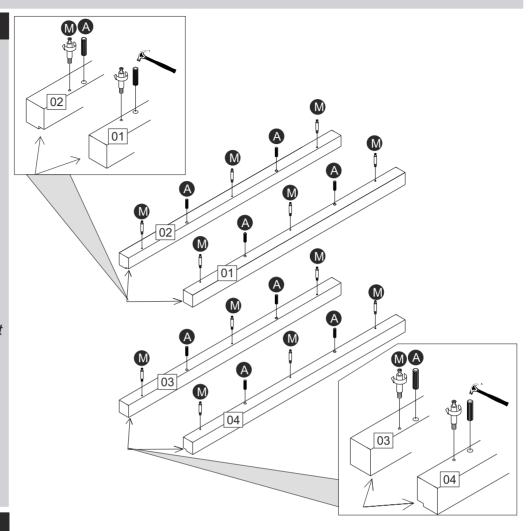


Step 2

Insert wooden dowels **A** into the indicated parts.

Insert wooden dowels **J** into runners 14, as shown in the diagram.




Fully insert wooden dowels.

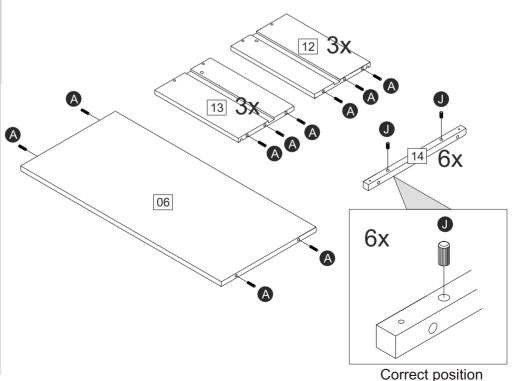


Step 3

- a) Fit side panel 07, left front leg 03 and left back leg 04 together as shown.
- b) Insert locking nuts where shown. Use a screwdriver to turn locking nuts clockwise to lock.

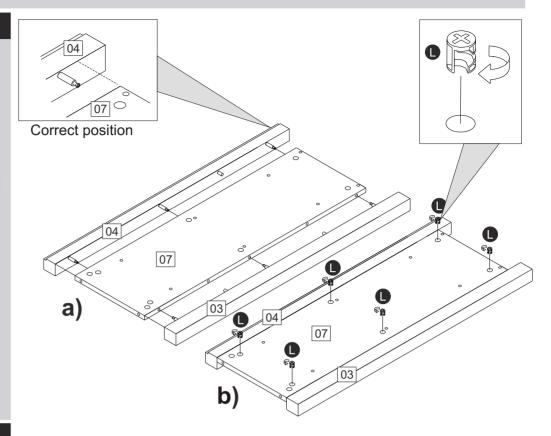


Step 4

Fix runners 14 to side panel 07 using screws **B** . Make sure holes in runner are positioned as shown.

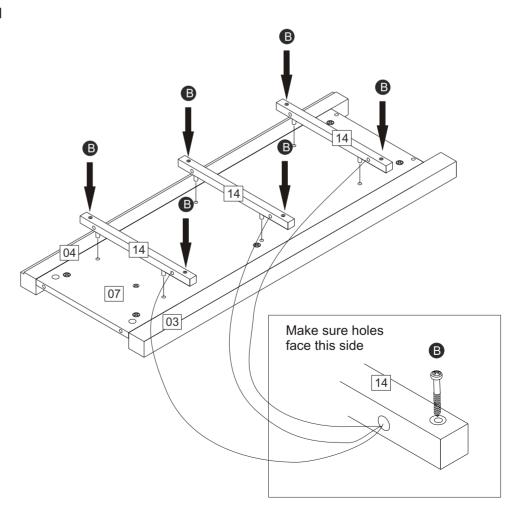


Step 5

- a) Fit side panel 07, right front leg 01 and right back leg 02 together.
- b) Insert locking nuts where shown. Use a screwdriver to turn locking nuts clockwise to lock.

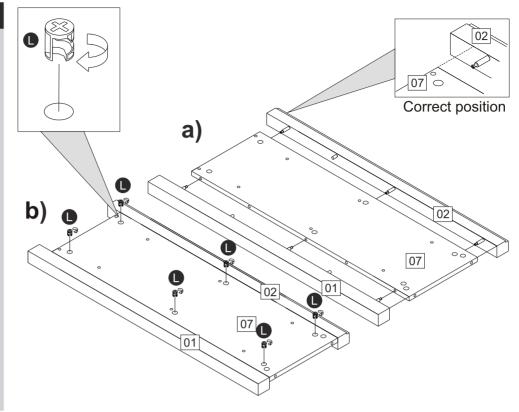


Step 6

Fix runner 14 to side panel 07 using screws **B**. Make sure holes in runner are positioned as shown.

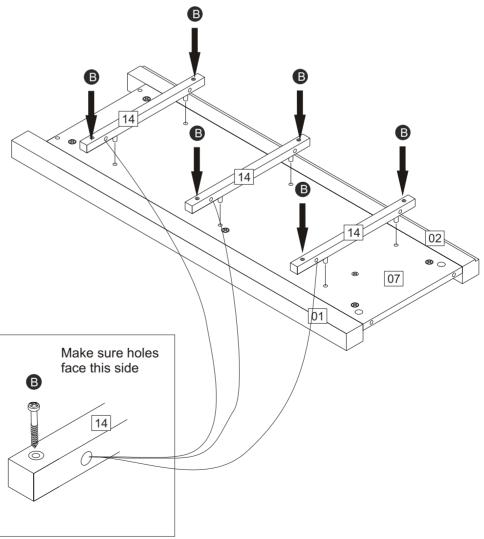

Step 7

Fix base panel 06 to the left and right panels using screws **B** .

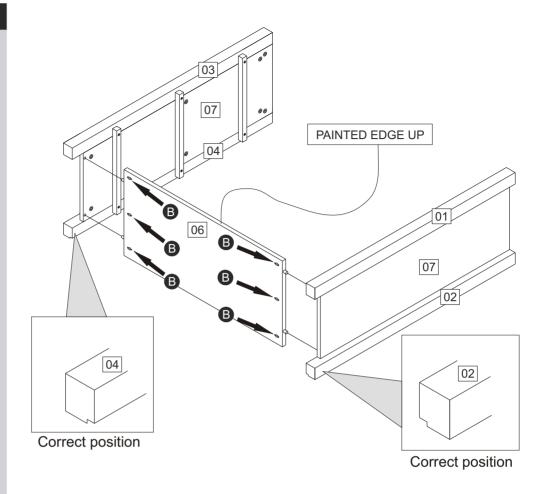


Step 8

Insert metal dowels **M** into top panel 05.



Do note over tighten metal dowels.

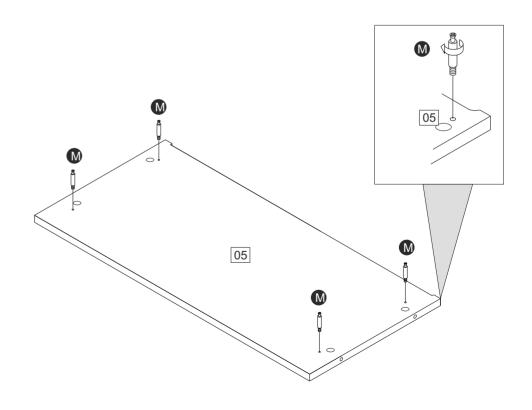


Step 9

Attach top panel 05 to the cabinet.

Insert locking nuts as shown. Use a screwdriver to turn locking nuts clockwise to lock.

With the help of a hammer, fix foot pads **F** as shown.

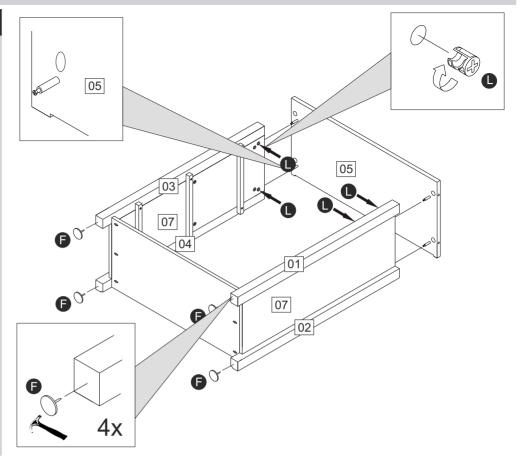


Step 10

Carefully turn chest of drawer upright.

Position back panels 09 within rebates with profile 12 in place as shown. Attach back panels using nails **©**.


IMPORTANT Cabinet must be "square" when back is attached.

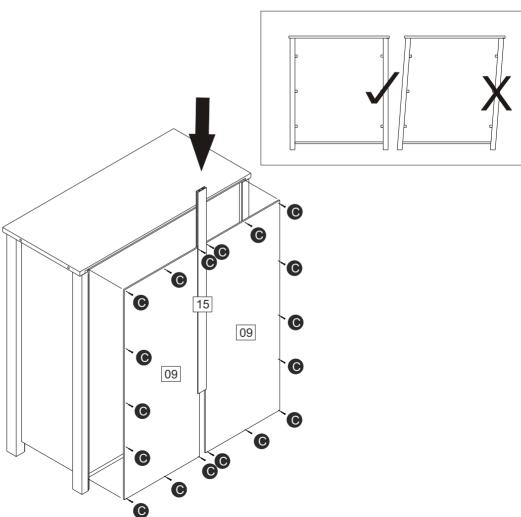

Step 11


Fixing wall strap:

Fix wall strap to top of product (edge) using washer and screw as shown.

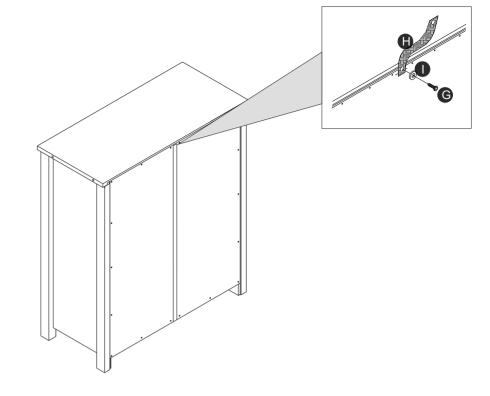

Step 12


Attach drawer sides 12 and 13 to drawer front 08 using screws **B**.

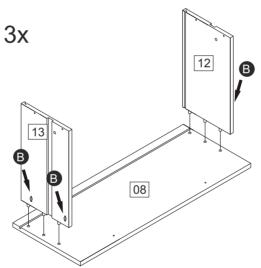

3x

Step 13


Slide drawer base 10 into grooves as shown.

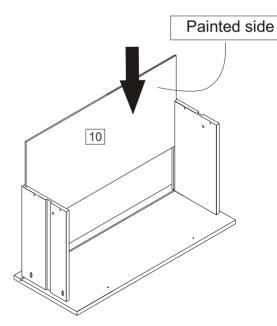

Step 14


Fix drawer back 11 to the drawer sides using screws B. Make sure drawer back is flush to the drawer sides.

Fix handle (a) using screw (b).

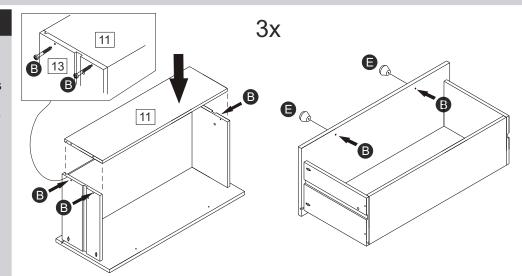

Step 15

Insert wooden dowels **A** only into the front holes of the runners.

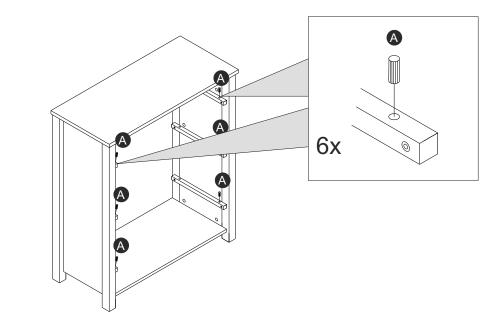


Step 16

Place drawers onto runners and slide past dowels fitted to runners.

Then, with hammer, tap plastic pins **f** in drawer sides, this is a safety catch to stop drawer falling out.

Assemble is complete

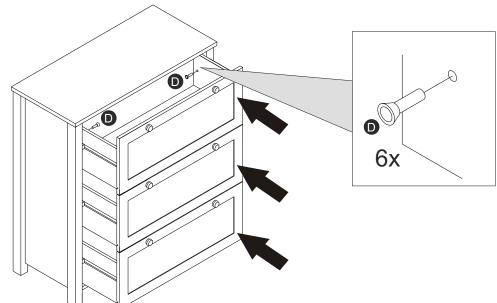

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400 800

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- **2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- **5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

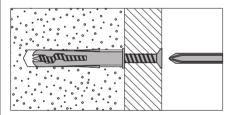


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

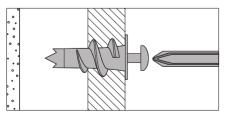


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

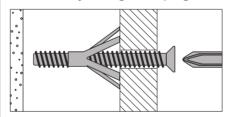


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

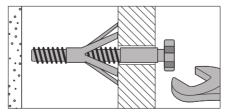


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

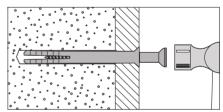

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "ShieldAnchor" wall plug Heavy loads

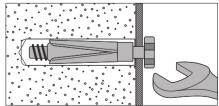

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.



Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.