 


# Classic Two Tone - Changer Top

**Assembly Instructions** - Please keep for future reference

377/4278

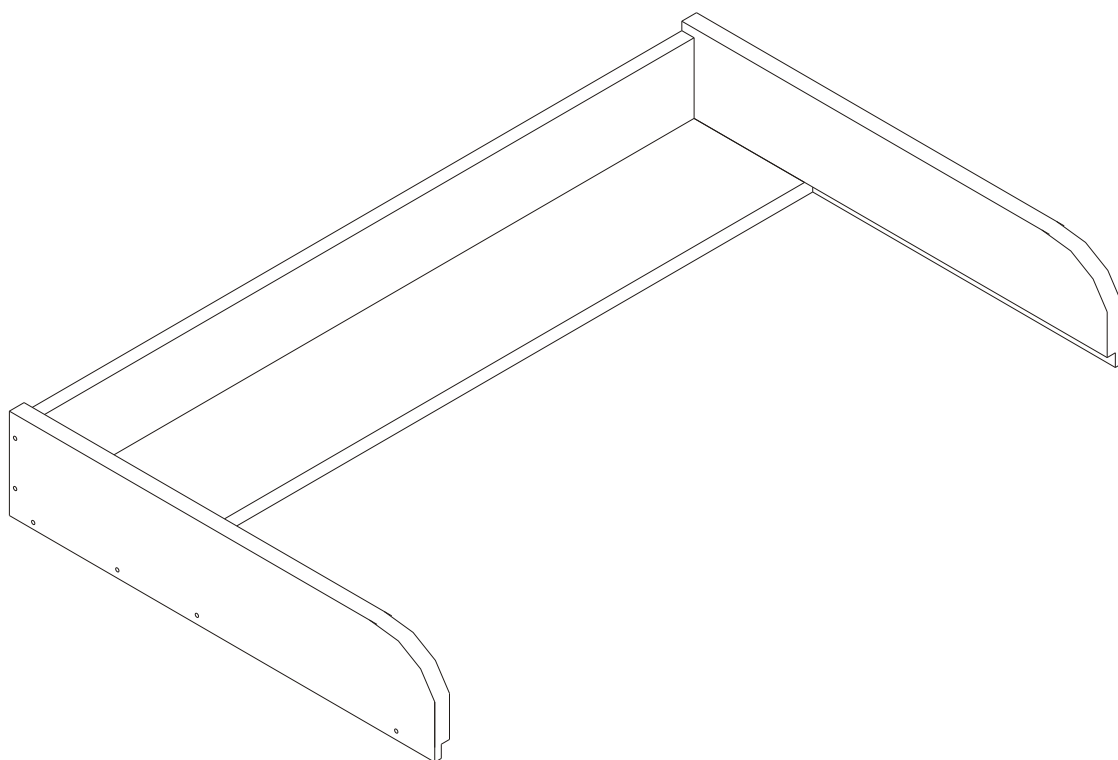

## Dimensions

Width - 83cm

Depth - 52cm

Height - 11cm

**Important** – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fittings from the plastic bags and separate them into their groups.

 
- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- This product contains Natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

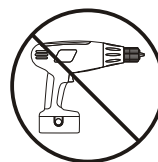

- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- Parts of the assembly will be easier with 2 people.

- Dispose of all packaging carefully and responsibly.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

## Care and maintenance

- Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

- From time to time check that there are no loose screws on this unit.

- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Warning !

1 - DO NOT LEAVE THE CHILD UNATTENDED



2 - THIS PRODUCT IS INTENDED FOR CHILDREN WITH A MAXIMUM WEIGHT OF 15KG.

3 - PERIODICALLY CHECK AND ENSURE THAT ALL COMPONENTS ARE IN THEIR PROPER POSITION, FREE FROM DAMAGE, AND THAT ALL ASSEMBLY FITTINGS ARE TIGHT.

4 - DO NOT USE THE PRODUCT WHEN ANY PART IS BROKEN, TORN OR MISSING.

5 - DO NOT USE SUBSTITUTE PARTS. CONTACT THE RETAILER FOR REPLACEMENT PARTS.

6 - BE AWARE OF THE RISK OF OPEN FIRES AND OTHER SOURCES OF STRONG HEAT, SUCH AS ELECTRIC BAR FIRES, GAS FIRES ETC. IN THE NEAR VICINITY OF THE CHANGING UNIT.

7 - PLEASE ENSURE THAT THE CHANGING PAD USED DOES NOT EXCEED 79,4 X 50,5 X 8,5 CM AND FITS WITHIN THE BARRIERS WITHOUT FOLDING.

EN 12221-1:2008

 
**Note:** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

# Components - Panels


Please check you have all the panels listed below



02 Back panel(79,5 x 8,5cm)



01 Base panel(82 x 15cm)

 

04 Left side panel(52 x 11cm)








03 Right side panel(52 x 11cm)

# Components - Fittings

 
If you have damaged or missing components,  
call the Customer Helpline: **08456 400 800**

**Please check you have all the fittings listed below**


**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b>  3,5 x 35mm Screw X 2	<b>B</b>  Nut X 4	<b>C</b>  M6 x 40mm Bolt X 4
<b>D</b>  7,0 x 50mm Bolt X 8	<b>E</b>  Allen key X 1	

## Tools required

 

Phillips screwdriver  
(medium & large)

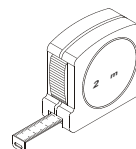 

Ruler/tape  
measure



Small  
hammer



Eye protection  
(when using a  
hammer or glue)

**Ruler** - Use this ruler to help correctly identify the screws




# Assembly Instructions
 
## Step 1


Attach sides **04** and **03** to the base **01** using bolts **D** and allen key **E**.

Fix back panel **02** to the sides **03** and **04** using bolts **D**.

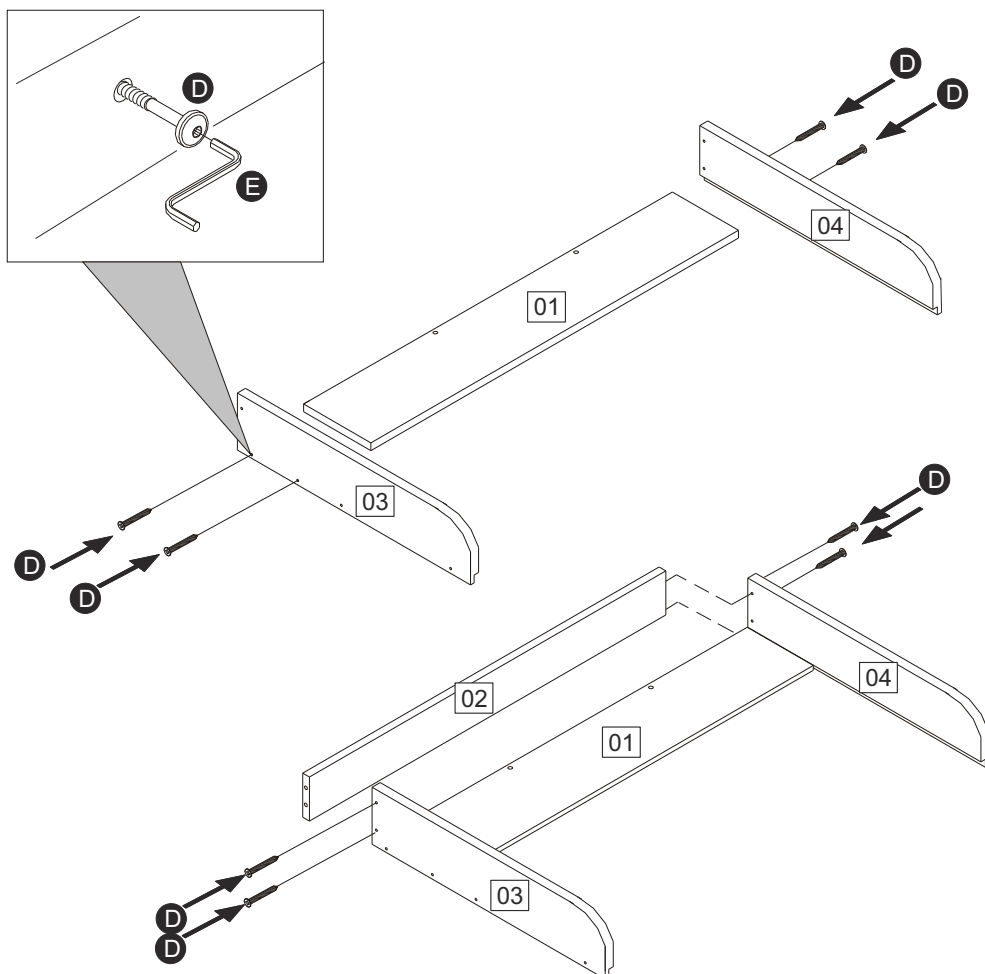

## Step 2

 Fix base panel **01** to the back panel **02** using screws **A**.

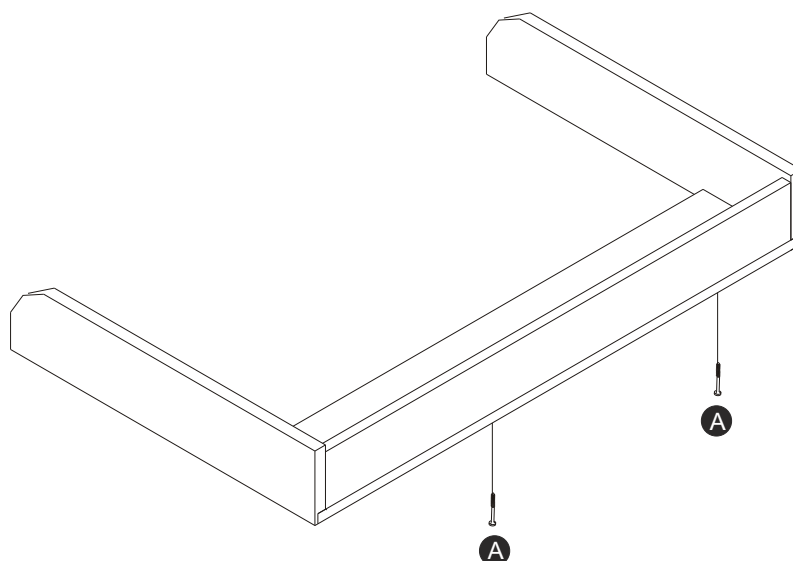


# Assembly Instructions

## Step 3

Attaching changer unit to the chest of drawers:

Position changer unit on top of the chest and with help insert bolt **C** half way through changer unit and chest top panel.

 From underneath chest top panel insert nuts **B** and hold it in place, then finish tighten bolt **C**.

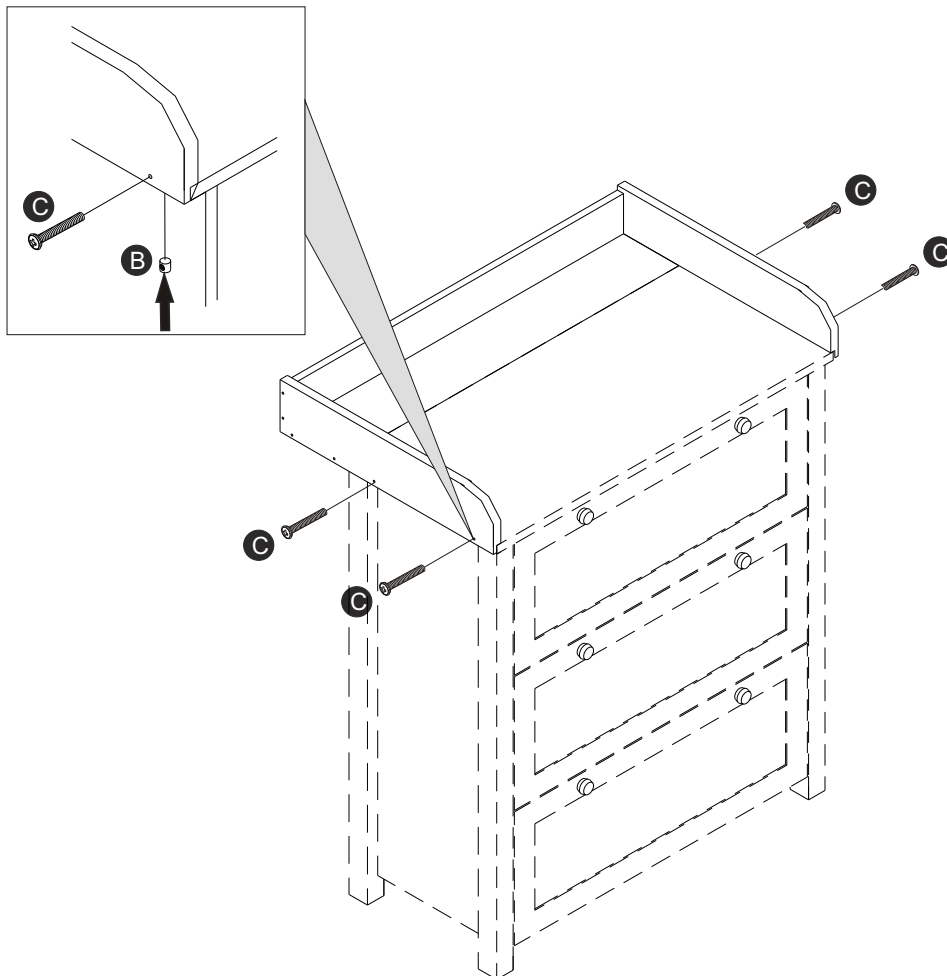


## Step 5

It is essential that this product is fixed to the wall using wall strap supplied together with chest of drawers.

Remove wall strap from chest of drawers and fix it to the back of the changer unit as shown.

Secure to wall using a suitable fixing (note supplied)

 
**Assemble is complete.**

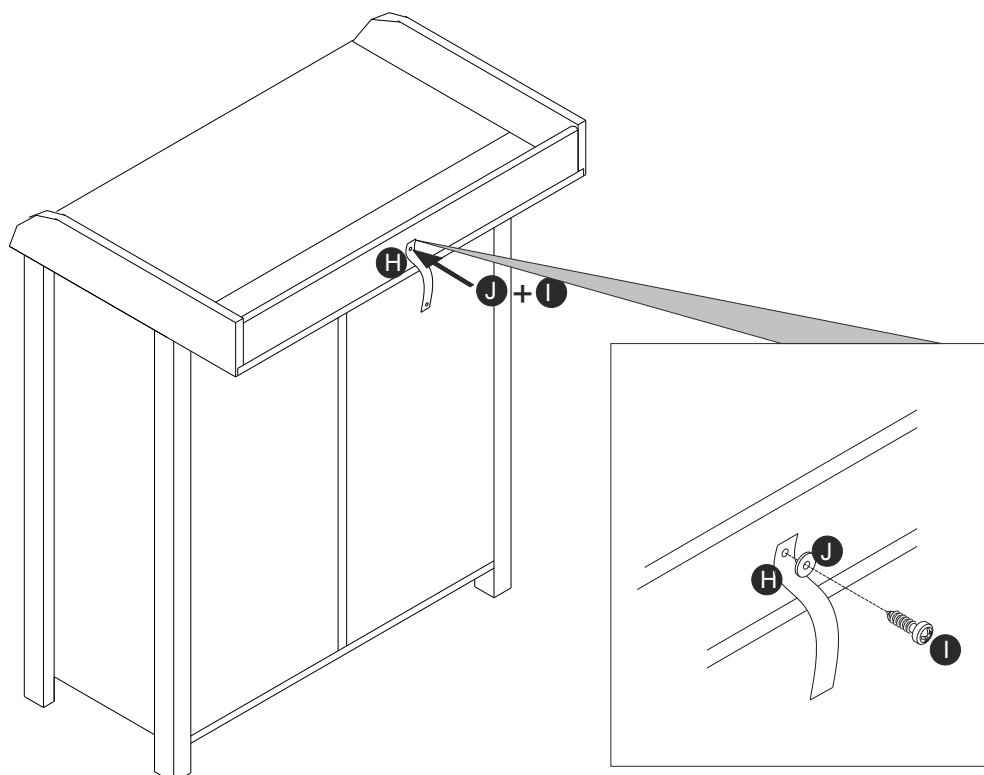

# A Guide to - Wall Mounting & Fixings

## Important note:

 If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.



**Important:** When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


## Hints:

 - 1: General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

## Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

### No.1 "General Purpose" wall plug

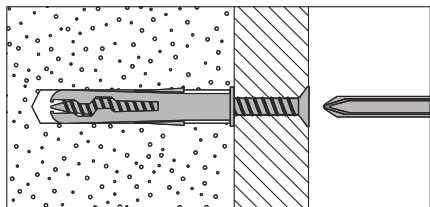


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

### No.2 "Plasterboard" wall plug

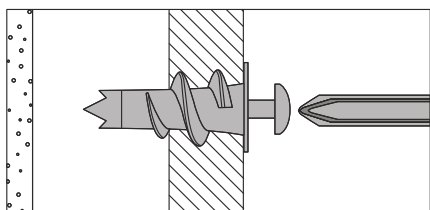 


For use when attaching light loads on to plasterboard partitions.

### No.3 "Cavity Fixing" wall plug

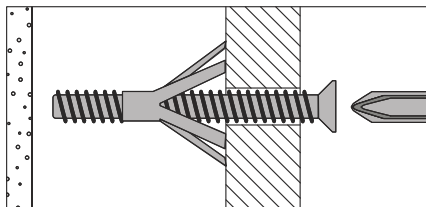 


For use with plasterboard partitions or hollow wooden doors.

### No.4 "Cavity Fixing-Heavy Duty" wall plug

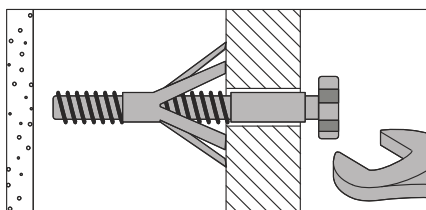 


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

### No.5 "Hammer Fixing" wall plug

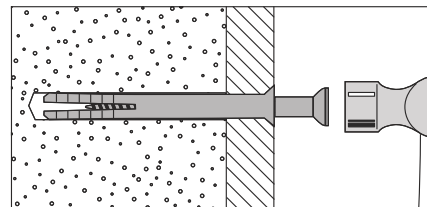 

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

### No.6 "ShieldAnchor" wall plug Heavy loads

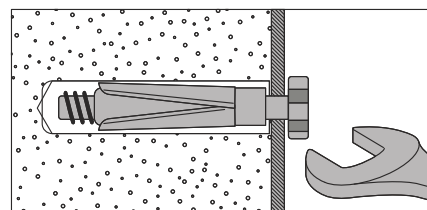 

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



## Care & Maintenance

**Safety:** Always check the fitting and location to ensure your safety in and around the home.

**Fitting:** From time to time check the fitting to ensure the wall plugs or screws do not become loose.