

Lights & Sounds Defender Robot

Assembly & User Instructions - Please keep for future reference

385/2310



Important

Age: 3 years & up

Important – Please read these instructions fully before assembly or use

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400 800**



Safety Information

Important – Please read these instructions fully before assembly or use.

General safety

- Young children in play are unaware of potential dangers and hazards, therefore responsible adult supervision is essential.
- **WARNING!** Not suitable for children under 36 months. Small part. Choking hazard.

Before use

- Remove all packaging before giving to your child.
- Surface clean the product with damp cloth.

 
Parts

If you have damaged or missing parts,
call the **Customer Helpline: 03456 400 800**

Please check you have all the parts and fittings listed below



1 Robot with immovable gun x 1

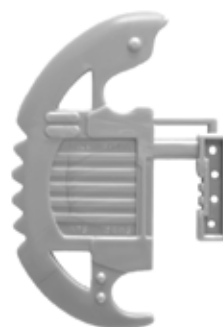


2 Removable axe x 1

Assembly Instructions

Step 1

 - Insert the lower end of the axe to the hole of left hand.


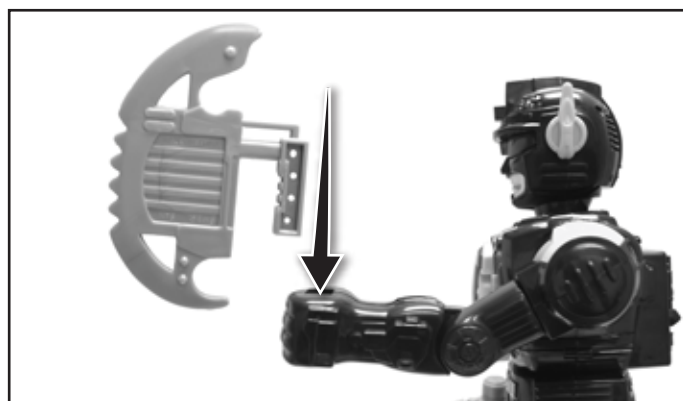


User Instructions

Multiple Mode



Normal Mode

  - Move the switch to "ON".
- The robot will start to:
 1. Upper part will rotate 360°
 2. Walk function
- It will continue to walk as well as lights and sounds until the switch is moved to "OFF"

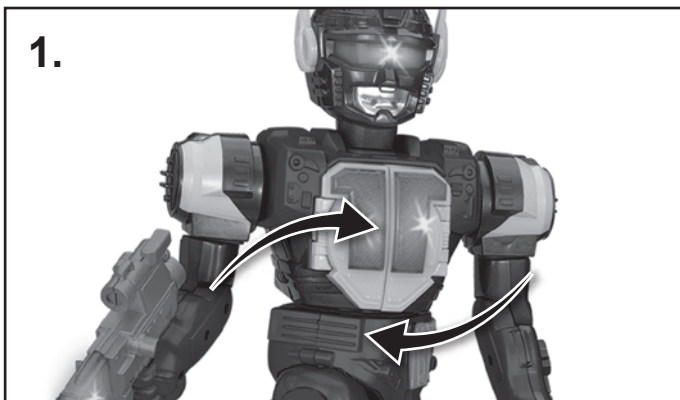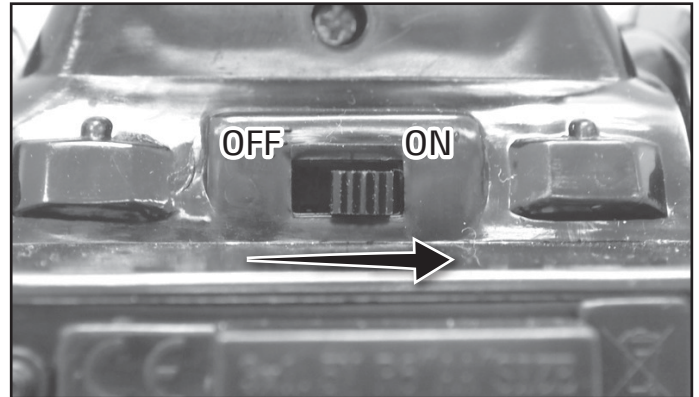

Ready Mode

  - Move the switch to " OFF ".
- When you press the button of the head. It has lights and sounds only for a few seconds.

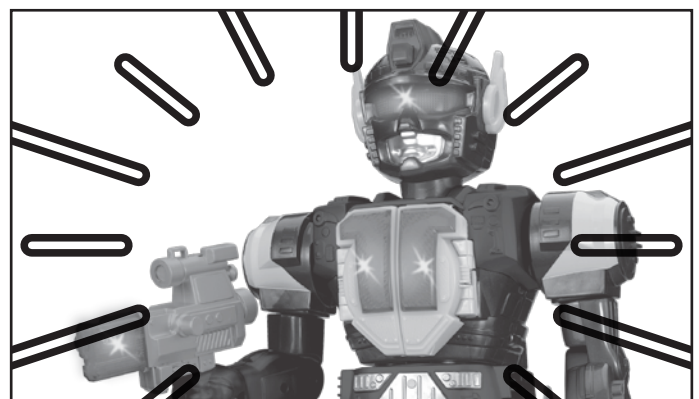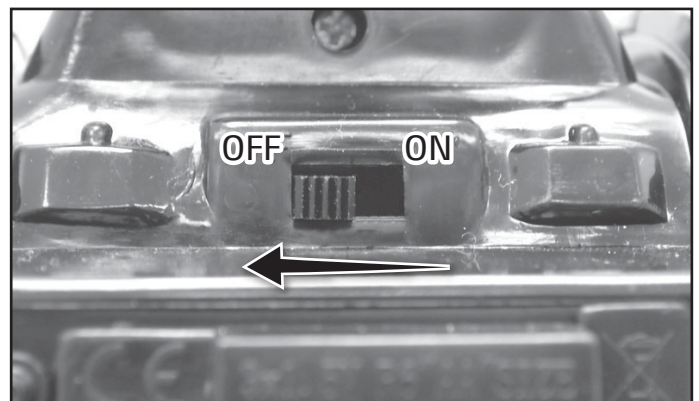


Care and Maintenance

Safety battery precaution

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent types as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not dispose the battery in fire, battery may leak or explode.
- Battery should be replaced by adult.

Battery installation & replacement

 - Loose the screw by screw driver to open the battery compartment door at the back of the product. Insert/replace the new battery in the proper direction indicated inside the battery compartment. Close and screw the battery door.
- Batteries are not included.

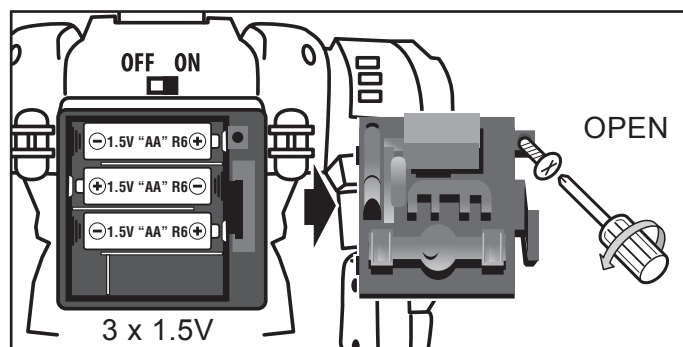

Not suitable for children under 36 months due to small parts - choking hazard.

Disposal information



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you

will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400 800**
MADE IN CHINA.
PRODUCT FOR CHAD VALLEY TOYS: Argos Limited, 489-499 Avebury Boulevard,
Central Milton Keynes, MK9 2NW
Visit www.argos.co.uk/chadvalley