

**BATTERY WARNINGS**

- Batteries should only be inserted or changed by an adult.
- Rechargeable batteries are to be removed from the toy before being charged.
- Never recharge non-rechargeable batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix different types of batteries e.g. alkaline, standard (carbon zinc) or rechargeable (Nickel Metal Hydride) batteries.
- Never mix old batteries with new batteries (replace all batteries at the same time).
- Only use the recommended type of battery
- To replace battery, unscrew cover using a cross head screw driver and insert the batteries in correct polarity.
- Always remove old or exhausted batteries from the product.
- Remove batteries from product before extended storage.
- Do not short circuit terminals
- Check that the contact surfaces are clean and bright before installing batteries.
- It is advisable to remove batteries from the unit if the product is not to be used for long periods of time.

**GENERAL WARNINGS**

WARNING! Not suitable for children under 5 years  
WARNING! Contains small parts which may cause a choking hazard.  
Do not immerse in water or any other liquid

WEEE product should be disposed of by handing it over at a designated collection point. For more information about where you can drop off your waste product for recycling please contact your local authority

MADE IN CHINA     

 


**CASH MACHINE**  
**Instruction Manual**  
**Model: ARG7017**

OPERATING INSTRUCTIONS FOR COIN MACHINES

COMPONENT NAMES

- 1) Insert card
- 2) Insert notes
- 3) LCD display
- 4) Key operating area
- 5) Take money
- 6) Insert coins
- 7) Fuselage

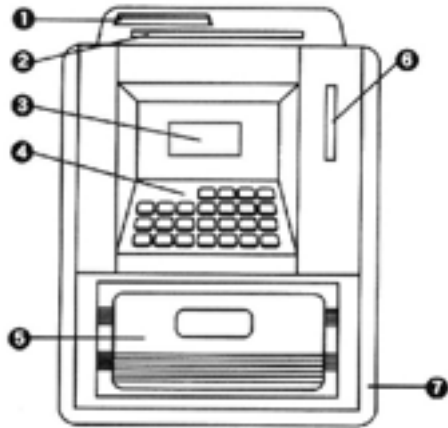


BATTERIES

- This coin machine requires 3 x AA batteries (not included).
- Please unscrew the battery cover screws to open.
  - Insert new batteries. Please make sure that the positive and negative electrodes of the batteries are correctly loaded according to the labels on the battery containers.

BANK CARD

 - The coin machine is affiliated with a bank card.
- With the card label facing toward you, insert the card according to the direction of the arrow shown in the image.

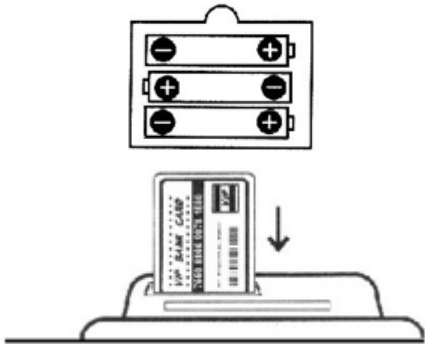

BUTTON USES

A. TIME/DATE/ALARM/CALCULATOR:

- (a). Switch among the functions of time, date, alarm and calculator.
- (b). Press and hold this button for about 2 seconds in the displaying Screen of time, date and alarm to get into “ set mode”

B. SAVING TARGET:

Press once to display the target amount of saving and press again to display the target days.

C. PASSWORD: Modify the withdrawing password.

D. DAYS STILL NEEDED/AC: Displays the number of days left to reach the saving Target.

E. MONEY STILL NEEDED: Display the amount of money left to reach the saving target.

F. TOTAL SAVINGS: Display the balance of the account.

G. NOTE DEPOSIT: Enter the amount of paper money deposited.

H. WITHDRAW: Withdraw money.

 
I. CE/C/ALM ON 12/24:

- (a). Clear the numbers for reentering the amount when withdrawing Money.
- (b). CE/CE button is used to clear the numbers when the machine is used as a calculator.
- (c). Switch on and off when the machines is used as alarm.
- (d). Switch between 12 or 24 hour system when setting the time.

J. 0-9: They are used to enter the number 0, 1, 2, 3, 4, 5, 6, 7, 8 and 9.

K. “.”: It is used to enter the decimal point and switch AM and PM in 12 hour system in “Time Set” mode.

L. + - x ÷=: The input symbols needed in the calculator.

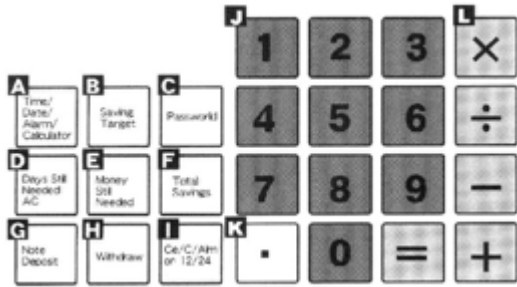

BUTTON INSTRUCTIONS

Before operating any of the below functions, the bank card must be inserted into the machine:

- Time Setting: Press TIME/DATE/ALARM/CALCULATOR button and hold for 2 seconds to get into time setting, enter correct numbers separately in second, minute and hour and then press TIME/DATE/ALARM/CALCULATOR button again for confirmation.
- Date Setting: Press TIME/DATE/ALARM/CALCULATOR button and select DATE function and hold for 2 seconds to get into date setting, enter correct numbers separately in day, month and year and then press TIME/DATE/ALARM/CALCULATOR button again for confirmation.
- Alarm Setting: Press TIME/DATE/ALARM/CALCULATOR button and select ALARM function and hold for 2 seconds to get into alarm function, enter correct numbers separately in second, minute and hour and then press TIME/DATE/ALARM/CALCULATOR button again for confirmation.
- Calculator: Press TIME/DATE/ALARM/CALCULATOR button and select CALCULATOR function and hold 2 seconds to get into calculator function.

OPERATION INSTRUCTIONS FOR WITHDRAWING AND DEPOSITING MONEY:

- To deposit coins: Insert coins closely against the upper edge of the coin hole using your thumb & forefinger. The currency and amount will be displayed and automatically calculated. The settings status will then be displayed after displaying the coin value.
- Deposit paper money: Insert the bank card and then press “Deposit”, then insert the paper money and enter the amount (press “C” to clear when entering a wrong number), then press “Deposit” again to complete deposit.
- Withdraw: Insert the bank card and press “withdraw”, enter the amount to withdraw (press “C” to clear when entering a wrong number), press the “withdraw” button again. Enter the Password and if correct the LED light is then lit. Pull out the drawer, withdraw money within 15 seconds, then push back and lock the drawer.

**NOTE:** If the money withdrawn is not the same as the amount entered, the account balance will be incorrect.

**NOTE:** If the amount entered is more than the account balance, then the display will show the message “Error”, Please re-enter the correct amount.

HOW TO CHANGE YOUR PASSWORD:

Preset Password: 0000

CHANGING YOUR PASSWORD: Press password button, type in 0000, then straightaway type in a set of four numbers of your choosing.

HOW TO SET YOUR SAVINGS TARGET:

- To Set Saving Target Amount and Days: Insert the bank card and hold the “Saving Target” button for two seconds until the beep, enter the amount you would like to save (NOTE: Use the decimal point to enter pence if necessary) then press “Savings Target” to save that amount. You will then need to enter the number of days you wish to save for, once done press “Saving Target” again to save (The maximum number of days to set is 999).
  - To view your savings target simply press the “Savings Target” button.
- NOTE:** When the saving target is set, each amount you put into the machine will be deducted from this target. To see your remaining amount to save press “Money Still Needed”.

GENERAL INSTRUCTIONS:

- Insert the bank card and press “Money Still Needed” to display how much money left to reach the saving target. (The number is a negative value if the target is not reached)
  - Insert the bank card and press “Days Still Needed” to display how many days left to reach the saving target.
  - Insert the bank card and press “Total Savings” to display the balance
- NOTE:** The following actions are only effective with the bank card inserted, otherwise pressing the buttons are invalid:
- 1. Entering the time settings of TIME, DATE and ALARM.
  - 2. Depositing paper money, modifying the password, setting the saving target amount and target days, checking the account balance, withdrawing.

It is advisable to remove batteries from the unit if the product is not to be used for long periods of time.