

COOKWORKS

Chocolate Fountain INSTRUCTION MANUAL



This is an attended appliance. Do not leave the appliance unattended when in use.

IMPORTANT SAFETY WARNINGS

 
 
- ❑ Read all the instructions carefully before using and please retain this instruction manual for further reference.
- ❑ Never leave the appliance unattended while in use.
- ❑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- ❑ Keep the appliance and its cord out of reach of children less than 8 years.
- ❑ That the appliance is not intended to be operated by means of an external timer or separate remote control system.
- ❑ The surfaces are liable to get hot during use.

- ❑ The temperature of accessible surfaces may be high when the appliance is operating especially the metal top area.
- ❑ Do not touch hot surfaces. Use handles or knobs.
- ❑ To protect against risk of electrical shock, do not immerse cord, plugs or cooking unit in water or other liquid.
- ❑ Close supervision is necessary when any appliance is used by or near children.
- ❑ Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- ❑ Keep the power cord away from hot surface. Never let the cord hang down where a child could grab it.
- ❑ Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- ❑ The use of accessory attachments, not recommended or sold by the appliance manufacturer, may cause hazards. NEVER use unauthorized attachment or accessory.
- ❑ Use extreme caution when moving an appliance containing hot liquids.
- ❑ Do not use outdoors.
- ❑ Do not let cord hang over edge of a table or counter, or touch hot surfaces.
- ❑ Do not place on or near a hot gas or electric burner, or in a heated oven.
- ❑ To disconnect, remove plug from wall outlet.
- ❑ Do not use appliance for other intended use.
- ❑ This product is intended for melting chocolate for human consumption only. Do not use the product for any other purpose.
- ❑ Always place the product on a flat, level, stable, heat resistant

surface.

- ❑ Children should be supervised to ensure that they do not play with the appliance.
- ❑ For household use only.
- ❑ No user-serviceable parts inside. Refer servicing to qualified service personnel.
- ❑ A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a long cord. A longer power cord or extension cord is not recommended for use with this product.
- ❑ Ensure switch off the appliance after each use. Make sure the motor stops completely before disassembled.

KNOWING YOUR PRODUCT

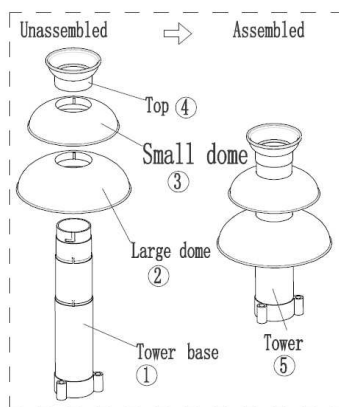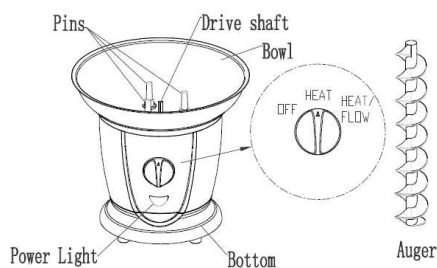

LOCATION

- ☐ Always operate this product on a flat horizontal surface.
- ☐ Do not operate under or near curtains or other combustible materials. Do not place under cupboards or close to a wall as scorching of wall or cupboard may occur.
- ☐ Lay out power cord to desired length and secure excess power cord to avoid grabbing by children.

BEFORE USING YOUR APPLIANCE

As with all new heating elements, your appliance may emit a slight burning smell when it is first switched on. This is normal and not a cause for concern. This will reduce the unpleasant smells when several uses.

USING YOUR APPLIANCE

TO ASSEMBLE

1. Before using for the firstly time, wash the disassembled parts (Except the motor base) in warm water.
2. Wipe the bowl with a damp cloth and let dry.
3. Attach Auger to Base by inserting the triangular hole in the bottom of the Auger onto the Driveshaft. Do not attempt to place Auger or Tower onto Base or remove from Base while product is operating.
4. To assemble tower;

- a. Attach large dome to Tower base by aligning the center hole around Tower base and snap the two ribs of Tower base to the two slots of the large dome.
 - b. Attach Small dome to Tower base by aligning the center hole around Tower base and snap the two ribs of Tower base to the two slots of the Small dome.
 - c. Attach Top to Tower base by aligning the center hole around Tower base and snap the two ribs of Top to the two slots of the Tower base.
 - d. Attach assembled Tower to Base by aligning the three holes around the bottom of the Tower with the three pins in the Bowl.
5. Plug the power cord into a standard 220-240V AC electrical outlet.



Fig.a



Fig.b



Fig.c



Fig.d

TO USE

1. Place the Fountain on a flat, level, and stable surface. Unit must be level to operate properly.
2. Turn the Power Switch to "HEAT" to preheat the bowl.

NOTE: let the unit warm up for at least three minutes before adding melted chocolate.

3. Prepare Chocolate:

NOTE: Use chocolate that is maximum of 60% cocoa Any higher percentage ("stronger") chocolate may require the addition of too much oil to obtain proper flow. Also, if you are using a chocolate specifically formulated for making fondue, just follow the instructions on the packaging.

For all other types, use the following instructions.

- a. Place 900g chocolate chips, pieces and 150ml vegetable oil in a microwave-safe container and use the microwave oven to cooking until the chocolate full melted Carefully pour the chocolate mixture into the Bowl up to 1/4 inch from the top of the Bowl.

NOTE: milk chocolate, dark semi-sweet chocolate, or white chocolate may also be used.

- b. Heat the chocolate in a microwave oven on high (100%) for two minutes.
 - c. If necessary, heat mixture again for an additional 20-30 seconds until completely melted and smooth. Stir the mixture well and add a tablespoon or more of oil if the mixture is not thin,
 - d. Repeat the heating process if necessary. The chocolate must be of a thin enough consistency to flow properly.
 - e. If desired, other liquids such as liqueurs may now be added (approximately 1/4 cup of liqueur, depending on your taste).
 - f. Carefully pour the chocolate mixture into the bowl up to 1/4 inch from the top. **CAUTION: DO NOT overfill the bowl.**
4. When the chocolate is completely melted, turn the power switch to "HEAT/FLOW" to begin Auger rotation and chocolate flow.

CAUTION: To prevent clogging, do not drop food pieces or objects into the chocolate. Also, do not add cold liquids to the chocolate mixture or it may thicken and prevent proper fountain operation.

NOTE: if chocolate flow becomes inconsistent, turn the power switch to "HEAT" and allow a few seconds for the chocolate to settle; then turn the power switch back to "HEAT/FLOW".

5. You can now dip strawberries, marshmallows, sliced bananas, pineapples, apple wedge, pretzels, cookies, cake pieces, or peanut butter balls into the chocolate mixture.

CAUTION: the Bowl will be hot, use oven mitts or other hand protection to help prevent a burn hazard.

6. Refill the Bowl as needed, maintaining a 1/4 inch space at the top.

CARE AND MAINTENANCE

- **WARNING: Always unplug the product from the electrical outlet and allow it to cool completely before handling, relocating, or cleaning it.**
- Make sure unit is switched off and unplugged. Allow parts to cool to the touch. The Tower, Auger, and Base can get very hot.
- Before first use and after each use, wash the Tower and Auger thoroughly. Do not wash parts in an automatic dishwasher
- To simplify cleaning of the chocolate fountain, carefully remove the Tower and Auger (after cooling) Wipe off remaining chocolate with paper towels Soak Tower and Auger in hot water for five minutes, then wash in warm soapy water, rinse, and let dry.
- Carefully remove as much remaining chocolate from the Bowl as possible Use a damp sponge cloth to wipe the inside and outside of the bowl. To clean the exterior, wipe with a soft, dry towel.
- **WARNING: to prevent an electrical shock hazard, do not immerse Base in water or other liquid as the Base contains**

the electrical components.

- Clean the reservoir bowl and motor base only with a damp cloth
- Cleaning must be carried out while the chocolate is still warm. Do not wait until the chocolate has hardened.

CAUTION:

- **DO NOT immerse in water or any liquid.**
- **DO NOT pour excess/leftover chocolate down drain or into a toilet. Pour in plastic bag or disposable container and place in garbage.**
- **DO NOT use steel wool pads or other abrasive cleaners to clean the product, never spray or apply cleaners directly to the product.**
- **NOTE: To prolong product life, follow the cleaning instructions after every use.**

CONNECTION TO POWER

 
- Before connecting, check that the voltage indicated on the appliance (bottom of the appliance) corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This appliance may be fitted with a non-rewirable plug. If you need to change the fuse in a non-rewirable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained (available from the appliance manufacturer).
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a

mains socket is likely to cause an electrical hazard.

- This unit must be earthed. This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

For your own safety read the following instructions carefully before attempting to connect this unit to the mains.

You should only plug the appliance into a 230V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance.

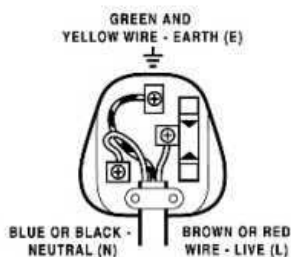

The wires in this mains lead are colored in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

GREEN + YELLOW = EARTH


IMPORTANT

The colors of the wires in the mains lead of this appliance may not correspond with the colored markings identifying the terminals in your plug, proceed as follows:



Caution

To prevent electric shock disconnect from the mains before removing the cover

- ☐ The blue wire must be connected to the terminal marked with the letter N or colored black.
- ☐ The brown wire must be connected to the terminal marked with the letter L or colored red.
- ☐ The green and yellow wire must be connecting to the terminal marked with the letter E or the earth symbol. ().

If a 13 Amp (BS1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved.

If in doubt contact a qualified electrician

DISPOSAL INFORMATION



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

GUARANTEE

This product is guaranteed against manufacturing defects for a period of

1 year

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement

Your statutory rights remain unaffected

Guarantor; Argos Ltd
489 – 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW