

COOKWORKS

 
TRAVEL KETTLE INSTRUCTION MANUAL



Description

Capacity: 0.4L

Power: 100-127V/220-240V ~ 50/60Hz 416-672W / 548-653W

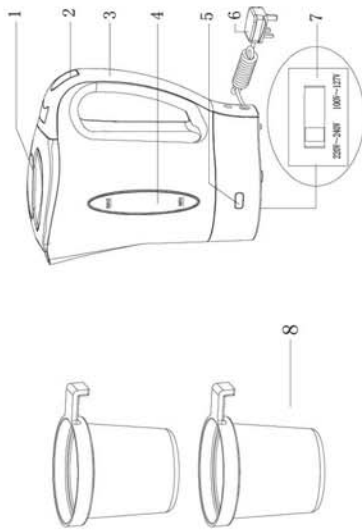

- 1 Upper cover
- 2 Main switch
- 3 Handle
- 4 Water level window

- 5 Neon lamp
- 6 Power cord
- 7 Voltage change switch
- 8 Cups

Safety Warnings

- Please read these instructions carefully before using the travel kettle for the first time.
- Before you connect the travel kettle to the mains supply, make sure that the voltage indicated at the bottom of the travel kettle matches the mains voltage in your home or hotel. If it does not, switch to the correct voltage range.
- The kettle will switch off automatically when the water has boiled.
- If the kettle ever boils dry, allow 15 minutes to cool before refilling with cold water. The safety cutout will automatically reset during this time.
- Place the kettle on a stable flat surface.
- Never immerse the kettle or cord in water or any other liquid. Do not allow liquid to penetrate the electrical parts of this kettle.
- Prevent children from pulling on the mains cord or knocking the kettle over.
- Before cleaning the kettle disconnect from the power supply and wait until it was cooled down.
- The kettle may be cleaned with a damp cloth.
- Pour away the first lot of water boiled in this kettle.
- Only use the cord supplied with this kettle. If a replacement is required, only approved components may be used.
- The outside surface of the kettle may get hot during use, please take care when using the kettle.
- Never fill in water more than the maximum acceptable water level.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not remove lid while the water is boiling.
- If the kettle is overfilled, boiling water may be ejected.

 
Using the kettle

ADJUST VOLTAGE INPUT

- Check the voltage main supply at your home or hotel.
- Turn the switch at the bottom of kettle to 100-127V or 220-240V.
- Factory default setting is 220-240V.



FILLING

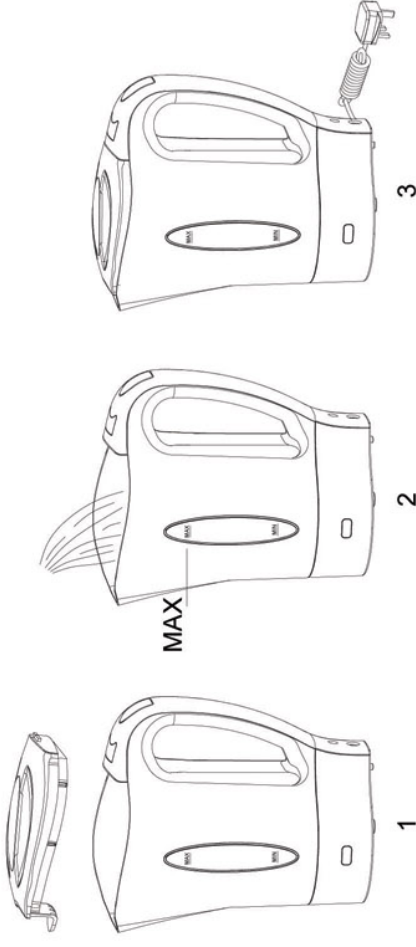

- To fill the kettle, open the cover by lifting the lid
- Fill to the desired level (Max. 0.4L)
- Close the lid by pressing it down until it clicks into place.

Switching on

- Plug the power supply cord into the mains.
- To switch on the kettle, press the On/Off switch. The power indicator lights up.

Switching off

- When the water has boiled the kettle will automatically switch itself off.
- The power indicator will go out.

Note: Do not open the lid when steam is coming out of the spout.

Cleaning

- First read the instructions in the section titled "SAFETY WARNINGS".
- Avoid using abrasive cleaning agents.

Descaling

For normal use descale the kettle at least twice a year following the procedure below.

TO CLEAN THE INSIDE OF THE KETTLE:

- Use a kettle de-scaling solution available from most supermarkets or household suppliers. OR
- Half fill the kettle with tap water and add the juice of half lemon to the water.
- Boil this mixture and allow it to stand for 15 minutes. Re-boil the mixture and allow it to stand for a further 15 minutes. Re-boil this mixture a third time then rinse the kettle well.

This procedure may need to be repeated in extreme cases. Abrasive cleaners must not be used as these will damage the finish.

COOKWORKS

AND

LIMESCALE

IT IS ESSENTIAL THAT THIS KETTLE,
IS REGULARLY DESCALED.

THIS WILL MAINTAIN IT'S APPEARANCE,
AND ALSO ENSURE THAT THE KETTLE
OPERATES EFFICIENTLY.

EVEN A SMALL AMOUNT OF SCALE, CAN
REDUCE THIS PERFORMANCE.

DESCALING SOLUTIONS ARE READILY
AVAILABLE IN THE HIGH STREET.

 
Connection to Power

- Before connecting, check that the voltage indicated on the appliance (bottom of the appliance) corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This appliance may be fitted with a non-rewirable plug. If you need to change the fuse in a non-rewirable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained (available from the appliance manufacturer).
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.
- This unit must be earthed. This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

For your own safety read the following instructions carefully before attempting to connect this unit to the mains.

You should only plug the appliance into a 230V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance.

GREEN AND
YELLOW = EARTH (E)



BLUE OR BLACK =
NEUTRAL (N)
BROWN OR RED
WIRE = LIVE (L)

The wires in this mains lead are coloured in accordance with the following code:


BLUE = NEUTRAL
BROWN = LIVE
GREEN + YELLOW = EARTH

IMPORTANT

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:



 
Caution
To prevent electric shock disconnect from the mains before removing the cover

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- The green and yellow wire must be connected to the terminal marked with the letter E or the earth symbol. ().

If a 13 Amp (BS1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved.

If in doubt contact a qualified electrician.

Disposal Information



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

Guarantee

This product is guaranteed against manufacturing defects for a period of 1 year.

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement

Your statutory rights remain unaffected

Guarantor; Argos Ltd
489 – 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW