


Perth Dining Chair

Assembly Instructions - Please keep for future reference

392/9652

423/8029

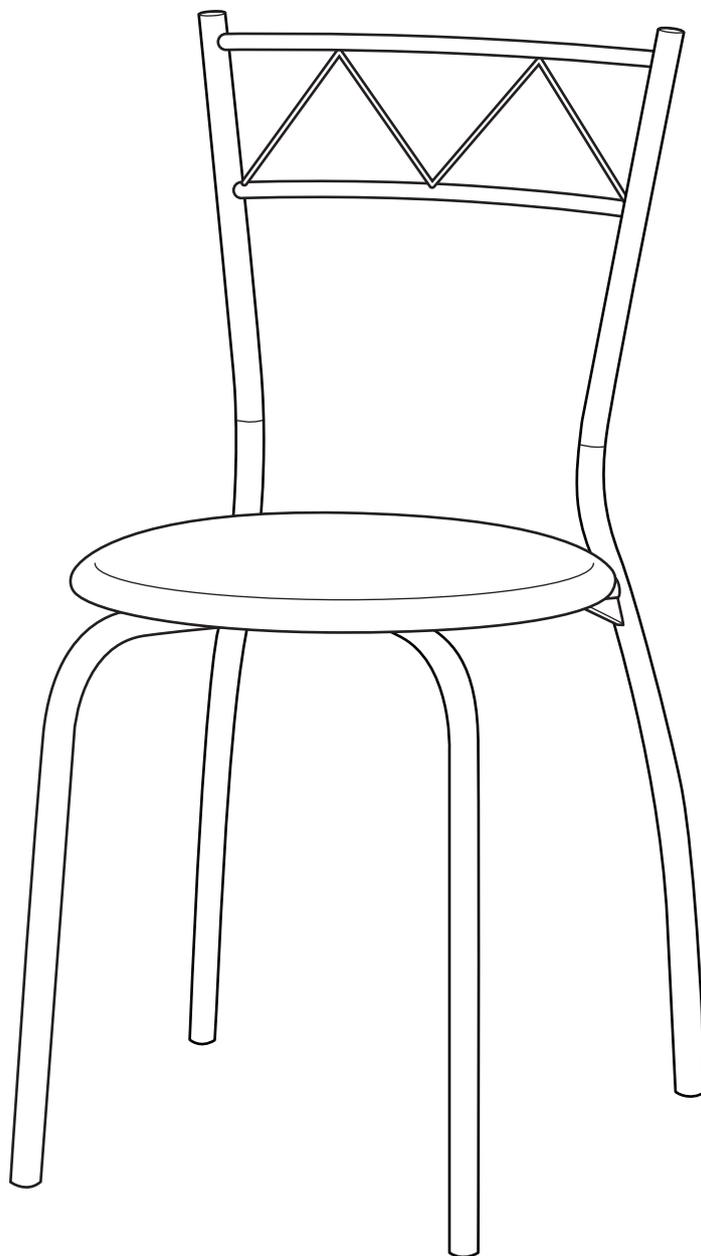

Dimensions

Width - 42cm

Depth - 42cm

Height - 85.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Parts of the assembly will be easier with 2 people.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Do not stand on the chair.
- Do not use this chair as step ladder.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.
- Unit weight: 3.4 kgs.
- Maximum safe weight of user: 110kgs.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.


Components - Parts

If you have damaged or missing components, call the
Customer Helpline: Argos = 0345 640 0800


Please check you have all the parts listed below

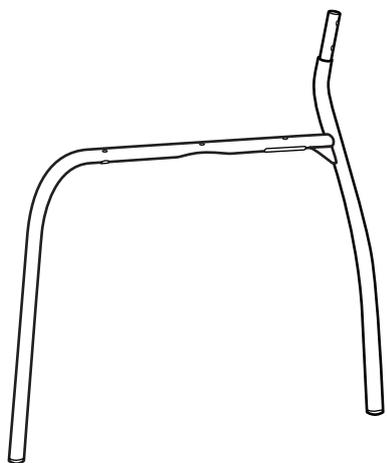


1 Upper leg
(54.5 x 3 x 59cm)

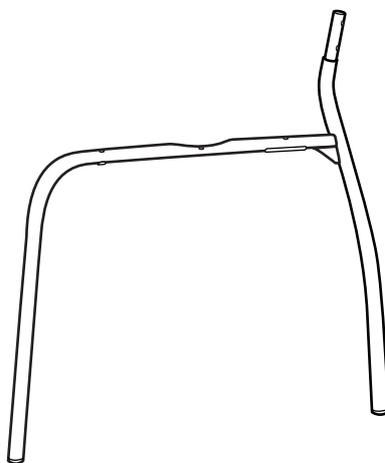

2 Lower leg
(54.5 x 3 x 59cm)

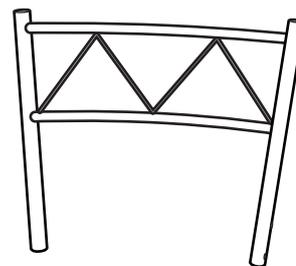

3 Backrest
(32.5 x 5 x 39.5cm)

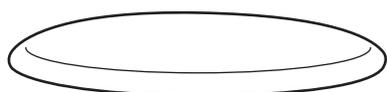 


4 Seat
(38.5 x 38.5 x 4cm)


Components - Fittings

Please check you have all the fittings listed below

 Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

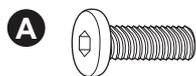

A M6 x 15mm Bolt x 4

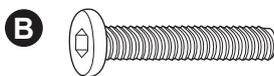 

B M6 x 35mm Bolt x 5



C Allen key x 1

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Attaching backrest

Position the upper leg **1** and lower leg **2** in a crossed position as shown.



With the help of an assistant holding the legs, insert the legs into holes on the backrest **3** as shown.

Then fix through holes using bolts **A** and tighten with allen key **C**.



Important:

Do not fully tighten the bolts at this stage.

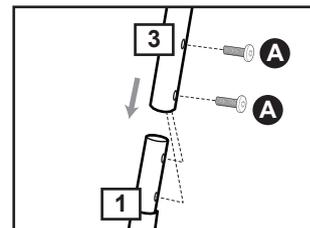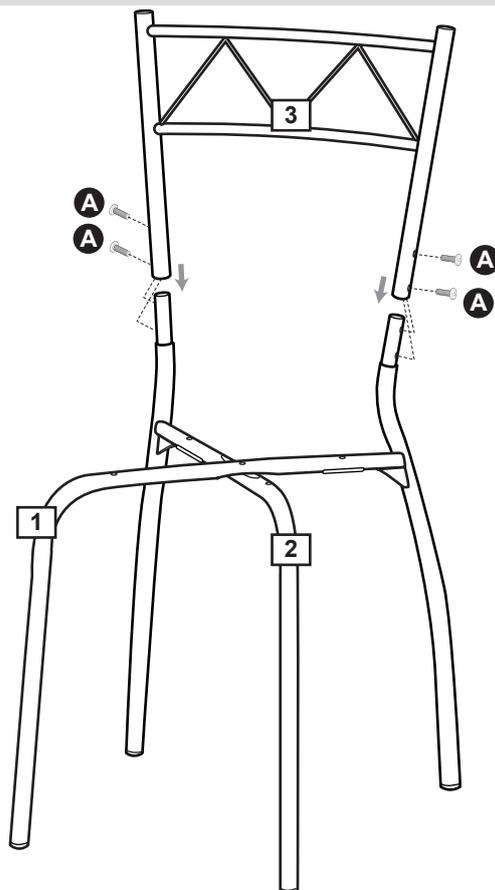

Step 2

Attaching seat

Place the seat **4** face down on a flat and raised surface such as a table.

Position the chair frame on the seat **4** as shown then fix through holes using bolts **B** then tighten with allen key **C**.







Important:

Carefully turn over the chair. Place it on a flat even surface and make adjustments to ensure the legs are even on the floor.

Then fully tighten bolts **A** fixed on step 1 using allen key **C**.

Assembly is complete.

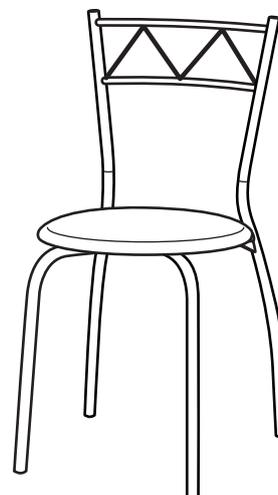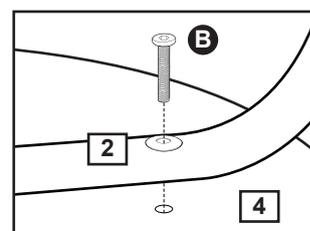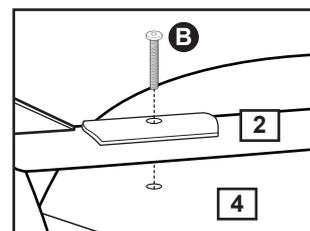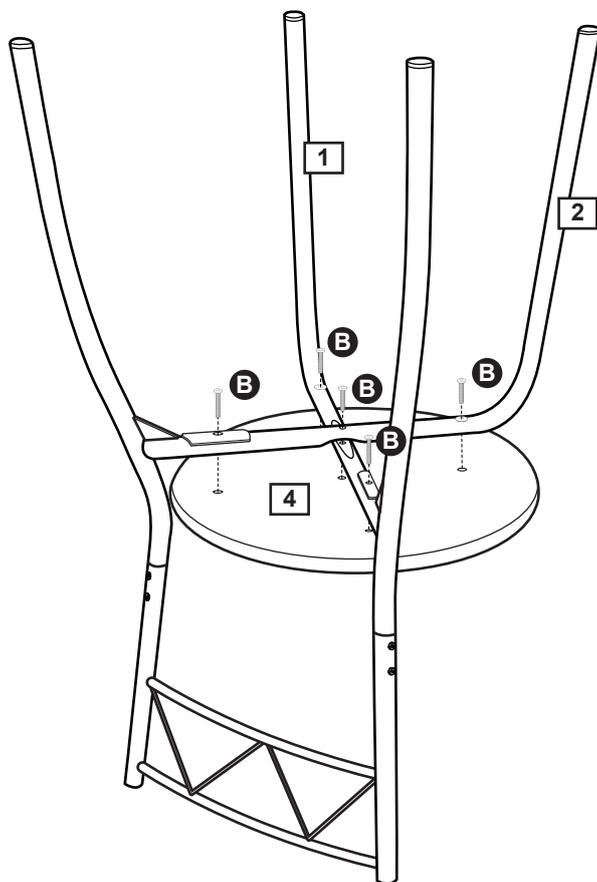

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800