
 


Components

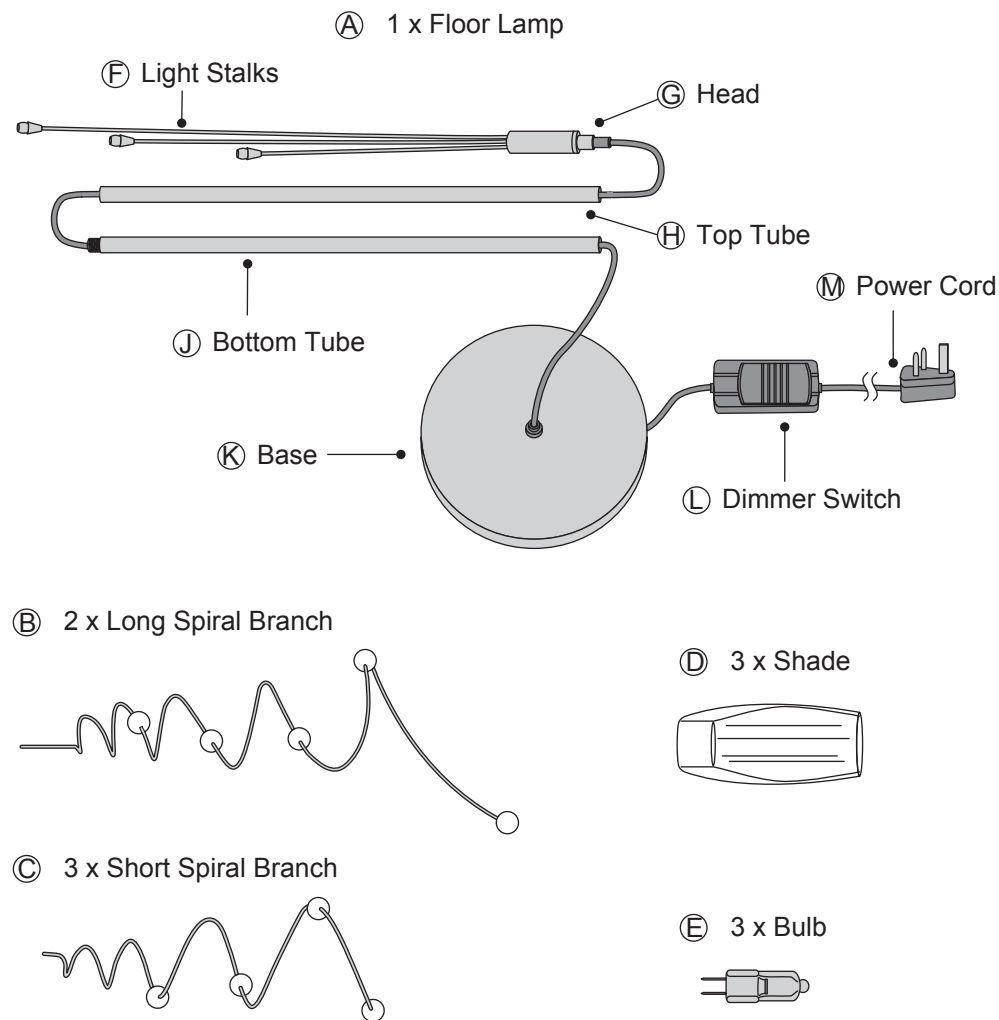


Fittings



Belize Floor Lamp

Simple Assembly Instructions - Please keep for future reference

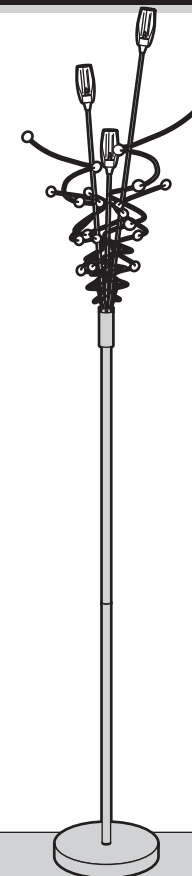

IMPORTANT

1. Read these instructions carefully and familiarise yourself with the procedure before assembling the unit.
2. Check that you have all the component parts following the list on the back cover and familiarise yourself with each part before proceeding.
3. Take all the fittings out of the plastic bag and separate them into their groups.
4. Ensure you have enough space to lay out all the parts before assembly.
5. To avoid scratching it is recommended that you assemble the unit on a soft level surface.

Assembly Instructions

Stage 1 – Fitting the Floor Lamp



IMPORTANT:

Ensure electricity is switched off at the mains before installing or maintaining any light fixture.



CAUTION:

Take care not to damage the cable or light fittings. Feed the cable through the tubes and base during assembly.

NOTE: It would be useful to ask someone to help you at this stage.

1. Screw Bottom Tube (J) into Base (K).
See fig. 1.
2. Screw Top Tube (H) into Bottom Tube (J).
See fig. 1.
3. Screw Head (G) into Top Tube (H).
4. Bend Light Stalks (F) to a suitable angle.

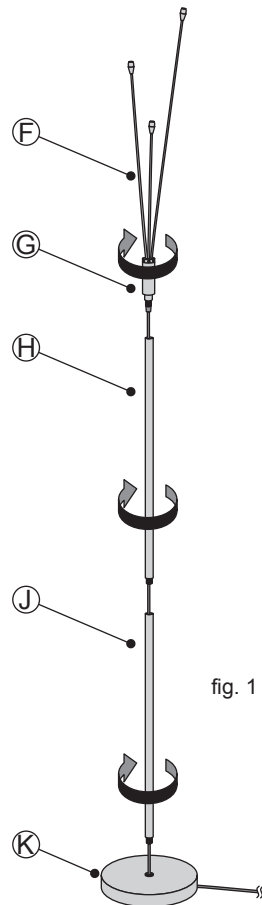


fig. 1

Assembly Instructions

Stage 2 – Fitting the Short Spiral Branches

NOTE: It would be useful to ask someone to help you at this stage.

1. Insert Short Spiral Branches (C) into the holes in Head (G).
See fig. 2 and 4.
2. Use Tool (A) to fix Short Spiral Branches (C) in position.
See fig. 3.

NOTE: The Light stalks can be readjusted using Tool (A).
See fig. 5.

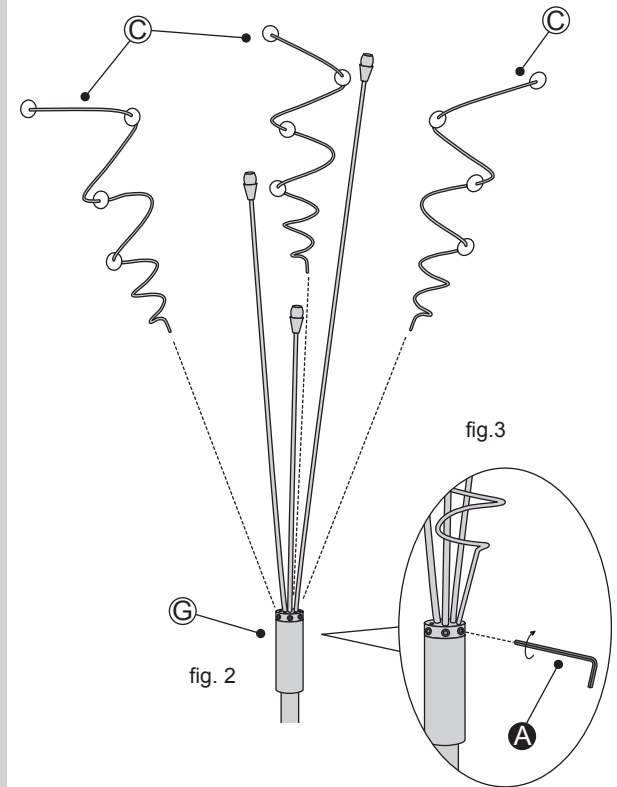


fig. 2

fig. 3

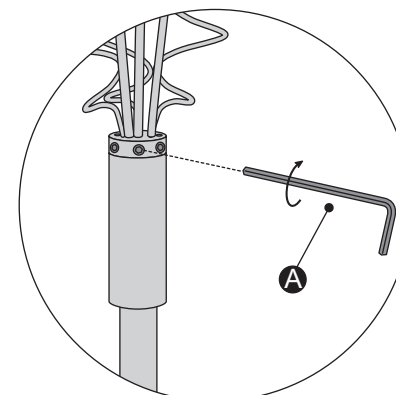


fig. 5

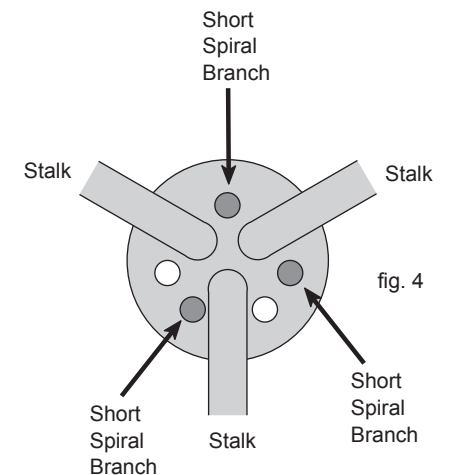


fig. 4

Assembly Instructions



Stage 3 – Fitting the Long Spiral Branches

NOTE: It would be useful to ask someone to help you at this stage.

1. Fit the Long Spiral Branches **(B)** over the Stalks, plugging the end into Head **(G)**.
See fig. 6, 8 and 9.

NOTE: The Short Spiral Branches may need to be adjusted to allow the Long Spiral Branches to fit.

2. Use Tool **(A)** to fix Long Spiral Branches **(B)** in position.
See fig. 7.

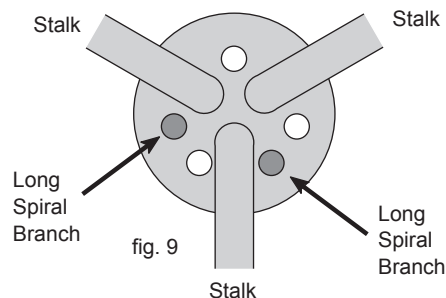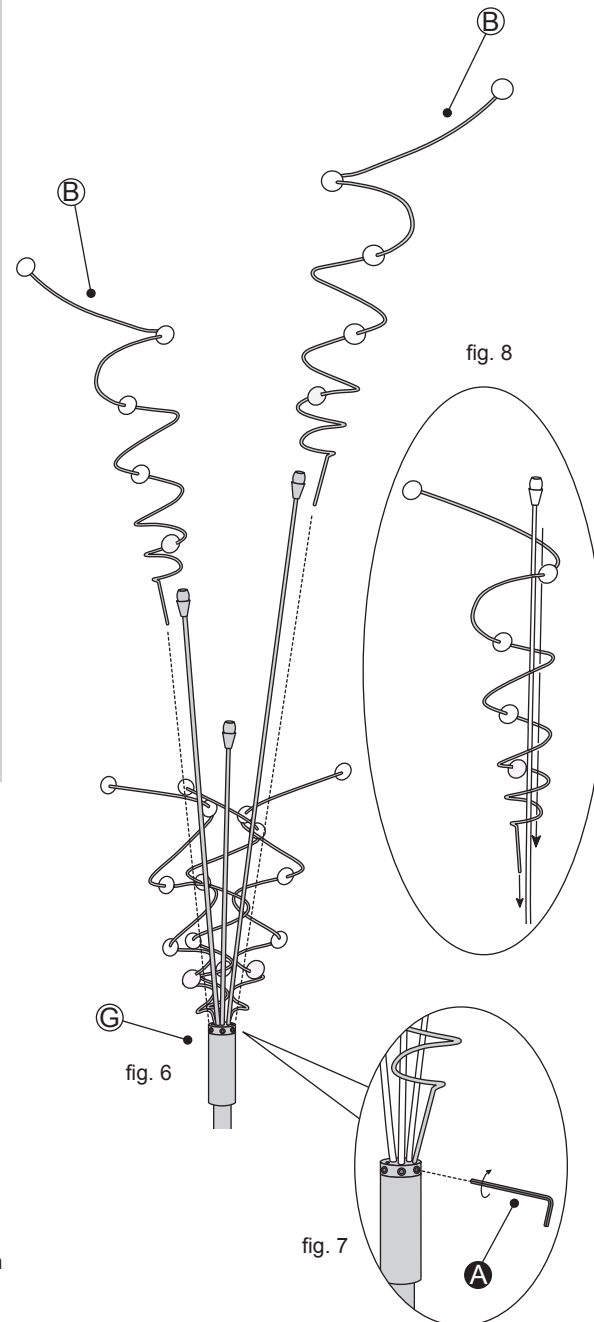

Assembly Instructions

Stage 4 – Fitting the Bulbs




IMPORTANT:

Ensure electricity is switched off at the mains before installing or maintaining any light fixture.

NOTE: Never touch the bulb with your fingers directly, cover it with a cloth.

1. Fit Bulbs **(E)** (20W 12V G4 BI Pin Halogen Capsule Bulbs) into Poles **(F)**.
See fig. 10 and 12.

2. Carefully fit Light Shades **(D)** onto Light Stalks **(F)**.
See fig. 11 and 12.

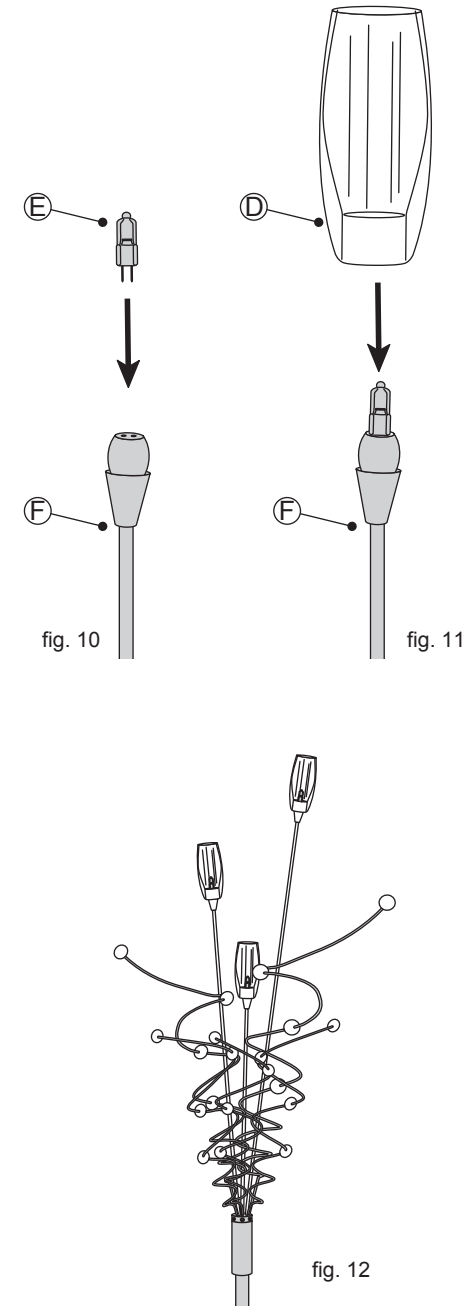

Assembly Instructions

Stage 5 – To Operation


NOTE: It would be useful to ask someone to help you at this stage.

1. Carefully place the lamp in the desired location.

NOTE: Make sure your local voltage is 230V/240V~50Hz.

2. Plug the Power Cord (M) into the mains socket.
See fig. 13.

3. Use the Dimmer Switch (L) to adjust the brightness; and to turn the unit on or off.
See fig. 13 and 14.

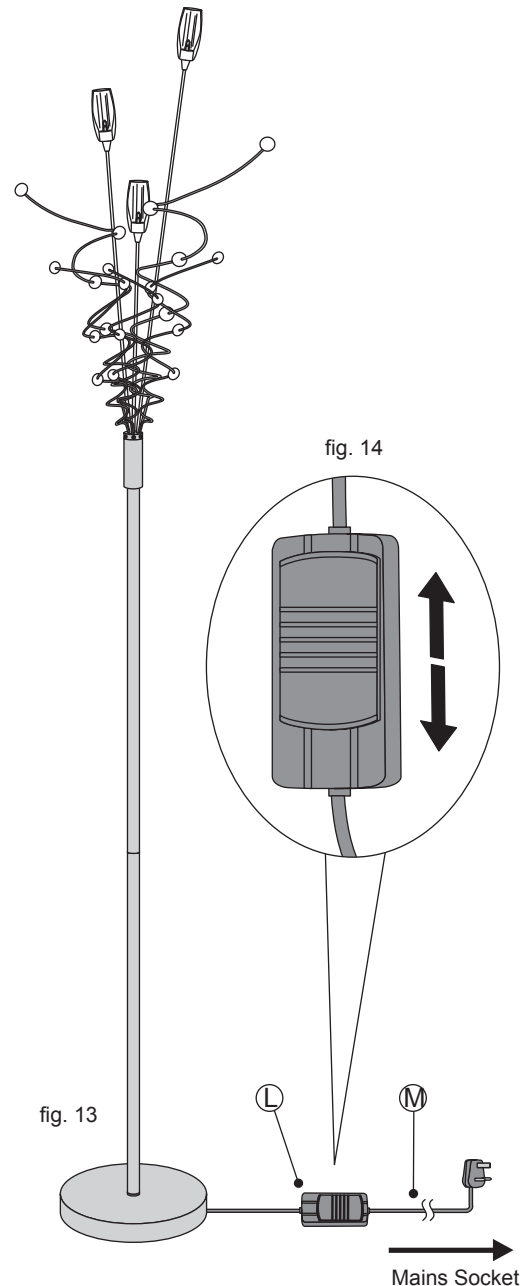

Assembly Instructions

Stage 6 – Bulb Replacement




WARNING:

The correct Bulb wattage for each bulb **MUST** be 20W MAX when replacing the failed bulb, the total load **MUST** be 60W MAX as its rated power.

1. Switch off the mains power supply.
2. Allow bulb to cool for at least 10 minutes before replacing.

NOTE: Never touch the bulb with your fingers directly, cover it with a cloth.

3. Remove the bulb.
4. Replace with a new bulb of the same voltage and wattage.

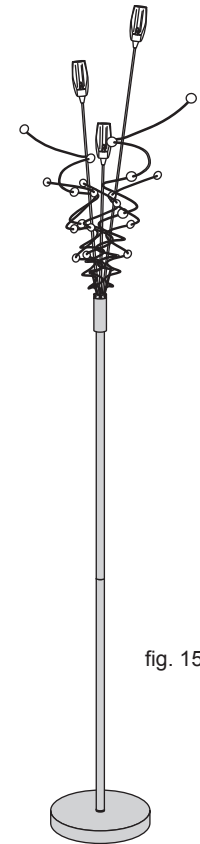

Caution

1. Indoor use only.
2. Connect to 230V/240V~, 50Hz.
3. If in doubt about fitting this product. Please consult a suitably qualified electrician.
4. The temperature of the spot lamp rises very quickly. Do not touch the metal parts or glass of the spot lamp after the light is turned on.
5. Never allow the light beam to point directly onto the ceiling.



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

Technical Data

Model No.	SHLT0017
Input Voltage	230-240V~, 50Hz
Max. Wattage	60W
Bulb	3 x Max. 20W G4 BI Pin Halogen Capsule Bulbs