

SET OF 2 WOOD TABLE LAMPS INSTRUCTIONS

Please read these instructions carefully prior to installation and retain them for future reference.

This product is for indoor use only.

SAFETY

This product is supplied complete with a 13-amp plug with 3-amp fuse. Our products should not be modified. If any modification is made, including tampering with the plug, it will invalidate the warranty and may render the product unsafe.


The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.



This fitting is double insulated and must not be earthed. If in doubt, we recommend you consult a qualified electrician.

ASSEMBLY

- Carefully remove all parts from their packaging.

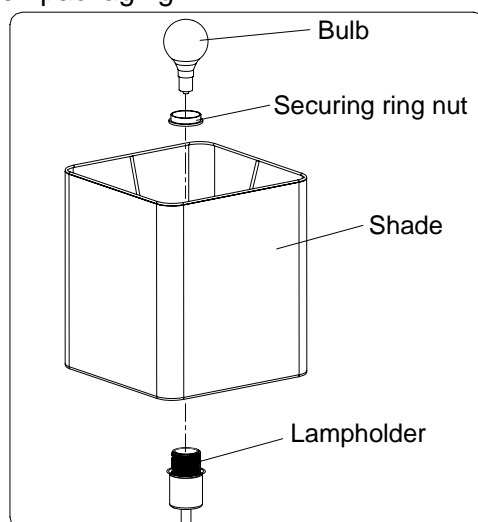

- Unscrew the securing ring nut from the lampholder.
- Fit the shade to the lampholder and secure into position with the securing ring nut. See above fig.
- Fit the recommended bulb (not included): **Max. 40W E14 Golf Bulb.**
- Installation is now complete, plug in to test. The lamp is turned on and off using the in-line switch.
- If the product fails to light, unplug before investigating.

BULB REPLACEMENT

- Switch off the mains power supply.
- Before replacing the bulb, allow it to cool down for at least 10 minutes.
- Never touch the bulb with your fingers directly, cover it with a cloth.
- Loosen the bulb and remove it from the lamp.
- Replace a new bulb with same voltage and wattage.



Model No. : GYTL3710A

Input Voltage: 230-240V~50Hz

Max. Wattage: 40W

Bulb: Max. 40W E14 Golf Bulb.

Argos Limited, Avebury, 489-499 Avebury Boulevard, Saxon Gate West, Central Milton Keynes, MK9 2NW.

29/4/08