

***BaByliss***<sup>®</sup>



**Pro Cordless  
Curling Tong & Brush**

Model 2583BU

# ***BaByliss***<sup>®</sup>

## **Pro Cordless Curling Tong & Brush**

BaByliss brings you a professional high temperature ceramic coated curling tong and brush for use at home or on the move. The cordless tong and brush gives you the versatility to create curls, waves, flicks, texture and lift. The ceramic coating has a flawlessly smooth surface giving you smooth styling for a perfect finish.

### **Features:**

- 19mm ceramic coated barrel
- High temperature, fast heat up
- Brush sleeve
- Cordless
- Cool tip
- Protective heat shield
- 1 x energy cell

## **INSTRUCTIONS FOR USE**

### **To insert or change the Energy Cell**

- Remove the base of the tong handle.
- Remove the cap from the energy cell.
- Place the energy cell into the handle, the top inserted first.
- Twist the energy cell clockwise and screw firmly in place.
- Replace the handle base.

### **To switch the tong on**

- Push the 'on' switch and wait for approximately 5 seconds.
- Depress the start switch on the handle of the tong several times.
- The light at the end of the barrel should now be on and the tong should begin to heat up.
- Wait for 1 minute, the tong is now ready for use.

**WARNING:** The barrel will get very hot within a few seconds and should not be placed in contact with the skin after the curling tong is turned on.

**IMPORTANT:** Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.

### **For best results**

- The curling tong will heat up very quickly.
- Always do a test curl before using the tong to ensure that it is at the correct temperature.
- To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl. (Remember to always place the spoon on top of a section when making a curl you want rolled under; place the spoon under the section when making a flip style)
- Wind the hair as far as you want it curled, being careful not to let the tong touch the scalp. Hold in place for 5-8 seconds, depending on the texture and length

of your hair. For tighter, bouncier curls, take smaller sections of hair. For loose, free-flowing curls, take larger sections of hair.

- To remove curling tong, press the automatic curl release and slide tong out sideways. To 'set' the curl, do not comb or brush hair until it cools.

### **Using the brush sleeve**

For softer waves and body, use the brush attachment. Ensuring the barrel is cool, slide the brush attachment over the tong. Separate a section of hair and wind around brush, hold in place for approximately 10 seconds and gently unwind. Allow hair to cool before styling.

### **After styling**

At the end of styling, push the 'off' switch and allow to cool before replacing the protective heat shield.

### **To check level of energy cell**

Check the level of fuel left in the energy cell by looking at the clear base of the cell while in a horizontal position (see figure 1). If cell is empty, replace with a new BaByliss energy cell.

**Figure 1**



## **SAFETY**

- Flammable. Contains pressurised butane gas.
- Do not use near fire or flames, including cigarettes.
- Protect from sunlight and do not expose to temperatures over 120°F (50°C).
- Do not pierce, puncture or incinerate the energy cell even after it is empty.
- If using aerosol sprays or flammable liquids such as hairspray, allow at least 5 minutes before igniting the tong to let flammable vapours disperse.
- When igniting the tong, hold it away from hair and clothing. Do not ignite while tong is in the hair.
- Do not cover the tong with the hand while igniting.
- Do not leave unattended while switched on.
- Careful adult supervision is required when the appliance is used on or near children or some disabled persons.
- Keep out of the reach of children.
- Allow the appliance to cool before storing away.
- Do not place the appliance on any heat sensitive surfaces whilst in operation.
- Do not immerse the appliance in water or other liquids. Do not allow to become wet.
- This appliance should only be used as described within this instruction booklet. Please retain for reference.
- Always inspect the appliance before use for noticeable signs of damage, or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to the UK After Sales Service Section

for further information).

### **Air Travel**

Please note that only one unit containing an energy cell may be carried per person aboard an aircraft inside your check-in-bags. Additional energy cells are not permitted. The protective heat shield must be securely in position over the heating element. This is subject to the individual airline's discretion. Please check with the airline before you travel.

### **UK GUARANTEE**

This BaByliss appliance is guaranteed for consumer use for three years. This guarantee is no longer valid in case of alteration or repair by any unauthorised persons and covers defects under normal use from the date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, it will be repaired or replaced under guarantee through the BaByliss After Sales Service. BaByliss reserve the right to amend terms and specifications without prior notice.

This guarantee in no way affects your rights under statutory law.

### **UK AFTER SALES SERVICE:**

For further help or advice on using the BaByliss Pro Cordless Ceramic Tong & Brush, or any other BaByliss appliance, contact the Conair Customer Care Line, telephone 0870 5 133191 (09.00-17.00 Monday to Friday)

or alternatively e-mail your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com)

**In guarantee**

Enclose your name, address and telephone number, details of the fault and your proof of purchase. Ensure the product is wrapped appropriately and return to the Conair Service Centre at the following address:

Conair Service Centre  
P.O. Box 506  
WIGAN  
WN1 9AA

BaByliss will either repair or replace your product as appropriate.

**Out of guarantee**

Telephone Conair 0870 5 133191 (09.00-17.00 Monday to Friday) or e-mail your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com) for details of the standard repair/replacement fee. Ensure the product is wrapped appropriately and enclose your cheque, (made payable to The Conair Group Ltd.) name, address and telephone number and details of the fault and return to the Conair Service Centre at the following address:

Conair Service Centre  
P.O. Box 506  
WIGAN  
WN1 9AA

