

BLOW DRY FASTER & NOURISH AC DRYER



LSHD20 Instruction Manual

My BLOW DRY FASTER AND NOURISH AC Dayer is infused with argan oil - an ingredient used for hundreds of years by the B. d. c. M. C. M

Berber woman of Morocco as part of their daily beauty regime. They consider it to have many benefits including the prevention of moisture loss in their unforgiving desert surroundings. Now these beauty secrets, proven for centuries, are infused within this driver!

Scan the QR code to see my handy hints and top tips!



IMPORTANT SAFETY POINTS

To reduce the risk of fire, burns, electric shock or other injuries, careful study of the following important safety precautions is strongly recommended:

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable. Please consult your local electrician for advice.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

ALWAYS

- ✓ ALWAYS use the unit only for its intended use as described in this manual. Only use attachments recommended in this pack.
- ✓ ALWAYS take care to avoid contact between hot surfaces and bare skin, particularly at the face & neck.
- ALWAYS ensure the appliance is switched off, unplugged from the mains and it has cooled down before storing.
- ✓ ALWAYS regularly check the mains cord for damage from time to time. If damaged, discontinue use immediately and do not use until the appliance has been inspected and approved by a qualified electrician.
- ✓ ALWAYS clean before storing away.
- ALWAYS keep mains cord away from hot or heated surfaces.
- ✓ ALWAYS store in original box in a cool, dry place.

NEVER

X NEVER use this product if it is not working correctly, if it has been dropped or damaged or dropped into water or any other liquid or if it has a damaged plug or mains cord. If it has the unit must not be used. **X** NEVER use with wet hands.

- NEVER use this product near bathrooms, showers, basins or other vessels containing water and do not immerse in water or any other liquids.
- X NEVER place the unit near heat sensitive materials.
- **X NEVER** leave unattended when plugged in and operating.
- **X** NEVER wind the mains cord around the handle when hot or while storing.
- X NEVER store while still connected to the mains.
- X NEVER attempt repairs yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee.
- **X NEVER** carry or suspend the appliance by the power lead.

IMPORTANT SAFETY POINTS

A 13 amp BS1362 ASTA approved fuse must be fitted.

Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. Connecting it to any other power source may cause damage.

This product may be fitted with a non-rewirable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained.

BLOW DRY FASTER AND NOURISH

If the plug has to be changed because it is not suitable for your socket, or due to damage, it should be cut off and a replacement fitted, following the wiring instructions shown. The old plug must be disposed of safely because inserting it into a socket could cause an electrical hazard.

The wires in the mains cable of this product are coloured in accordance with the following code:

Blue = Neutral Brown = Live


If the markings on the terminals of your plug do not correspond to the colours shown of the wires in the mains cable, proceed as follows:

The wire which is coloured **Blue** must be connected to the terminal which is marked **N** or coloured **Black**.

The wire which is coloured **Brown** must be connected to the terminal which is marked L or coloured **Red**.

DO NOT connect any wires to the earth terminal.

This symbol indicates that this is a 2-core appliance is Class II and does not require an earth connection.

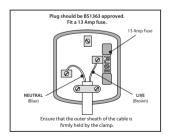





The LEE STAFFORD and ARGANOIL devices, barcode and the trade dress are all trade marks and used under licence. All rights reserved.



Due to our policy of continuous improvement, the actual product may differ slightly from the one illustrated in this booklet.

2200W HIGH PERFORMANCE IONIC DRYER

PRODUCT FEATURES

- 2200W AC motor for fast drying.
- · Conditioning high performance ionic generator.
- Removable rear grille cover for easy cleaning.
- Salon slim concentrator for directing airflow and smoothing the cuticle for a shiny finish.
- 2 speed and 3 heat setting for personal control.
- Cool shot to freeze frame your style.
- Salon length 3 metre cord for ease of use.
- Grille infused with nourishing argan oil for the smoothest, silkiest, healthiest hair yet!
- 2 year guarantee (subject to registration).

Thank you for choosing Lee Stafford. Please read and retain these instructions before operating for future reference.

USING YOUR HIGH PERFORMACE IONIC DRYER

PREPARING FOR USE

- Please read and retain these instructions before operating for future reference.
- Before first use, wipe the dryer with a soft, dry cloth.
- Remove all packaging and keep safe.
- For domestic use only.

OPERATION

This unit operates on a main 220-240V - 50/60Hz 2000-2200W.

INSTRUCTIONS FOR USE

- Towel dry your hair after washing, and detangle with a large tooth comb from scalp to tip.
- Plug the appliance into a suitable mains socket.
- Ensure the voltage being used is the correct voltage for this product.
- You can alter the heat and speeds settings via the buttons on the handle.
- Use high heat and speed for initial drying.
- Use low heat and speed for setting as hair begins to dry, and for styling.
- You can use the concentrator nozzle to direct heat and control the airflow.
- The freeze shot feature only operates while you hold the cool shot button down.
- When you release the button, the dryer will return to normal operation.
- After use, switch off and unplug the appliance.
- Allow unit to cool before storing away.
- Always keep the rear of the appliance away from the hair during use to prevent it being drawn in through the rear filter.
- Always carry out regular cleaning of the rear grille cover to remove any hair, dust or dirt to prevent the dryer from overheating.

LEE'S TOP TIPS

- Sectioning the hair will help to create a perfect, long lasting blow dry finish.
- To achieve a sleek, shiny blow dry always keep the cuticles flat by aiming the airflow down the hair shaft.

BLOW DRY FASTER AND NOURISH

- The hair sets as it cools so use the cool shot after drying to hold your style in place.
- I recommend my ARGANOIL[®] from Morocco haircare regime before and after styling with my BLOW DRY FASTER AND NOURISH hair dryer to help achieve the smoothest, silkiest, healthiest hair yet!

CLEANING AND MAINTENANCE

- The appliance must be unplugged before cleaning.
- Let the appliance cool down before cleaning.
- Wipe the body of the dryer with a soft damp cloth.
- To ensure correct operation and prevent overheating, it is important to regularly remove dust and dirt from the rear grille.
- The rear grille cover is removable to allow for blockages to be removed. Remove the rear grille by gently gripping the filter cover and lifting it off the dryer. Clean the grille with a soft brush or clean cloth. Place the grille cover back onto the dryer until it locks back into place.
- Do not use any harsh detergents, abrasives, solvents or cleaners.
- Never immerse in water to clean.

STORAGE

- Ensure the product is completely dry, switched off and unplugged from the mains before storage.
- Store in original box in a cool, dry place.
- Store in a safe place, away from children.

FOR DOMESTIC USE ONLY

SERVICING

There are no user serviceable parts inside this appliance. Always refer servicing to qualified service personnel. If you drop or damage your product, do not use until it has been inspected and approved by a qualified electrician.

If you require help with using your product contact the Customer Services Helpline on **0345 467 6743**.

YOUR TWO YEAR GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects, when registered at www.leestaffordelectricals.com within 28 days of purchase.

NB: Non-registered products are guaranteed for a period of 1 year.

It is particularly important that you carefully read the instructions provided, in order to get maximum use from this product.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply, dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

This guarantee is only valid with your original sales receipt as proof of purchase. You may wish to attach the receipt to this card for ease of reference and to avoid accidental loss.

In the unlikely event of a fault or mechanical defect in material and workmanship within the **12 months** of purchase the product should be returned to the retailer for replacement.

If the fault develops after 12 months and within 24 months from the date of original

purchase and you have registered your product online within 28 days of purchase, you should contact Customer Services quoting the product's model number and batch code.

This information can be located on the underside or back of the product. The batch code will be stated in an YYWW format (e.g. 1133).

For spare parts please contact customer services quoting the product's model number and batch code. They will give you up-to-date prices.

Exclusions

1. Batteries and damage from leakage is not covered by the terms of the guarantee.

2. The warranty does not cover acts of God such as fire, floods, hurricanes or tornadoes or use for rental or commercial services.

This guarantee does not cover any claims for consequential loss or damage.

This guarantee is only valid within the UK and Ireland. Nothing in this guarantee or the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice.

ALL MPL HOME PRODUCTS ARE INTENDED FOR DOMESTIC USE ONLY

MPL Home Customer Services 0345 467 6743 or warranty@mplhome.com



At the end of the useful life of the appliance, it should not be disposed of with general household waste.

Check with your Local Authority or retailer for recycling advice in your local area.

Lee Stafford is marketed and distributed under license by MPL Home Ltd HP2 7DX





Lee Stafford, Soho, London www.leestaffordelectricals.com