

# PHOENIX 6 CUBE UNIT

 
Assembly Instructions - Please keep for future reference

161/9878

170/2345

425/7079

395/8960

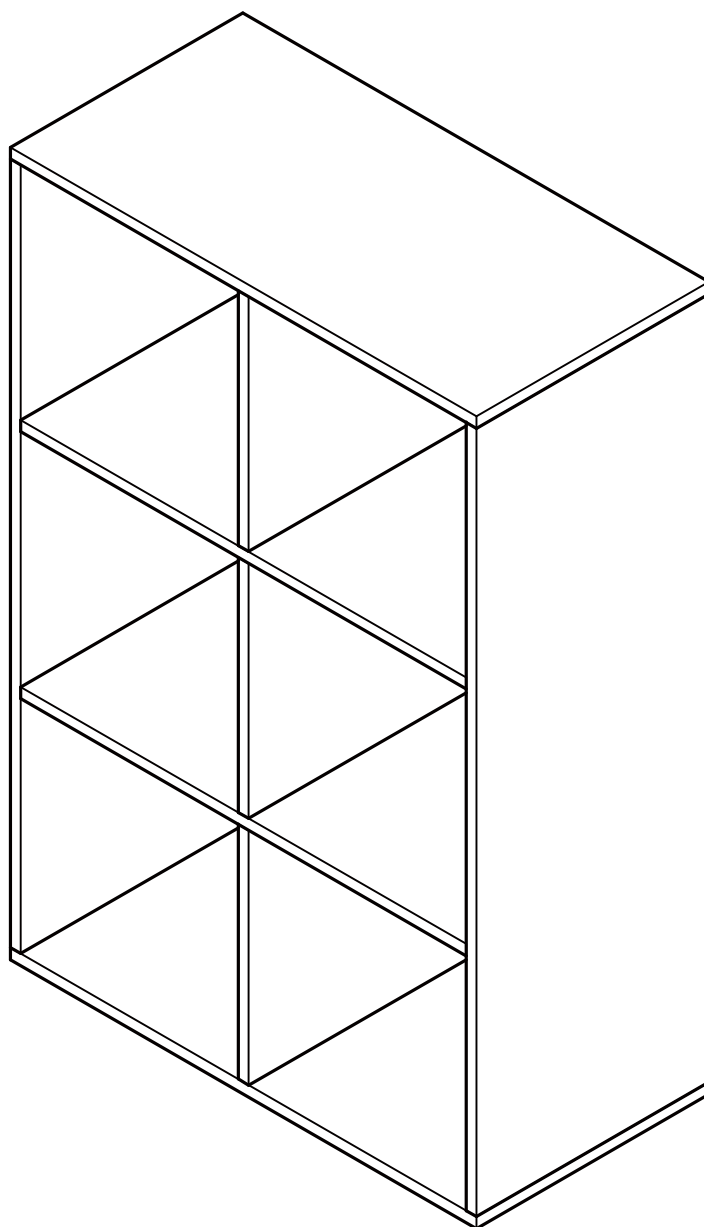

## Dimensions

Width - 70cm

Depth - 35.5cm

Height - 105.5cm

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**  
**Argos = 0345 6400800**



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not use this item if any components are missing or damaged.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.

- During assembly children should be kept away from the product due to possible risk of injury.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

## IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

 
- Argos Ltd. MK9 2 NW.
- This product is intended for children in the age 6 or above.
- Maximum load: 20 kgs.
- Assembly of this product must be carried out by a competent adult.

**Note:** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you have damaged or missing components, call the  
**Customer Helpline: Argos = 0345 6400800**


Please check you have all the panels listed below

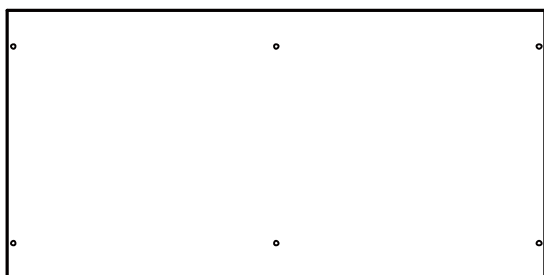

 
**1** Top/Bottom panel x 2 (69.9 x 34.9cm)




**2** Shelf x 2 (66.8 x 34.9cm)

 

**3** Middle support x 3 (33 x 34.9cm)

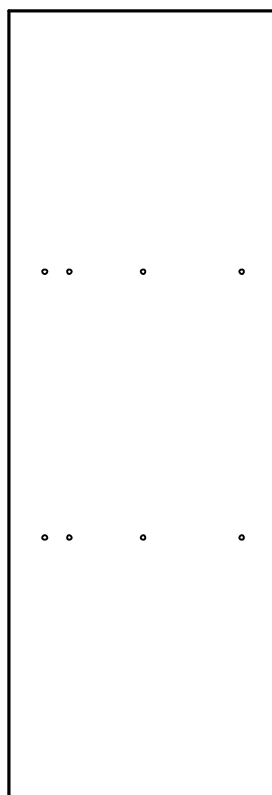 

**4** Side panel x 2  
(34.9 x 102.4cm)

 



 

 





**5** Back panel x 2  
(34.5 x 104.6cm)


# Components - Fittings

 Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.

<b>A</b>  30mm Dowel x 20	<b>B</b>  50mm Dowel x 4	<b>C</b>  50mm Screw x 8
<b>D</b>  Screw cover x 4	<b>E</b>  Nail x 32	<b>F</b>  (This screw is included in the wall strap bag) Wall strap x 1  x 1
<b>G</b>  14mm Screw x 1	<b>H</b>  Wall plug x 1	<b>I</b>  Allen key x 1


## Tools required



Phillips screwdriver  
(medium & large)



 7mm Suitable drill bit  
(for use with wall plug)

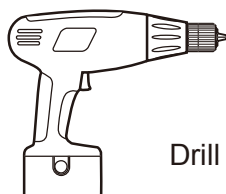

Drill



Small  
hammer



Ruler/tape  
measure



Eye protection  
(when using a  
hammer or glue)

## Ruler - Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (30mm screw shown).

# Assembly Instructions

 
## Step 1

### Attaching shelves

**Note:** It would be useful to ask someone to help you at this stage.


**a:** Use Dowels **B** to fix Middle supports **3** onto Shelves **2**.

**a:**

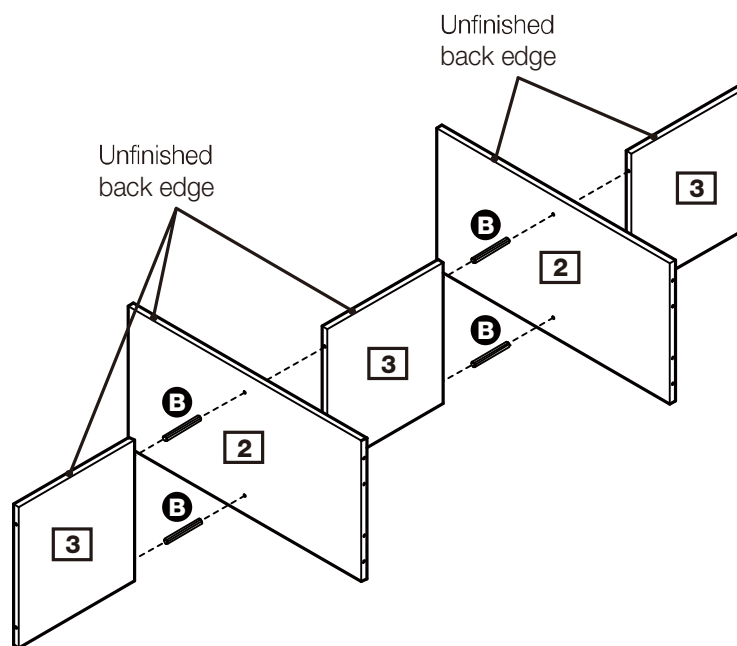

**b:** Insert Dowels **A** into the Shelves **2** and Middle supports **3**.


**b:**

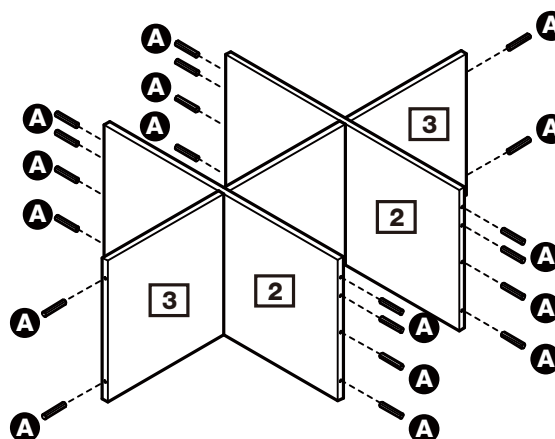 

## Step 2

### Attaching side panel

 Fix the Side panels **4** onto the unit.

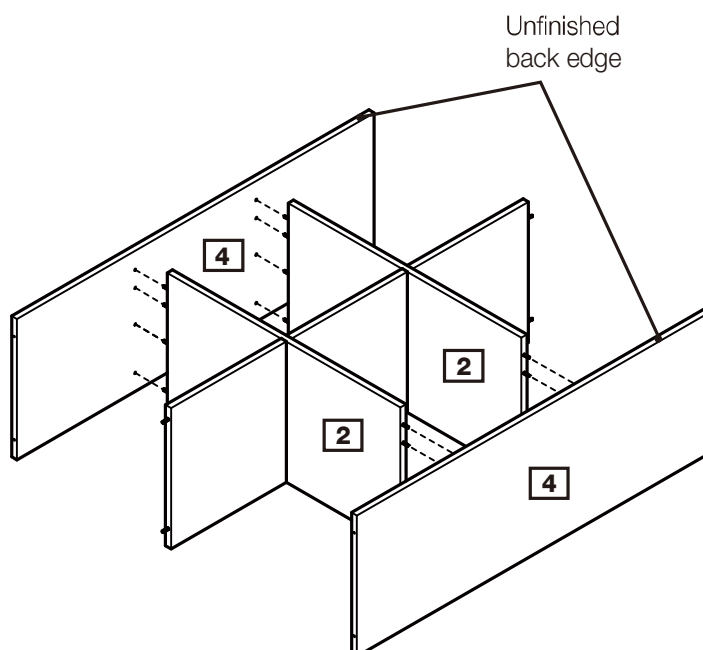

# Assembly Instructions

## Step 3

### Attaching top and bottom panels

Fasten Screws **C** by Allen key **I** to fix the Top and Bottom panels **1** onto the unit.

 
Use Screw covers **D** to cover the screw heads.

With help, carefully stand the unit upright.



**Warning:**

The unit is heavy.  
Lift with care.

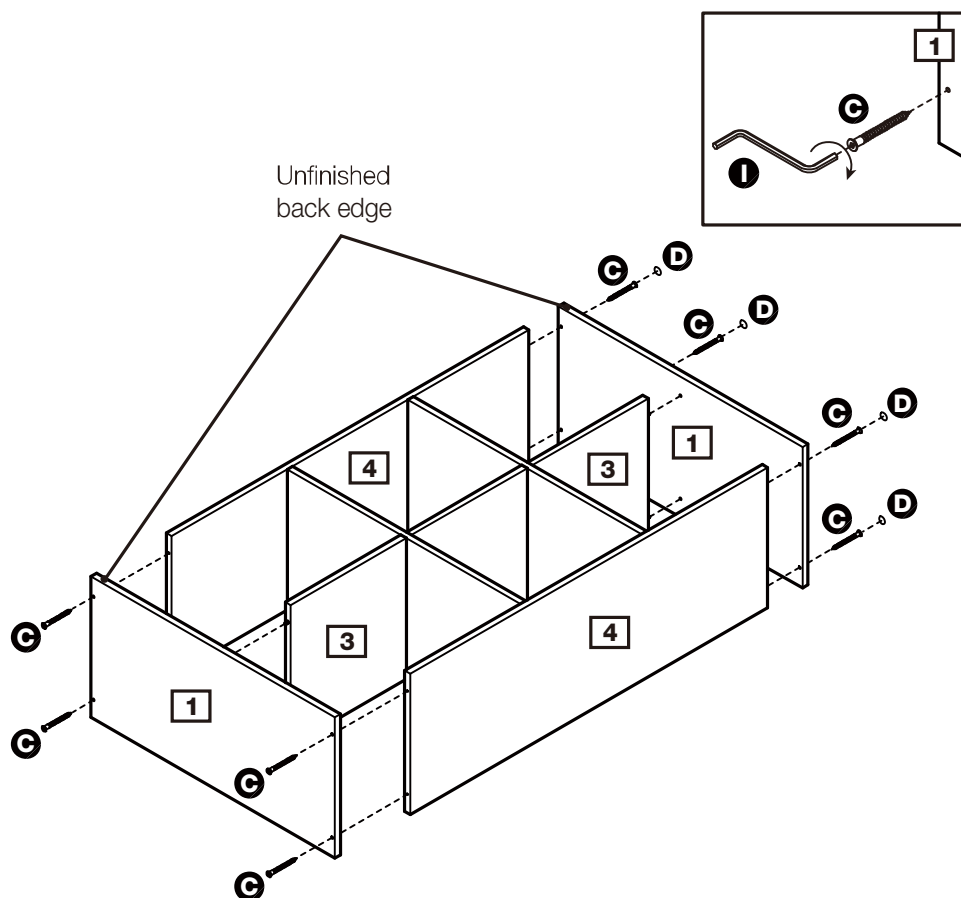

## Step 4

 
 
### Fixing back panel

Use Nails **E** to fix the Back panels **5** onto the unit.



**Important:**

The unit **MUST** be 'square' when the back is attached.

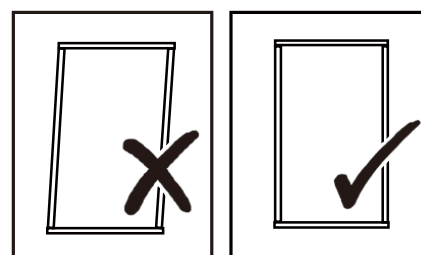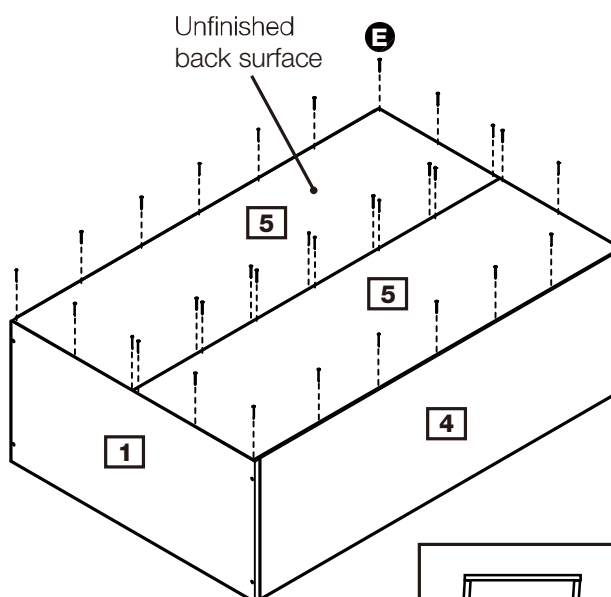

# Assembly Instructions

## Step 5

### Fixing to wall

It is recommended that the unit is fixed to a wall.

Fix Wall strap **F** to top panel using Screw **G**.

With help, move the unit into position.



**Warning:**  
The unit is heavy.  
**Lift with care.**

Mark fixing hole on wall and remove unit.

 
Drill a hole and insert Wall plug **H**.





**Warning:**  
Before drilling, check wall for hidden pipes and cables.

Reposition the unit and fix wall strap using Screw **F**.

**Assembly is complete.**

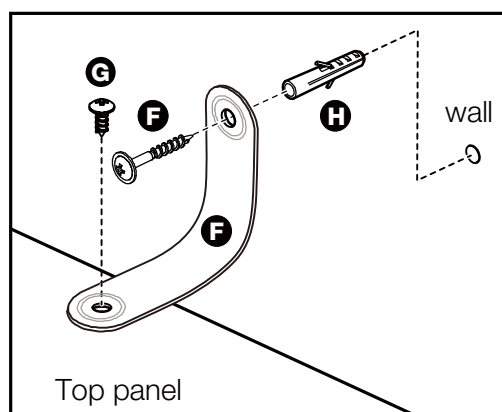

  **Note:** Wall plugs supplied are for solid wall only.  
The correct type of fixing must be used for your wall, seek professional advice if in doubt

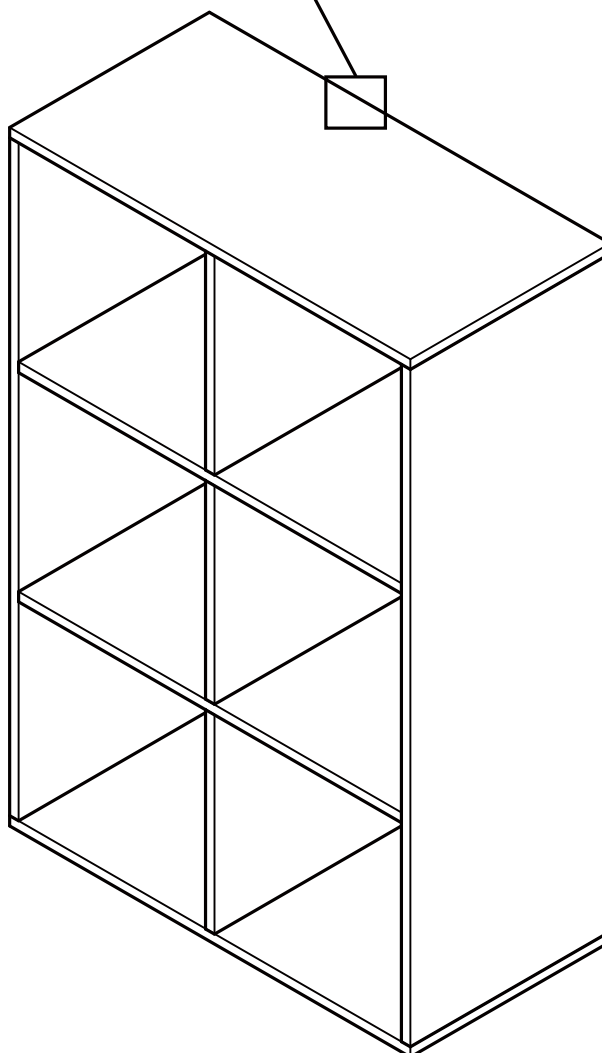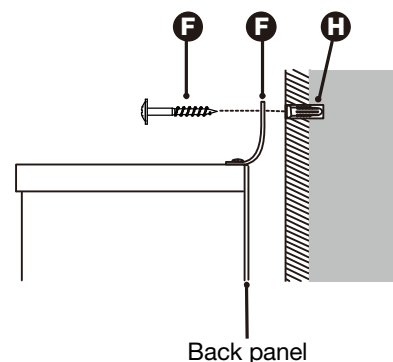

If you need help or have damaged or missing parts, call the **Customer Helpline:**  
**Argos = 0345 6400800**

# A Guide to - Wall Mounting & Fixings

## Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.



**Important:** When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

- 1: General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

## Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

### No.1 "General Purpose" wall plug

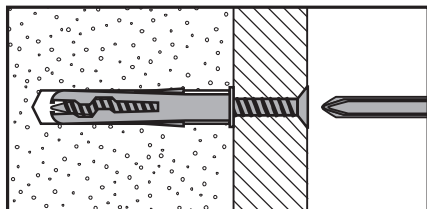


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

### No.2 "Plasterboard" wall plug

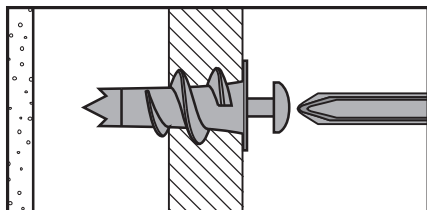 


For use when attaching light loads on to plasterboard partitions.

### No.3 "Cavity Fixing" wall plug

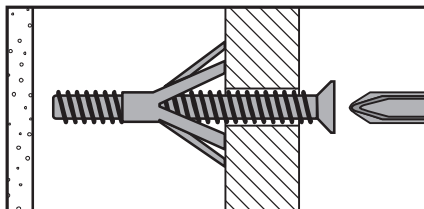 


For use with plasterboard partitions or hollow wooden doors.

### No.4 "Cavity Fixing-Heavy Duty" wall plug

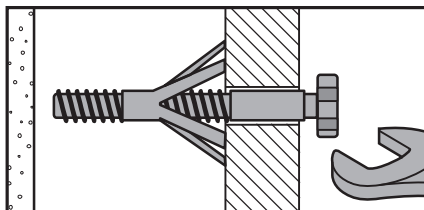 


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

### No.5 "Hammer Fixing" wall plug

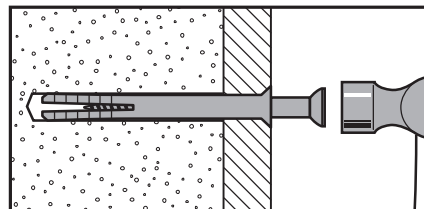 

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

### No.6 "Shield Anchor" wall plug Heavy loads

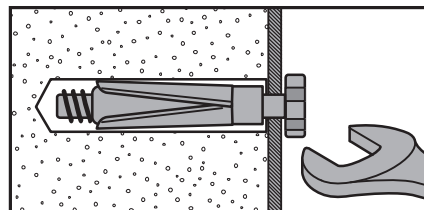 

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



## Care & Maintenance

**Safety:** Always check the fitting and location to ensure your safety in and around the home.

**Fitting:** From time to time check the fitting to ensure the wall plugs or screws do not become loose.