 


Foldable Bamboo Clothes Rail

Assembly Instructions- please keep for future reference

460/9414

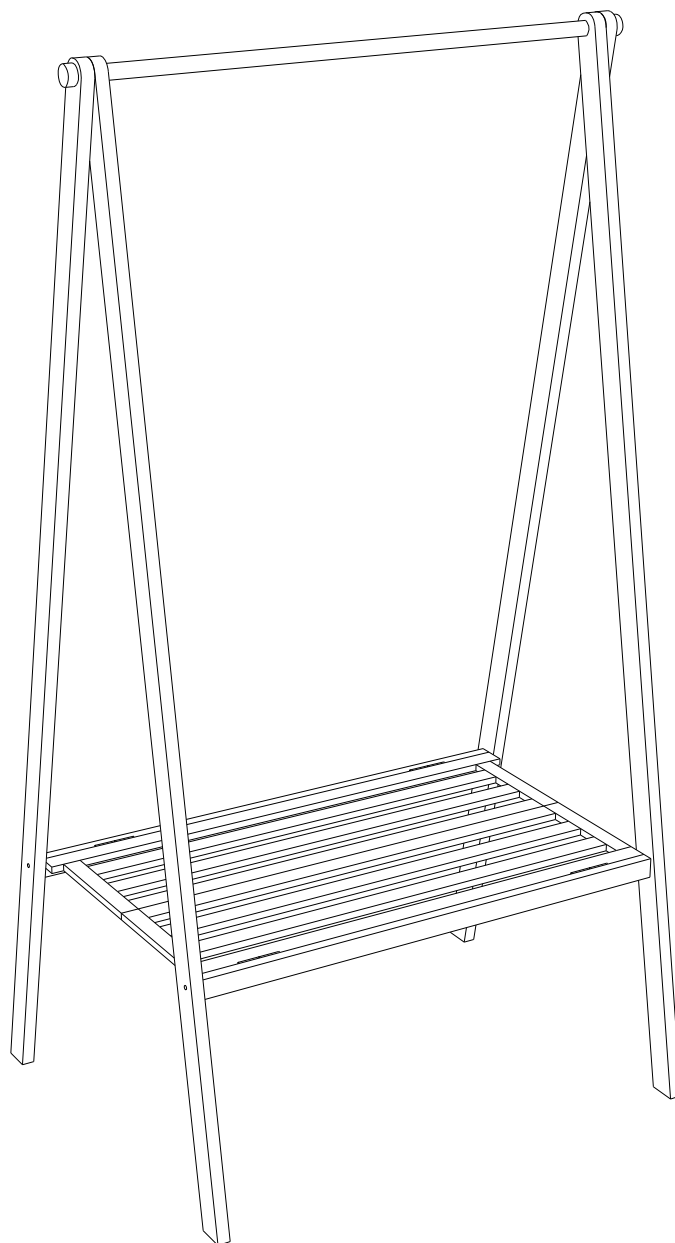

Dimensions

Width - 83 cm

Depth - 56cm

Height - 148 cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 2
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the using. Only use hand screwdrivers

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

 
Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.


Components - Panels

If you have damaged or missing components, call the
Customer Helpline: **0345 640 0800**


Please check you have all the panels listed below

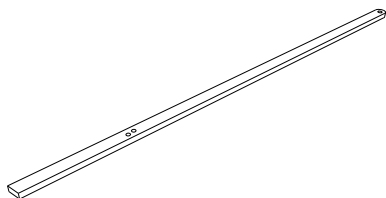


1 Leg A x 2
(3.9(w)cm*151(d)cm)

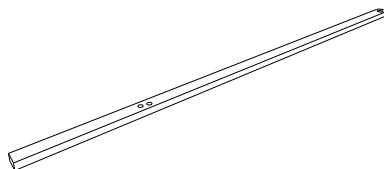 

2 Leg B x 2
(3.9(w)cm*151(d)cm)

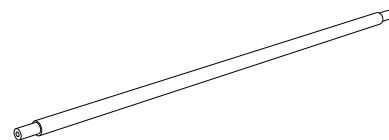 

3 Cross Bar x 1
(2(w)cm*78.8(d)cm)

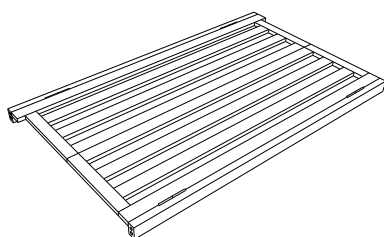 

 
 

 
4 Bottom rack x 1
(43.5(w)cm* 71.5(d) cm)

Components - Fittings


If you have damaged or missing components,
call the **Customer Helpline: 0345 640 0800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

| | | | |
|---|---|---|--|
| A  40mm Screw x 4 | B  30mm Dowel x 4 | C  Allen Key x 1 | D  Machine Screw x 2 |
|---|---|---|--|

 Ruler – Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

1. Connect Legs **1** and **2** to bottom rack **4** by inserting 2 x dowels **B** into the ends of Rack **4**

2. Screw together using 2 x Screw **A** and Allen Key **C**

 3. Locate Cross Bar **3** into holes in the top of legs **1** and **2** as shown

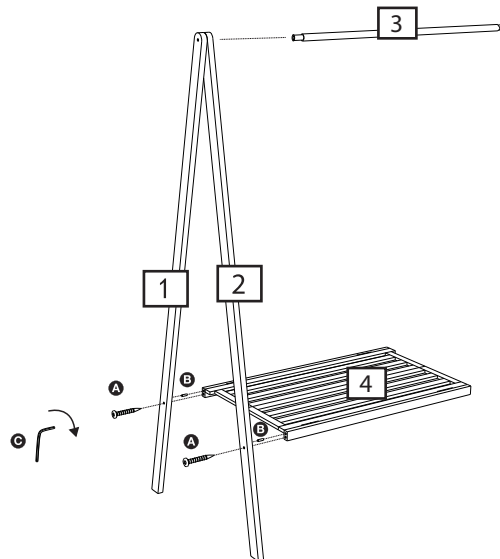


Step 2

1. Locate Cross Bar **3** into holes in legs **1** and **2** as shown.

2. Connect Legs **1** and **2** to bottom rack **4** by inserting 2 x dowels **B** into the ends of Rack **4**

 3. Screw together using 2 x Screw **A** and Allen Key **C**

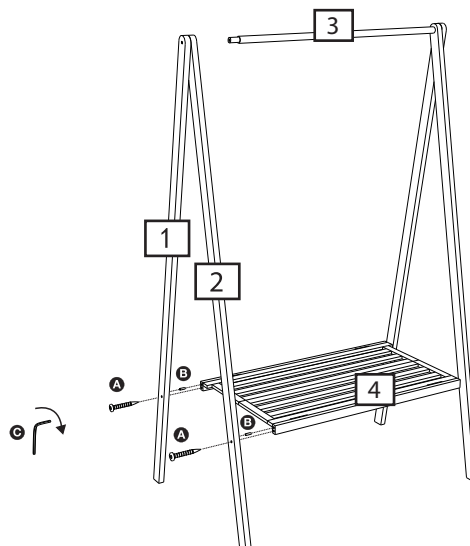


Assembly Instructions

Step 3

1. Fix cross bar **3** in place using 2 x machine screws **D**. The unit is now secure.

 Assembly Complete

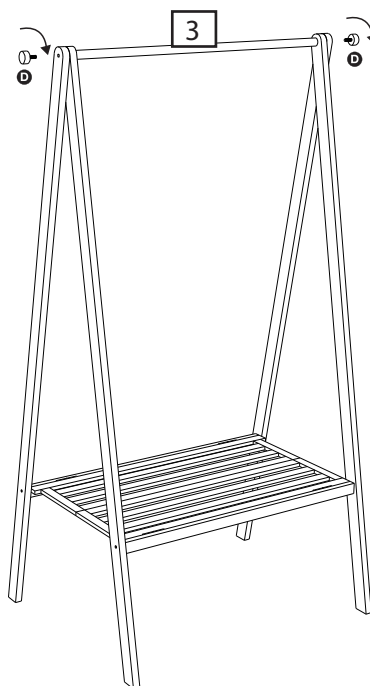

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**
Argos LTD. 489-499 Avebury boulevard, Central Milton Keynes, MK9 2NW