


Jessie Dining Table

Assembly Instructions - Please keep for future reference

464 / 7397



481 / 6506

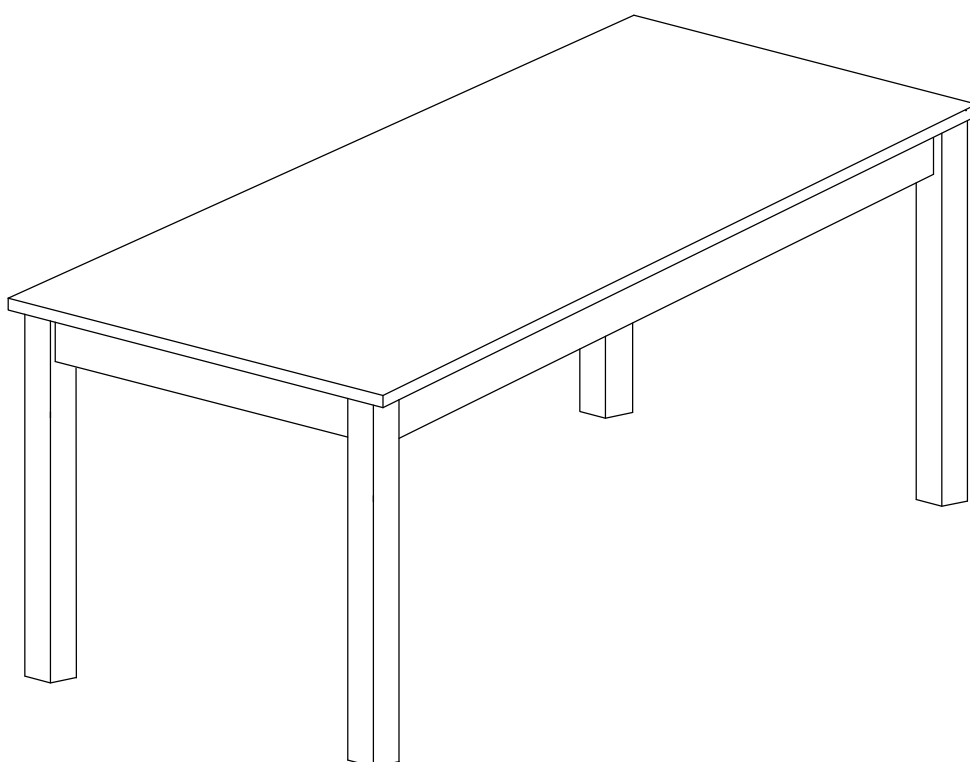

Dimensions

Width - 110 cm

Length - 70 cm

Height - 75 cm


Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline** :
Argos 0345 640 0800



Safety and care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2.
 - Remove all fittings from the plastic bags and separate them into their groups.
 - Keep children and animals away from the work area, small parts could choke if swallowed.
 - Make sure you have enough space to layout the parts before starting.
 - During assembly do not stand or put weight on the product, this could cause damage.
 - Assemble the item as close to its final position (in the same room) as possible.
 - Assemble on a soft level surface to avoid damaging the unit or your floor.
 - Parts of the assembly will be easier with 2 people.
-  To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.


Note : if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Part


If you have damaged or missing components
, call the Customer Helpline :
Argos= 0345 640 0800

Please check you have all the parts listed below

- 1 Table Top
(1.8 x 70 x 110cm)

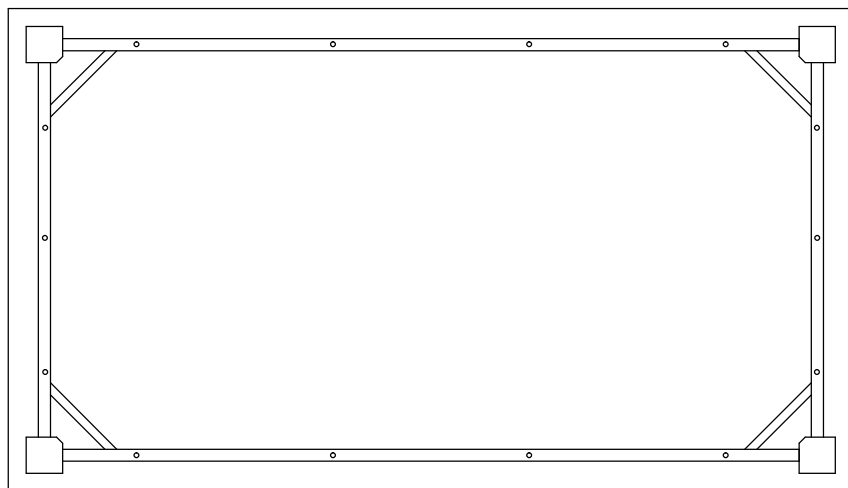

- 2 Leg
(4.5 x 4.5 x 73cm)

 





Components - Fittings


If you have damaged or missing components
, call the Customer Helpline :
Argos= 0345 640 0800

 Please check you have all the parts listed below

Note : The quantites below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A  M6 x 50mm JCBC Screw x 8	B  Spring Washer x 8	C  Flat Washer x 8
D  Allen Key x 1		

 Tools required



Ruler/tape
measure

 Ruler - Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (30mm screw shown).

Assembly Instructions


Step 1

Assembling legs

Carefully place table top **1** upside down onto a clean flat surface.

Assemble legs **2** to table top **1** using fixings **A**, **B** and **C**.

Note: Ensure the legs are tight but do not overtighten.

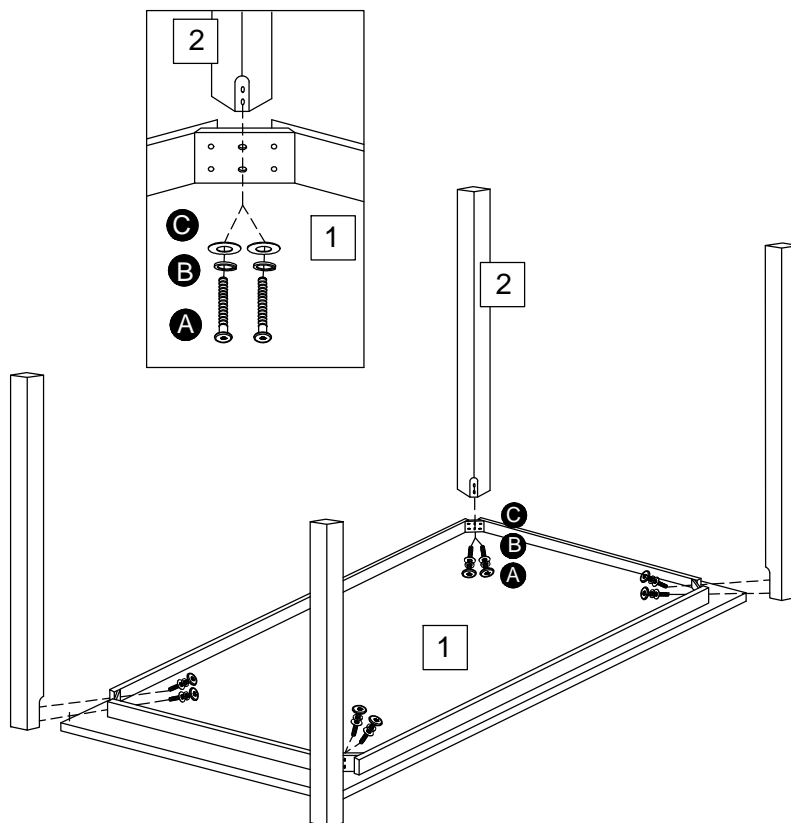


Step 2

Turn upright

With help, carefully turn the table upright.



Warning The table is heavy.
Lift with care.

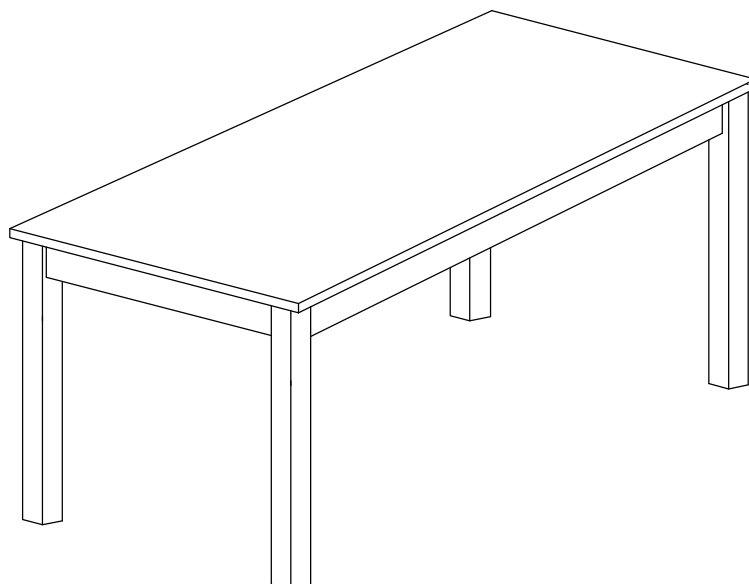

Assembly is complete

If you need help or have damaged or missing parts, call the **Customer Helpline : 0345 640 0800**