


# 3x3 Pop Up Gazebo with Side Panels

Assembly Instructions - Please keep for future reference

483/2669

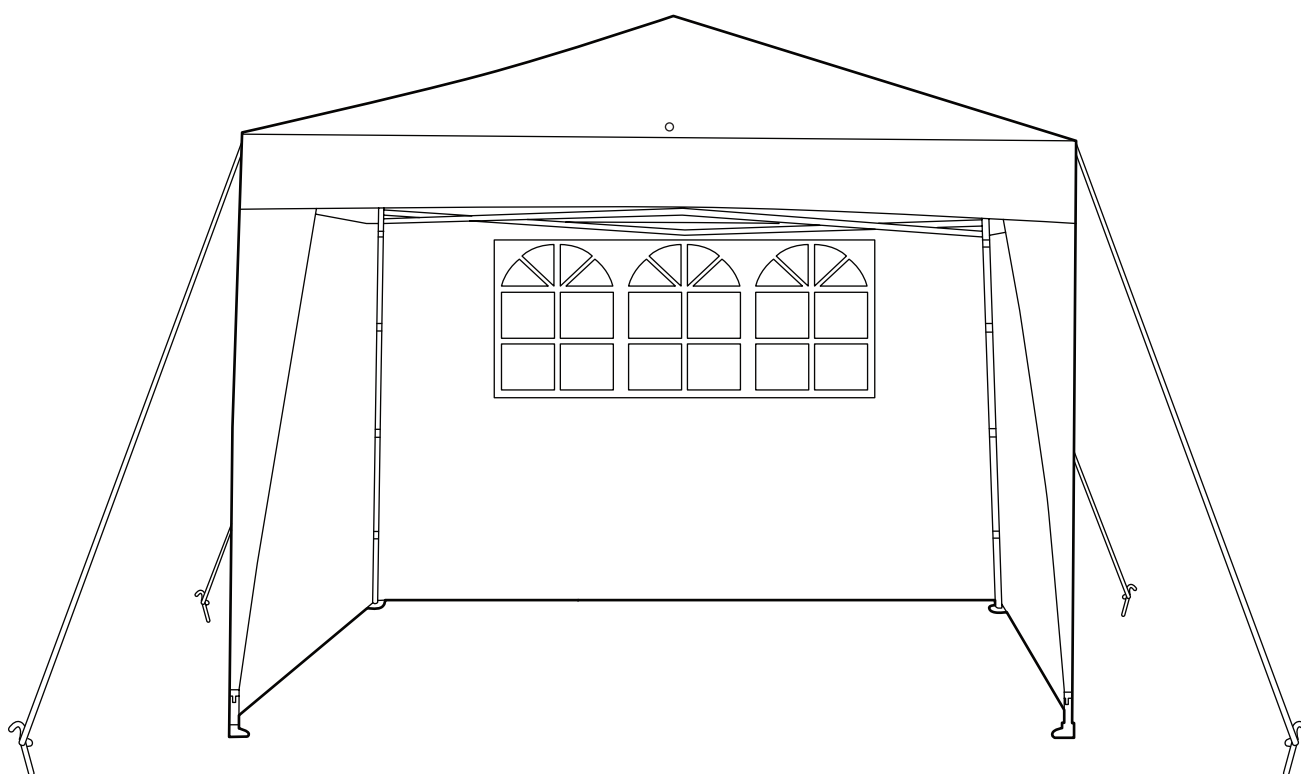

**Important:** Please be careful when you open and fold gazebo to avoid tearing the canopy

## Dimensions

Width - 300cm  
Depth - 300cm  
Height - 255cm



**Important:** This Gazebo Must be opened, erected and dismantled by 2 people at least



**Important:** Make sure all the guy ropes and pegs are used, otherwise the gazebo will be unstable!

**Important – Please read these instructions fully before starting assembly**

If you need help or have damaged or missing parts, call the

**Customer Helpline: Argos = 0345 6400800**

For further assistance please visit <http://www.argos-support.co.uk>

Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks, MK9, 2NW



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components, fittings and tools listed on page 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- **Do not Assemble or Dismantle during strong winds.**
- This unit is not a permanent fixture - **Do not use or leave erected in windy conditions.**

- Follow all safety and fire precautions when in or near this Gazebo.
- Please note that this Gazebo is Shower proof and not Waterproof.
- Practice assembling and dismantling the Gazebo before use to familiarise yourself with the components and fittings.
- Take note of all the components and fittings and ensure you don't forget anything when dismantling.
- Before each use check you have all the components and fittings, and that none of them are damaged.

## Positioning:

- To prevent the wind blowing into the entrance, position the Gazebo so the entrance is away from prevailing winds.
- Ensure the ground is level, free from debris and sharp objects that could damage the fabric. Avoid pitching under trees but make use of any natural wind breaks such as hedge rows etc. **Heavy winds and rain could damage the Gazebo.**
- Try to locate the Gazebo at least 5 - 10 meters away from any other campers where possible.
- **Warning:** The unit weighs approximately 18.5 kgs. **Please lift with care.**

## Fire precautions and safety



**The canopy and sides of this Gazebo are not fire proof, follow the fire precautions and safety at all times.**

- Do not use naked flames in or around the Gazebo - **there is no cooking area within the Gazebo.**
- Do not store cooking apparatus, BBQs etc within the

Gazebo as it may cause a fire hazard.

- Do not smoke or allow smoking in or around the Gazebo.

## Care and storage

- Take care when dismantling the Gazebo. Follow the assembly instructions in the reverse order and do not force the frame.
- Never remove the pegs by pulling on the guy ropes, fabric or Gazebo legs.

- Ensure all parts of the Gazebo are **completely dry before repacking.**  
If necessary unpack the parts when you return home and allow to dry completely before repacking and storing.

- All parts should be cleaned and packed separately. **When completely dry** gently remove any dirt and debris from the fabric with a soft brush.

 

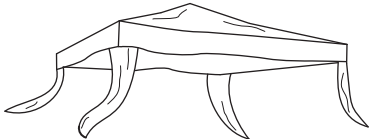
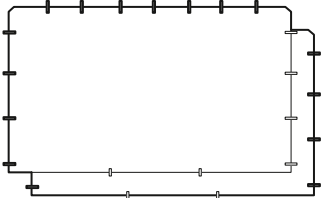
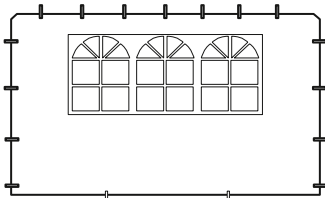
 
 
- **Never use abrasive cleaners or detergents.**

# Components - Parts & Fittings

 
If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400800**

Please check you have all the parts & fittings listed below

*Note:* The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<div>1</div>  <p>Tent bag x 1</p>	<div>2</div>  <p>Gazebo frame x 1</p>	<div>3</div>  <p>Top roof x 1</p>
<div>4</div>  <p>Side panel x 2</p>	<div>5</div>  <p>Back panel x 1</p>	<div>A</div>  <p>Peg x 12</p>
		<div>B</div>  <p>Guy rope x 4</p>

## Tools required



**D** Rubber mallet x 1

# Assembly Instructions

## Step 1

### Opening the Gazebo

**Note:** At least 2 people are required for this procedure.

**a & b:** Stand the Gazebo frame **2** upright.

With people at diagonally opposite corners, carefully pull the Gazebo frame partly open.

Move to each side, carefully pulling the frame apart until it has expanded as shown in diagram b.




**c & d:** With people at opposite sides, carefully push up and down on the frames as shown in diagram c.

Move to each side, carefully pulling (compressing) the frame together until it has expanded as shown in diagram d.



**Important:**

Do not compress more than shown or the frame can be damaged.

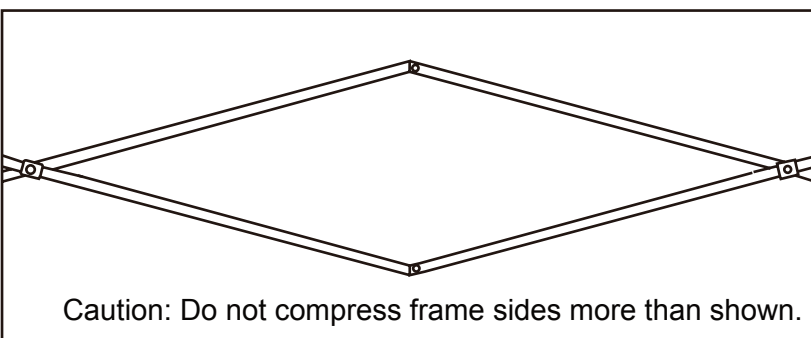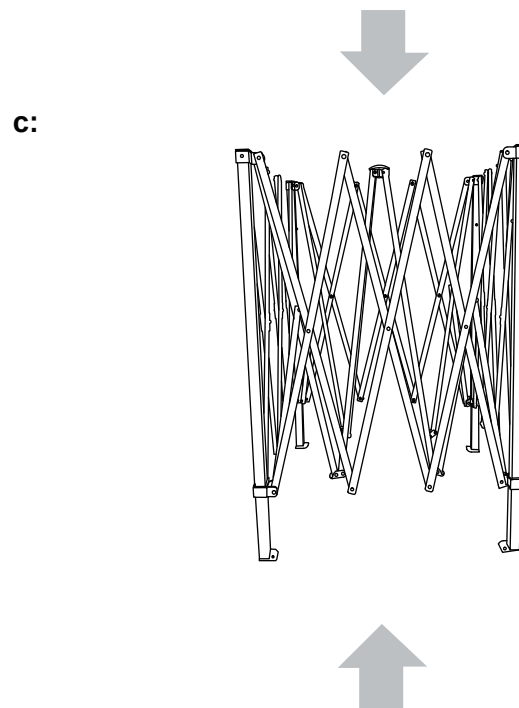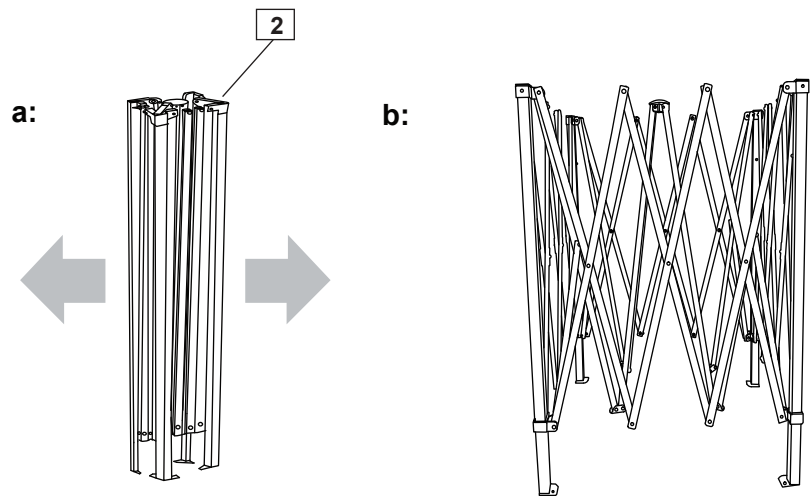

# Assembly Instructions


## Step 2

### extending the Gazebo frame and put top roof

**Note:** At least 2 people are required for this procedure.


**a:** In one corner at a time, lock the Gazebo frame **2** in position by sliding the corner bracket up until the spring clip engages through the bracket.

**a:**

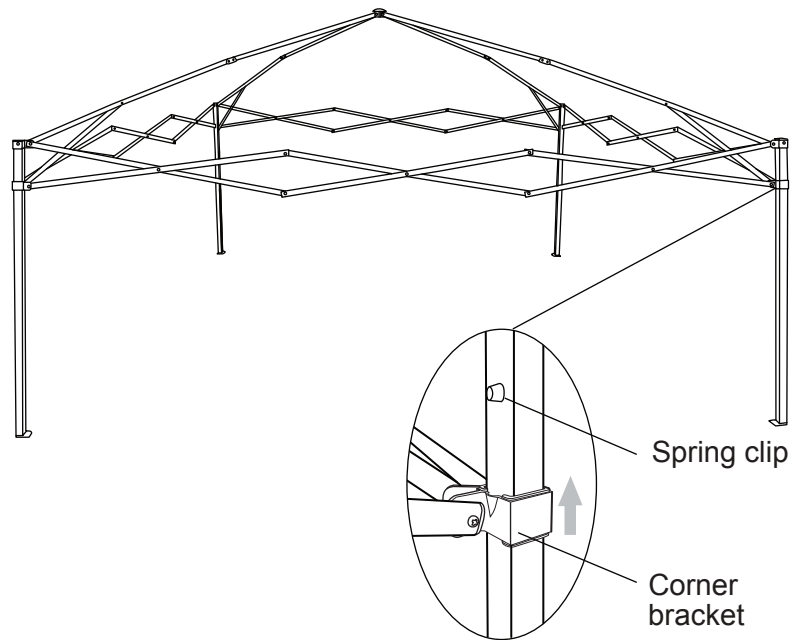

**b:** Put the top roof **3** on the Gazebo frame **2**.

**b:**

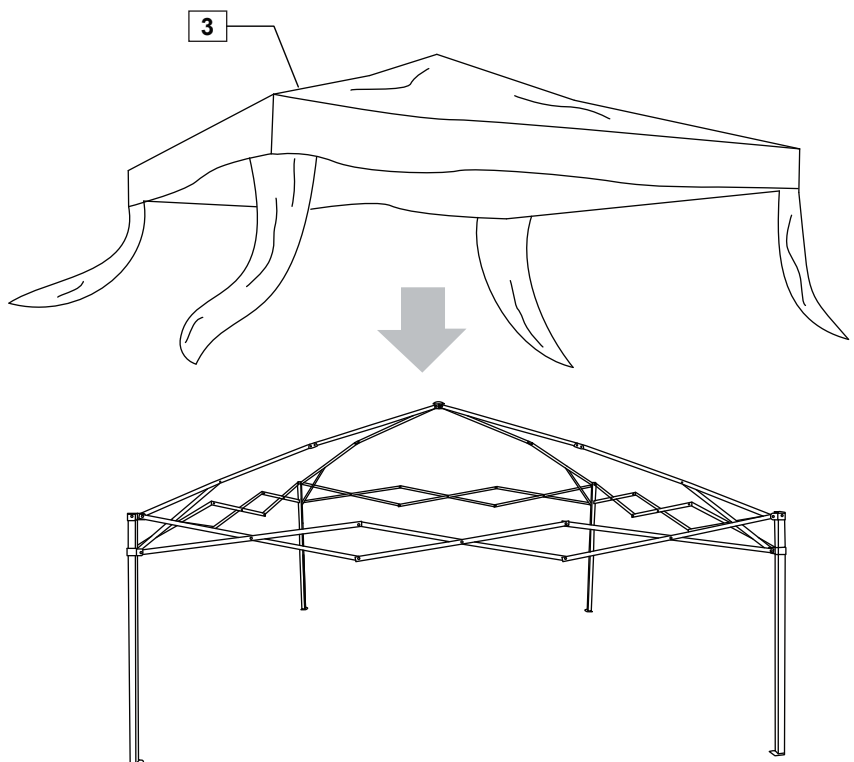

# Assembly Instructions

## Step 3

### Extending the legs and secure the canopy


**a:** Pull and extend each leg until the spring clips engage into the hole in the outer tubes.

**Note:** There are two spring clip location holes in each leg, using the holes can adjust the height of Gazebo.

**b:** Attach the hooks on the end of the canopy legs to the holes at the end of the frame leg, the canopy cover can be tightened by moving the hooks to a lower hole.

**c:** close the velcro tape as shown in diagram c.

**Warning:** the velcro tape must stretch tight as this could cause rain water to collect on the canopy and a hazard.

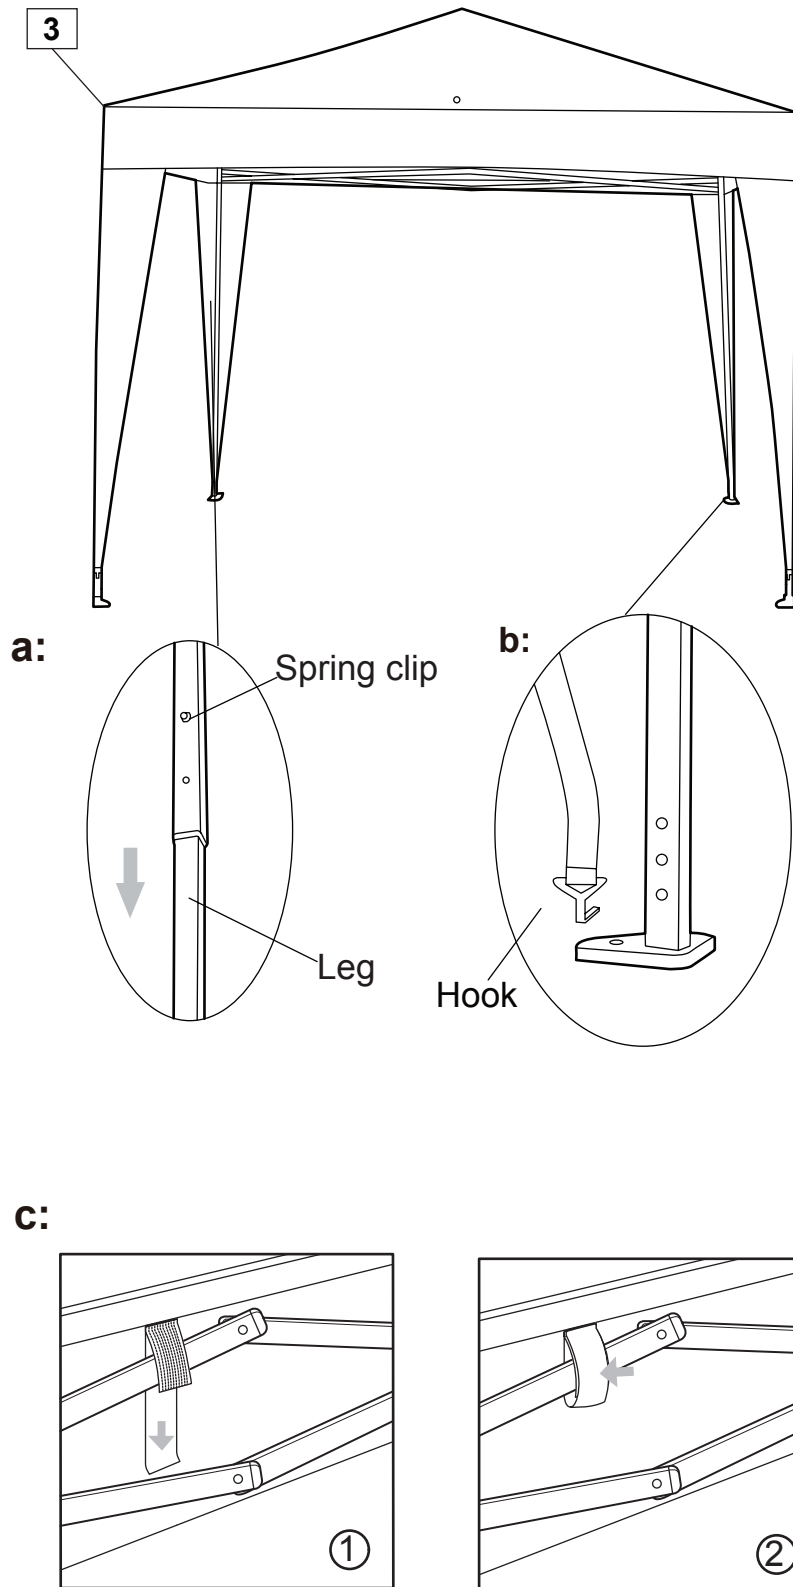

# Assembly Instructions

## Step 4

### Attaching the guy ropes

**Note:** At least 2 people are required for this procedure.

**a:** Attach the end of each guy Rope **B** to a "D" ring at each corner of the canopy cover.

**b:** Use the pegs **A** to secure the other end of the guy rope to the ground (insert at an angle).


**c:** The length of the guy rope **B** can be adjusted by feeding the rope through the tensioner.

**Note:** Take care not to bend the pegs, please use a rubber mallet to help fully insert to the ground (insert at an angle).



**Caution:**

Do not over tighten the Guy ropes as this can damage the fabric seams.

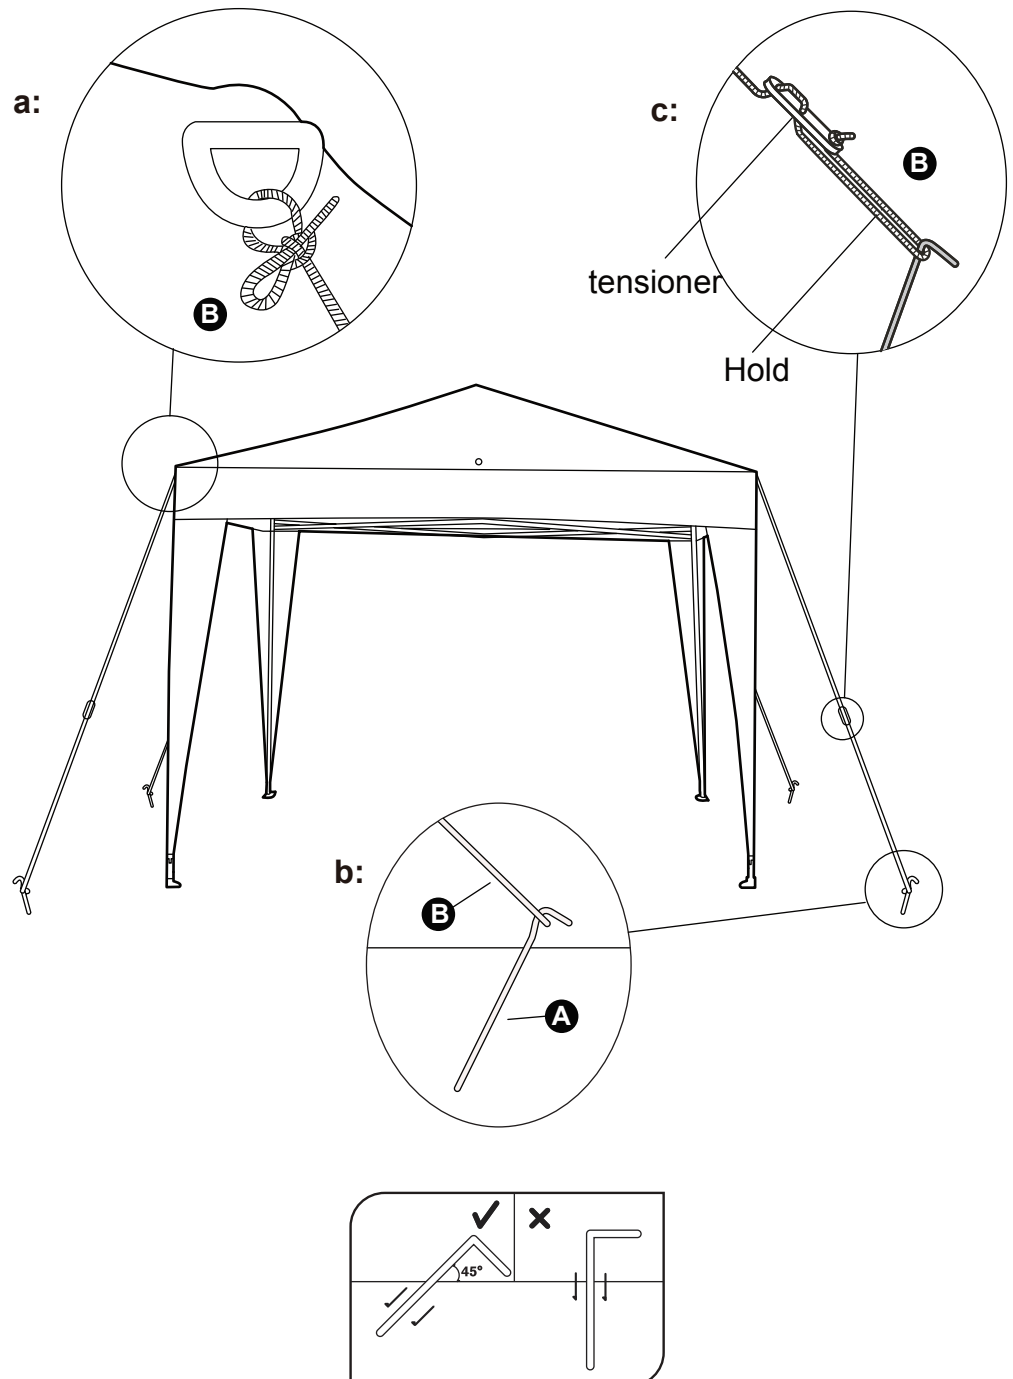

# Assembly Instructions

## Step 5

### Assembly Instructions Fitting the sides

**Note:** At least 2 people are Required for this procedure.

**a:** Use the Velcro tapes on the Back and side panels **5** & **4** To secure the panels onto the frame work.

**Note:** the velcro tapes length are different, they should be secured on the frame as shown in diagram a.

**Warning:** the velcro tape must stretch tight as this could cause rain water to collect on the canopy and a hazard.


C

**b:** Insert two pegs **A** to secure the side panels **4** **5** and legs into the ground.




**c:** Insert one peg **A** to secure the side panels **4** and legs into the ground, then insert another peg to the ground directly.

**Note:** Take care not to bend the pegs, please use a rubber mallet to help fully insert to the ground.

**The assembly is now complete**

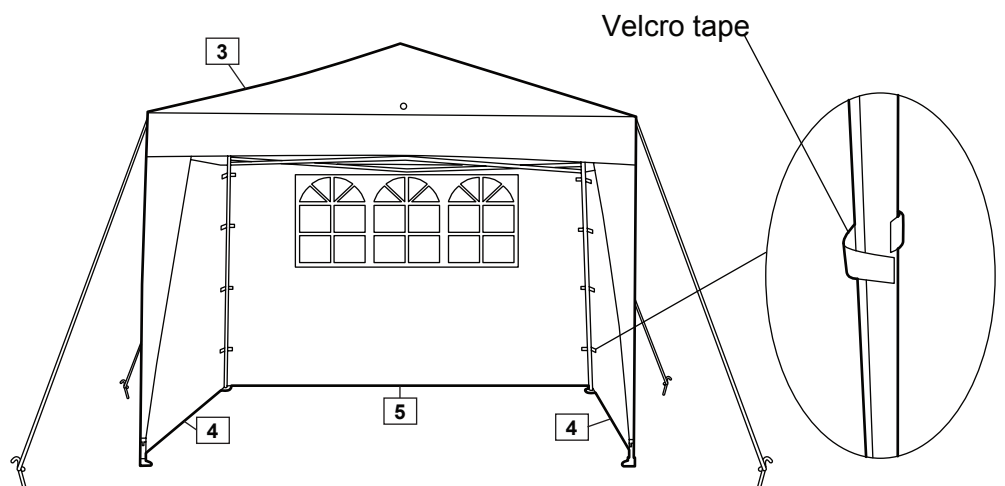

a:

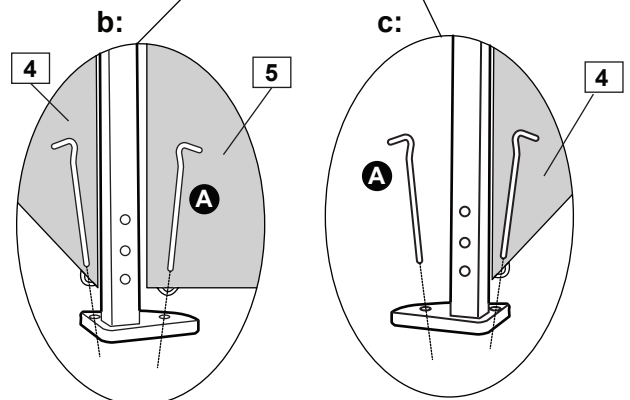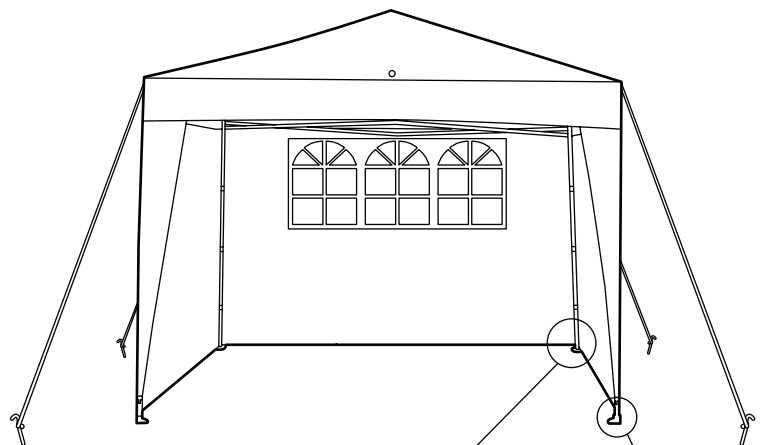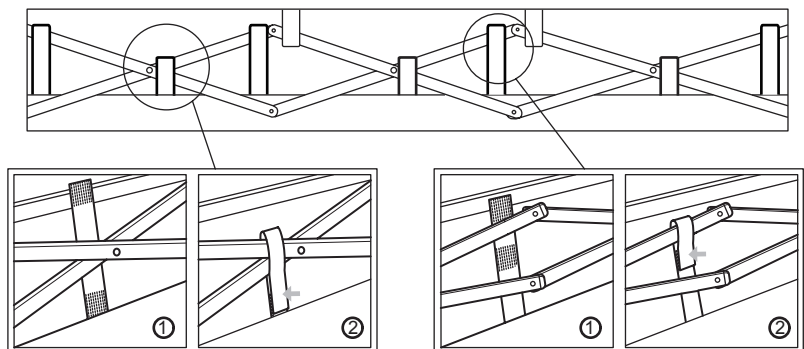

# Folding Instructions

## Step 6

### Folding the Gazebo

**Note:** At least 2 people are required for this procedure.

Take care when dismantling the Gazebo. Follow the assembly instructions in the reverse order and do not force the frame.

**a:** Remove the back and side panels

**b:** Remove the guy ropes and pegs

**c:** Unhook the canopy from the frame legs.

**d:** Push in the spring clips and slide up the frame legs

**e:** Push in the spring clips and (slightly) lower the corner brackets.


**f:** Remove the top roof from Gazebo frame.

**g:** With people at diagonally opposite corners, carefully lift and push the gazebo together.

**Do not force the frame.**

Repeat at each corner until the gazebo is fully folded.

Store all of the components and fittings in the tent bag **1** provided.

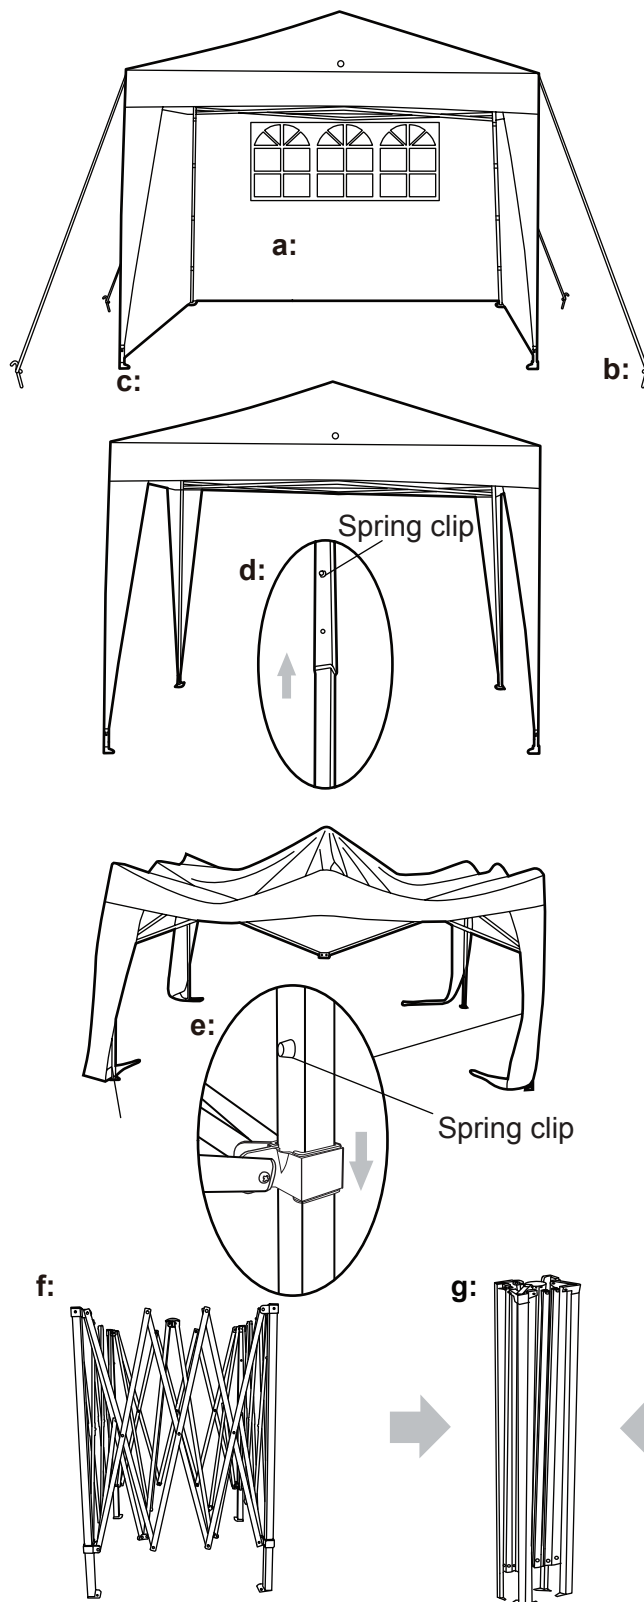

**Warning:** in heavy wind , if you want to leave the gazebo outside , please remove the side panels

**Warning:** please be careful when you open and fold gazebo to avoid tearing the canopy

If you need help or have damaged or missing parts, call the

**Customer Helpline: Argos = 0345 6400800**

For further assistance please visit <http://www.argos-support.co.uk>

Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks, MK9, 2NW