

# BUSH

## Instruction manual

311007



You'll soon be enjoying your new Wireless Speakers.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

## Help and Guidance

We're here to help you get the most from your Wireless Speakers. Should you require any guidance, a simple solution can often be found online at:

[www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 600 3021**.

## Contents

### 1 Safety information

Safety information 6

### 2 Getting to know your Wireless Speakers

Ready? Let's begin 10

Accessories 10

Power connection 12

Initial set-up 13

Connecting or 'Pairing' with your Wireless Speakers 13

### 3 Using your Wireless Speakers

Power on / Power off 16

Bluetooth mode 16

Listening to Music/Audio using Bluetooth 16

Using as a Mobile handsfree speakerphone 17

Aux in mode 17

### 4 Other information

Technical specification 20

### 5 Product support

Troubleshooting 24

Help and assistance 25

Disposal 26

Guarantee 27

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk). If you still require further assistance, call one of our experts on **0345 600 3021**.

# Safety information

1

This page is left intentionally blank

## Safety information

**Important** - Please read these instructions fully before installing or operating

### General safety information

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- **Do not** attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- **Do not** use your Wireless Speakers near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.



- To avoid possible hearing damage, do not listen to these Wireless Speakers at high volume levels for long periods of time. Always keep the volume within reasonable limits.

### Power source

- Only use the USB charging cables that came with the product. Using unauthorised charging cables will invalidate your guarantee and may irrecoverably damage the product..
- Please charge the integral lithium battery in your Wireless Speakers at least once a month, to prevent damage to and prolong the life of the lithium battery.

### Positioning the Wireless Speakers

It is important that you consider carefully in advance where your Wireless Speakers will be situated and make sure that they are:

- on a flat and stable surface.
- at least 1 metre away from other electrical appliances to avoid interference.
- where they will be in range of the connected or 'paired' bluetooth device (e.g. iPod/ iPhone/iPad/Android/other phone/computer, which is about 10 metres or less (33 feet or less) in line of sight.

## Safety information

**Important** - Please read these instructions fully before installing or operating

- Within 5 metres of each other, without obstructions between them.
- Never place your Wireless Speakers directly onto antique or polished surfaces.

### Moisture and water

- **Do not** leave your Wireless Speakers in low temperatures as moisture can form inside the product, which may damage the circuit board.

### Ventilation

- **Do not** block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.

### Heat sources and flames

- **Do not** leave your Wireless Speakers in high temperatures as electronic devices and plastic parts may warp in heat.

 
If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.

## Getting to know your Wireless Speakers

2

This page is left intentionally blank

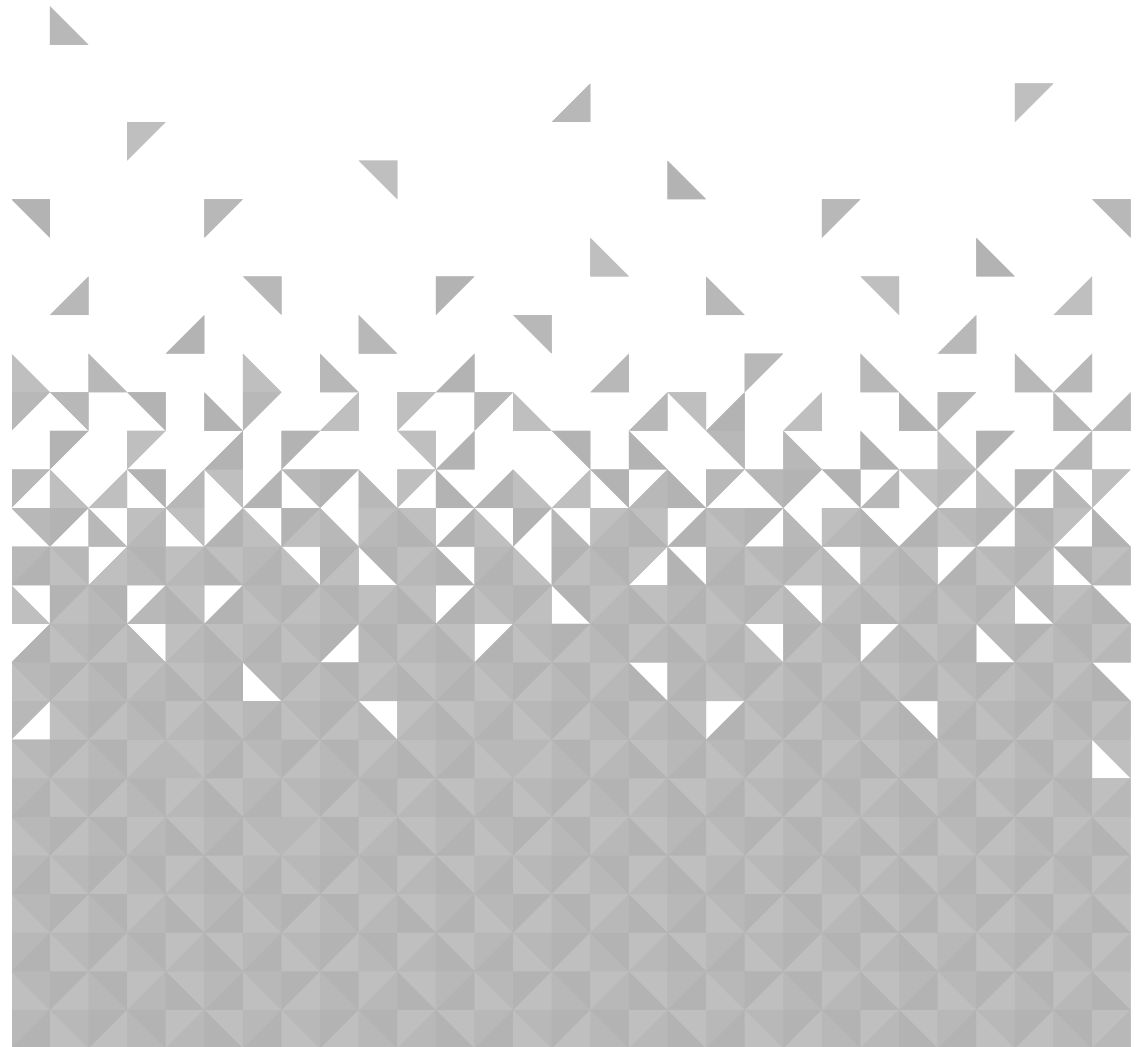

## Getting to know your Wireless Speakers

You'll be up and running in no time

 
### Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

### Accessories

The following accessories are included with your Wireless Speakers:

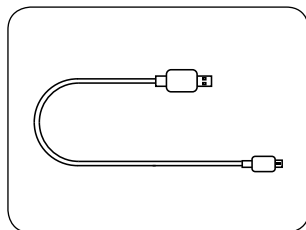

2 x Micro USB Cables.

Fig 1.

## Getting to know your Wireless Speakers

You'll be up and running in no time

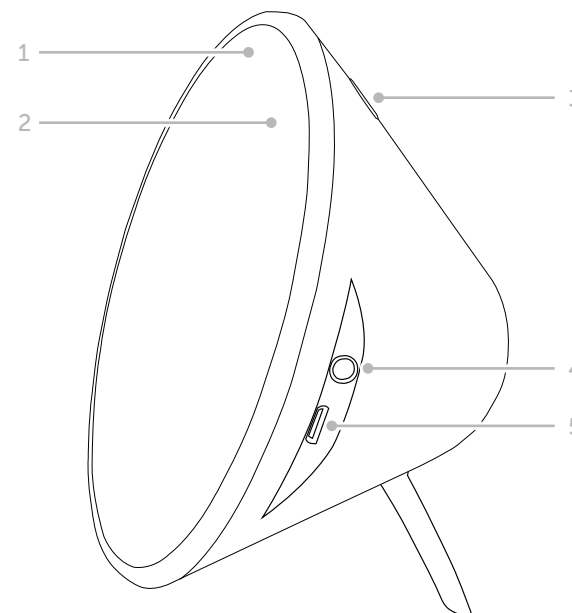 


Fig 2.

- |  |                        |
|--|------------------------|
| 1. Microphone  | 4. Aux in socket       |
| 2. LED status indication                               | 5. USB charging socket |
| 3. Power On/Off/Answer/End Call/<br>Pairing/Play/Pause |                        |

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021

## Getting to know your Wireless Speakers

You'll be up and running in no time

### Power connection

1. Connect the micro USB end of the charging cables to the USB socket on each Wireless Speaker (**Fig 3**). Plug the standard end of each USB charging cable into a computer or other USB charging device.
2. The small LED status indicator on the front of each Wireless Speaker, behind the speaker mesh will light up. If the LED is red the Wireless speaker battery is charging, when the LED changes to blue the battery is fully charged.

---

**Note:** Charging the battery before first use, may take up to 3 hours per speaker.

---

3. When fully charged, unplug the micro USB charging cables.

---

**Note:** Your Wireless speakers have an approximate playtime of 8 hours, before they need to be recharged. When the battery power is low, the LED indicator will flash quickly and you should plug in and recharge your Wireless Speakers straight away.

---

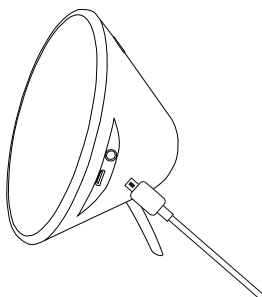 


Fig 3.

## Getting to know your Wireless Speakers

You'll be up and running in no time

### Initial set-up

1. Press and hold the Power On button on the top of each Wireless Speaker for about 5 seconds, until 'Power on, pairing' is announced, then release the power on buttons.
2. The Wireless Speakers will pair with each other. 'Pairing successful' will be announced, followed by 'Left Channel' and 'Right channel' by each speaker, as appropriate.
3. 'Pairing' will be announced again as your Wireless Speakers search for a Bluetooth device to connect to.

### Connecting or 'Pairing' with your Wireless Speakers

1. On the device that you would like to connect to your Wireless Speakers via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

---

**Note:** If necessary, refer to the instructions for your device to add or set up Bluetooth.

---

2. Select to 'Add new device', if necessary.

---

**Note:** Some products will automatically search for a new device and so the 'Add new device' option is not available.

---

3. When found, your Wireless Speakers will be displayed as 'BUSH WIRELESS STEREO SPEAKER'. Select the device name to begin pairing.
4. When pairing is complete the Wireless Speakers will announce 'Pairing successful', followed by 'Second device connected'.
5. Now that you have paired your device with the Wireless Speakers, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
6. Your device will remain paired with the Wireless Speakers unless you decide to disconnect or 'unpair' it.

---

**Note:** If the pairing process is not completed within 10 minutes, your Wireless Speakers will automatically power off. Please repeat the power on and pairing steps again to complete the process.

---

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

## Using your Wireless Speakers

3

This page is left intentionally blank



## Using your Wireless Speakers

Let's get started

### Power on

After the initial set up, when you have already paired the Wireless Speakers to each other and to a separate Bluetooth device, the announcements when you switch on the Wireless Speakers, will be slightly different.

1. Press and hold the Power On button on the top of each Wireless Speaker for about 5 seconds, until 'Power on', is announced, then release the power on buttons.
2. 'Connected', followed by 'Left channel', 'Right channel', then 'Second device connected' will be announced.

### Power off

1. Press and hold the Power button on one of the Wireless Speakers for about 3 seconds, until both speakers announce 'Power off'.

### Bluetooth mode

Check that you have connected or 'paired' a product with your Wireless Speakers, please refer to 'Connecting or 'Pairing' with your Wireless Speakers on page 13.

### Listening to Music/Audio using Bluetooth

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the Wireless Speakers. Adjust the volume on the connected device.
2. You can use the controls on your paired Bluetooth device but you can also Play/Pause the music/audio, on your Wireless Speakers.

Press and release the power button to play/pause.

---

**Note:** If there is no audio signal for approximately 10 minutes, your Wireless Speakers will automatically power off to conserve battery power.

---

## Using your Wireless Speakers

Let's get started

### Using as a Mobile handsfree speakerphone

If you have paired your mobile phone with your Wireless Speakers, the left channel speaker can be used as a handsfree speaker and will ring when there is an incoming call.

#### Make an outgoing call:

1. Dial the number as usual on your mobile phone, you will be able to hear the progress of the call and your caller through the left channel Wireless speaker and your caller will also be able to hear you.
2. Press and release the Power button on the Wireless speaker or on your mobile phone to end the call.

#### Receive an incoming call:

1. Press and release the Power button on your Wireless speaker or answer the call as usual on your mobile phone. You will be able to hear your caller through your Wireless Speaker and your caller will also be able to hear you.
2. Press and release the Power button on the Wireless Speaker or on your mobile phone to end the call.

### Aux in mode

Your left channel Wireless Speaker can also be used in Aux in mode.

1. Connect one end of a 3.5mm audio cable (not supplied) to the headphone (or auxiliary out) socket of your secondary device, connect the other end to the Aux in socket on the right hand side of your left channel Wireless Speaker. 'Line in mode' will be announced.
2. Press the Play button on your external device to start playback through the Wireless Speaker.
3. Adjust the volume level on the secondary device.

---

**Note:** It is recommended that you unplug the audio cable from the Aux in socket on the side of the Wireless Speaker, after you have finished listening to your external device.

---

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

## Other information

4

This page is left intentionally blank

## Other information

Helpful technical information

### Technical specification

Audio output:	2 x 3W RMS
Voltage:	Input DC 5V 1A
Lithium battery:	500mAh
Bluetooth:	Version 4.1
Pairing name:	BUSH WIRELESS STEREO SPEAKER
Profiles	HSP, HFP, A2DP, AVRCP
Frequency range:	2.4GHz-2.480GHz

This page is left intentionally blank

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on **0345 600 3021**

**Product support**

5

This page is left intentionally blank

## Product support

Help is always at hand

### Troubleshooting

#### No sound / Sound distortion:

- If you are using a Bluetooth connected device, check the volume on the secondary device.
- Your Wireless Speakers may have low battery power and need to be recharged.
- Move the Wireless speakers closer together and ensure that there are no obstructions to the signal between them.
- Ensure that you are within range of the Wireless Speakers for Bluetooth functionality, 10 metres or less (33 feet or less).
- If possible, turn off other nearby WiFi / Bluetooth devices or disable their WiFi Bluetooth functionality.
- Power the Wireless Speakers off and on again.

#### Unable to pair with a Bluetooth device:

- Check that you are in Bluetooth mode.
- Ensure that you are within range of the Wireless Speakers for Bluetooth functionality, 10 metres or less (33 feet or less).
- Check that the device you are attempting to pair with supports A2DP stereo audio transmission.
- Move the Wireless Speakers and Bluetooth device away from other Bluetooth devices/ electrical equipment.
- If possible, turn off other nearby WiFi / Bluetooth devices or disable their WiFi Bluetooth functionality.
- Power the Wireless Speakers off and on again.

## Product support

Help is always at hand

### Help and assistance

If you require any technical guidance or find that your Wireless Speakers are not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 600 3021\***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies\*

**Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.**

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on **0345 600 3021**

## Product support

Help is always at hand

### Disposal



- This product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk)
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing

This product is intended for use within the UK. This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

#### Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>

## Product support

Help is always at hand

# BUSH

### Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

**[www.bushregistration.co.uk](http://www.bushregistration.co.uk)**

FREEPHONE\*

**0800 597 8548**

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

### Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

#### The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

### Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# BUSH

**Contact:**

[www.argos-support.co.uk](http://www.argos-support.co.uk)

Helpline: 0345 600 3021