

PIFCO®

SELF DOCKING ROBO VAC

YOUR SAFETY &
INSTRUCTION MANUAL
PLEASE READ CAREFULLY

MODEL **P28027**



www.pifco.co

TECHNICAL DATA

| | |
|-----------------|--|
| Description: | Self Docking Robo Vac |
| Model: | P28027 |
| Product rating: | DC 14.4V |
| Adaptor: | |
| Input: | 230-240V ~50Hz |
| Output: | DC 18V  350mA |
| Battery: | 1500mAh |

DOCUMENTATION

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

| | |
|-------------|--|
| 2004/108/EC | Electromagnetic Compatibility Directive. |
| 2006/95/EC | Low Voltage Directive. |
| 2011/65/EU | Restriction of Hazardous Substances Directive. |

RKW Quality Assurance, United Kingdom

WARRANTY

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RKW has limited liability for incidental or consequential loss or damage.
- This guarantee is only Valid in the UK and Eire Only.

An extended warranty is available for this appliance.

See back page for details.

PRODUCT SAFETY

When using **any** electrical appliance, basic safety precautions should always be followed including the following:

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- Do not immerse cords, plugs or any part of the appliance in water or any other liquid.
- Do not leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Do not use this product for anything other than its intended use.
- This appliance is for household use only.
- Do not carry the appliance by the power cord.
- Do not use the appliance outdoors.
- Do not immerse cord, plug or machine in water or any other liquid.
- Keep hair, loose clothing, fingers, feet and all parts of body away from moving parts.
- Use only original accessories.
- **IMPORTANT:** Not suitable for use on dark carpets.
- Keep hair, loose clothing, fingers, feet and all parts of body away from moving parts.
- Use only original accessories.
- Children should not play with the appliance. It is NOT a toy!
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the service department.





WHAT'S IN THE BOX

Robo Vac

Docking Station

Charger

1. Dust Bin Release Button
2. Dust Bin
3. Indicator Light
4. Start Button
5. Handle
6. Infrared Receiver
7. Docking Station
8. Touch Sensor
9. Power Switch
10. Charger Jack
11. Infrared Sensor
12. Rechargeable Battery
13. Side Brush
14. Main Brush
15. Cover Board

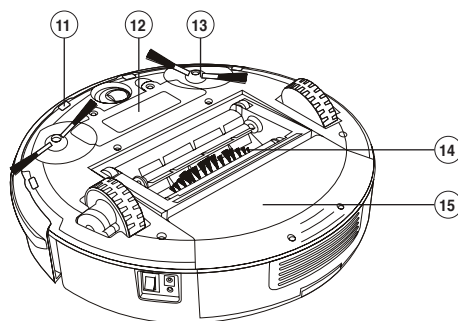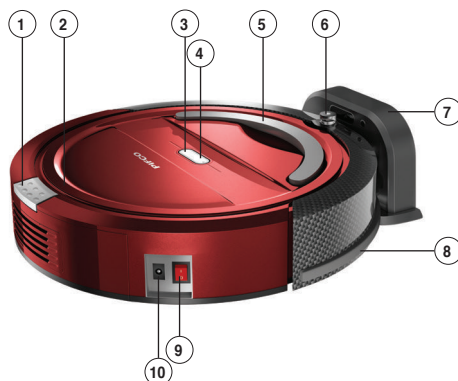

BEFORE YOUR FIRST USE:

1. Remove the appliance from the box
2. Turn the Robo Vac upside down on a flat, stable surface.
3. Push the rotating brush bar towards the right wheel. The bar is spring loaded and can then be removed by lifting and sliding to the left. The rotating brush bar has a small securing clip on it that needs to be removed prior to first use.
4. Charge the appliance as directed.
5. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Dispose of the packaging in a responsible manner.

USING YOUR APPLIANCE

1. Before first use, it is recommended to fully charge your Robo Vac. A full charge takes approximately 8 hours.
2. Once your Robo Vac is charged, carry it and the docking station into the room you wish to clean.
3. Place the docking station against a wall, ensuring there is a clear path for the Robo Vac to reach it.
4. As the Robo Vac moves around the room it may knock into things. Clear any breakables, such as vases or ornaments from the floor.
5. Set the Robo Vac down on the floor and turn on.
6. The Robo Vac will automatically return to the docking station once cleaning is complete.
7. The Robo Vac has an anti bump navigation sensor fitted, and will right itself if it hits anything.

Note: If using on carpeted floor, check to see if there are any carpet lips over 1 cm. The Robo Vac cannot move over lips higher than 1 cm. You may need to lift your Robo Vac and move it over the lip.

Auto Stop:

The Robo Vac will automatically stop when it is picked up. When you place it back down it will continue cleaning.

Anti Falling Sensors:

The Robo Vac's intelligent navigation system includes anti falling sensors. When placed on a surface or stairs, the Robo Vac will not drive off of the surface/stairs or fall.

Docking Station:


Important:

1. The docking station must be placed by a wall/solid surface in order for the Robo Vac to dock. Do not place in the centre of a room.
2. Make sure the docking station is against a clear, unobstructed wall.
3. Ensure that there are no barriers or obstacles in front of the dock, or any debris that will block the Robo Vacs path to the docking station.
4. You must ensure the Robo Vac is in close enough range to the docking station to self-dock. Do not place the docking station in a separate room to the Robo Vac, for example.
5. If the Robo Vac runs out of battery during use, you must take it to the dock yourself. Ensure that you have switched the Robo Vac off before returning to the dock.
6. If the Robo Vac and the docking station do not connect correctly when charging, the indicator light will flash blue.

Charging:



As well as charging at the docking station, you can also charge the Robo Vac using the supplied charging adaptor. The charger jack is located on the side of the Robo Vac, next to the power switch. It will take approximately 8 hours for a full charge. The indicator light will flash red during charging. Once a full charge is reached, the indicator light will be steadily red.

Emptying the dust bin:

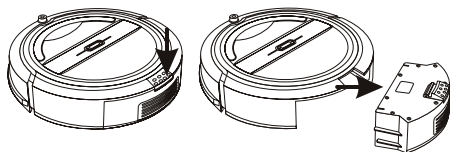

1. Switch off the Robo Vac and press the dust bin release button.
2. Pull the case out of the Robo Vac and empty the dust case.
3. Turn over the dust case and remove the filter.
4. Discard of any excess dust or dirt.
5. Wash the filter in warm water and ensure that it is fully 100% dry prior to re-insertion into the product.


Important! Never machine dry the filter. Always allow the filter to air dry

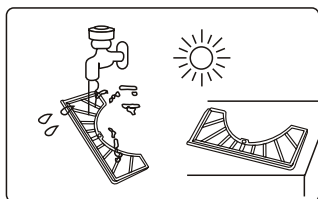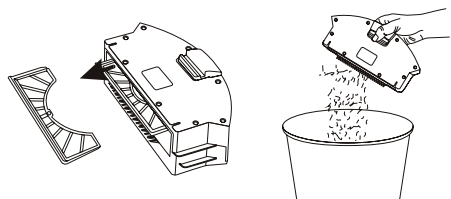

Removing the brush:

Switch off the Robo Vac and turn it upside down on a flat, stable surface.

Push the brush bar towards the right wheel. The bar is spring loaded and can then be removed by lifting and sliding to the left. Repeat with each bar.

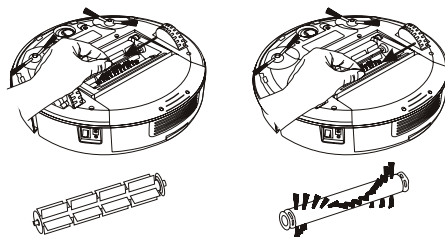

Cleaning the brushes and housing:

Remove the brushes.

Wipe the brush housing with a clean, damp cloth.

Remove any excess dust from the brushes.

WARNING:
DO NOT IMMERSE THE UNIT IN WATER

TROUBLESHOOTING & FAQs:

| | |
|--|---|
| The Robo Vac is not cleaning well. | <p>Check to see whether the dust bin is full. If it is, turn off the Robo Vac and empty the dust bin before continuing.</p> <p>The filter may be clogged. Clean it as described in the instruction manual.</p> |
| The Robo Vac has stopped working during cleaning. | <p>The Robo Vac may have got caught on some wires or the lip of a carpet. Lift the Robo Vac and move it to a different place to clean.</p> <p>The battery may be low. Lift the Robo Vac and either manually dock it onto the docking station to charge or plug it in to the charging cable.</p> <p>Check the wheels to ensure there is not material or debris wrapped around round.</p> |
| The Robo Vac is not charging properly. | <p>If using the docking station: If the Robo Vac and the docking station do not connect correctly when charging, the indicator light will flash blue. Manually connect the Robo Vac with the docking station.</p> <p>If using the charging cable: Ensure that the cable is plugged in and turned on at the power socket.</p> |



DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

We hope you enjoy your appliance for many years.

As a thank you for purchasing one of our fantastic products,
we are giving you an extra 2 years peace of mind.

To receive your extra 2 years guarantee, register your appliance online by visiting

www.pifco.co



Should you have a problem
with your appliance or need any spare parts please call our
Service Department on:

+44 (0) 333 220 6054

Distributed throughout the UK by RKW LTD

PIFCO®