 


# Devon End Table

Assembly Instructions - Please keep for future reference

532/7623

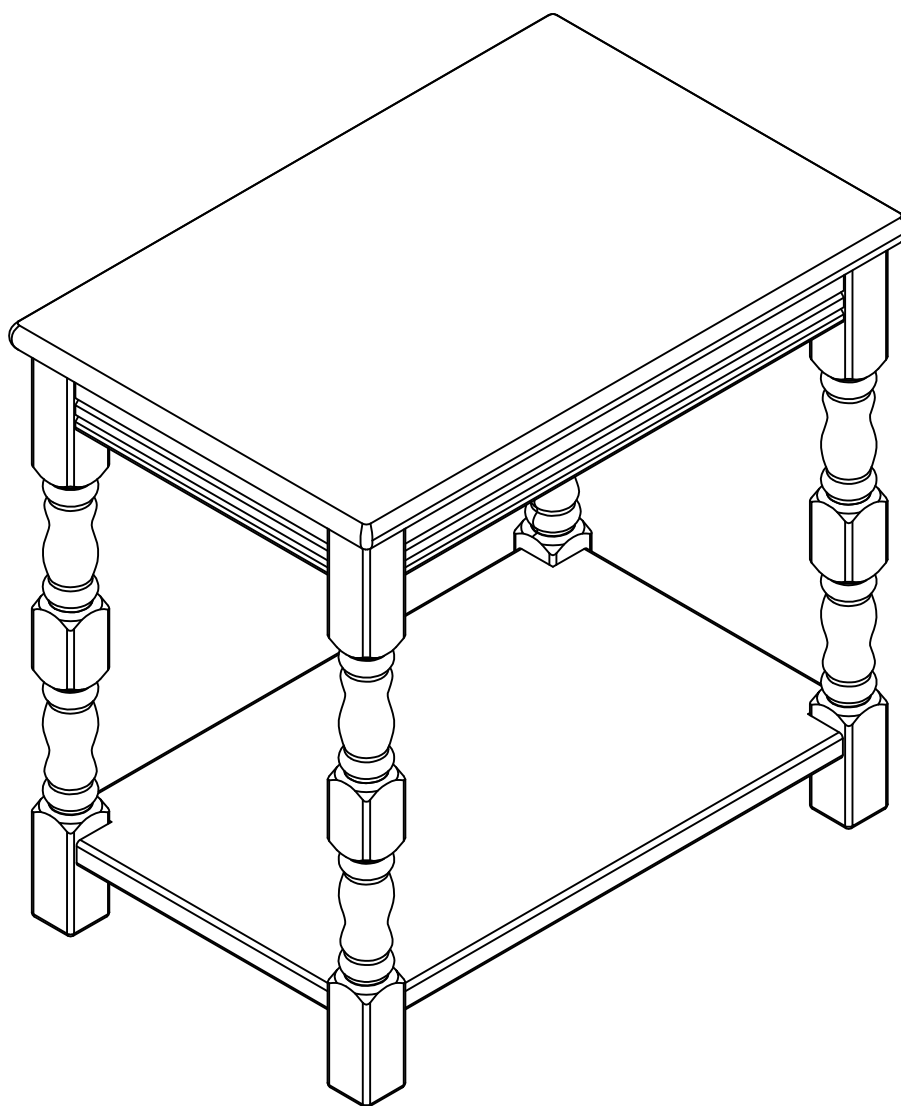

## Dimensions

Width - 45.5cm  
Depth - 30cm  
Height - 42.7cm

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**.  
For further assistance please visit <http://www.argos-support.co.uk/>.



# Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

 
## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.


# Components - Panels

If you have damaged or missing componets, call the **Customer Helpline:03456 400800**. For further assistance please visit <http://www.argos-support.co.uk/>


Please check you have all the panels listed below

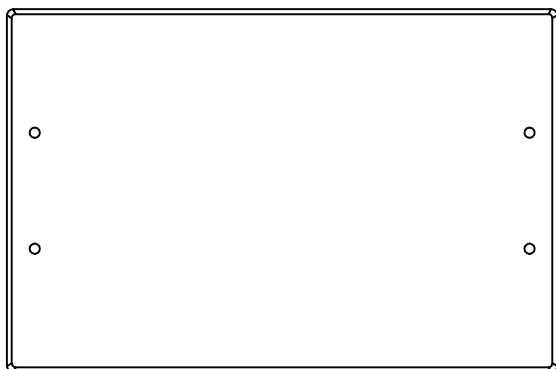


**1** Top panel × 1 (45.5× 30cm)

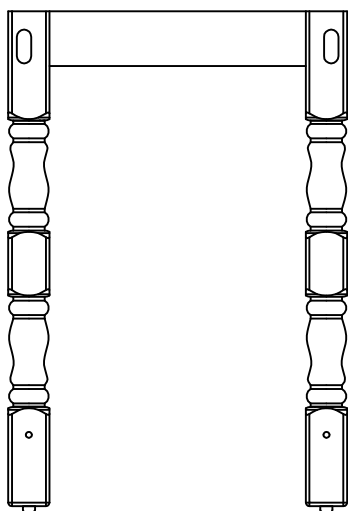 

**2** Side frame× 2 (40.9 ×28cm)

 

**3** Rail × 2 (38.7 ×4.5cm)




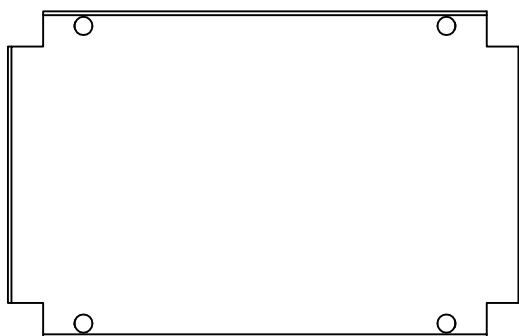 


**4** Bottom panel × 1 (42.5 × 27cm)


# Components - Fittings

 Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
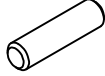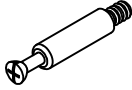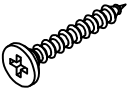
<b>A</b>  Ø8 ×30mm Wooden dowel × 4	<b>B</b>  Locking pin× 4	<b>C</b>  Locking nut× 4
<b>D</b>  Ø3.5×45mm Screw × 12		


## Tools required

 

Phillips screwdriver  
(medium & large)




 Rubber  
mallet



Flatblade screwdriver  
(medium)

 **Ruler** - Use this ruler to help correctly identify the screws





# Assembly Instructions

## Step 1

a. Insert 2 Locking pin **B** to Side frame **2**.

b. Insert 2 Wooden dowel **A** to Side frame **2**.

  
Repeat Step a & b for the other Side frame **2**.

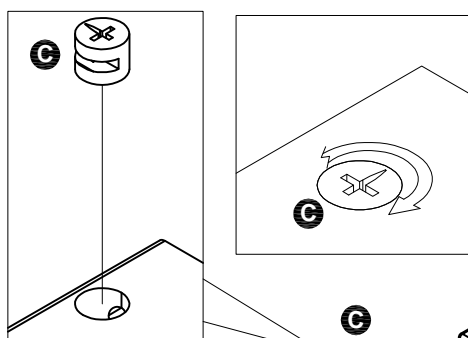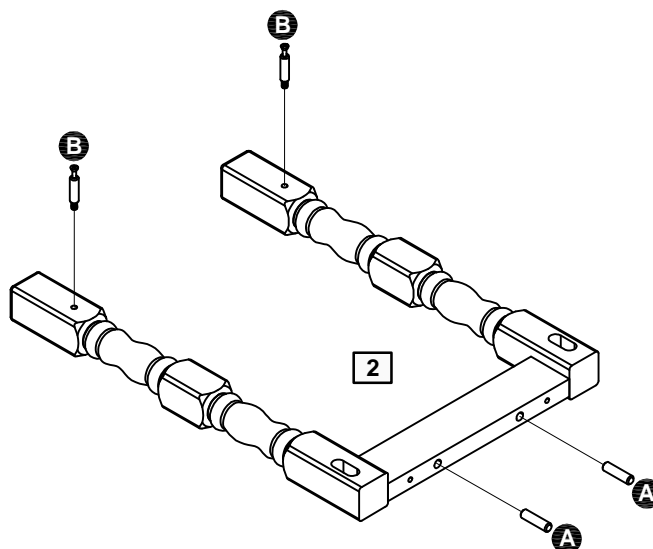

## Step 2

a. Attach Rails **3** and Bottom panel **4** to the Side frames **2**.


 
b. Insert Locking nut **C** to the Bottom panel and use screw driver turn Locking nut **C** clock wise to lock as show on picture.

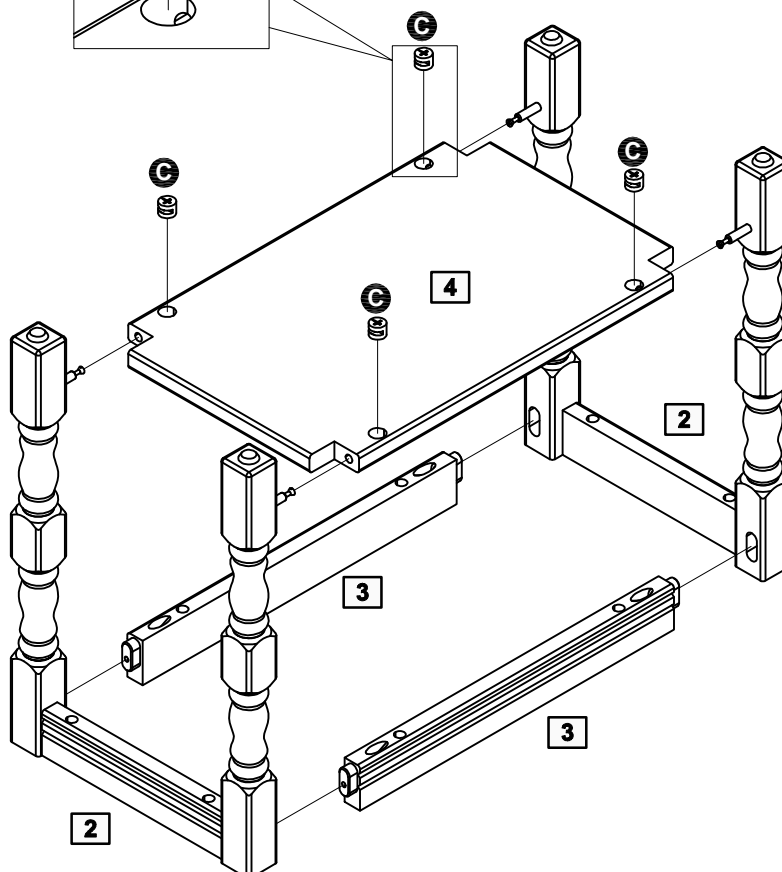

# Assembly Instructions



## Step 3

  Fixing rails **3** to Side frame **2** by 4 Screw **D** as show on picture. Use screw driver turn Screw **D** clock wise to fix.

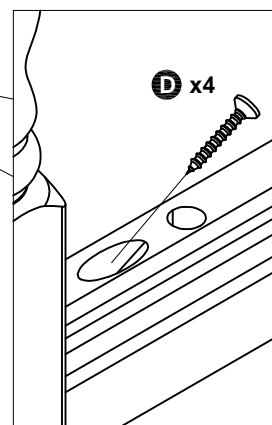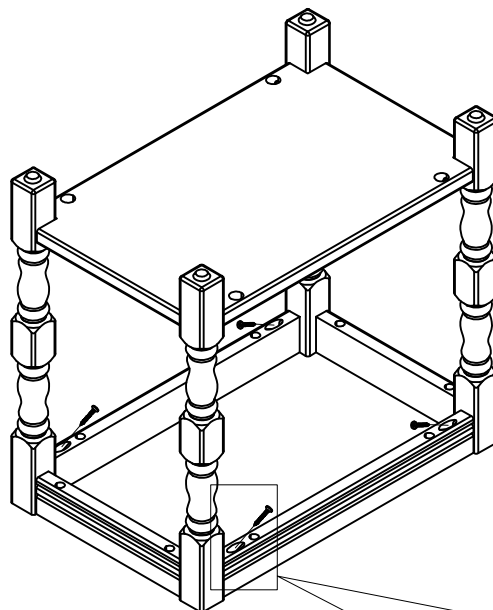

## Step 4

  Fix the unit to Top panel **1** by 8 Screw **D** as show on picture.

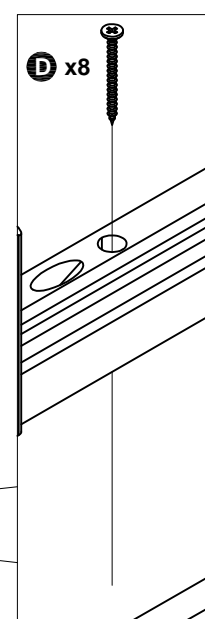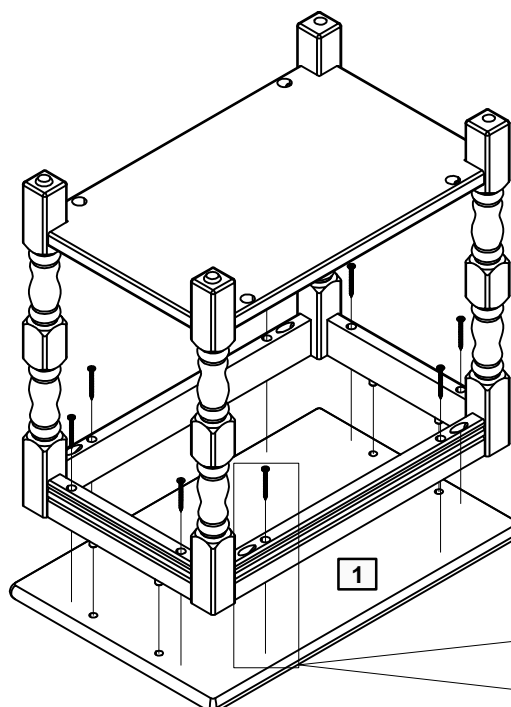

**Assembly is completed.**