REMINGTON®

Rotary Shaver





Redicted and brite to the death of the transfer of the transfe

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

♠ IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 This appliance should never be left unattended when plugged into a power outlet, except when charging.
- 3 Keep the power plug and cord away from heated surfaces.
- 4 Make sure the power plug and cord do not get wet.
- 5 Do not plug or unplug the appliance with wet hands.
- 6 Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- 7 Do not twist or kink the cable, or wrap it round the appliance.
- 8 Store the product at a temperature between 15°C and 35°C.
- 10 Suitable for use in a bath or shower.
- 11 Do not submerge the appliance.
- 12 This appliance is not intended for commercial or salon use.



KEY FEATURES

- 1 On/off switch
- 3 Individual flexing heads
- 5 Charge stand
- 7 Detail trimmer
- 9 Power port
- 11 Cleaning brush (not shown)
- 13 Travel pouch (not shown)

- 2 Pivoting head and cutter assembly
- 4 Hairpocket
- 6 Low/Full/Charging indicator light
- 8 Trimmer release button
- 10 Adaptor
- 12 Head guard

GETTING STARTED

It is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.

To confirm the model number of your shaver, please refer to the packaging.

★ CHARGING YOUR SHAVER

- · Ensure the appliance is turned off.
- · Connect the adaptor to the charge stand and then to the mains.
- · Place the charge stand on a flat surface.
- The shaver can also be charged when not sat in the charge stand. To do this, connect the shaver to the adaptor and then to the mains.
- Charge for at least 24 hours when using for the first time.
- Allow 90 minutes for a full charge generally.
- When charging, the green indicator light will slowly flash. When fully charged, the green indicator light will show for 5 minutes and then turn off.
- On a full charge the shaver will have a cordless run time of up to 60 minutes.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 24 hours.
- The shaver automatically adjusts to a mains voltage between 100V and 240V.

INSTRUCTIONS FOR USE

★ Note: This shaver can only be used in cordless mode.

★ SHAVING

- Make sure your shaver is properly charged.
- Switch the shaver on.
- Stretch the skin with your free hand so the hairs stand upright.
- Only apply light pressure on the shaving head while shaving (pressing too hard can damage the heads and make them vulnerable to breakage).
- Use short, circular strokes.

★ TRIMMING

- Slide the trimmer button to release the detail trimmer.
- Hold the trimmer at a right angle to your skin.
- Place the trimmer at desired trim line for a quick, easy, professional trim.
- To retract the trimmer, push down until it locks into position.

➡ TIPS FOR BEST RESULTS

- Ensure your skin is dry. Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the rotary heads.
- ★ Note: your shaver has been designed to be used in the shower if desired.

CARE FOR YOUR SHAVER

Care for your appliance to ensure a long lasting performance. We recommend you clean your product after each use. The easiest and most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.























★ CLEANING CAUTIONS

- Ensure the appliance is switched off and unplugged from the mains before cleaning.
- Open the shaver head by pressing the release button on the front of the shaver (Fig. A) and flipping open the head away from the body of the shaver (Fig. B).
- Hold the cutter assembly so that the blue cutter is facing towards you. Slide
 the inner cutter carrier away from the blue cutter to release it from the
 assembly (Fig. C).
- Pull the inner cutter carrier away from the inner cutters (Fig. D).
- Thoroughly brush hairs from the inner and outer cutters. Rinse out remaining debris (Fig. E).
- Place the inner cutter carrier back into position and lock into place (Fig. F-G).
- Align the spring hinge into the slot at the back of the hair pocket and press into place. Snap the head assembly closed.

★ WARNING:

Detach the hand-held part from the supply cord before cleaning in water.

★ CAUTION

- Do not submerge in water as damage will occur.
- Shaver can be rinsed with water. The water temperature should not exceed 70 degrees. Unplug the shaver before cleaning with water.
- Keep the adaptor and cable dry.

★ CLEANING TRIMMER

 Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- DANGER: Once the shaver has been dismantled for disposal, do not attempt to reassemble and/or use.
- · Unplug the shaver.
- Remove the head from the shaver (Press release button and pull head straight away from the shaver body).
- Using a small screwdriver, pry front cover from the shaver.
- Remove the 4 screws located on the front of the shaver (Fig. H).
- Remove rear cover from inner housing to expose batteries (Fig. I).
- Pry batteries free from circuit board and cut wires (Fig. J K).
- Dispose of battery properly.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



For further information on recycling see www.remington-europe.com

⇒ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded.

Your statutory rights are not affected.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

⇒ SERVICE CENTRE

United Kinadom

Tel 0800 212 438 (free call mainland UK)

+44 161 947 3111 (call outside the UK) Spectrum Brands (UK) Ltd Fir Street, Failsworth, Manchester

www.remington.co.uk

Ireland

M35 0HS, UK

Tel 142 951 40

Remington Consumer Products, Unit B12, Ballymount Corporate Park, Ballymount, Dublin 12. www.remington.co.uk

∅ REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery. Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. PR1285

15/UK/ PR1285 T22-0003575 Version 08 /15

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries. Spectrum Brands (UK) Ltd

Fir Street.

Failsworth,

Manchester M35 0HS

www.remington.co.uk

© 2015 SBI