

Phoenix 9 Cube


Assembly Instructions- please keep for future reference

557/8317

544/7998

542/8632

558/4442

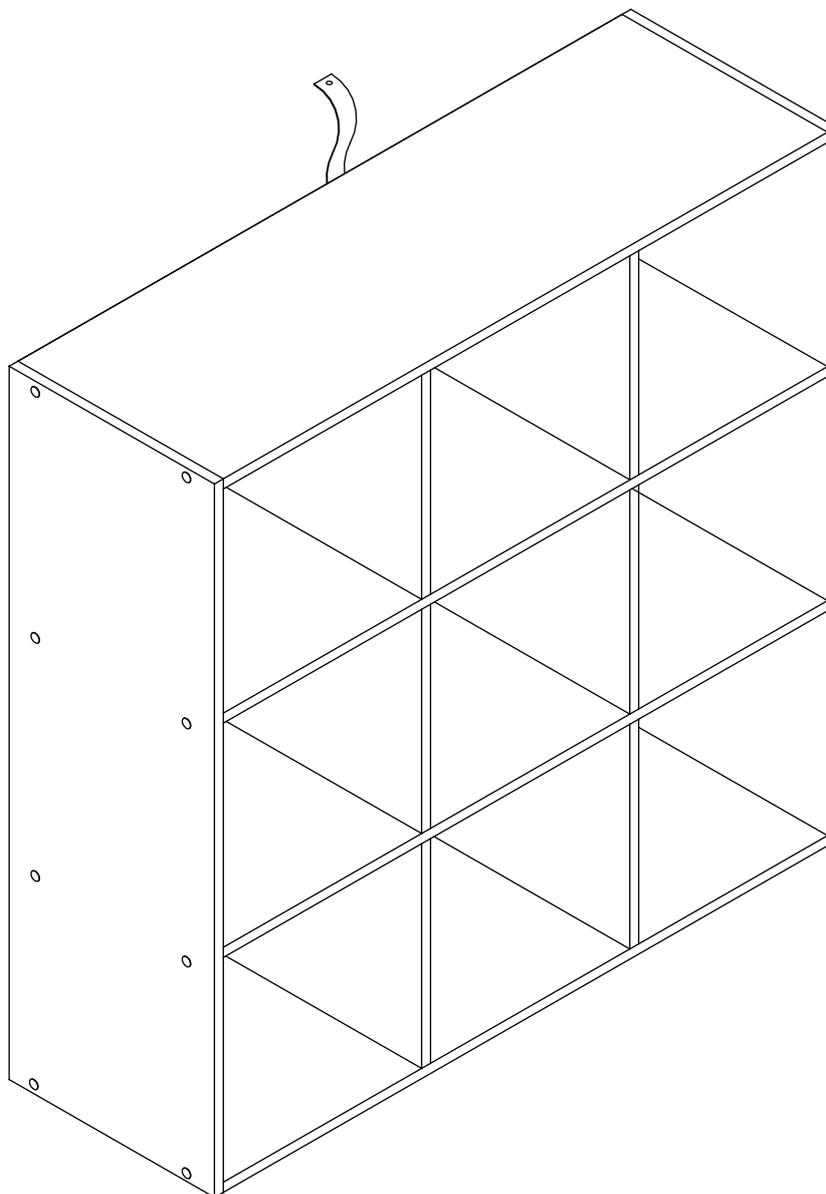

Dimensions

Width - 106 cm

Depth - 35 cm

Height - 106 cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 3 and 4..
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the using. Only use hand screwdrivers

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.


Components - Panels

If you have damaged or missing components, call the
Customer Helpline: **0345 640 0800**


Please check you have all the panels listed below

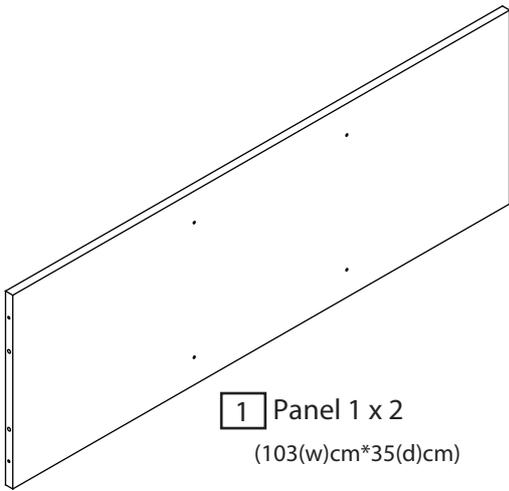


1 Panel 1 x 2
(103(w)cm*35(d)cm)

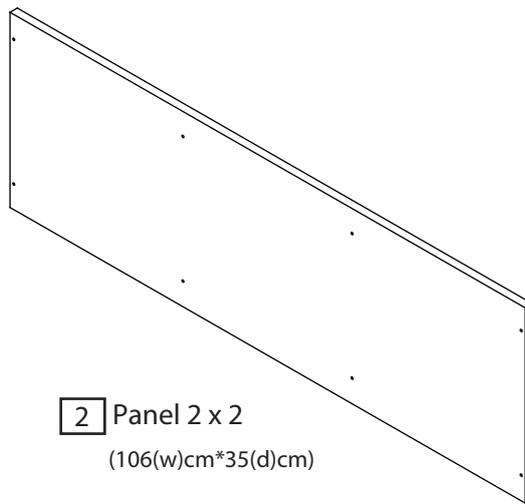

2 Panel 2 x 2
(106(w)cm*35(d)cm)

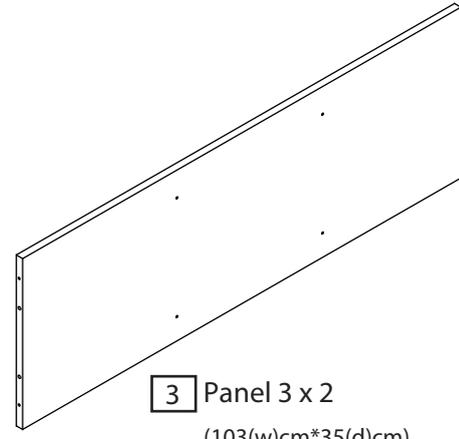


3 Panel 3 x 2
(103(w)cm*35(d)cm)

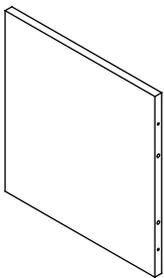

4 Panel 4 x 6
(33.5(w)cm*35(d)cm)



5 Left & Right Back Panel x 2
(106(w)cm*35.3(d)cm)

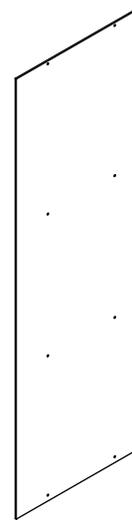


6 Central Back Panel x 1
(106(w)cm*34.6(d)cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0345 640 0800**

Please check you have all the fittings listed below

 Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  50mm Screw x 16	B  30mm Dowel x 24	C  50mm Dowel x 8	D  Allen Key x 1	E  12mm Screw x 35
F  Screw Stickers x 16	G  Wall Strap x 1	H  12mm Screw x 1	I  Washer x 2	J  35mm Screw x 1
K  Wall plug x 1				

 Tools required




Phillips screwdriver
(medium & large)



Drill
(Wall Fixing Only)

 
Ruler – Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


1. Insert 4 x 50mm Dowels **E** into Panel **3**
2. Locate 4 x panel **4** onto 2 x Dowels

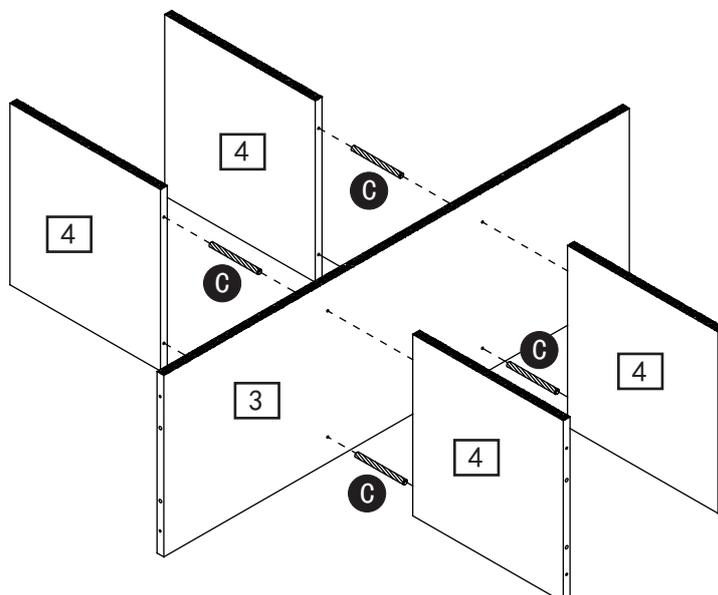

Assembly Instructions


Step 2

1. Insert 4 x 50mm Dowels **C** into Panel **3** as shown.
2. Locate Dowels in panel **3** into holes in 4 x Panels **4** as shown.

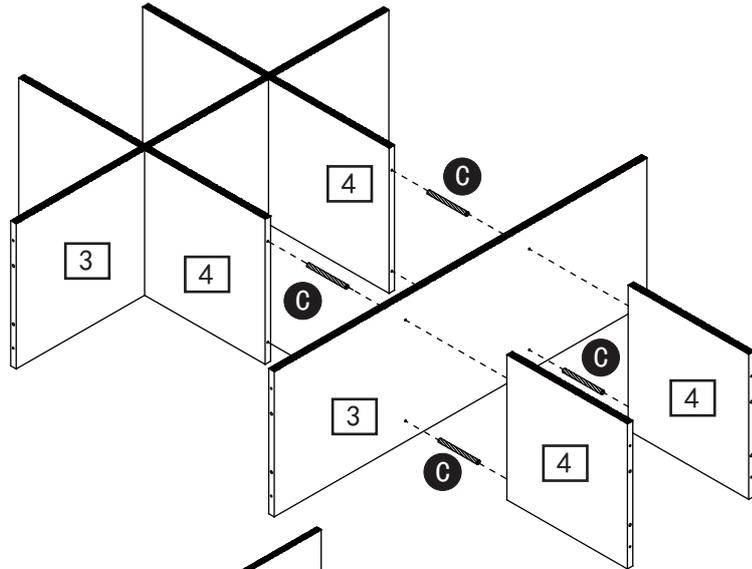


Step 3

1. Insert 8 x Dowels **B** into the ends of 4 x Panels **4** as shown.
2. Onto these locate 2 x Panels **1**

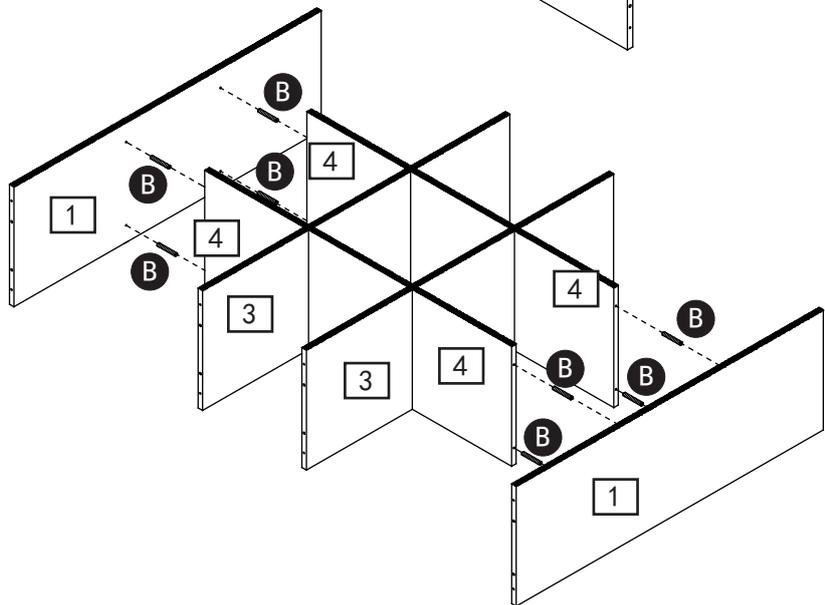

Step 4

1. Insert 8 x Dowels **B** into the ends of 2 x Panels **1** and 2 x Panels **3**
2. Connect Side panel **2** to panels **1** and **3** with 8 x Screws **A** using Allen Key **D** supplied.
3. Cover Screws using 4 x Screw stickers **F** as shown.

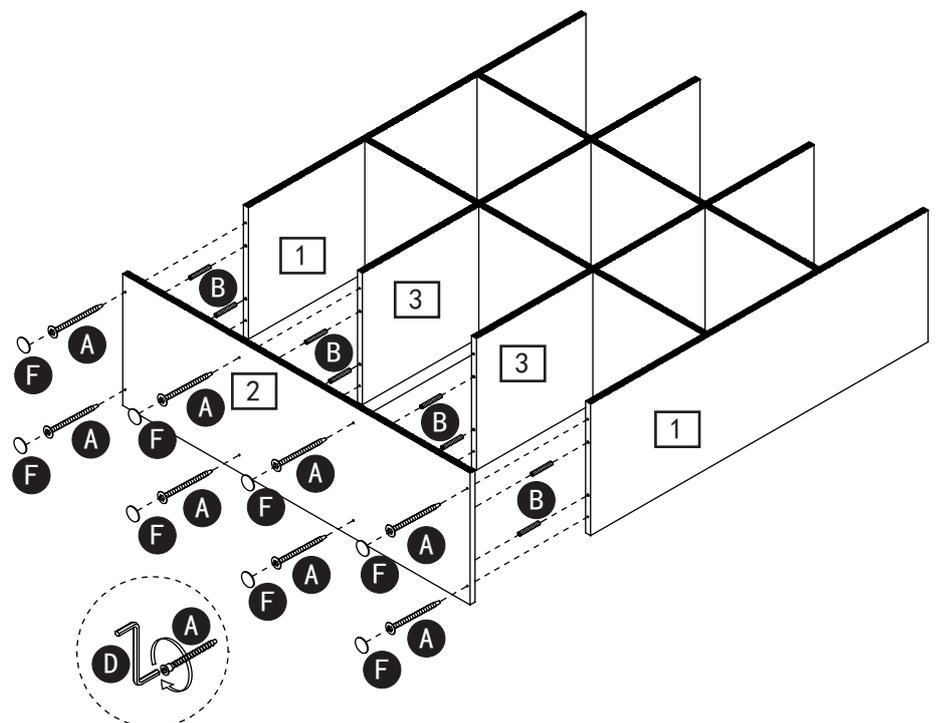


Assembly Instructions

Step 5

1. Insert 8 x Dowels **B** into the ends of 2 x Panels **1** and 2 x Panels **3**

2. Connect Side panel **2** to panels **1** and **3** with 8 x Screws **A** using Allen Key **D** supplied.

3. Cover Screws using 4 x Screw stickers **F** as shown.

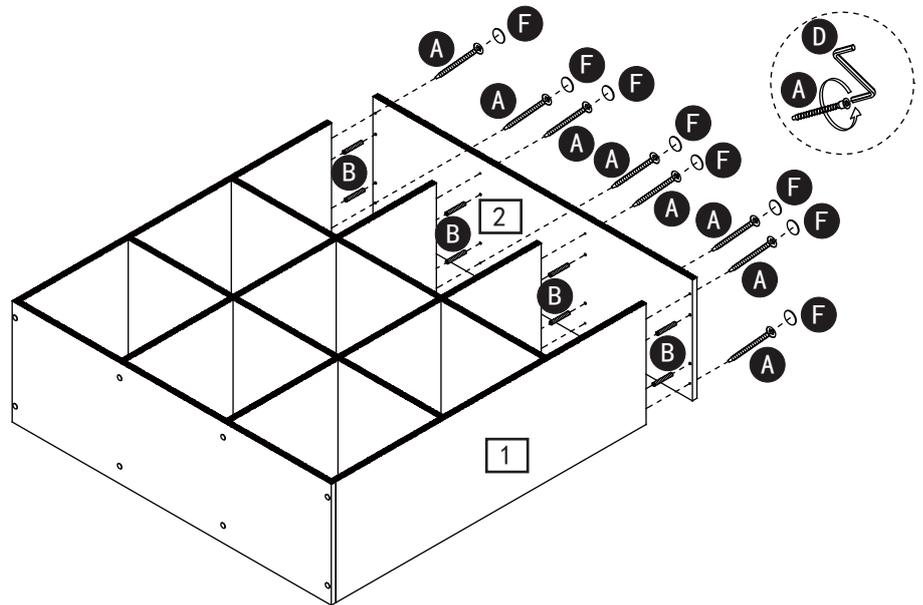


Step 6

1. Connect 2 x Left/Right Back panels **5** and 1 x Central Back Panel **6** to the unit using 35 x Screw **E** as shown.

The unit is floor standing, but it is recommended that it is secured to the wall.

2. Connect 1 x wall strap **G** to the Top of the unit with 1 x Washer **I** and 1 x screw **H** in position Shown

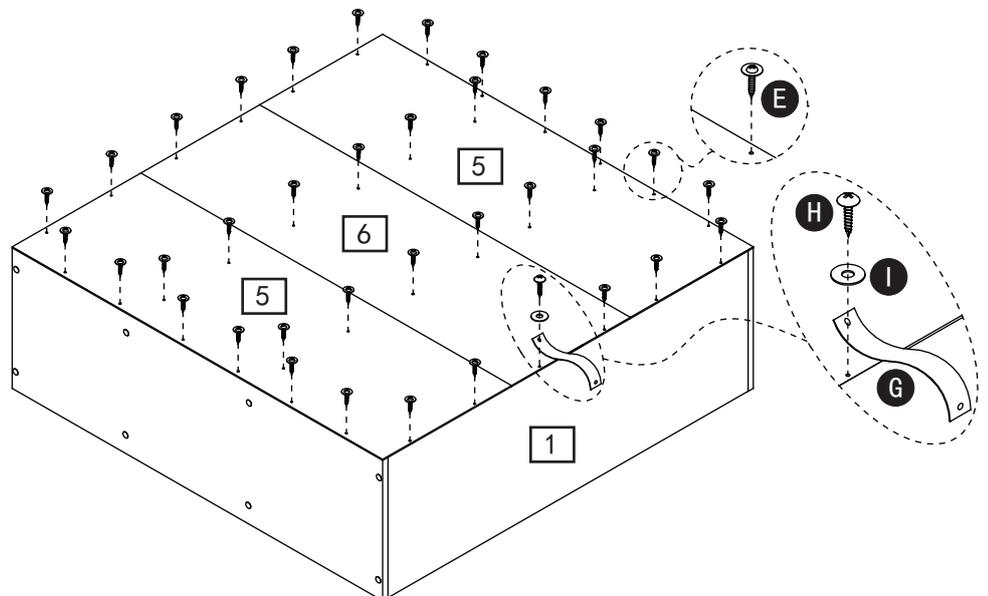

Assembly Instructions

Step 7


The unit is floor standing, but it is recommended that it is secured to the wall.

1. Move the Unit into desired position.
2. Mark the wall with a suitable scribe the position of the fixing hole.



Warning:
Before drilling, check wall for hidden pipes and cables.

3. Drill hole and insert wall plug **K**
4. Secure the strap to the wall using 1 x Washer **I** and 1 x wall screw **J**

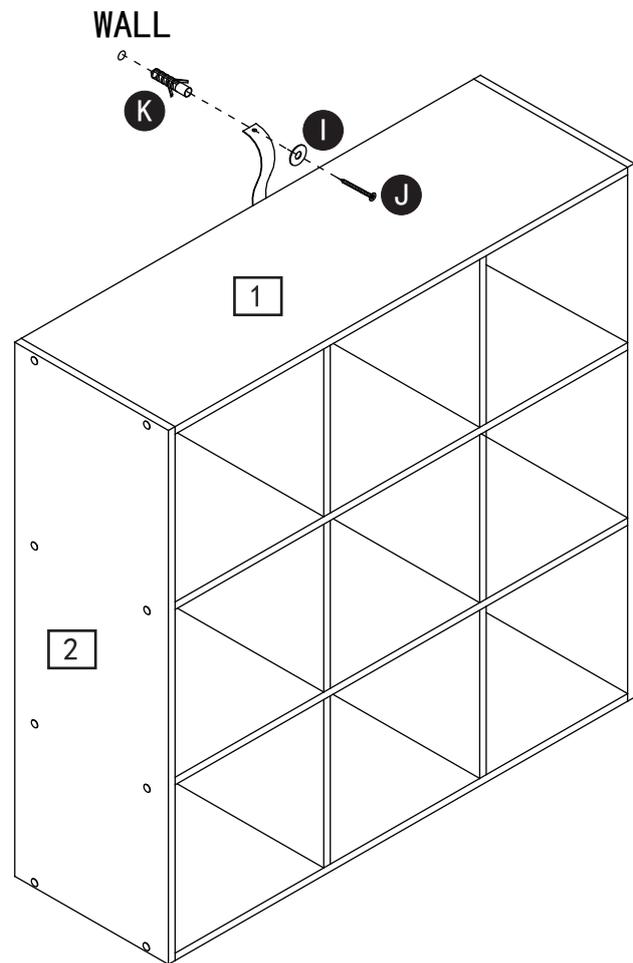

Assembly Complete

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**
Argos LTD. 489-499 Avebury boulevard, Central Milton Keynes, MK9 2NW

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: **General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

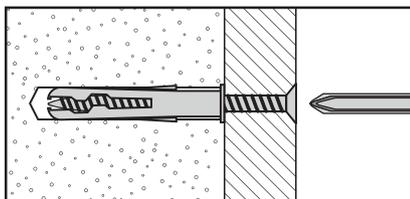


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

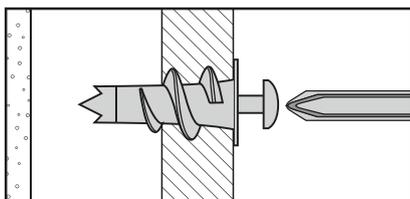


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

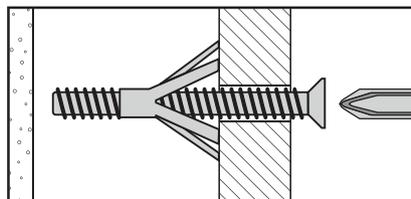


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

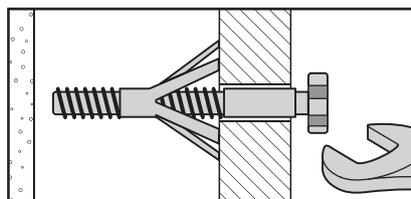


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

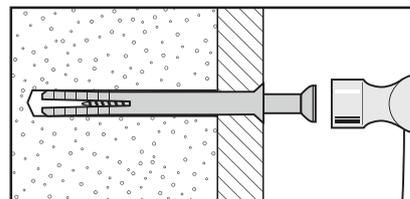

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

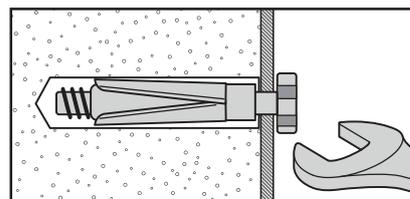

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.