





5. Steering Wheel x1




4mm Nut x1 (Already on steering wheel)


When assembling the wheels ensure that the wheel nut (7) is tightened so that the axle protrudes slightly through the outer surface NOTE: Remove the cable tie around the gear

Installation of Power Supply

Connecting the battery

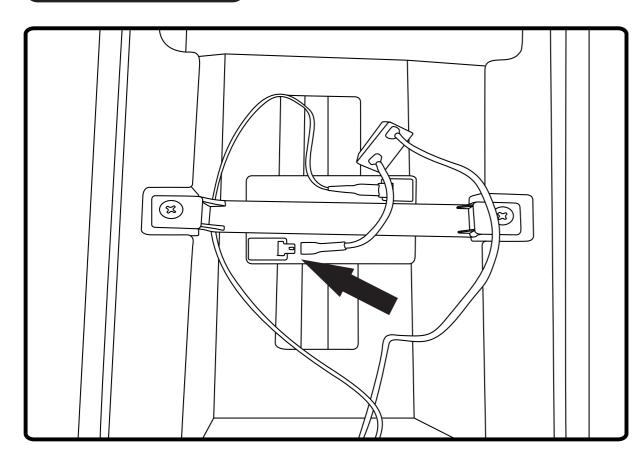


While connecting the connectors to the storage battery take care they are connected in correct polarity.

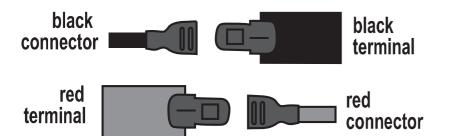


THE VEHICLE IS SHIPPED WITH THE BATTERY AND MOTOR UNPLUGGED. THE RED CABLE MUST BE ATTACHED TO THE RED TERMINAL BEFORE THE FIRST USE.


- 1. Unscrew and remove the seat.
- 2. Connect the battery.
- 3. Replace the seat and tighten back with the screw.

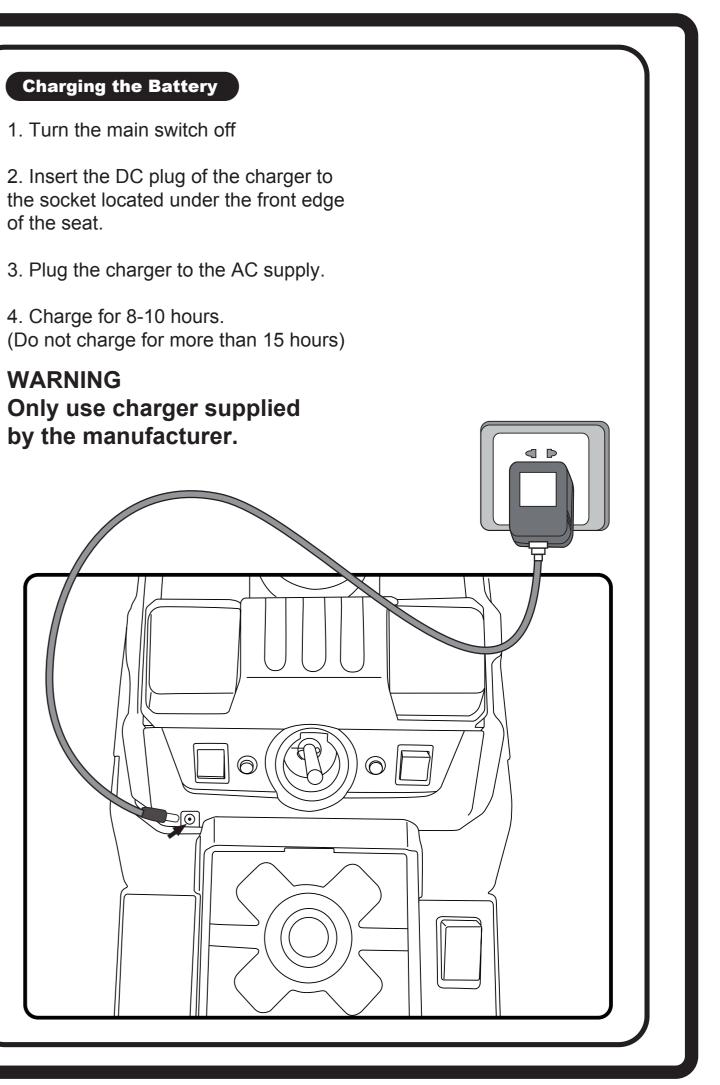


Operation instructions

- Turn on the power switch 1.
- Select the direction by switching the Forward/Reverse switch 2.
- Press the foot pedal to start moving. Release the foot pedal to stop 3.
- 4. Press the alarm button or the horn button as you want

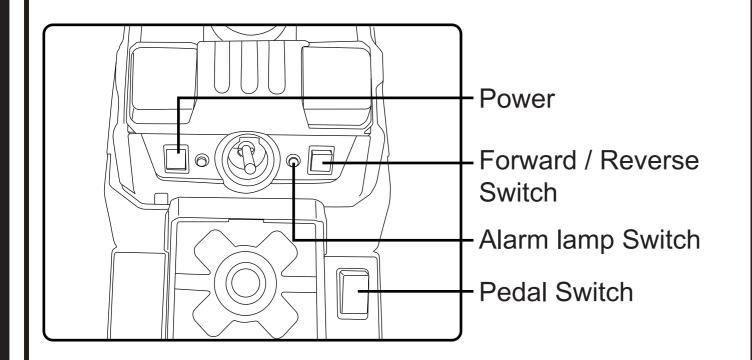

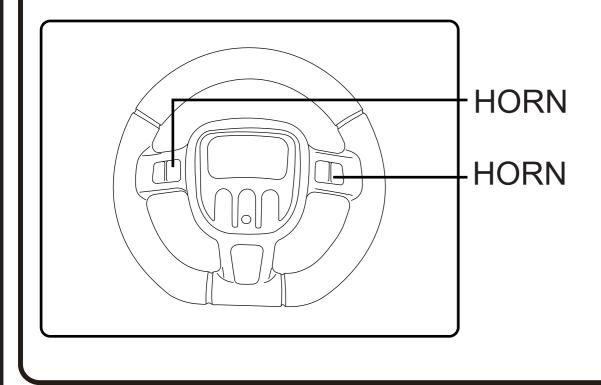

Troubleshooting

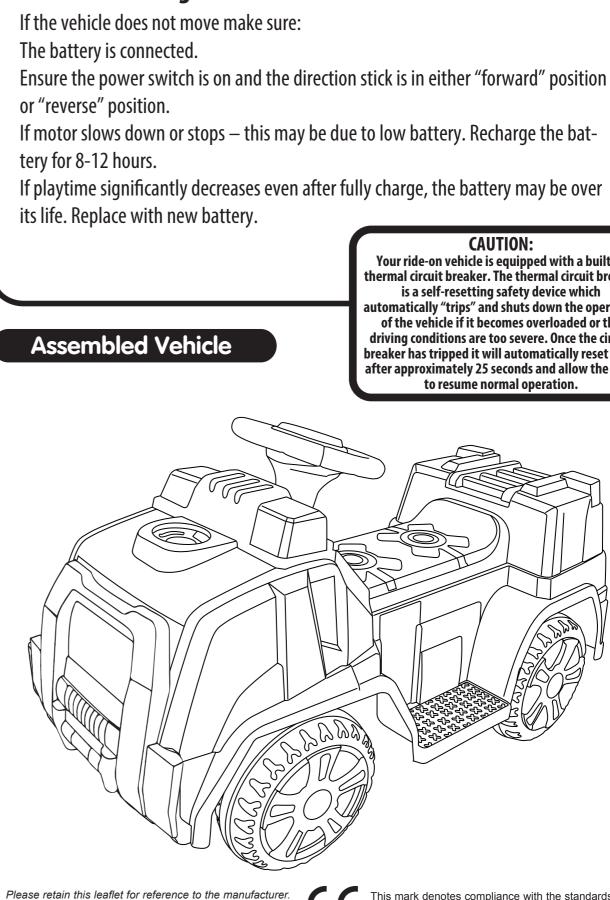

Carefully made in China to European Safety Standards

Your ride-on vehicle is equipped with a built-in thermal circuit breaker. The thermal circuit breaker automatically "trips" and shuts down the operation of the vehicle if it becomes overloaded or the driving conditions are too severe. Once the circuit breaker has tripped it will automatically reset itself after approximately 25 seconds and allow the rider



This mark denotes compliance with the standards laid down by the EC (European Community)