

BUSH

Instruction Manual

NE-3313



You'll soon be enjoying your new DAB/FM Digital Radio.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your DAB/FM Digital Radio. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

BUSH

Contents

1 Safety information

Safety information	6
--------------------	---

2 Getting to know your DAB/FM Digital Radio

Ready? Let's begin	10
Product Overview	10
Connecting to the Mains Supply	11
SETTING THE CLOCK	13

3 Using your DAB/FM Digital Radio

BASIC OPERATION - GETTING STARTED	16
USING THE RADIO - DAB MODE	17
USING THE RADIO - FM MODE	22
USING THE RADIO - PROGRAMMED STATION FUNCTION	25
SETTING AND USING THE ALARM	26
SETTING AND USING THE SLEEP FUNCTION	29
USING HEADPHONES (not included)	30
SETTING THE DISPLAY ACKLIGHT LEVEL	31
CARE AND MAINTENANCE	31


4 Other information

Specifications	34
----------------	----


5 Product support

Troubleshooting	37
Help and assistance	38
Disposal	40
Guarantee	41

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105

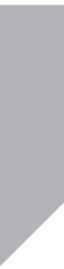

Safety information **1**

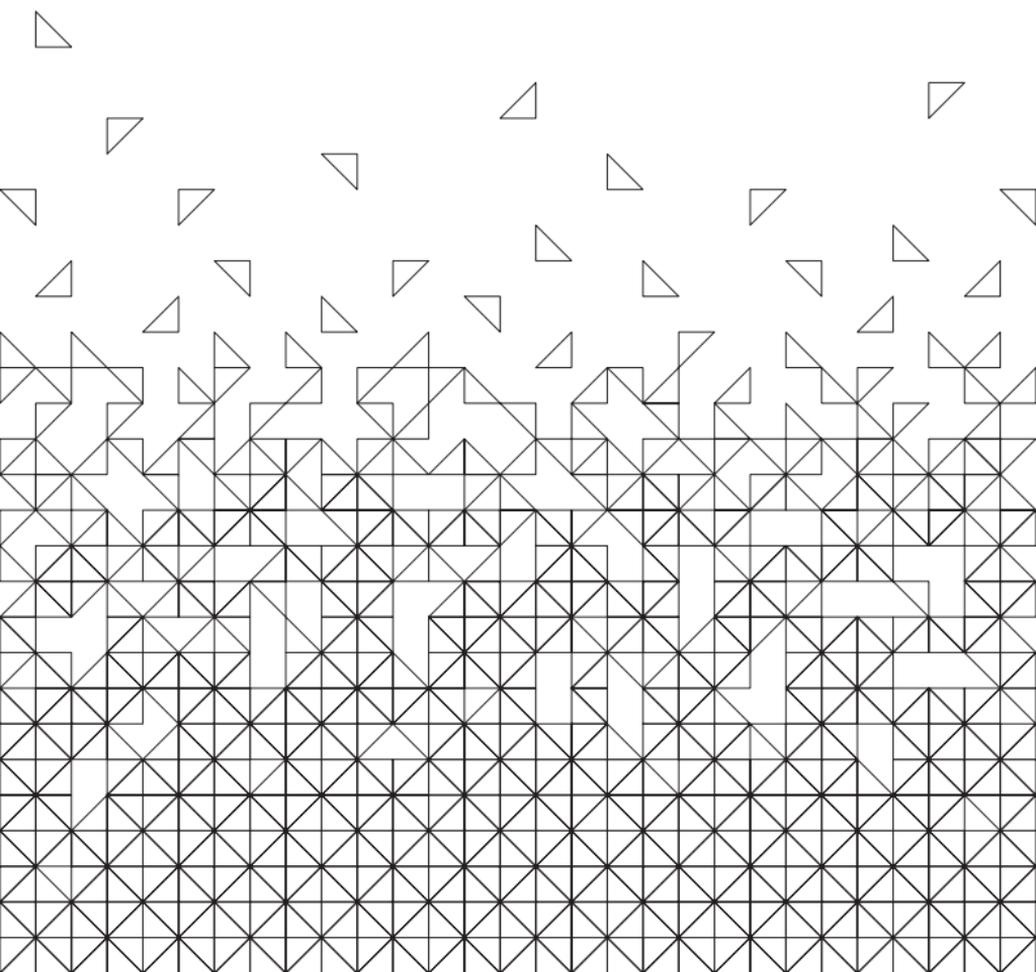



Safety information

Important - Please read these instructions fully before installing or operating

SAFETY

- FOR HOUSEHOLD AND INDOOR USE ONLY
- PLACE THE APPLIANCE ON A FLAT, STABLE SURFACE WITH ADEQUATE VENTILATION AND AWAY FROM OTHER SOURCES OF HEAT. MINIMUM DISTANCES AROUND THE APPLIANCE FOR ADEQUATE VENTILATION IS 10CM. DO NOT COVER OR RESTRICT VENTILATION OPENINGS.
- CHILDREN SHOULD BE SUPERVISED TO ENSURE THEY DO NOT PLAY WITH THE APPLIANCE, AND THE APPLIANCE AND CABLE SHOULD BE KEPT COMPLETELY OUT OF REACH OF YOUNG CHILDREN.
- THIS APPLIANCE IS NOT DESIGNED FOR USE BY CHILDREN, OR PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, AND SHOULD NOT BE USED BY SUCH PERSONS UNLESS THEY CAN DO SO SAFELY. WHERE NECESSARY, SUCH PERSONS (OR ANYONE WITH LACK OF EXPERIENCE OR KNOWLEDGE) SHOULD FIRST BE GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- FULLY UNWIND THE CABLE BEFORE PLUGGING IN AND ENSURE THE CABLE IS POSITIONED AWAY FROM AREAS WHERE IT IS LIKELY TO GET DAMAGED OR CAUSE A TRIP HAZARD.
- THE OUTPUT CORD OF THIS MAINS ADAPTOR CANNOT BE REPLACED. IN THE EVENT OF DAMAGE TO THE CABLE, JACK PLUG OR ADAPTOR, THE ENTIRE ADAPTOR UNIT SHOULD BE REPLACED.
- CONNECTIONS MUST ONLY BE MADE VIA THE MAINS ADAPTOR SUPPLIED, NEVER CONNECT THE APPLIANCE DIRECTLY TO THE 240V MAINS SUPPLY.
- NEVER USE THE ADAPTOR SUPPLIED WITH ANY OTHER APPLIANCE.
- THE MAINS ADAPTOR WILL BECOME WARM IN USE; DO NOT COVER OR PLACE ON OR NEAR SURFACES THAT COULD BE
- AFFECTED BY HEAT SUCH AS TABLE TOPS AND CARPETS.
- REMOVE MAINS ADAPTOR FROM SUPPLY IF APPLIANCE IS UNUSED



Safety information

Important - Please read these instructions fully before installing or operating

FOR A LONG PERIOD OF TIME, AND DURING THUNDERSTORMS.

- DO NOT PULL ON THE CABLE TO DISCONNECT FROM MAINS SUPPLY.
- KEEP APPLIANCE, CABLE, MAINS ADAPTOR PLUG DRY AND AWAY FROM AREAS WHERE IT IS LIKELY TO GET SPLASHED. AVOID USING IN HOT, HUMID ENVIRONMENTS.
- DO NOT PLACE ITEMS WITH NAKED FLAMES OR CONTAINERS WITH LIQUIDS ON THIS APPLIANCE.
- SWITCH OFF AND UNPLUG WHEN NOT IN USE AND BEFORE CLEANING OR SERVICING THE APPLIANCE. SERVICING OF THIS APPLIANCE MUST ONLY BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.
- ALWAYS ENSURE THE MAINS ADAPTOR PLUG IS READILY UNPLUGGABLE – DO NOT USE WITH 'LOCKABLE' SOCKETS OR PERMANENTLY WIRE TO MAINS.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Fully understand user manual before use.

Ensure your player at low volume levels or power off before you leaving.




The lightning flash with arrow-head symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.




WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

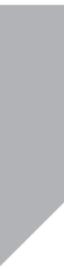

Getting to know your DAB/FM Digital Radio

2

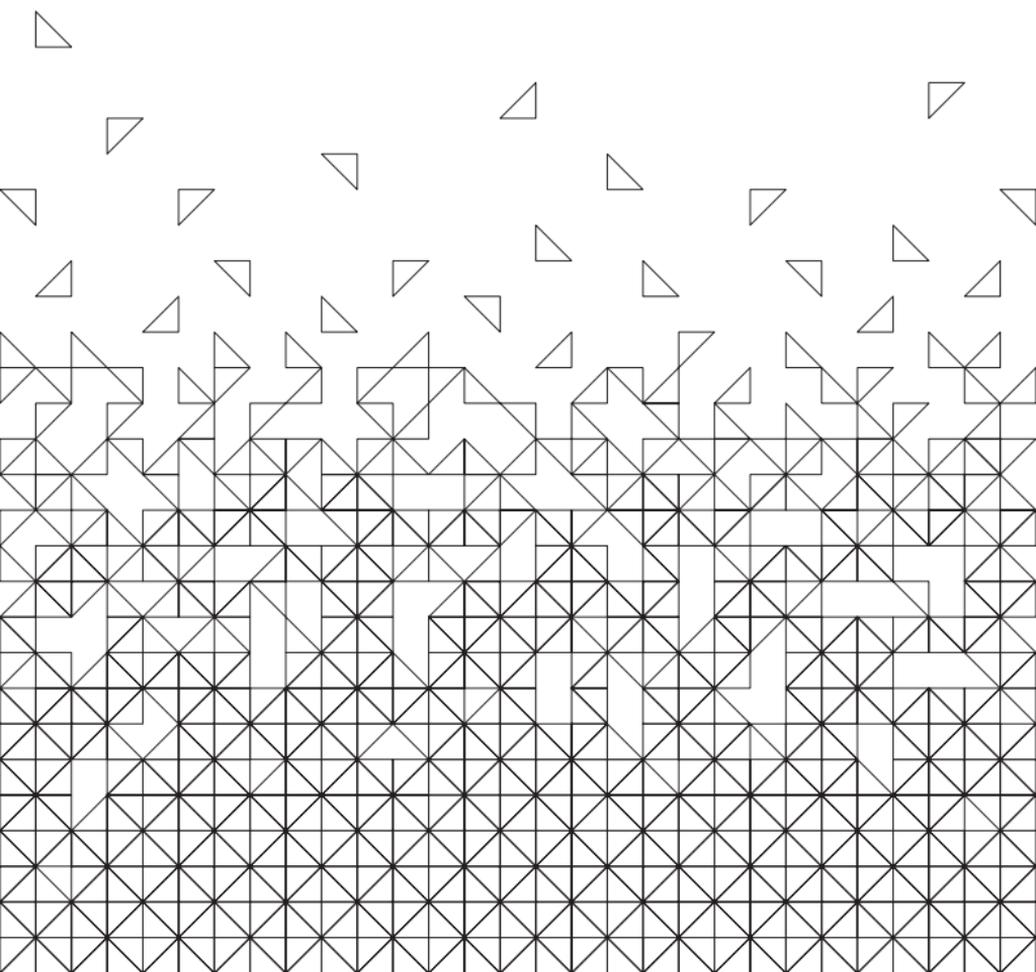

Getting to know your DAB/FM Digital Radio

You'll be up and running in no time


Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Product Overview

Front view

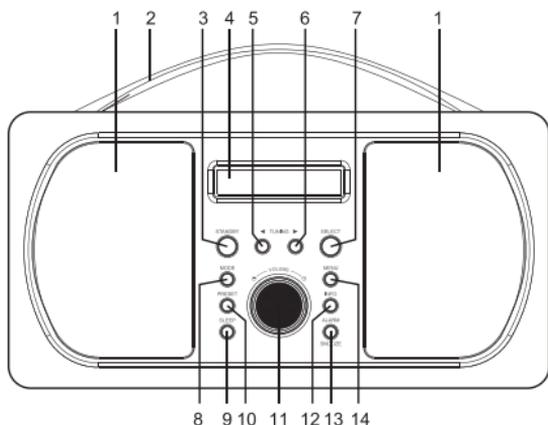


- | | | |
|-----------------------|---------------------|-------------------------|
| 1. Speaker | 6. TUNNING ► button | 11. Volume knob |
| 2. Handle | 7. Select button | 12. Info button |
| 3. Standby () button | 8. Mode button | 13. Alarm/Snooze button |
| 4. Display | 9. Sleep button | 14. Menu button |
| 5. TUNNING ◀ button | 10. Preset button | |

Getting to know your DAB/FM Digital Radio

You'll be up and running in no time

Rear view

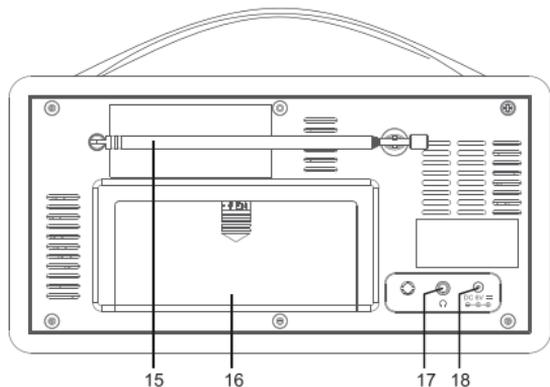


- 15. Telescopic antenna
- 16. Battery compartment
- 17. Headphone (🎧) jack

- 18. DC in jack
- 19. Adaptor (not shown)

Connecting to the Mains Supply

AC Operation

Before using, connect the supplied power cable to the mains cable socket at the rear of the unit and to the mains socket.

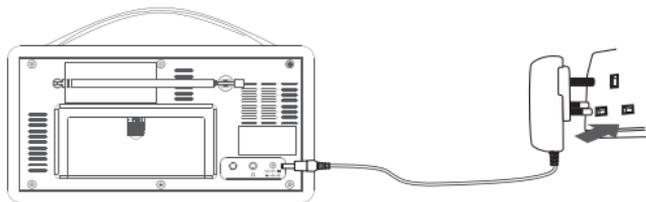

Remarks: If the AC Adaptor voltage is over than 6V, it will possible make the main unit damage.


Getting to know your DAB/FM Digital Radio

You'll be up and running in no time

DC (battery) Operation

To use the appliance with batteries ensure that the power cord is NOT connected to the mains and install the batteries into the battery compartment.

1. Slide off the battery compartment cover from the reverse of the radio.
2. Insert 4 x AA 1.5V alkaline batteries (not included) in accordance with the diagram in the battery compartment. Take care to observe the correct polarity (+/ -).
3. Refit the battery compartment cover.
4. Do not expose the batteries or the installed batteries to excessive heat (e.g. fire, sunshine or position close to radiators etc.).

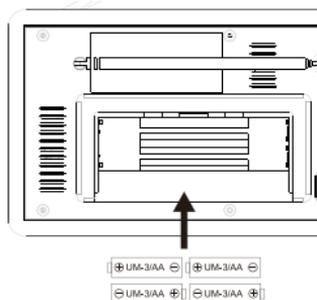

Notes:

All DAB radio's use more power during use than 'traditional' radios and so will run batteries down within a few hours. Therefore use of mains power (or rechargeable batteries) is recommended for extended listening.

BATTERY SAFETY AND DISPOSAL

- CAUTION – Danger of explosion if batteries are incorrectly fitted / replaced.
- Only use 'AA' 1.5V batteries in this appliance.
- Be sure to insert batteries correctly taking care to observe the correct polarity (+ and -).
- Use only batteries of the same or equivalent type as recommended.
- Batteries should be replaced by an adult.
- Do not recharge non-rechargeable batteries.
- Remove rechargeable batteries from appliance before recharging.

Getting to know your DAB/FM Digital Radio


You'll be up and running in no time

- Never mix old and new batteries (replace all batteries at the same time).
- Never try to dismantle batteries.
- Do not short-circuit the supply terminals.
- Always remove exhausted or dead batteries from the product.
- Remove batteries from the product before extended storage.
- Dispose of batteries responsibly at local authority household waste recycling facility.
- DO NOT dispose of batteries in a fire as the batteries may explode.

SETTING THE CLOCK


The clock in this radio is equipped to receive a DAB and FM radio frequency time signal.

1. Place the appliance on a flat and stable surface.
2. Connect the mains lead into the socket at the rear of the radio, plug in and switch on at the mains. The display backlight will illuminate for a few seconds, a welcome message (fig.1) will appear in the display briefly and the clock (00:00:00) will flash in the display and a message 'time is not set' will appear underneath.
3. If a DAB signal can be received in the area of operation after a short time the clock will automatically synchronise to the local time and then the unit will enter standby mode.

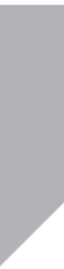

Using your DAB/FM Digital Radio

3

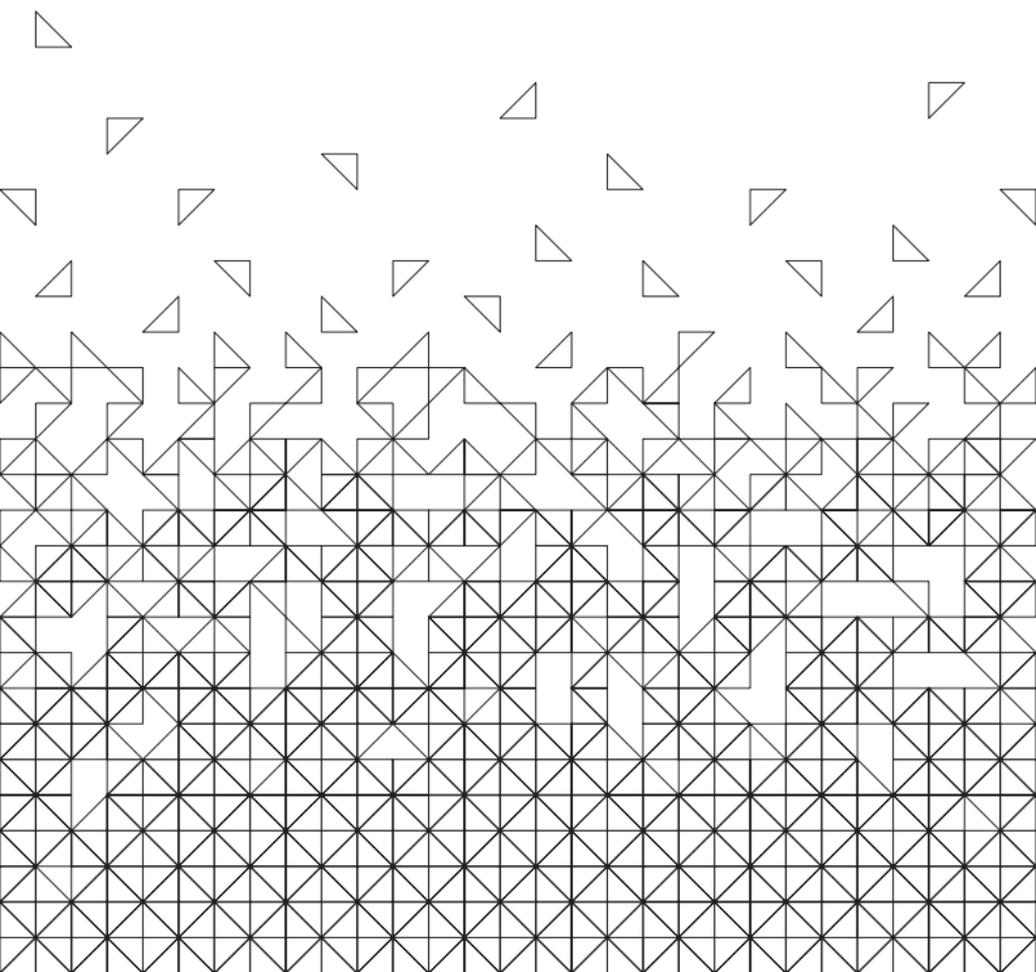

Using your DAB/FM Digital Radio

Let's get started

BASIC OPERATION - GETTING STARTED

1. Place the appliance on a flat and stable surface.
2. Connect the mains lead into the socket at the rear of the radio, plug in and switch on at the mains. The display backlight will illuminate for a few seconds, a welcome message (fig.1) will appear in the display briefly and the clock (00:00:00) will flash in the display and a message 'time is not set' will appear underneath.
3. Fully extend the telescopic antenna.
4. Press the STANDBY / ON () button to turn the unit on, the DAB mode will automatically be selected and the radio will perform a full autoscan. The display will show 'Scanning', together with a slide bar (fig.2) that indicates the progress of the scan and the number of stations found so far.

fig.1


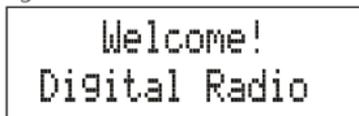


fig.2

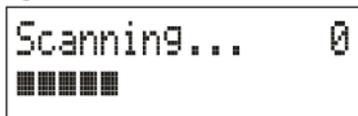

5. Once the scan has finished, the radio will select the first alphanumerically found station.
6. Adjust the volume to the desired level by turning the VOLUME knob. Turn anticlockwise to reduce the volume and clockwise to increase the volume.
7. Press the TUNNING () or () buttons to scroll through the located stations. Once the station of choice is located, press the SELECT button to select the station.
8. Move the antenna or radio until the best reception is received.
9. To switch to FM radio, press the DAB/FM button. Press the button again to return to DAB.
10. To switch the radio into standby mode, press the STANDBY () button. The radio will silence, the display will dim but the clock will still be displayed.

Using your DAB/FM Digital Radio

Let's get started

11. To turn off the radio, unplug from the mains supply.

USING THE RADIO - DAB MODE


DAB differs from analogue radio; the separate signals from a number of stations are grouped together and transmitted as a single frequency. These groups are referred to as multiplexes and ensembles. Each time a group has been found the name of the group will be shown on the lower half of the display.

DAB MODE - AUTO TUNE

This function allows the radio to search automatically for DAB Band III channels. Press the MENU button to enter the tuning menu.

1. In DAB mode, press the MENU button until 'Full scan' (fig.3) is displayed and press the SELECT button accept. The radio will start to scan, the display will show 'Scanning', together with a slide bar (fig.2) that indicates the progress of the scan and the number of stations found so far.

fig.3

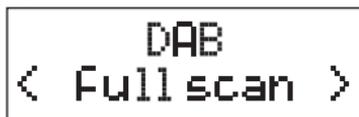

2. When the scan is finished the radio will return to the station played before the scan was initiated but any new stations found will have been added.

DAB MODE – MANUAL TUNE

This function allows a specific or new ensemble to be manually added to the stations already available on the radio. Press the MENU button once to enter the tuning menu.

1. In DAB mode, press the MENU button and then press the TUNING (◀) or (▶) buttons until 'Manual tune' (fig.4) is displayed. Press the SELECT button to accept.

Using your DAB/FM Digital Radio

Let's get started

fig.4


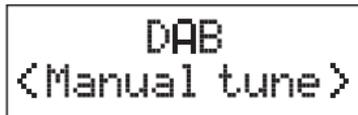


fig.5

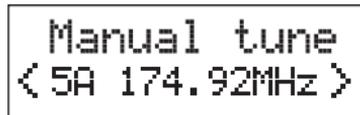

2. Use the press the TUNNING (◀) or (▶) buttons buttons until the desired frequency (e.g. fig. 5) is shown in the display and then press the SELECT button. The top line will now display the channel number, the frequency and name of the ensemble and the lower line will show the signal strength or 'service not available' if the signal strength is too weak.
3. Press the SELECT button again to add the ensemble and automatically tune to the station.

DAB MODE – PRUNE

This function allows all unavailable stations to be removed from the station list. Press the MENU button for about 2 seconds to enter the tuning menu.

6.3.1 Press the TUNNING (◀) or (▶) buttons until 'Prune' is displayed and press the SELECT button to confirm.

6.3.2 Press the TUNNING (◀) or (▶) buttons to select <yes> to confirm and delete. If <no> is selected the operation will be cancelled.

DAB MODE – SECONDARY SERVICES

Some stations include secondary services and when these are available a '>' symbol appears after the station name when searching the stations found list. These secondary services contain extra services that are related to the primary station, for example a sports station may want to add extra commentary. The secondary services are inserted directly after the primary station in the station list.

- To access this service, press the SELECT button. When the secondary service ends, the unit will automatically switch back to the primary station.

Using your DAB/FM Digital Radio


Let's get started

DAB DISPLAY MODES

This function allows information relating to the current station to be shown in the second line of the display.

Press the INFO button repeatedly to scroll through the following display modes (fig.6)

fig.6

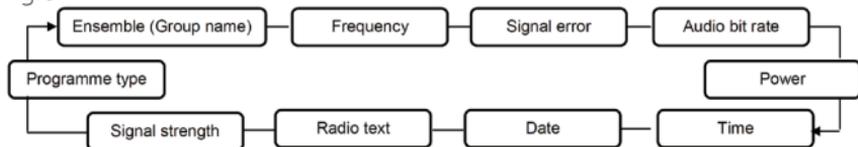

- Ensemble / Multiplex (Group name) - the ensemble / multiplex is a group of station that are bundled and transmitted together in a single frequency. There are national and local multiplexes, local ones contain stations that are specific to the local area.
- Signal strength – the display will show a slide bar to indicate the strength of the signal. The stronger the signal, the longer the bar.
- Signal error – the display shows the stability and quality of the reception, 0=good.
- Time - the time will be automatically updated by the radio time signal.
- Date - the date will be automatically updated by the radio time signal.
- Audio bit rate – the display will show the digital audio bit rate being received.
- Radio text - the broadcaster may include a scrolling message about the current programme.
- Programme type – this describes the style / genre of the programme. If the information is not available the display will show '<Programme type>'.
- Channel number / frequency – the display will show the channel

Using your DAB/FM Digital Radio

Let's get started

number / frequency of the station being broadcast.

- Power status – the display will show whether if the radio is being used on mains or battery. When in battery mode the display will show the battery capacity (21-100)

DAB SET UP OPTIONS

This function allows the DAB set up menu to be entered and a number of options to be changed.

With the music of choice playing, press the MENU button until 'Full scan' is displayed and then press the TUNNING (◀) or (▶) buttons to move through the menu options available and press the SELECT button to enter each option.

Menu	Options		
Full scan	Initiates full DAB scan		
Manual tune	Permits manual addition of DAB stations		
Prune	Removes unavailable DAB stations		
System	Time	Set Time / Date	hh:mm:dd:
		Auto update	Update from any Update from DAB Update from FM No update
		Set 12/24	12 24
		Set date format	dd/mm/yyyy mm/dd/yyyy

Using your DAB/FM Digital Radio

Let's get started

Menu	Options	
	Sleep	Off 10 mins 20 mins 30 mins 60 mins 70 mins 80 mins 90 mins
	Backlight	Low Medium High
	Factory reset	Initiates reset
	SW version	Display software version

DAB MODE - RESET

If moving the radio to another location in the country the pre-tuned and stored DAB stations may no longer be available and it will be necessary to reset the radio back to the factory settings.

1. With the unit switched on, press the MENU button and the press the TUNNING (◀) or (▶) buttons until 'System' is displayed. Press the SELECT button to accept.
2. Use the TUNNING (◀) or (▶) buttons until 'Factory reset' (fig.7) is shown in the display and press the SELECT button to accept.

fig.7




```
System
<Factory Reset >
```

Using your DAB/FM Digital Radio

Let's get started

3. The display will now show 'Factory Reset? <No> Yes' (fig. 8). Use the TUNNING (◀) or (▶) buttons until <Yes> is shown and then press the SELECT button to confirm. The radio will display "Restarting...." and will then go into standby mode.

fig.8

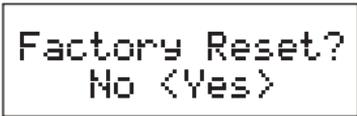

Factory Reset?
No <Yes>

4. Proceed as per section 6.1 to re-start the unit and scan for stations.

Note

- All stored programmed stations will be lost during reset.

USING THE RADIO - FM MODE

FM MODE - TUNING

1. To select FM radio, press the MODE button, the display will show 'FM' and then the frequency.
2. To activate auto search press the SELECT button or press and the TUNNING (◀) or (▶) buttons and the radio starts to scan up the frequency band, the display will show 'Scanning...' (fig.9), and it will stop automatically once a station has been found.
3. To search manually, press the TUNNING (◀) or (▶) buttons and immediately release to increment the frequency by 0.05MHz.
4. To change the audio mode (stereo or mono), press the MENU button and press the TUNNING (◀) or (▶) buttons until 'Audio setting' is displayed. Press the SELECT button to accept. Use the TUNNING (◀) or (▶) buttons button to switch from 'Stereo allowed' to 'Forced mono' and again to switch back. If 'stereo

fig.9



97.75MHz
Scanning...

Using your DAB/FM Digital Radio

Let's get started

allowed' is selected the radio will automatically switch between stereo and mono mode. Once the audio mode of choice is displayed, press the SELECT button to accept.


- To set the scan criteria, press the MENU button and press the TUNNING (◀) or (▶) buttons until 'Scan setting' is displayed. Press the SELECT button to accept. Use the TUNNING (◀) or (▶) buttons to switch from 'All stations' to 'Strong stations' and again to switch back. If 'strong stations' is selected the radio will only scan for strong stations. Once the scan criteria of choice is displayed press the SELECT button to accept.
- If an FM RDS (Radio Data Signal) is present, the display will automatically show the station name and radio text (if available).

FM DISPLAY MODES

This function allows information relating to the current station to be shown in the second line of the display.

If the INFO button is then pressed repeatedly, the second line of the station display will scroll through the following modes with each subsequent press of the button (fig.10).

fig.10

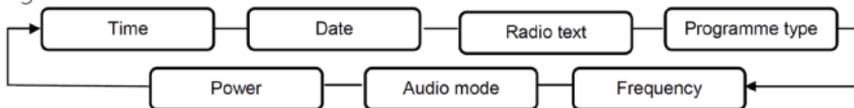

- Time - the time will be automatically updated by the radio time signal.
- Date - the date will be automatically updated by the radio time signal.
- Radio text - the broadcaster may include a scrolling message about the current programme.
- Programme type - this describes the style / genre of the programme. If the information is not available the display will show '<Programme type>'.

Using your DAB/FM Digital Radio

Let's get started

- Audio mode – the display will show if the station being received is stereo or mono.
- Frequency – the display will show the frequency of the station being broadcast.
- Power status – the display will show whether if the radio is being used on mains or battery. When in battery mode the display will show the battery capacity (21-100)

FM SET UP OPTIONS

This function allows the FM set up menu to be entered and a number of options to be changed.

With the music of choice playing, press the MENU button until 'Scan setting' is displayed and then press the TUNNING (◀) or (▶) buttons to move through the menu options available and press the SELECT button to enter each option.

Menu	Options		
Full scan	Initiates full DAB scan		
Manual tune	Permits manual addition of DAB stations		
Prune	Removes unavailable DAB stations		
System	Time	Set Time / Date	hh:mm:dd:
		Auto update	Update from any Update from DAB Update from FM No update
		Set 12/24	12 24
		Set date format	dd/mm/yyyy mm/dd/yyyy

Using your DAB/FM Digital Radio

Let's get started


Menu	Options	
	Sleep	Off 10 mins 20 mins 30 mins 60 mins 70 mins 80 mins 90 mins
	Backlight	Low Medium High
	Factory reset	Initiates reset
	SW version	Display software version

USING THE RADIO - PROGRAMMED STATION FUNCTION

This function allows up to 10 stations to be programmed into the memory and stored in DAB and FM modes.

1. Follow the directions above to select a radio station.
2. Press and hold the PRESET button until the display shows a flashing 'Preset store # empty' (fig.11).
3. Use the TUNNING (◀) or (▶) buttons to select the preset storage location and then press the SELECT button to confirm. The station now

fig.11

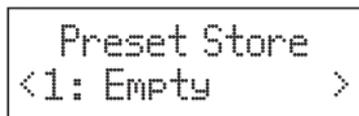

Using your DAB/FM Digital Radio

Let's get started

- broadcasting has now been stored in the selected location (fig.12).
- Repeat the above steps to store further stations.
 - To listen to the preset stations, press the PRESET button once and then use the TUNNING (◀) or (▶) buttons turn to select the desired location. The station name or frequency and preset location number will be displayed (fig.13) in the lower half of the display or if the preset has not been allocated, 'Preset empty' will be shown.

fig.12


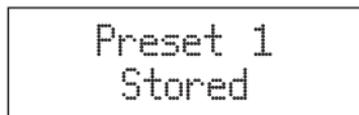


fig.13

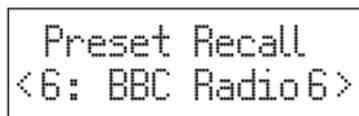

Note

- If the unit is disconnected from the mains supply for any length of time and batteries are not installed; the programmed stations won't be lost.
- Each of the above steps need to be completed within 5 seconds of pressing the button, otherwise the screen will keep on flashing


SETTING AND USING THE ALARM

This unit has a dual alarm function.

SETTING THE ALARM (in operational mode only)

- Press the ALARM / SNOOZE button to enter the alarm menu, press the button ONCE to display 'Alarm 1 set up' (fig. 14) and press the button TWICE to display 'Alarm 2 set up'.

fig.14

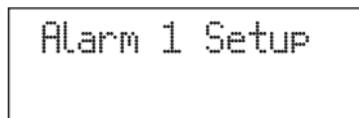

Press the SELECT button to accept alarm of choice.

Using your DAB/FM Digital Radio

Let's get started

2. After selecting the alarm of choice, the hour digits will flash in the display. Use the TUNNING (◀) or (▶) buttons to select the correct alarm wake up hour and press the SELECT button to confirm. The minute digits will start to flash.
3. Use the TUNNING (◀) or (▶) buttons to select the correct alarm minute and press the SELECT button to confirm. The alarm duration will be displayed.
4. Use the TUNNING (◀) or (▶) buttons to select the duration (90, 60, 45, 30, 15 minutes) of choice and press the SELECT button to confirm. The alarm source will be displayed.
5. Use the TUNNING (◀) or (▶) buttons to select the alarm source (Buzzer, DAB or FM) of choice and press the SELECT button to confirm. If a radio source is displayed the radio source will now be displayed.
6. Use the TUNNING (◀) or (▶) buttons to select the wake up station (last station listened to or DAB preset) of choice and press the SELECT button to confirm. The alarm frequency will now be displayed.
7. Use the TUNNING (◀) or (▶) buttons to select the alarm frequency (Daily, Once, Weekend, Weekdays) and press the SELECT button to confirm. If 'once' is selected then use the TUNNING (◀) or (▶) buttons to set the date that the alarm is to activate. Please use the select button to move to the next field in each case. When the date is set, the alarm volume will now be displayed.
8. Use the TUNNING (◀) or (▶) buttons to select the desired wake up volume and press the SELECT button to confirm. The alarm status will now be displayed.
9. Use the TUNNING (◀) or (▶) buttons to select the status of choice (Off or On) and press the SELECT button to confirm. This completes the set up procedure for the wake up mode.

Note

- To set the wake up options for the second alarm, follow the above procedure using 'Alarm 2' from the alarm menu.

Using your DAB/FM Digital Radio

Let's get started

ACTIVATING AND USING THE ALARM (in standby mode only)


1. Switch the radio into standby mode.
2. Press the ALARM / SNOOZE button to display the current status of the alarms (e.g. Alarm 1: on and Alarm 2:off).
3. Press the button again to change the status to the next one in the sequence below until the status of choice is displayed. Press the SELECT button to accept. An active alarm is indicated by a corresponding alarm icon (bell) in the display.

fig.15



4. Once the alarm has been set and activated, when the time on the clock is the same as the alarm time that has been set, the alarm will sound and the volume will gradually increase in volume to the one that has been set.
5. The alarm will continue to sound and stop automatically after the time interval that has been set (step 9.1.4 above). To silence the alarm, press the STANDBY (⏻) button. If a repeat alarm has been set, the alarm indicator will remain illuminated and the alarm will sound again at the next programmed day unless the alarm has been turn off.
6. To activate the snooze function, press the ALARM / SNOOZE button when the alarm sounds. The alarm will silence, the display will display the clock and the snooze interval remaining and the (Zz) indicator (fig. 16). The alarm will sound again

fig.16

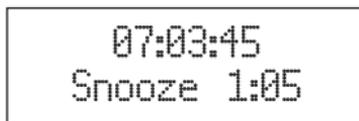

Using your DAB/FM Digital Radio

Let's get started

after approximately five minutes.

7. To extend the snooze interval from the default 5 minutes, press the snooze button repeatedly after the alarm has been activated to scroll through the options available (5, 10, 15 and 30 minutes). When the snooze interval of choice is displayed stop pressing the button and this interval will now be used as the default. The ALARM / SNOOZE button may be used repeatedly within the alarm activation time. To cancel the snooze function; press the STANDBY / ON (⏻) button.
8. To turn off the alarm permanently, follow steps 10.2.1 to 10.2.3 until 'Alarm 1 off' is displayed. Press on the SELECT button to select. The alarm is now off and the alarm symbol extinguishes.

Note

- To activate the second alarm, follow the above procedure using 'Alarm 2' from the alarm menu.
- If both alarms have been activated, priority will be given to the alarm that has the earliest activation time. If the snooze function is used for the first alarm and the activation time of the second alarm is within this period, the second alarm will not activate. If setting two alarms with activation times within one hour of the other one, always ensure that the alarm is silenced using the STANDBY / ON (⏻) button.

SETTING AND USING THE SLEEP FUNCTION

This function will switch off the main unit automatically after a preset time interval.


1. With the music of choice playing, press the MENU button and the press the TUNNING (◀) or (▶) buttons until 'System' is displayed. Press the SELECT button to accept.

Using your DAB/FM Digital Radio

Let's get started

2. Use the TUNNING (◀) or (▶) buttons until 'Sleep' is shown in the display and press the SELECT button to accept.
3. The display will now show 'Set sleep time?' and the current sleep status (e.g. fig. 17).
4. Use the TUNNING (◀) or (▶) buttons until the preset times in the sequence below (fig.18). When the sleep interval of choice is shown, press the SELECT button to set.
5. The sleep timer is now activated
6. To cancel the sleep timer, press the MENU button and follow the directions above until 'Sleep off' appears in the display.
7. To check the sleep timer status, follow steps 10.1 & 10.2 above and the sleep interval remaining will be displayed.

fig.17

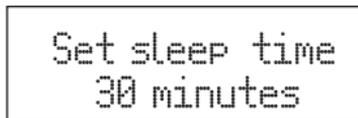

USING HEADPHONES (not included)

A stereo headphone jack has been provided so that the set can be used without disturbing others. Plug in the headphones at the point marked '🎧' on the back of the radio and adjust the listening volume to your chosen level. Excessive sound pressure from earphones and headphones can cause hearing loss. The speakers will not operate when earphones are fitted.

Using your DAB/FM Digital Radio

Let's get started

SETTING THE DISPLAY ACKLIGHT LEVEL

(in operational mode only)

The light level for the display can be selected in operational modes (high, medium, low or off).

1. With the radio in operational mode, press the MENU button and then press the TUNNING (◀) or (▶) buttons until 'System' is displayed. Press the SELECT button to accept.
2. Use the TUNNING (◀) or (▶) buttons until 'Backlight' is shown in the display and press the SELECT button to accept.
3. Use the TUNNING (◀) or (▶) buttons until the backlight level of choice is displayed and then press the SELECT to confirm.


Note

- Pressing any button on the unit will switch the backlight to the highest setting for five seconds.

CARE AND MAINTENANCE

- Wipe external surfaces with a soft cloth. If the cabinet is very dirty, unplug from the mains supply and use a damp cloth soaked in a weak solution of washing up liquid and water. Allow it to dry thoroughly before reusing.

Other information 4

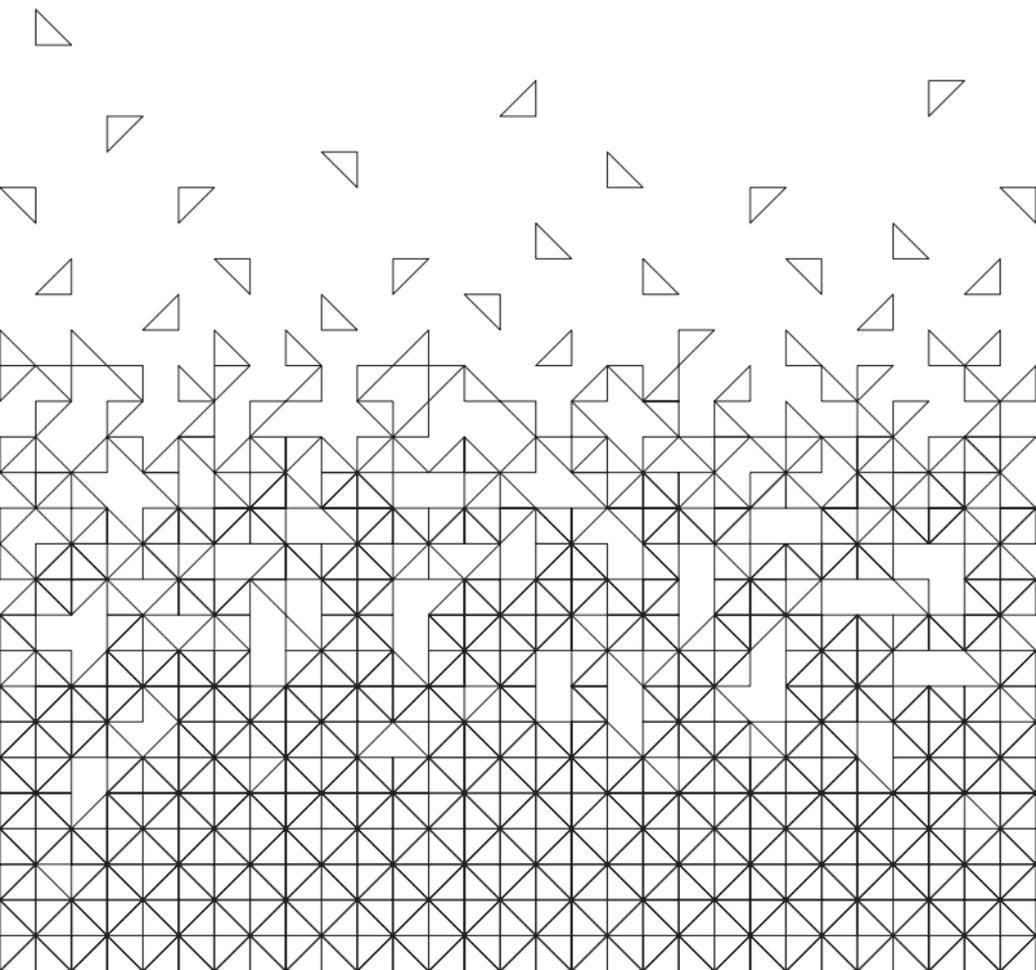


Other information

Helpful technical information

Specifications

Rated voltage (transformer)	100 – 240V~ 50/60Hz, 0.3A
Transformer output	6V 1.5A
Rated voltage (radio)	DC 6V (1.5V x 4 AA)
Power consumption	9W
Power consumption (standby)	0.4W
Class rating (transformer)	2
Audio output	2 x 2W RMS
Radio	DAB 174-240MHzFM 87.5-108MHz
Operating conditions	Temperature: 5°C to 35°C Humidity 5% to 90%
Operating position	Horizontal

Product support 5

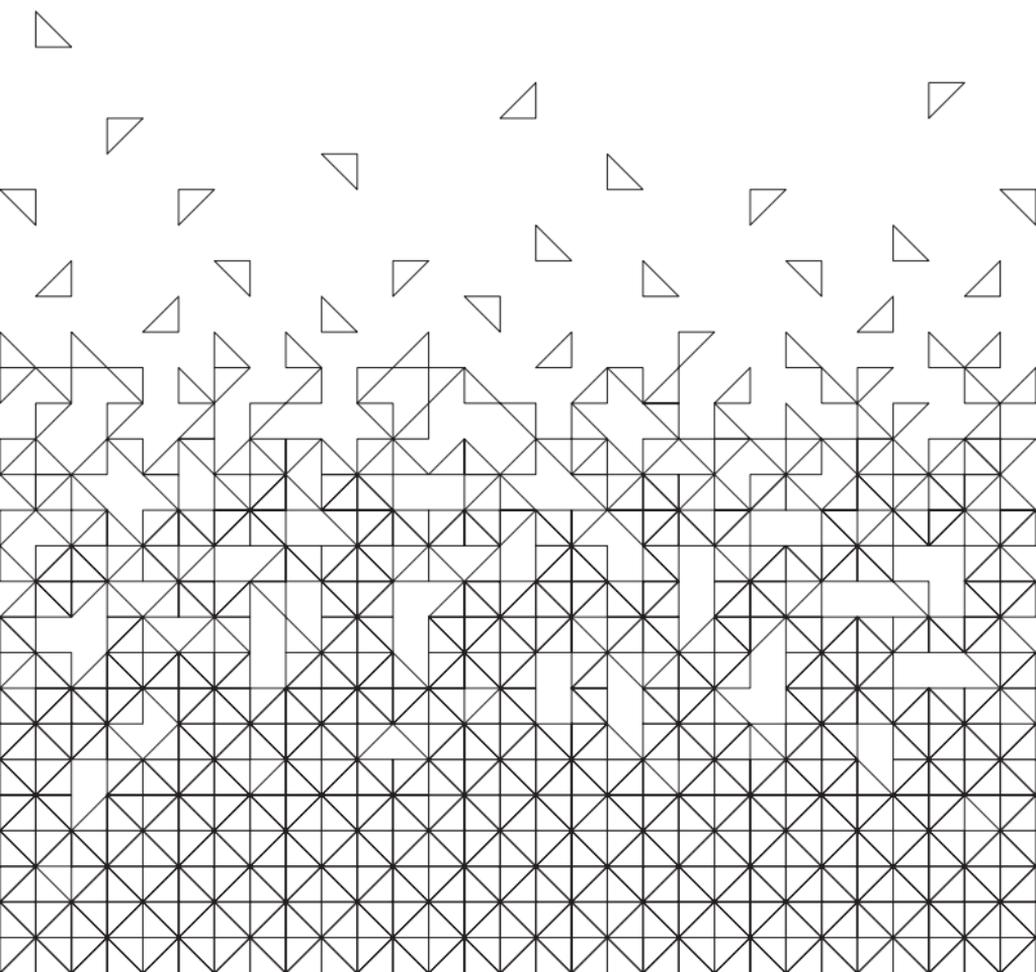

Product support

Help is always at hand

Troubleshooting

Observation	Potential cause / solution
The unit does not work (display not illuminated)	Has the adaptor lead been correctly plugged into the mains and the DC input jack at the side of the unit? Does the socket that is being used have power? Has the power lead been removed from the back of the unit without the batteries being installed?
The unit does not work on batteries	Has the adaptor lead been removed from the radio? Are the batteries inserted correctly? Are the batteries exhausted?
No sound (display illuminated)	Is the volume set at minimum? Are headphones fitted in the phones jack?
Clock display flashes	Indicates power has been interrupted and time signal has been lost. Switch on and tune in to a DAB station to automatically update the clock.
Radio reception noisy (FM)	Extend or adjust the position of the antenna or radio. FM stereo – if weak switch to MONO as this requires less signal strength.
Radio reception stutters / bubbling sounds (DAB)	Signal is weak. Extend the antenna or adjust the location of the radio. Positions higher up or nearer windows may improve reception.

Product support

Help is always at hand

Observation	Potential cause / solution
DAB 'service not available'	This usually means that reception is weak, not that there is no service. Try re-orienting the antenna or moving the radio to a different location. Check that your local area has DAB coverage on http://www.ukdigitalradio.com/coverage/postcodesearch/
Alarm does not work	Has the alarm been activated – see section " ACTIVATING AND USING THE ALARM "(P28)? Has the correct alarm been activated?

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your DAB/FM Digital Radio is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105**. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies*

Line open 8am-7pm Monday to Saturday and 10am-4pm Sunday

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Product support

Help is always at hand



This appliance complies with the following EEC directives:
2006/95/EEC Low voltage directive
2004/108/EMC directive

Disposal



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment.

To preserve our environment, dispose of used batteries according to your local laws or regulations.

Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

All trademarks are the property of their respective owners and all rights are acknowledged.

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.

The product must be correctly installed and operated in accordance with the instructions contained in the manual.

It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is

re-sold or has been damaged by inexperienced repair.

Specifications are subject to change without notice.

Bush disclaim any liability for loss or damage arising from the breakdown of the product.

This guarantee is in addition to and does not diminish your statutory or legal rights.

Product support

Help is always at hand

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

BUSH

Contact:

www.argos-support.co.uk

Helpline: 0345 604 0105

 DAB Digital
Radio