 

**Pro.Action 6 Man Tent** 



**x2 Inners** 


x1 Flysheet




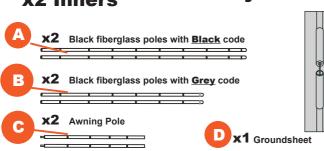







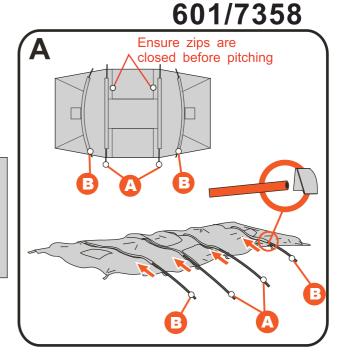

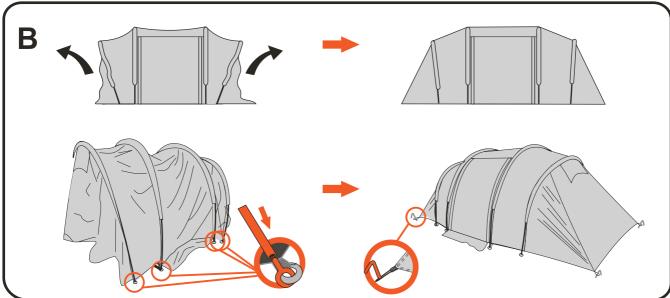

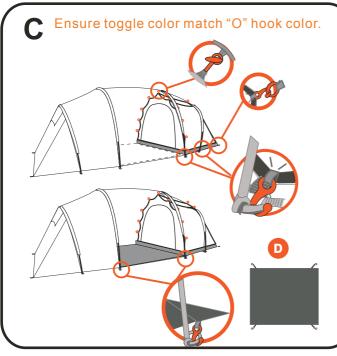

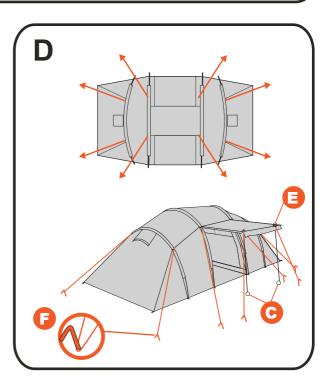



## Tips and Guideline

- It would be useful to ask someone to help you.
- Make sure that the ground is as level as possible and is free from stones and sharp objects as these can puncture the groundsheet.
- Ensure zips are closed before pitching.
- Take note of the order you unpack the contents of the tent bag and the way the tent is folded. This will help in the repacking. In case of damage to any of the tent poles we have included spare poles and connectors.
- Tents and prone to internal condensation when the air inside is warmer than outside, avoid this by keeping the tent wall ventilated.

Argos Help line: 0345 640 0800 ADDRESS:489-499 Avebury Boulevard, Milton Keynes MK92NW