
Romantic Sideboard

Assembly Instructions - Please keep for future reference

606/4325

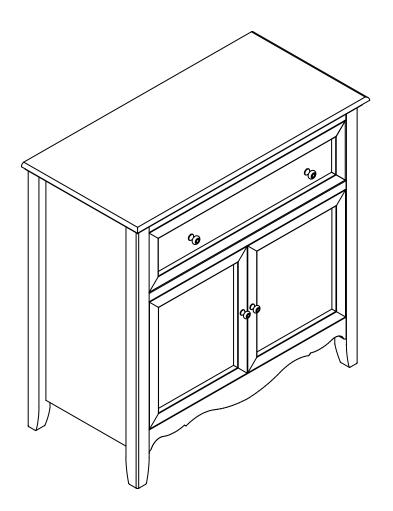



Dimensions

Width - 80cm

Depth - 40cm

Height - 80cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 6400800**



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.

Handy Hints


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the Customer Helpline: Argos = 0345 6400800


Please check you have all the panels listed below

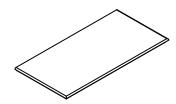

1 Top panel (80 x 40cm)

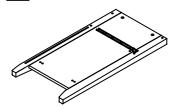


3 Right frame side (77.5 x 38cm)

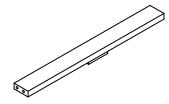

5 Mid rail (68 x 7cm)




7 Back rail (68 x 23.7cm)

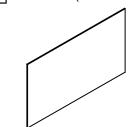


9 Back panel (69.2 x 39.3cm)




11 Left side drawer panel (30 x 14.8cm)

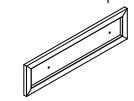

13 Drawer front (67.6 x 17.8cm)

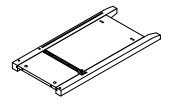


2 Left frame side (77.5 x 38cm)

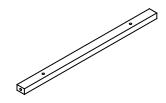


4 Top front rail (68 x 3.8cm)




6 Bottom shelf (68 x 37.9cm)

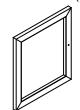


8 Doors x 2 (38.2 x 33.7cm)

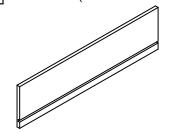

10 Back drawer panel (63 x 14.8cm)

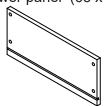

12 Right side drawer panel (03 x 14.8cm)

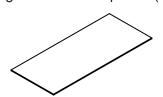


14 Bottom drawer panel (64.1 x 28.8cm)



Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

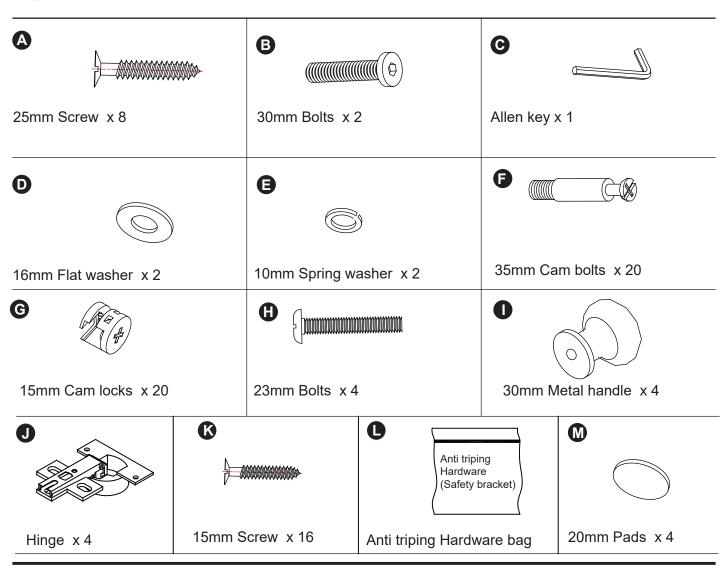

Tools required



Ruler - Use this ruler to help correctly identify the screws

(for use with wall plug)

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170




The screws length is measured from the head to the point (30mm screw shown).

Step 1


Insert Cam bolts

a: Insert Cam bolts F into top panel 1 as shown

a:

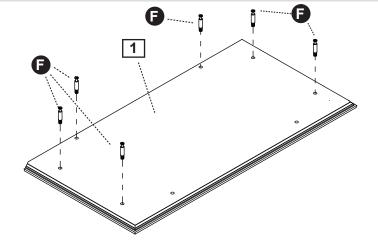


b: Insert Cam bolts into left frame side 2 and right frame side 3 as shown b:

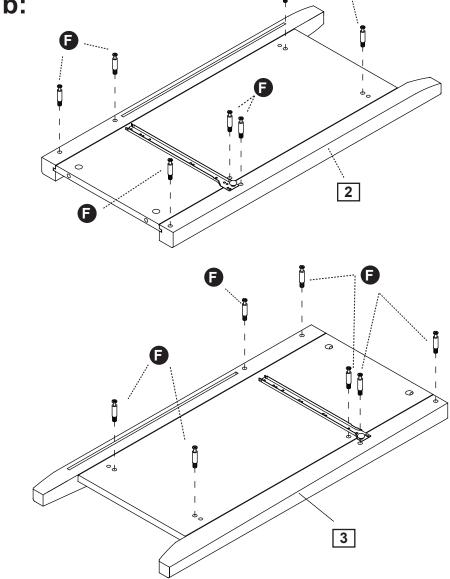

Step 2

Assembly frame side


Insert Cam locks G
into the frame bottom 6
back rail 7 top front rail
4 & mid rail 5 .
Press firmly together .
Turn the cam lock
clockwise with
a philipshead screwdriver
to lock.

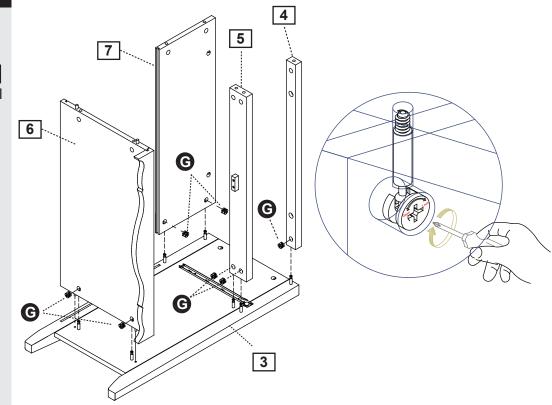

Step 3

Assembly back panel

Insert back panel 9
into the slot of back rail
7, frame side 3,
and frame bottom 6

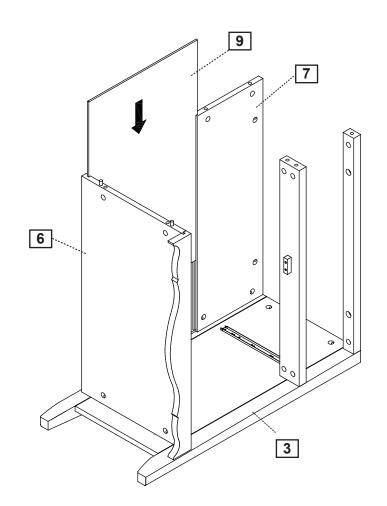

Step 4

a: Assembly frame side


Insert Cam locks into the frame bottom 6 back rail 7 top front rail 4 & mid rail 5.

Press firmly together.

Turn the cam lock clockwise with a philipshead screwdriver to lock.

b: Attach the pad


Remove cover paper on the pad . Attach the pad into under the legs. With help stand the assembled unit upright.

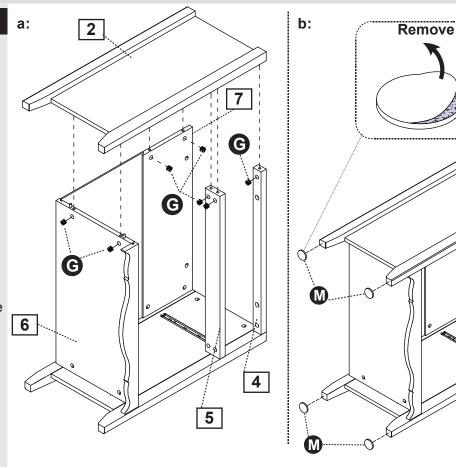

Step 5

Assembly top panel

Insert Cam locks G
into side panel 2 3
& back rail 7
as shown .Press top panel
1 onto assembly.Turn cam
locks to lock . Insert bolts
B , Spring washer D ,
flat washer E , Tighten
with supplied allen key C
Do not over tighten.

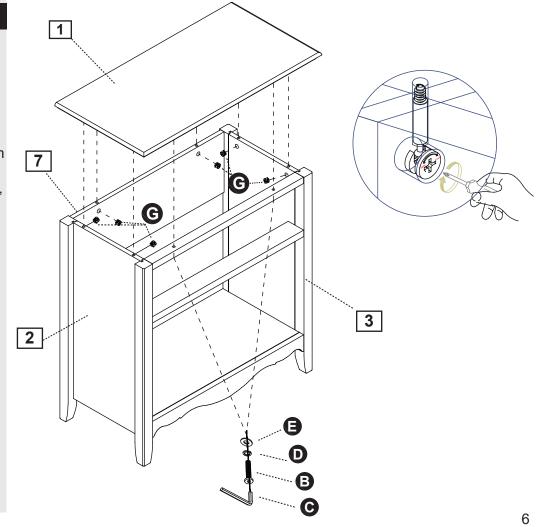

Step 6

Assembly Drawer

a:Position Left side
drawer panel 11, and
right side drawer panel
12 into drawer front 13


Fix through holes using screw **A**

- **b:** Insert bottom drawer panel 14 into the slot of side drawer panel and drawer front panel.
- **C:** Position back drawer panel 10.


Fix through holes using screw (A)

d: Position metal handle into top drawer panel.

Fix through holes using bolt **H**

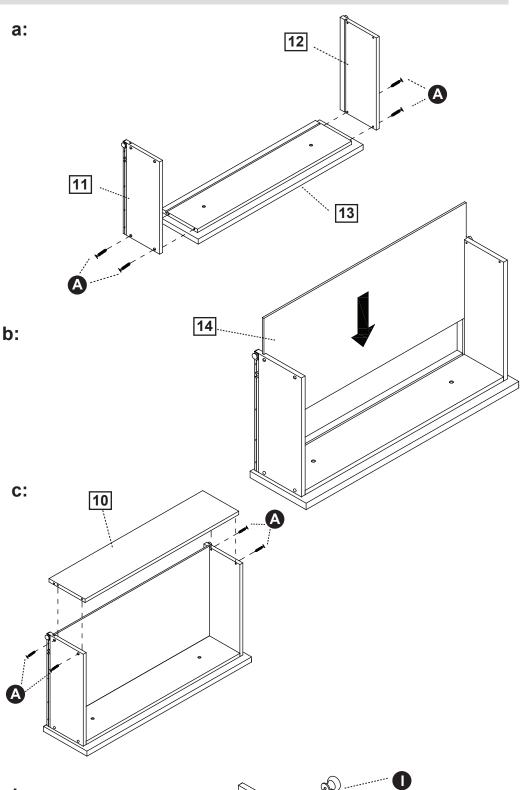


d:

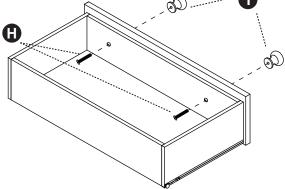

Step 7

Assembly Drawer

Position drawer into the assembled unit.

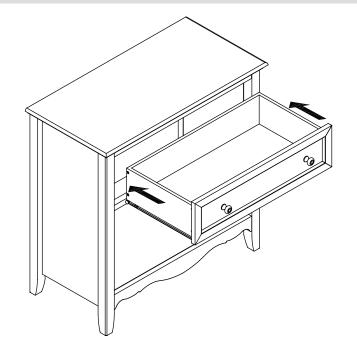


Step 8

Assembly the hinge

Position two hinges 1 into the door 8 Fix through holes using screws 1

Repeat (step 8) for second door .

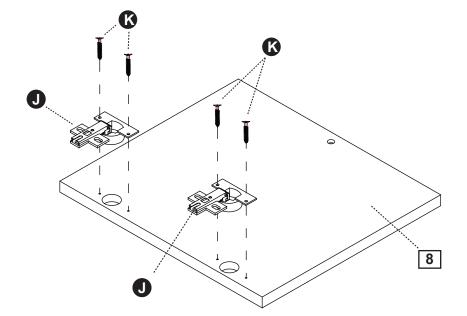

Step 9

Assembly the door

Position two door into the sideboard.


Fix through holes using screws (K)

Step 10

Assembly the handle for doors

Position metal handle into the door.

Fix through holes using bolt **H**

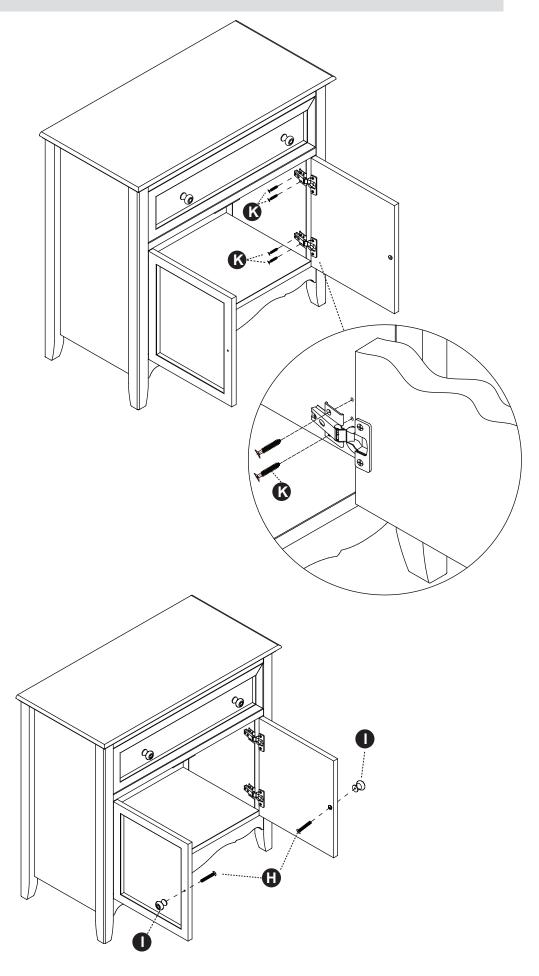



Step 11

Hinge adjustment

a: To move doors up or down: loosen screws shown and move doors to suit.


Once doors aligned, re-tighten screws

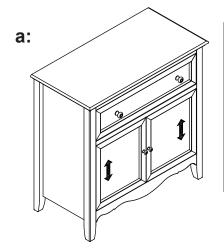


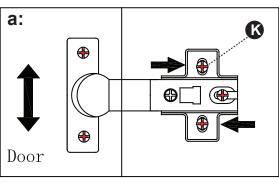

b: To move doors in or out : loosen screws shown and move doors to suit.

Re-tighten screws.

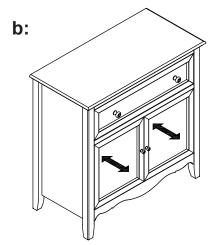

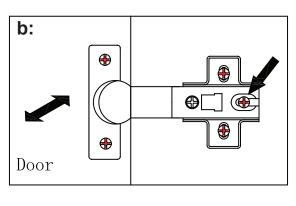


C: To move doors left or right: loosen screws shown and move doors to suit.

Re-tighten screws.





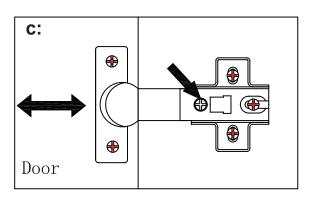

Step 12

Fixing to wall

It is the commended that the sideboard is fixed to the wall

Use screw (12) to fix the plastic Safety bracket 4 onto the back of the back rail.

With help, move sideboar into position.

Mark fixing hole on wall and remove sideboard.

Drill a hole and insert wall plug 13.Use screw to fix the plastic Safety bracket into the wall with wall plug.




Warning:

Before the drilling, check wall for hidden pipes and cables.


Reposition sideboard and fix Safety bracket using drawstring (15).

NO.	Safety Bracket Hardware List		Q'TY
(5)	MIIIIIIII 1	30mm Wood Screw	2
12	MILLIA	20mm Wood Screw	2
L 3	THE STATE OF	Wall plug	2
4	0 🖺 0	Plastic Safety bracket	2
L 5		Drawstring	1

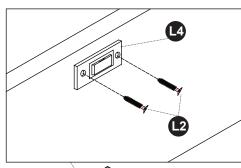

Note: Wall plugs supplied are for solid wall only.

The correct type of fixing must be used for your wall, seek professional advice if in doubt.

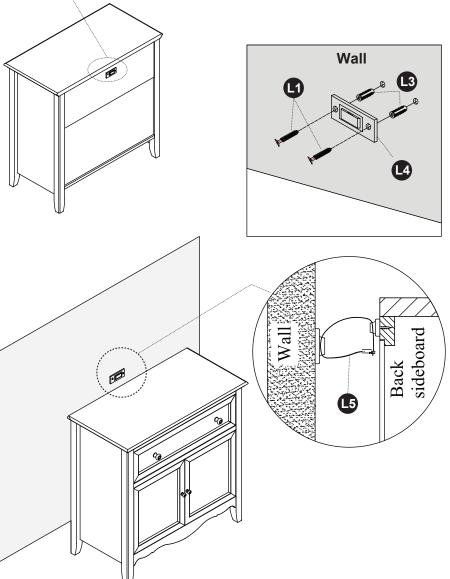

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fxings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sur e that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you ar e unsure.


Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- 2: Ensur e you use the recommended drill bit to match the wall plug and hole size .
- 3: Ensur e you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra car e when drilling high walls, ceilings and ceramic tiles. Ensur e wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensur e wall plugs are well ftted and are a tight ft in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

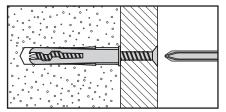


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboar d" wall plug

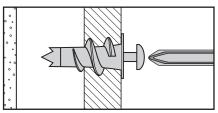


For use when attaching light loads on to plasterboar d partitions.

No.3 "Cavity Fixing " wall plug

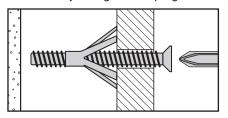


For use with plasterboar d partitions or hollow wooden doors.

No.4 "Cavity Fixing -Heavy Duty " wall plug

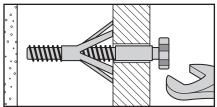


For use when ftting or supporting heavy loads such as shelving, wall cabinets and coat racks.

g vall No.5 "Hammer Fixing " wall plug

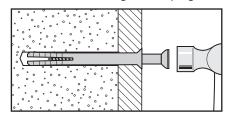

For use with walls stuck with plasterboar d. The hammer fxing allows it to be fxed to the wall rather than the plasterboar d. Always check the fxing is secure to the retaining wall.

No.6 "Shield Anchor " wall plug Heavy loads

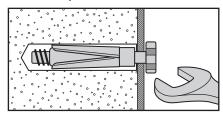

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.



Safety: Always check the ftting and location to ensure your safety in and around the home.

Fitting: From time to time check the ftting to ensure the wall plugs or screws do not become loose.