 


# Romantic TV Unit

Assembly Instructions - Please keep for future reference

607/1758

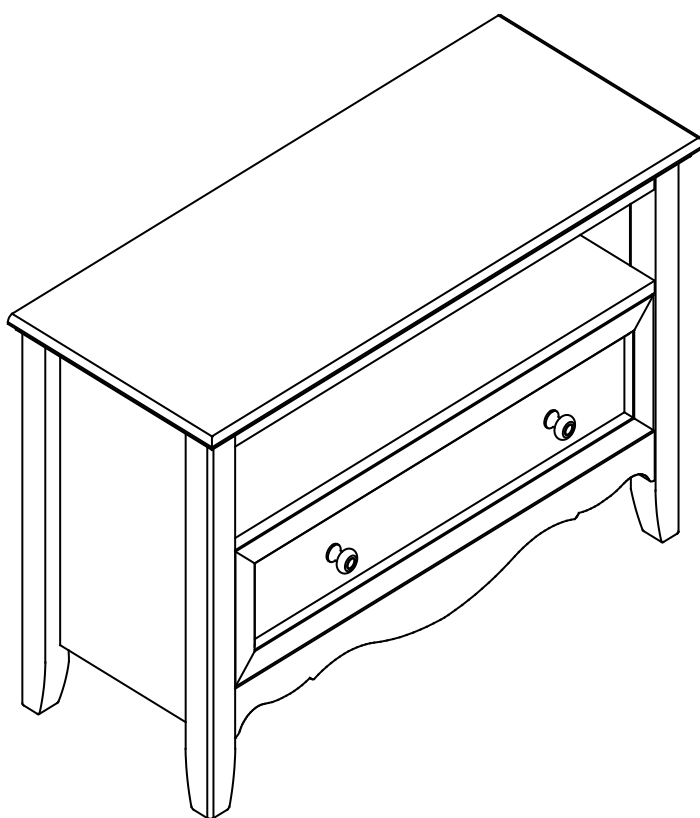

## Dimensions

Width - 80cm  
Depth - 33cm  
Height - 52cm

**Important – Please read these instructions fully before starting assembly**

If you need help or have damaged or missing parts, call the **Customer Helpline:**  
**Argos = 0345 6400800**



# Safety and Care Advice

**Important** – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

 
- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

**Note:** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you have damaged or missing components, call the  
Customer Helpline: Argos = 0345 6400800


Please check you have all the panels listed below

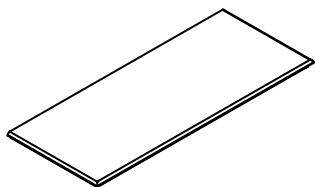


**1** Top panel (80 x 33cm)

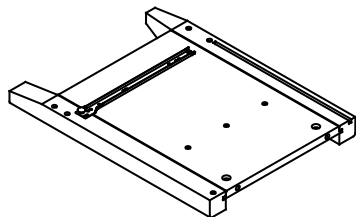 


**3** Right frame side (49.5 x 30.7cm)

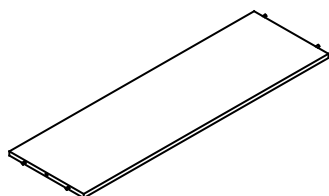 


**5** Shelf panel (68 x 29cm)

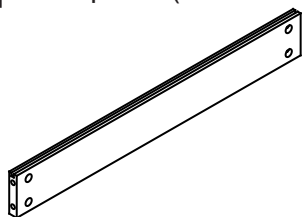 


**7** Back rail (68 x 8.8cm)

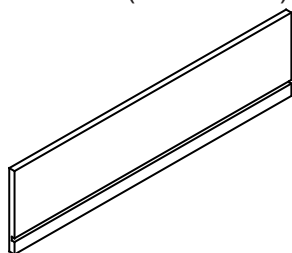 


**9** Back drawer panel (63.1 x 14.8cm)

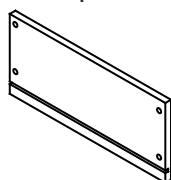 

 
**11** Right side drawer panel (26 x 14.8cm)

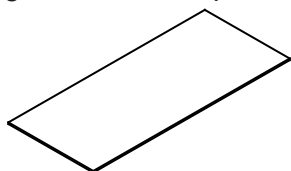

 
**13** Bottom drawer panel (64.3 x 24.8cm)

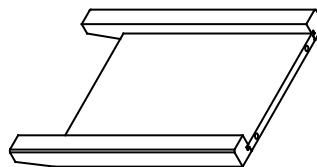


**2** Left frame side (49.5 x 30.7cm)

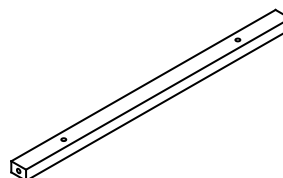 


**4** Top front rail (68 x 3.8cm)

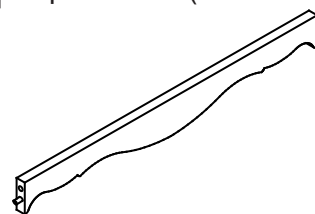 


**6** Bottom front rail (68 x 7.5cm)

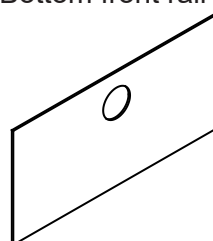 

**8** Back panel (69.2 x 33.3cm)

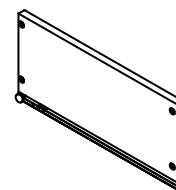 

 **10** Left side drawer panel (26 x 14.8cm)

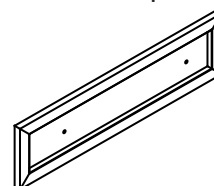

 





 

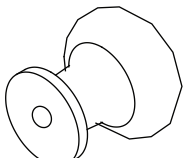 

**12** Drawer front (67.6 x 17.8cm)




# Components - Fittings

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<p><b>A</b></p>  <p>25mm Screw x 8</p>	<p><b>B</b></p>  <p>30mm Bolts x 2</p>	<p><b>C</b></p>  <p>Allen key x 1</p>
<p><b>D</b></p>  <p>16mm Flat washer x 2</p>	<p><b>E</b></p>  <p>10mm Spring washer x 2</p>	<p><b>F</b></p>  <p>35mm Cam bolts x 14</p>
<p><b>G</b></p>  <p>15mm Cam locks x 14</p>	<p><b>H</b></p>  <p>25mm Bolts x 2</p>	<p><b>I</b></p>  <p>30mm Metal handle x 2</p>
<p><b>K</b></p>  <p>20mm Pads x 4</p>		
 
## Tools required



Phillips screwdriver  
(medium & large)




Ruler/tape  
measure



Flatblade screwdriver  
(medium)

## Ruler - Use this ruler to help correctly identify the screws

 

The screws length is measured from the head to the point (30mm screw shown).


# Assembly Instructions
 
## Step 1

### Insert Cam bolts



**a:** Insert Cam bolts **F**  
into top panel **1**  
as shown

**a:**

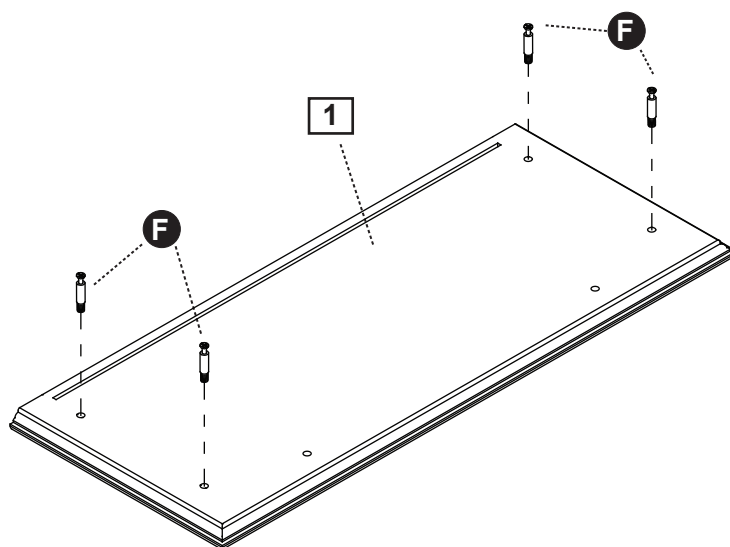

**b:** Insert Cam bolts **F**  
into left frame side **2**  
and right frame  
side **3** as shown

**b:**

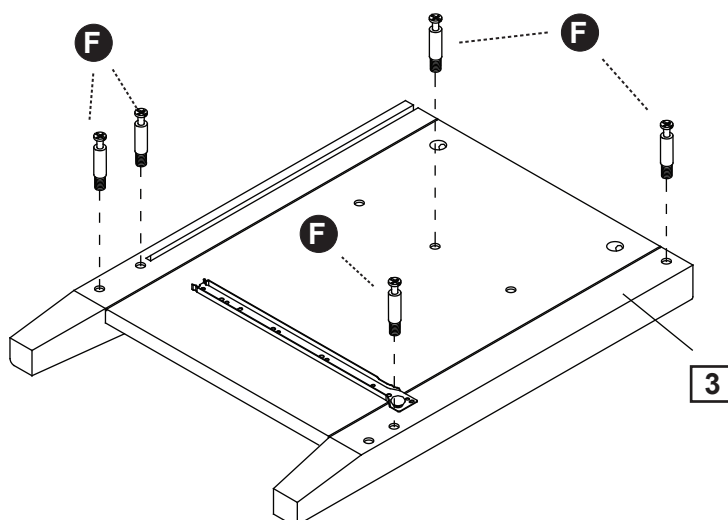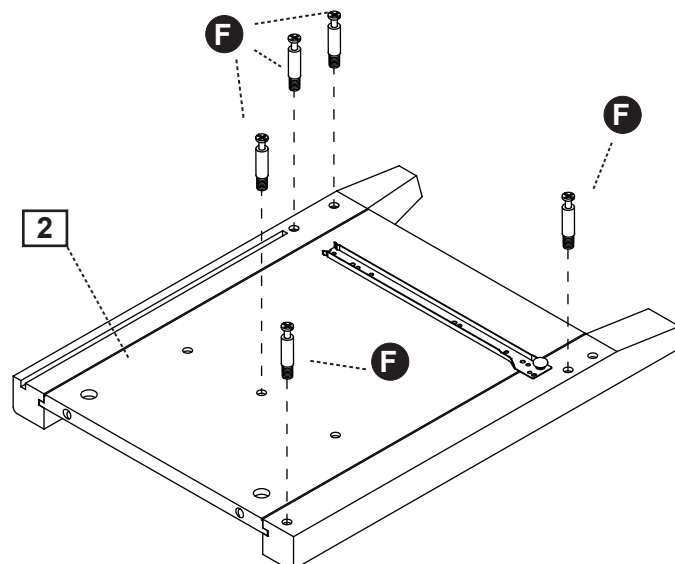  


# Assembly Instructions

## Step 2

### Assembly frame side

 Insert Cam locks **G** into the shelf panel **5** back rail **7** top front rail **4**, & bottom front rail **6**. Press firmly together. Turn the cam lock clockwise with a philipshead screwdriver to lock. Insert back panel **8** into the slot of back rail **7** & frame side **3**.

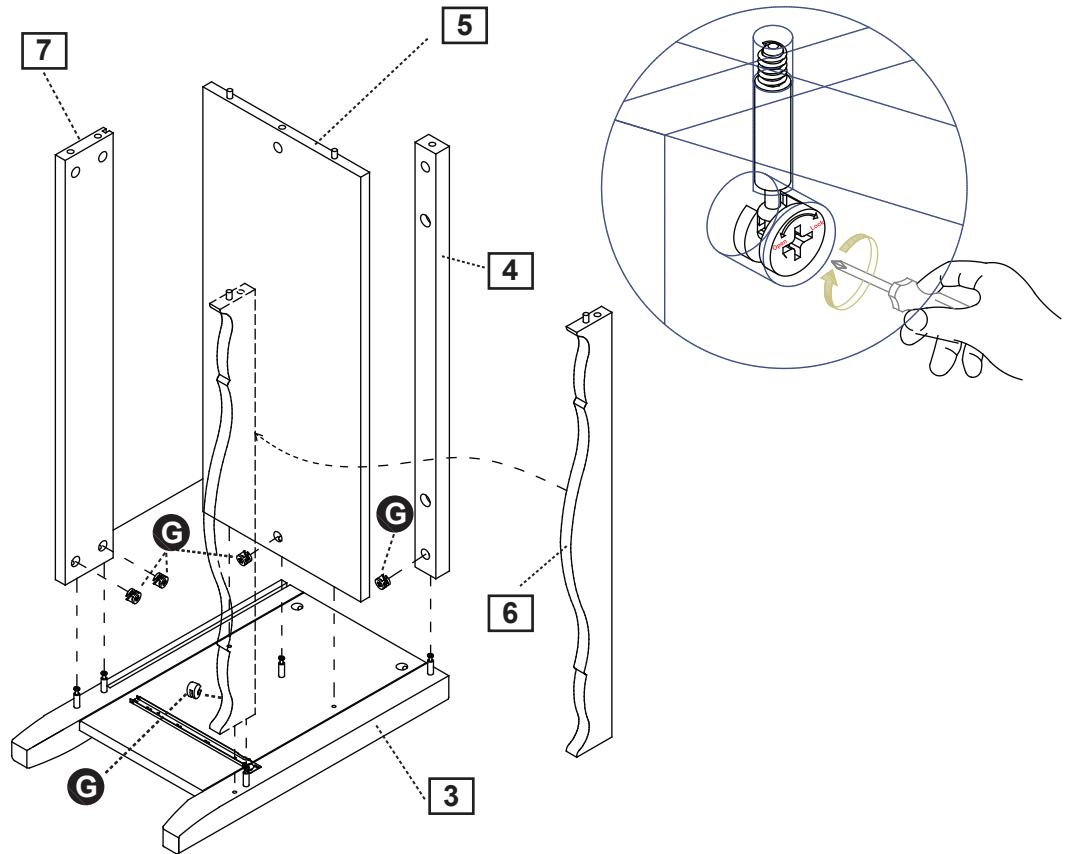


## Step 3

### a: Assembly frame side

Insert Cam locks **G** into the shelf panel **5** back rail **7**, bottom front rail **6** and top front rail **4**. Press firmly together. Turn the cam lock clockwise with a philipshead screwdriver to lock.

### b: Attach the pad

 Remove cover paper on the pad **K**. Attach the pad into under the legs. With help stand the assembled unit upright.

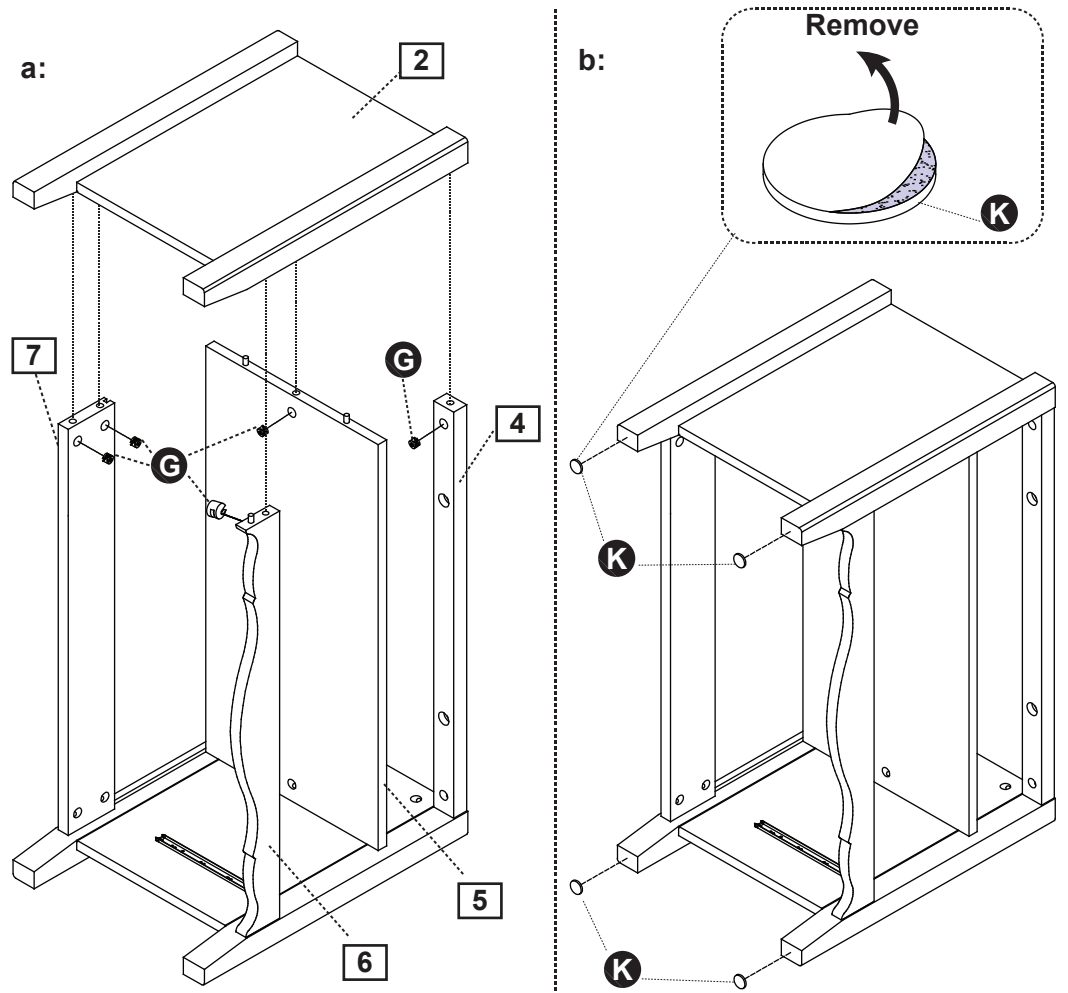


# Assembly Instructions

## Step 3

### Assembly Back panel

 
Insert back panel **8** into the slot of back rail & frame side .

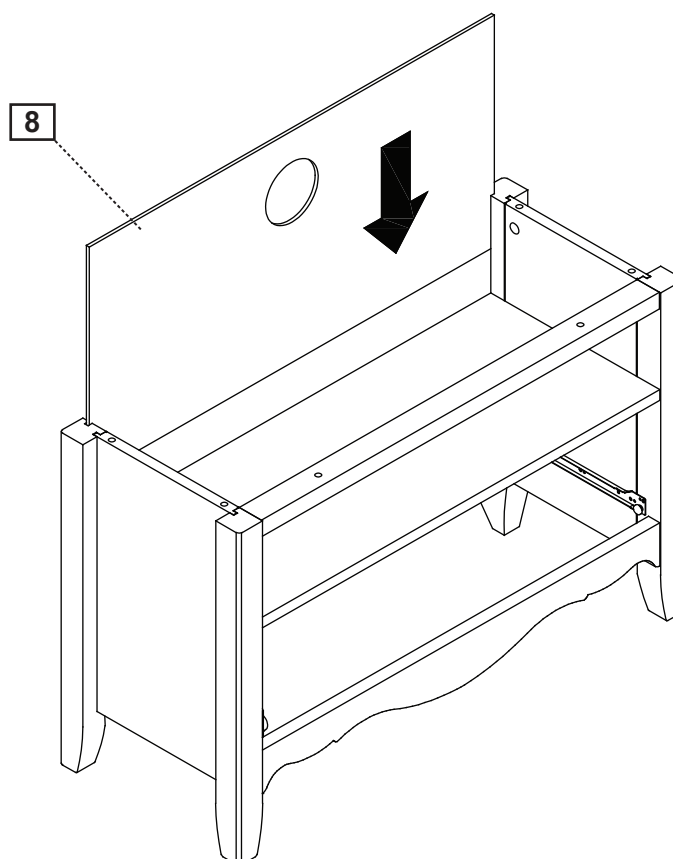

## Step 5

### Assembly top panel

 Insert Cam locks **G** into side panel **2** **3** as shown .Press top panel **1** onto assembly.Turn cam locks to lock . Insert bolts **B** , Spring washer **D** , flat washer **E** , Tighten with supplied allen key **C** . Do not over tighten.

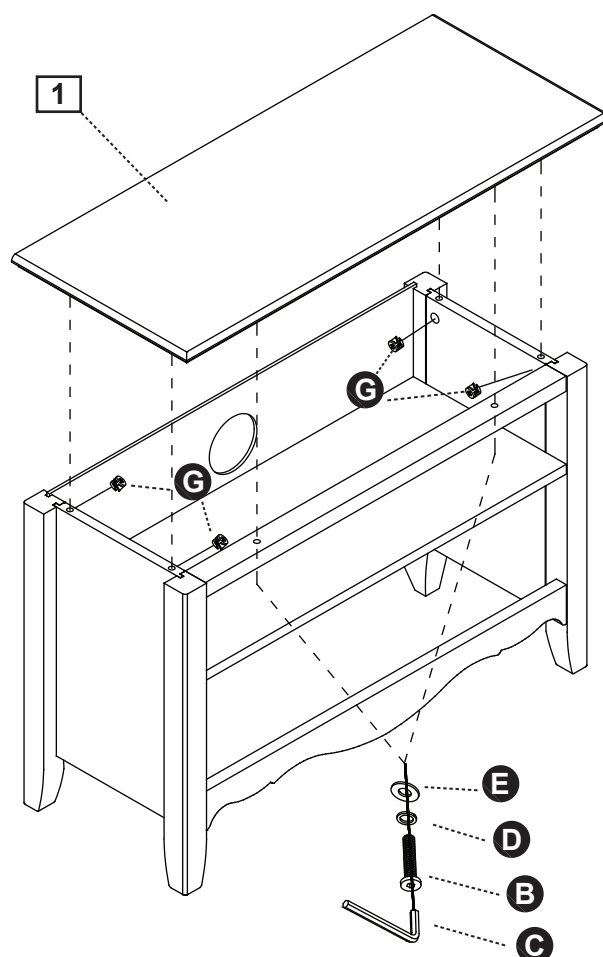


# Assembly Instructions

## Step 6

### Assembly Drawer

 
**a:** Position Left side drawer panel **10**, and right side drawer panel **11** into drawer front **12**. Fix through holes using screw **A**.

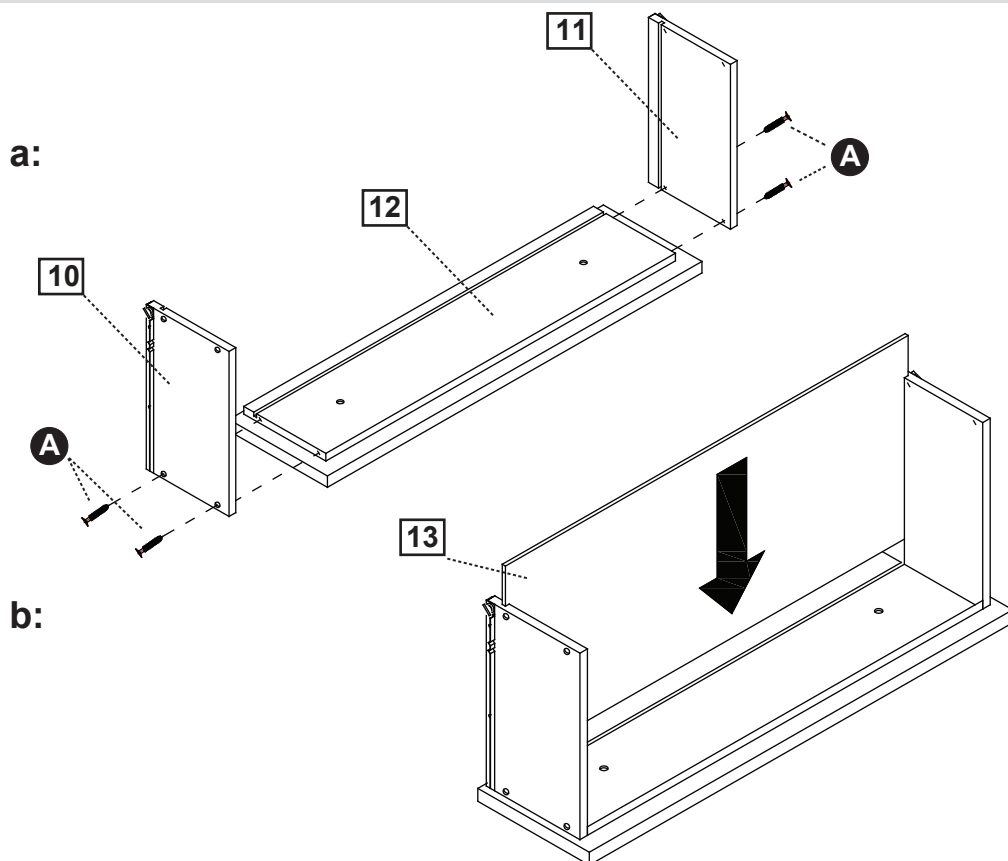

**b:** Insert bottom drawer panel **13** into the slot of side drawer panel and drawer front panel.


**c:** Position back drawer panel **9**.

 Fix through holes using screw **A**.

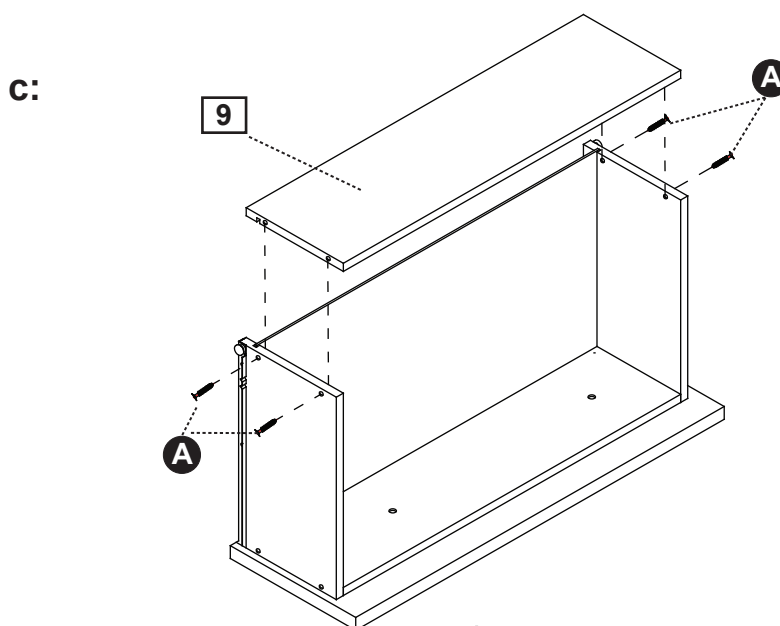

**d:** Position metal handle **I** into top drawer panel.

 Fix through holes using bolt **H**.

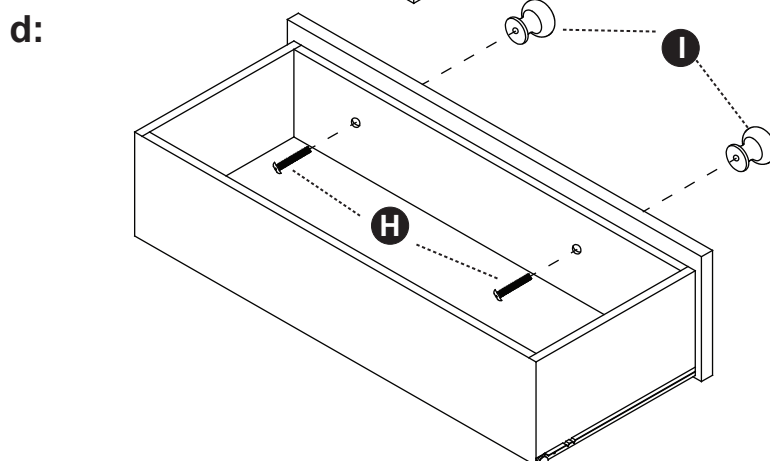



# Assembly Instructions

## Step 7

### Assembly Drawer

Position drawer into the assembled unit .

