 


Kids Canvas And Metal 5 Shelf

Assembly Instructions - Please keep for future reference

607/3141

604/3119

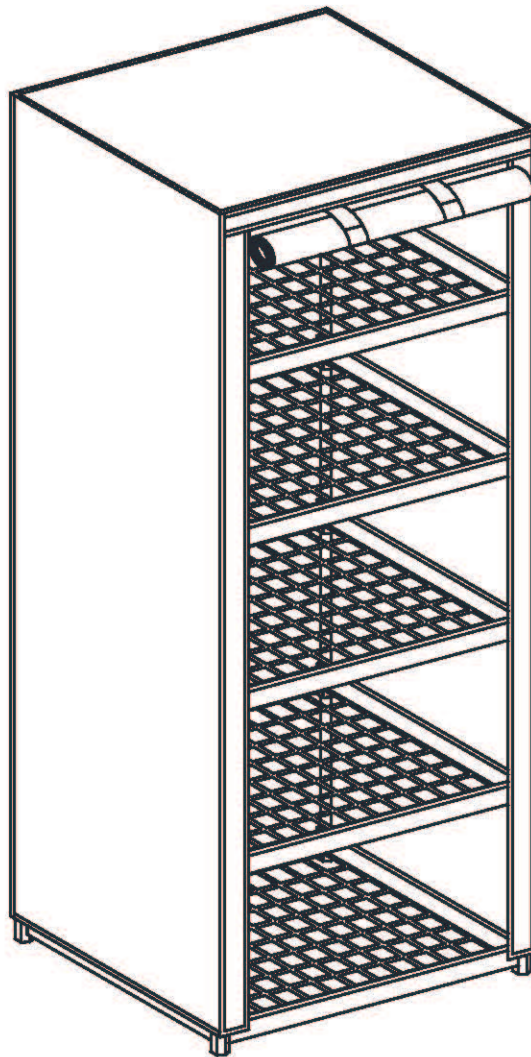

Dimensions

Width - 50cm
Depth - 40cm
Height - 140cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer helpline**: 0345 6400800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting
- Do not stand or put over weight on the parts this could cause damage.

- Assemble the unit as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- If using power tools, please follow the safety instructions supplied with the tools.



- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit.

- Only use hand screwdrivers.
- **Warning:** Before drilling, check the wall for hidden pipes and cables.
- Dispose of all packaging carefully and responsibly.
- **Warning:** Max loading weight Each shelf - 10 kg

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. take to your local authority waste disposal centre.

IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

- Argos Ltd Mk9 2NW
- This product is suitable for children of age 6 or above.
- Assembly of this product must be carried out by competent adult.

Components - Parts

If you need help or have damaged or missing parts, call the **Customer helpline**: 0345 6400800

Please check you have all the parts listed below



 
1 Metal Tube x 20(26.2cm)




2 Metal Tube x 2(49.8cm)



3 Metal Tube x 2(35.8cm)

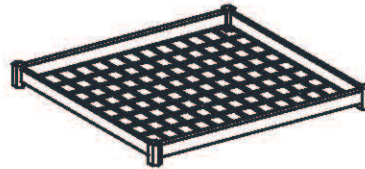

4 Shelf x 5(50x40cm)

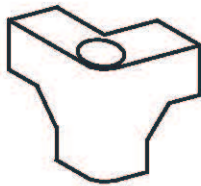 

5 Corner x 4



6 Cover x 1
fabric hook x 1

Components - Fittings

Please check you have all the parts listed below

Note: The quantities below are correct amount to complete the assembly. In some cases more fittings may be supplied than required



Screw x 1



Wall plug (for solid walls only)x1



Washer x 1

Tools required



Tape Measure

 
Assembly Instructions

Step 1

Note: It would be useful to ask someone to help you at this stage.


a: Attach metal tube **1** to shelf **4** as shown in figure.

a

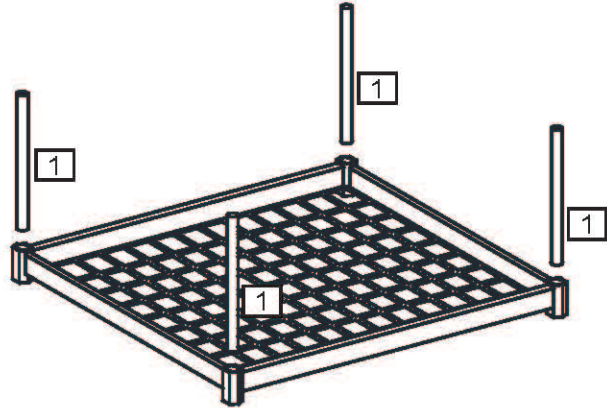

b: Repeat step 1a for the other **4** shelves assembly.

 b

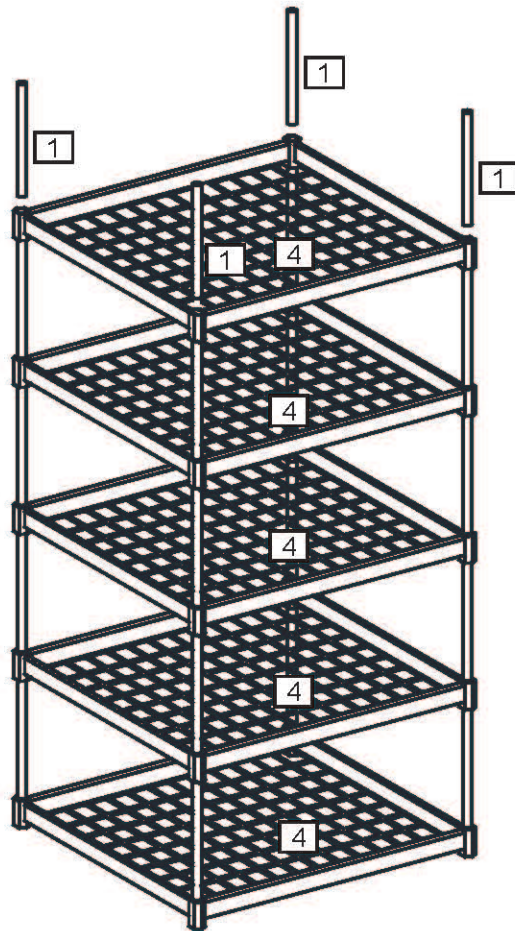


Assembly Instructions

Step 2


a: Attach metal tube **3** and metal tube **2** to corner **5** as shown in figure.

 a

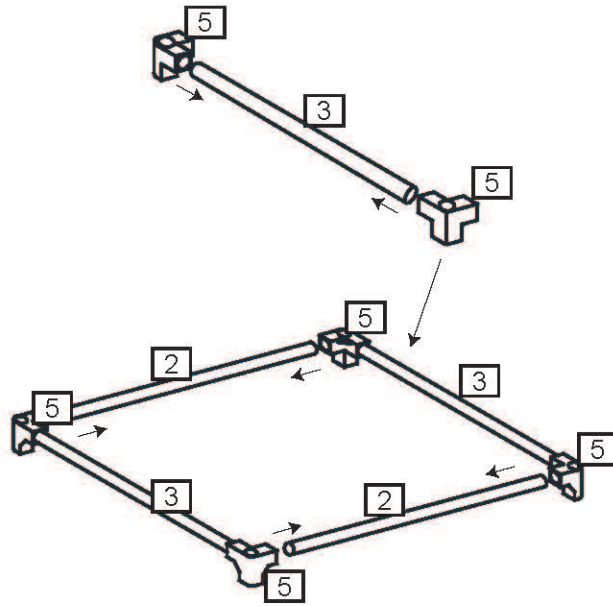

b: Position the top assembly onto metal tube **1** as shown in figure.

 
b

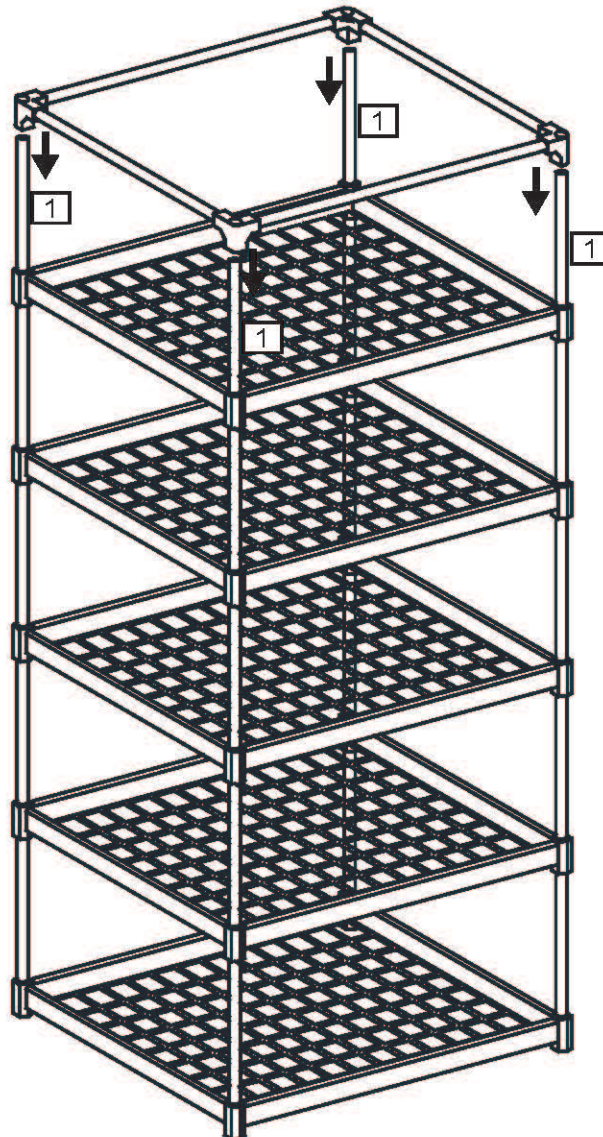


Assembly Instructions

Step 3

Fitting the cover

a: Fitting the cover  into the assembled frame.

 
a

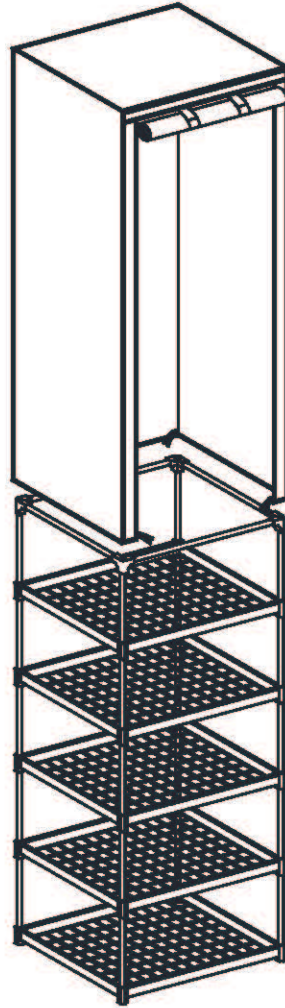

b

b: Evenly slide the cover down to the base. Fasten the ties at the bottom.

 Note: It is recommended that two people fit the cover over the frame.

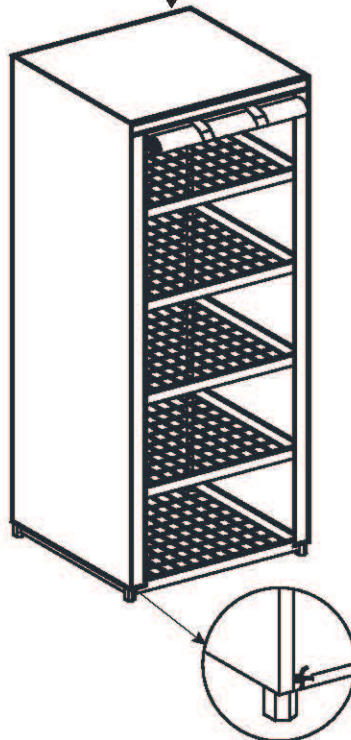

Assembly Instructions

Step 4

Fixing to wall

It is recommended that the wardrobe is fixed to a wall.

Note:

The correct type of fixing must be used for your wall, seek professional advice if doubt.

 
Mark the fixing hole on the wall and remove the wardrobe. Drill a hole and insert a wall plug **B**.



Warning:

Before drilling, check the wall for hidden pipes and cables.

Reposition the wardrobe and fix the wall strap using screw **A**.

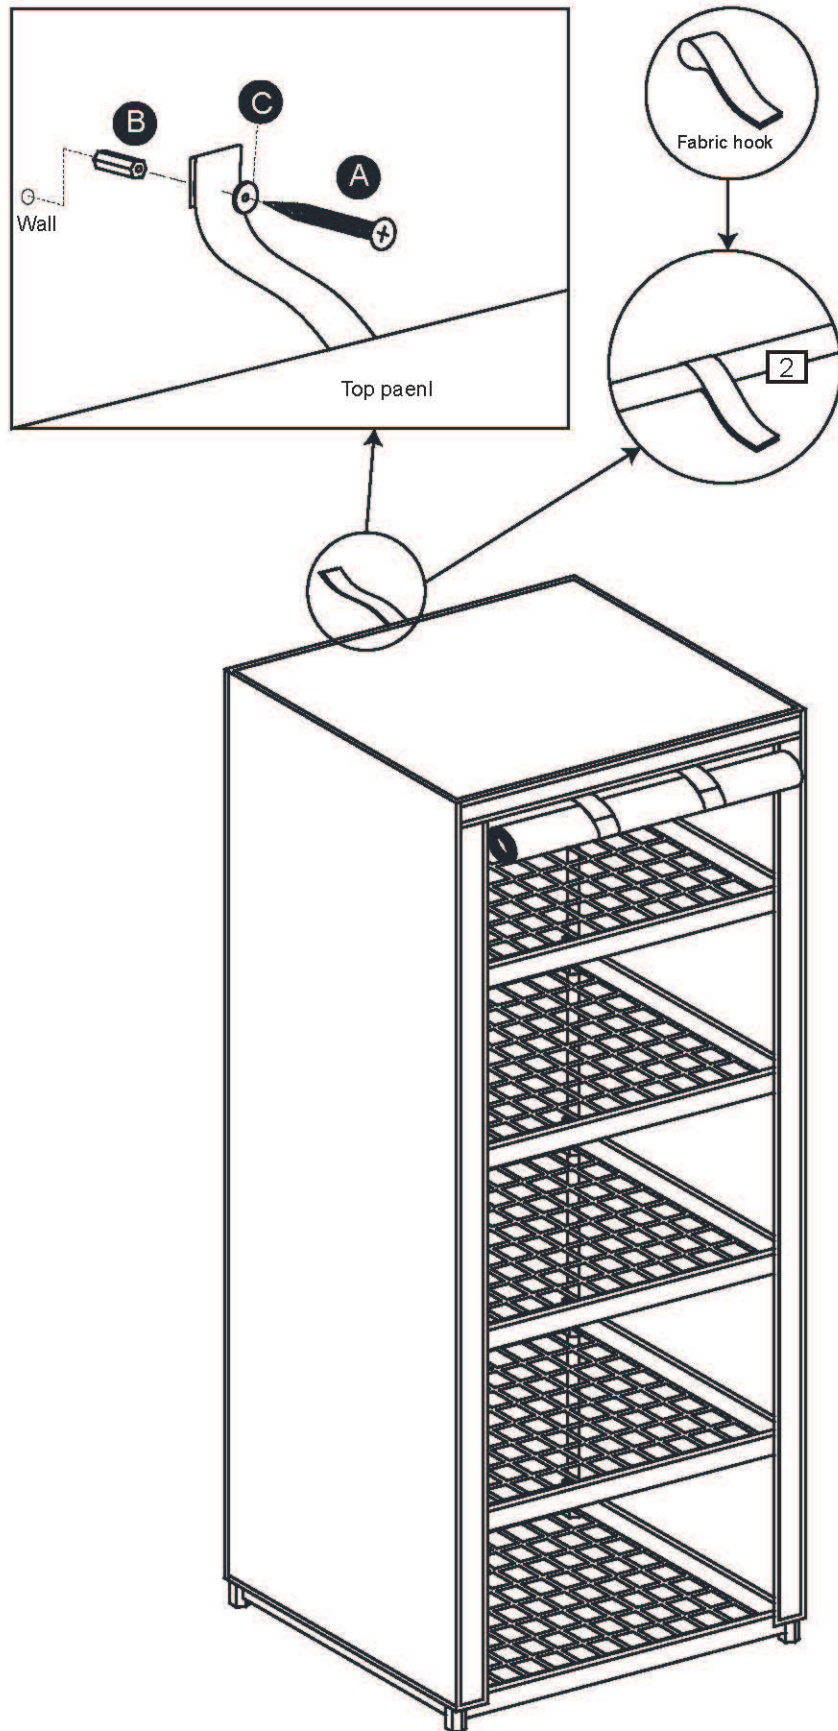

If you need help or have damaged or missing parts, call the **Customer helpline**: 0345 6400800

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

- 1: General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

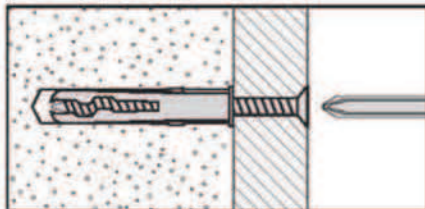


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug

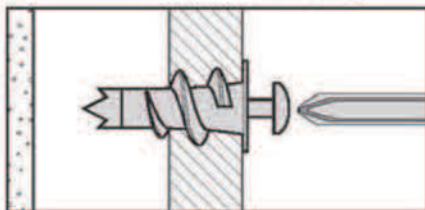


For use when attaching light loads on to plasterboard partitions.

 No.3 "Cavity Fixing" wall plug

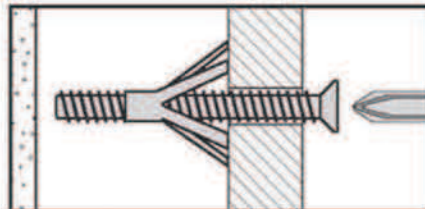


For use with plasterboard partitions or hollow wooden doors.

 No.4 "Cavity Fixing-Heavy Duty" wall plug

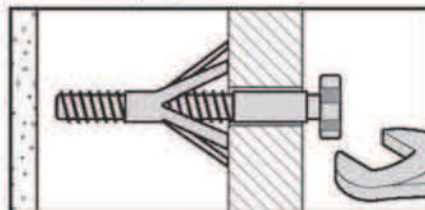


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer Fixing" wall plug

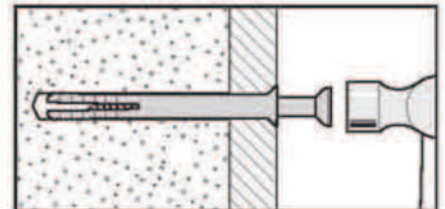

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads

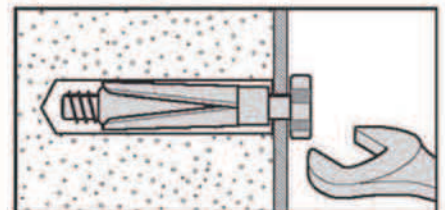

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.