 


Black TV Unit

Assembly Instructions - Please keep for future reference

609/6269

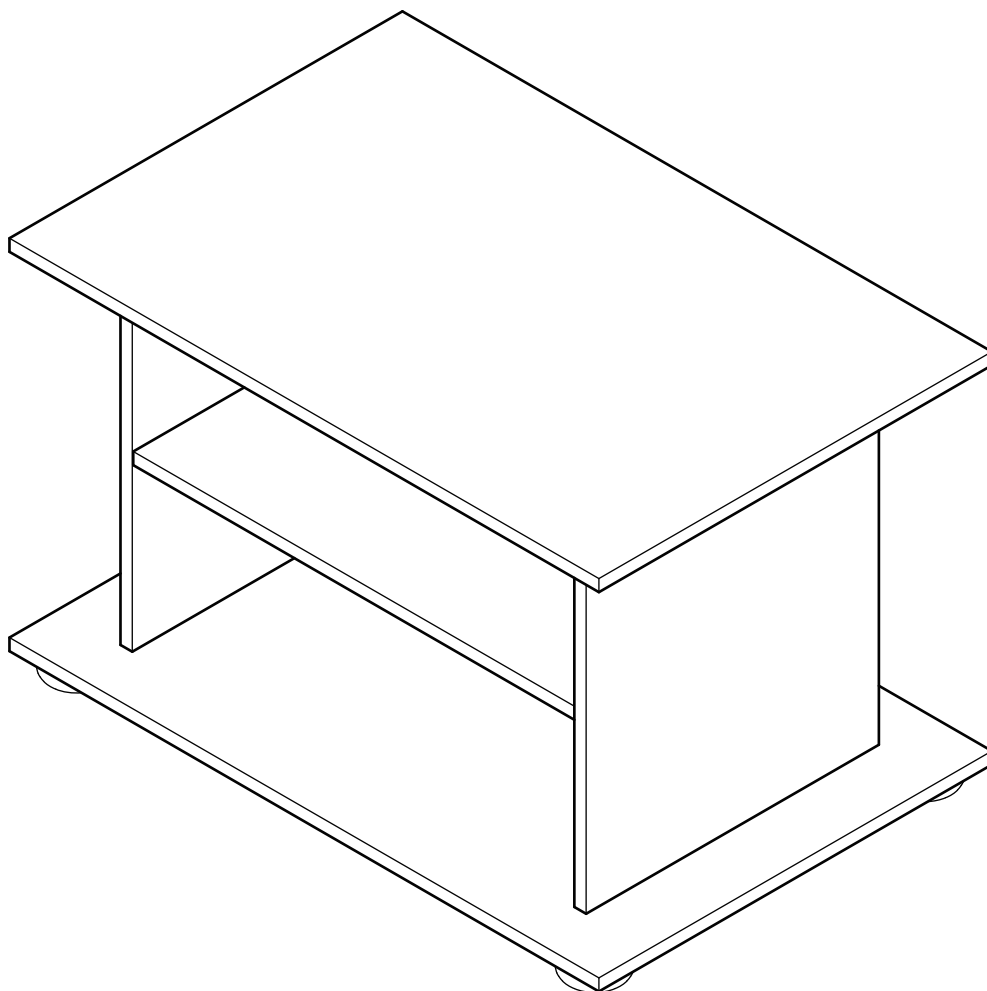

Dimensions

Width - 60.1cm

Depth - 40cm

Height - 38cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws,**

as this could damage the unit.
Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.

 
Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Components - Panels

If you have damaged or missing components,
call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

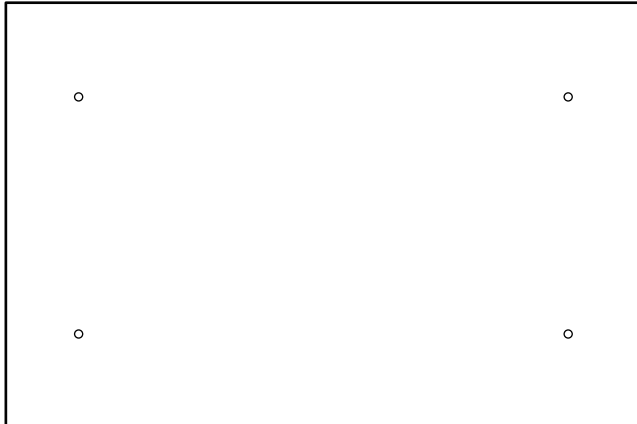


1 Top panel (60 x 40cm)

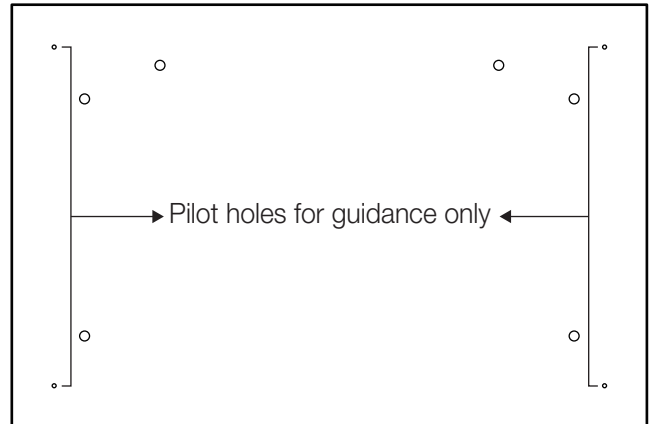 

2 Bottom panel (60 x 40cm)

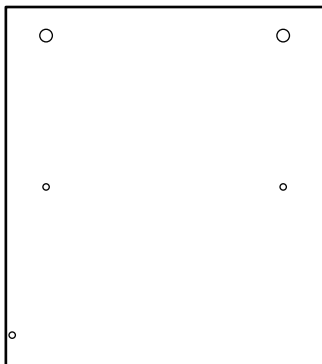 


3 Right side panel
(30 x 34cm)

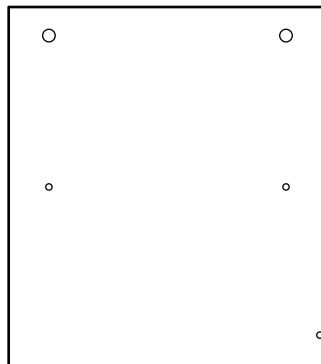 

4 Left side panel
(30 x 34cm)



 5 Shelf (45 x 29.8cm)









6 Back panel (45 x 6cm)

 Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.

A  40mm Screw x 12	B  Screw cover x 6	C  Locking pin x 4
D  Locking nut x 4	E  14mm Screw x 4	F  Foot x 4

Tools required



Phillips screwdriver
(medium & large)

 


Ruler/tape
measure



Bradawl
(or sharp point)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Attaching side panels

Use Screws **A** to fix the Right side panel **3** and Left side panel **4** onto the Shelf **5** and Back panel **6**.

 Use Screw covers **B** to cover the screw heads.

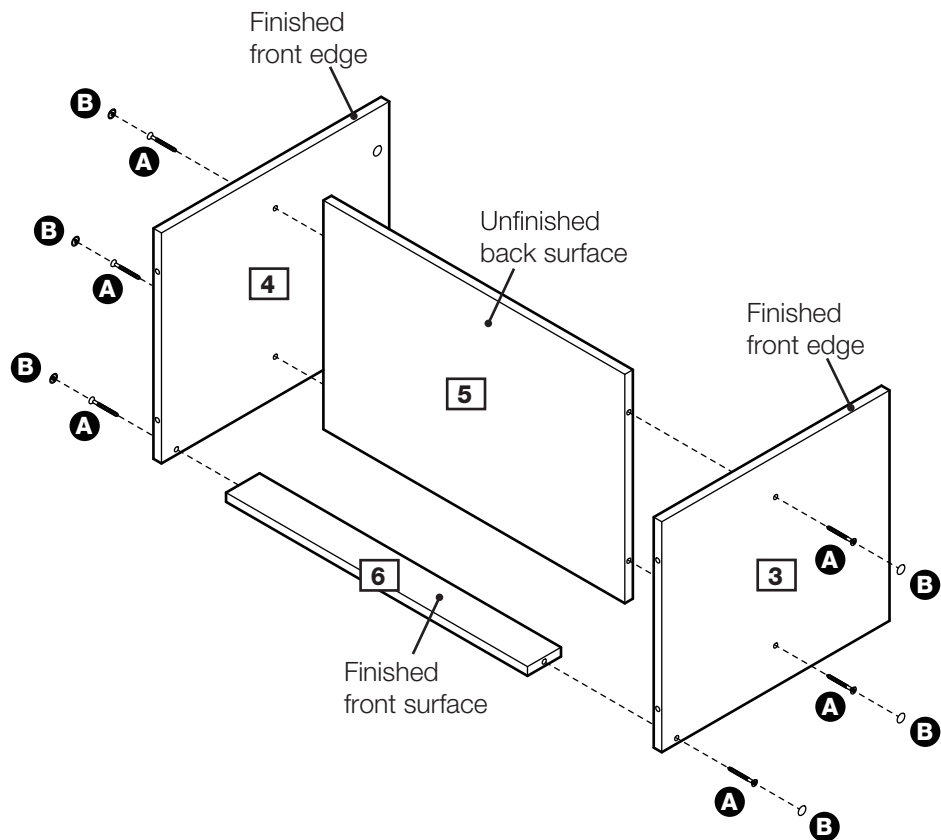

Step 2

 
Attaching top panel

a: Screw Locking pins **C** into the Top panel **1**.

Note: Insert Locking pins as far as shown.

Do not over tighten.

a:

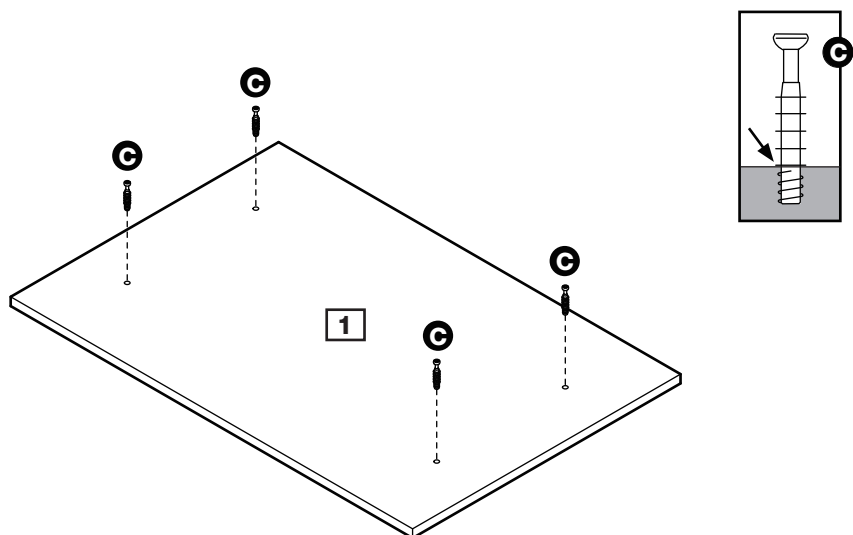


Assembly Instructions

Step 2 - continued

Note: It would be useful to ask someone to help you at this stage.

b: Position unit onto the Top panel **1**.

 
b:

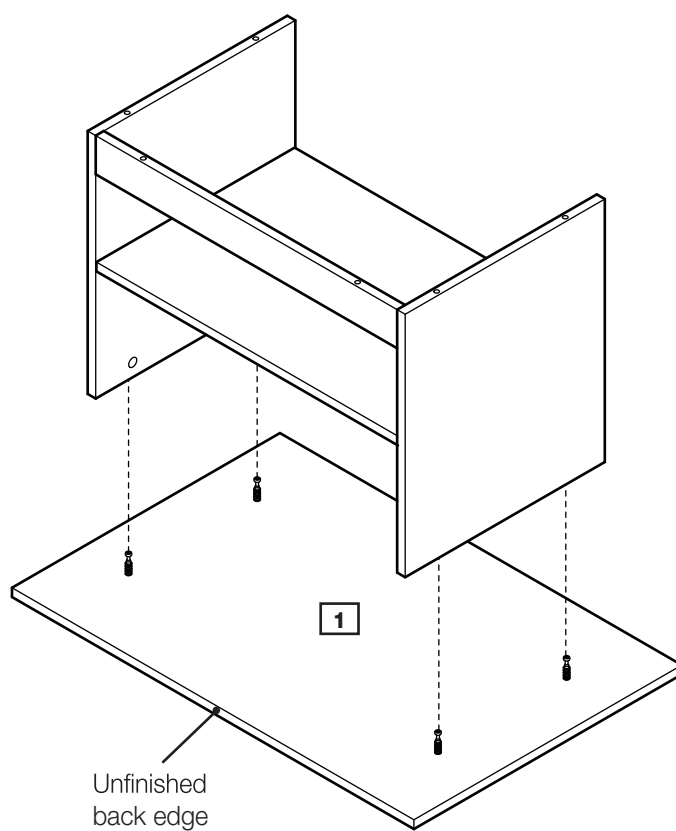

c: Insert Locking nuts **D** into the Right side panel **3** and Left side panel **4**.

Use a screwdriver to turn Locking nuts **D** clockwise to lock.

 c:

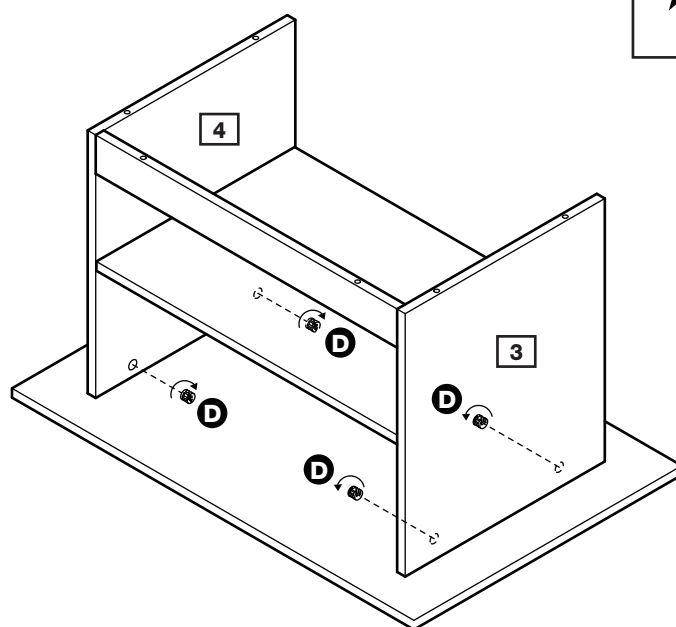


Assembly Instructions

Step 3

Attaching feet

 
Use Screws **E** to fix Feet **F** onto the Bottom panel **2**.

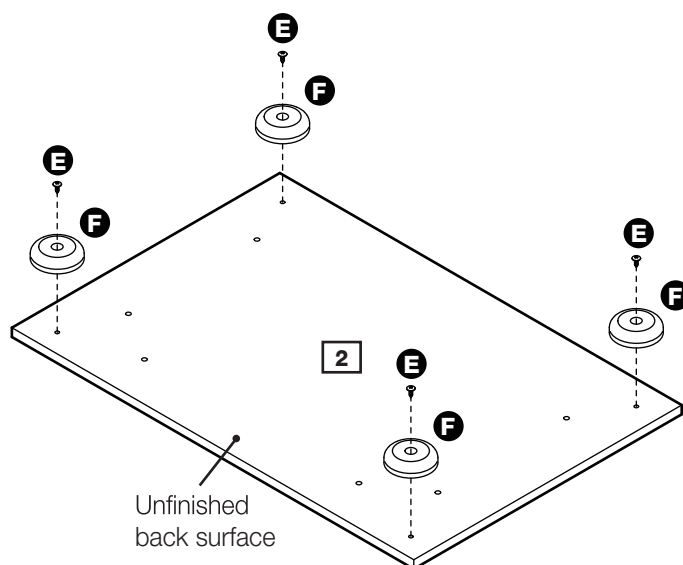

Step 4

Attaching bottom panel

 Use Screws **A** to fix Bottom panel **2** onto the unit.

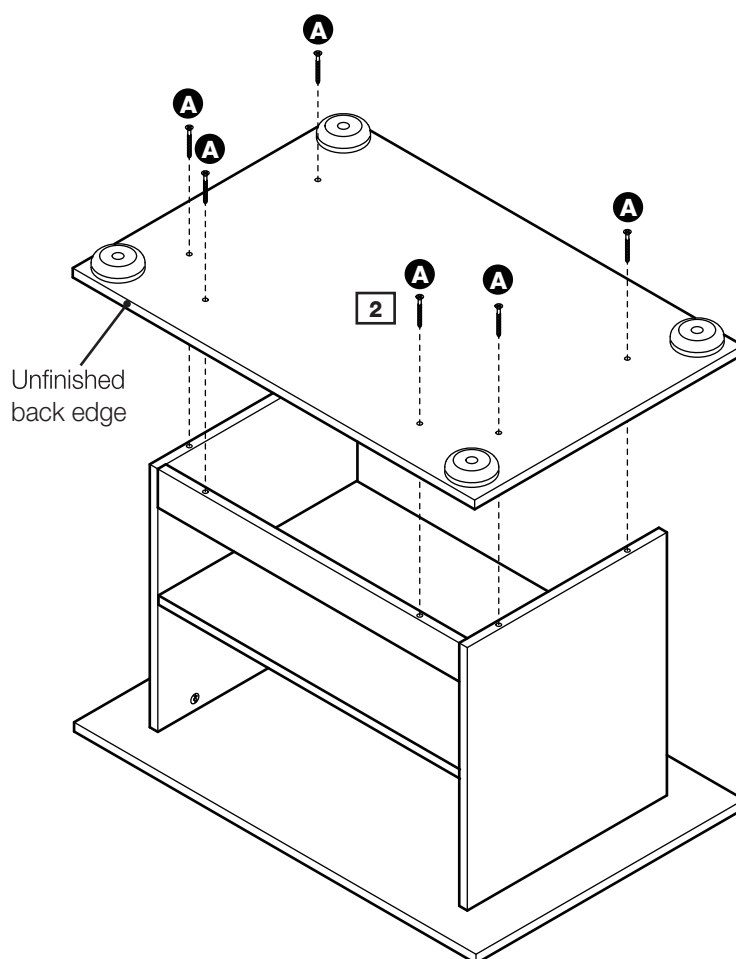

Assembly Instructions

 
Step 5

Finishing the unit

Note: It would be useful to ask someone to help you at this stage.

Carefully stand the TV unit upright.

Place the TV unit in the intended position.

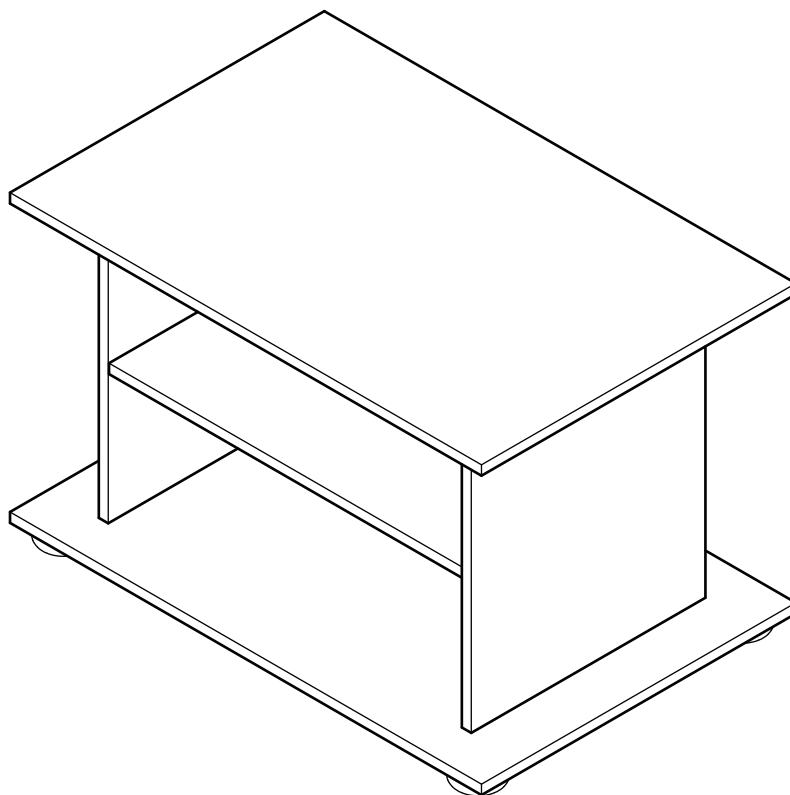

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**