 


Space Saver Extendable TV Unit

Assembly Instructions - Please keep for future reference

6166560

hygena

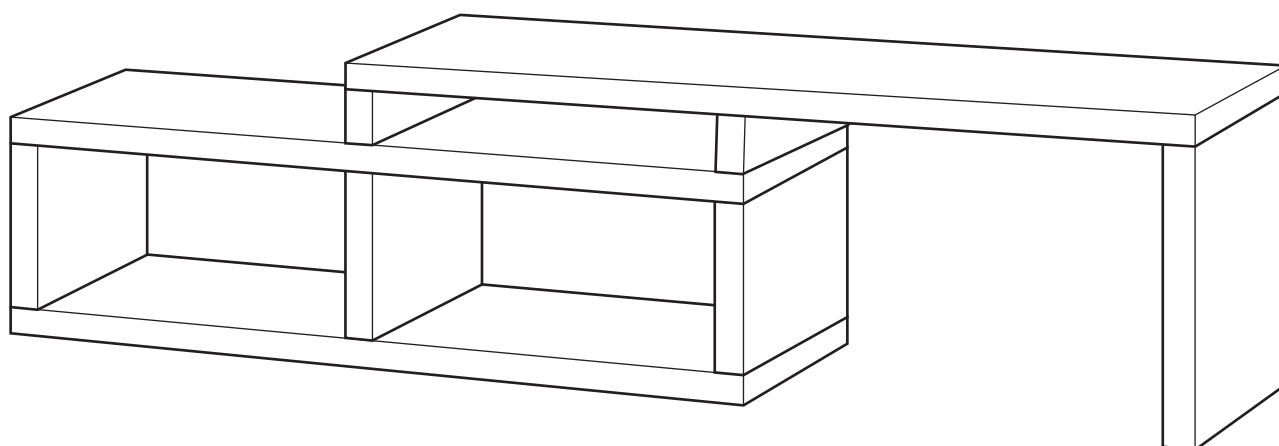

Dimensions

Width - 120-228cm

Depth - 39cm

Height - 46cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- Unit weight: 22.1 kgs.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

- Do not stand on the product.

- Always lift the product when moving it around. Never drag.

- This product should not be discarded with household

waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

- Regularly check and ensure that all bolts and fittings are tightened properly.

 
Components - Parts

If you have damaged or missing components, call the
Customer Helpline: Argos = 0345 640 0800


Please check you have all the parts listed below




1 Top Panel
(120 x 39 x 4cm)

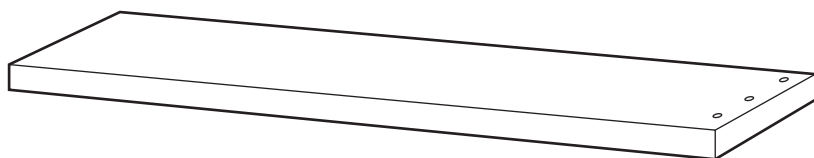


2 Mid Panel
(116 x 39 x 4cm)

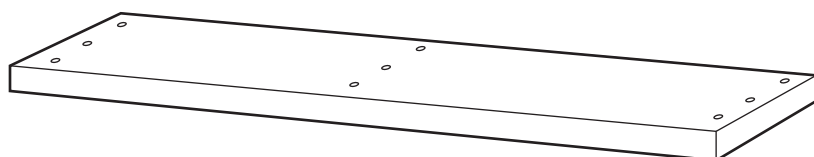 


3 Bottom Panel
(116 x 39 x 4cm)

 

4 Short Side Panel x 2
(18 x 39 x 4cm)

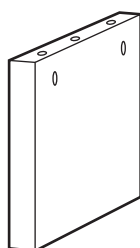 

5 Medium Side Panel x 3
(25 x 39 x 4cm)

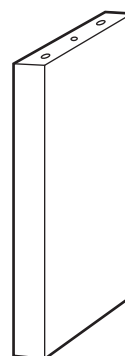 


6 Long Side Panel
(41 x 39 x 4cm)

Components - Fittings

Please check you have all the fittings listed below

 Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.




M7 x 70mm Bolt x 8



Adhesive pad x 6



 
Adhesive cover x 12



Cam bolt x 10




 Cam lock x 10



Wood dowel x 9

 Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Place the top panel **1**, mid panel **2** and bottom panel **3** on a flat protected surface.

 
a: Attaching cam bolts

Insert cam bolts **D** into holes on the top panel **1** and mid panel **2** as shown.



b: Attaching wood dowels

Insert wood dowels **F** into holes on the top panel **1**, mid panel **2** and bottom panel **3** as shown.

a:

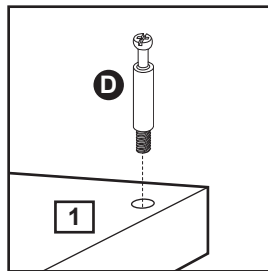

b:

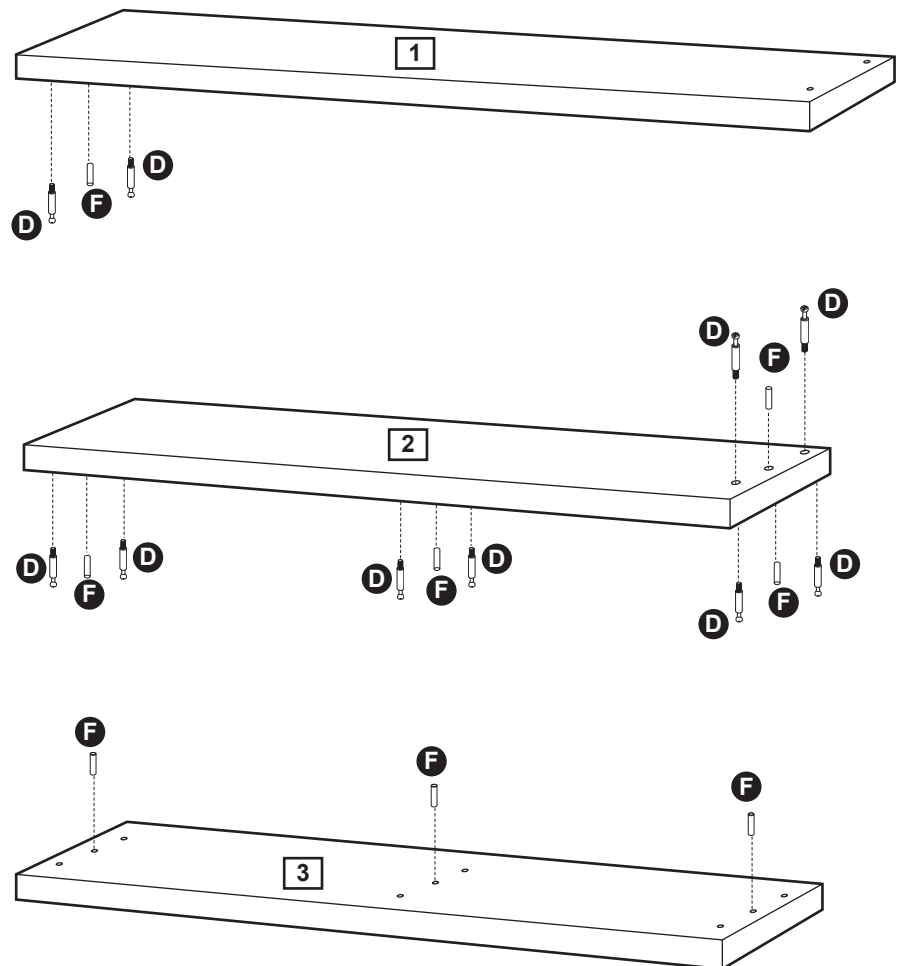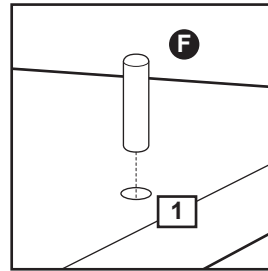  

Assembly Instructions

Step 2

Assembling top panel

 
a: Insert cam locks **E** into holes on the short side panel **4** as shown.

b: Attach the top panel **1** to short side panel **4** by aligning the cam bolts **D** and dowels **F** into holes as shown. Make sure the arrow on the cam locks **E** are pointing towards the cam bolts to be able to properly assemble the panels.


c: Use a crosshead screwdriver to turn the cam locks **E** clockwise to lock.

d: Attach the top panel **1** to long side panel **6** by inserting the dowel **F** into hole as shown. Then fix through holes using bolts **A** and tighten with a crosshead screwdriver.



a:

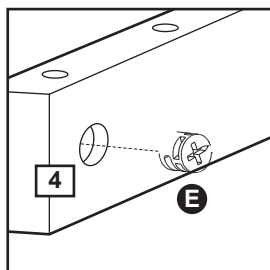


b:

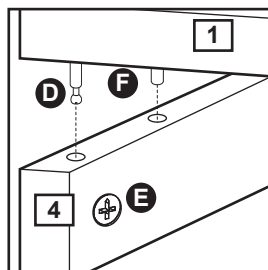 

c:

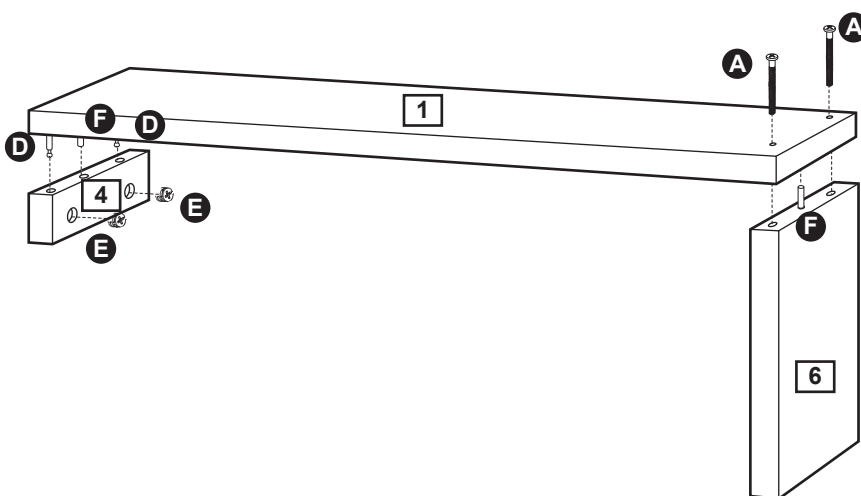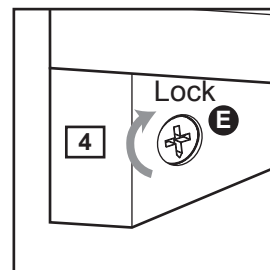  

d:

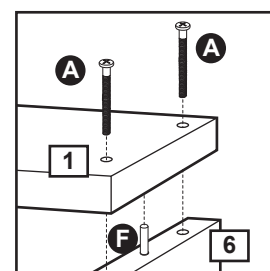 

Assembly Instructions

Step 3

 
Assembling mid panel

a: Insert cam locks **E** into holes on the medium side panels **5** as shown.


b: Attach the mid panel **2** to medium side panels **5** by aligning the cam bolts **D** and dowels **F** into holes as shown. Make sure the arrow on the cam locks **E** are pointing towards the cam bolts to be able to properly assemble the panels.

c: Use a crosshead screwdriver to turn the cam locks **E** clockwise to lock.



a:

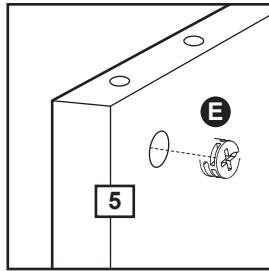

b:

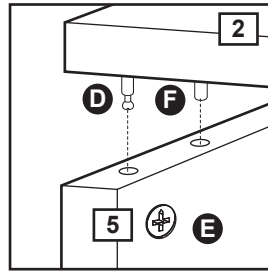 



c:

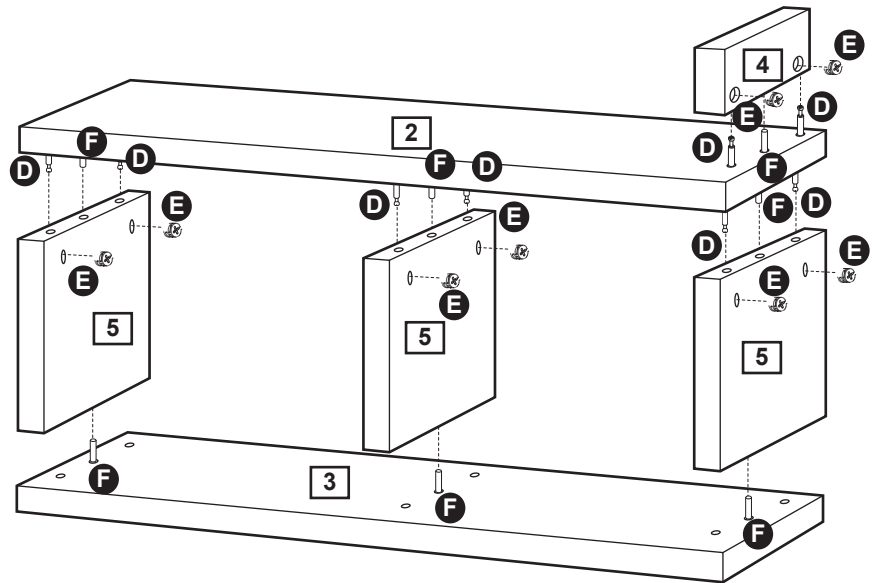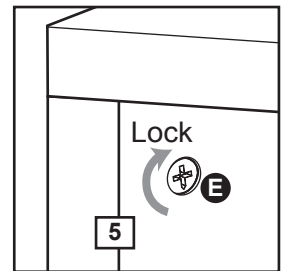  

Step 4

Assembling bottom panel

  Attach the bottom panel **3** to medium side panels **5** by inserting the dowels **F** into hole as shown. Then fix through holes using bolts **A** and tighten with a crosshead screwdriver.

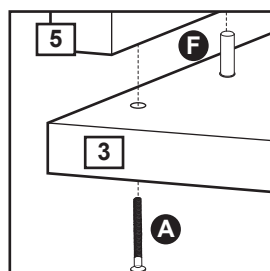
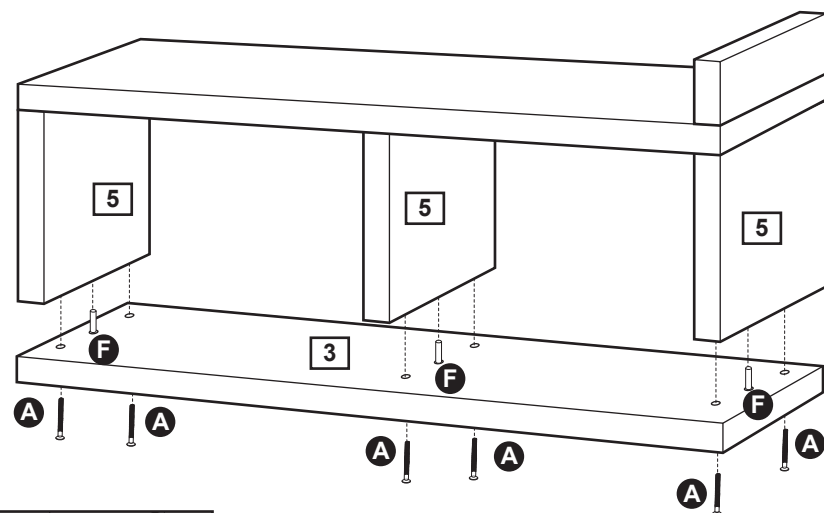


Assembly Instructions

Step 5



a: Attaching adhesive pads

  Remove backing of adhesive pads **B** then stick it onto the short side panels **4** and long side panel **6** as shown.

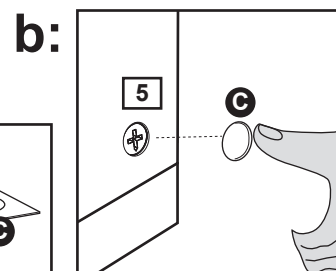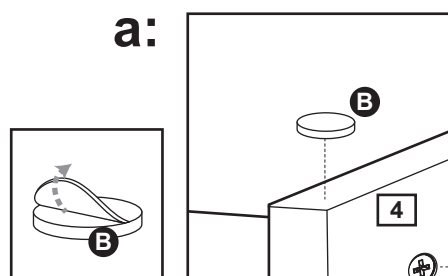

b: Attaching adhesive covers

  Remove backing of adhesive covers **C** then stick it onto the short side panels **4** and medium side panels **5** as shown.

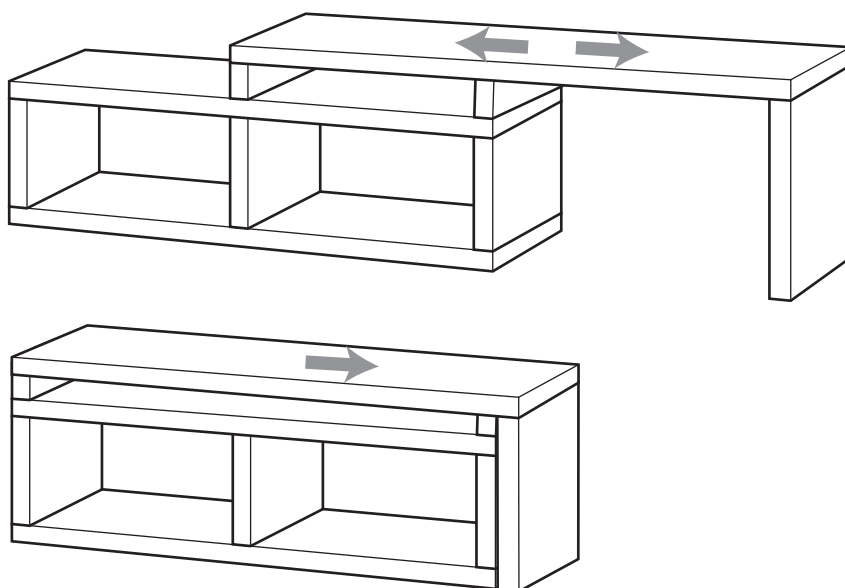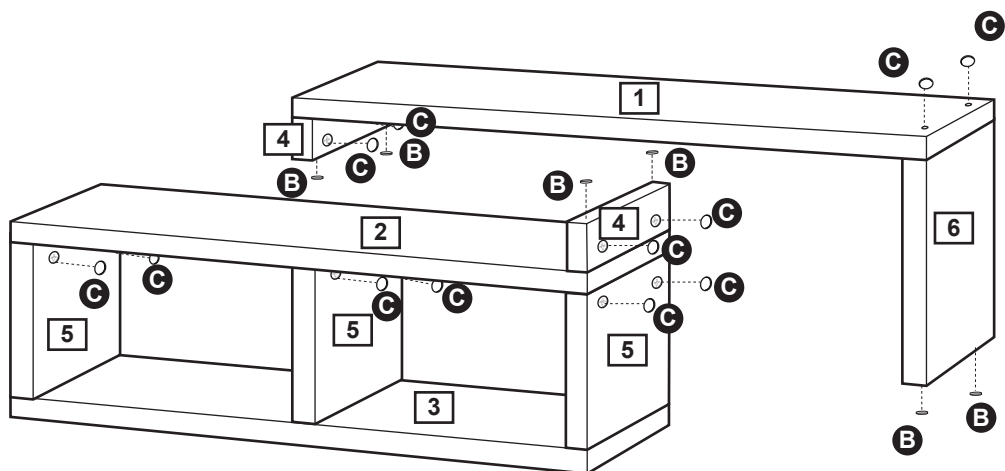

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800