 


Storage Cupboard

Assembly Instructions - Please keep for future reference

617/3113

617/3481

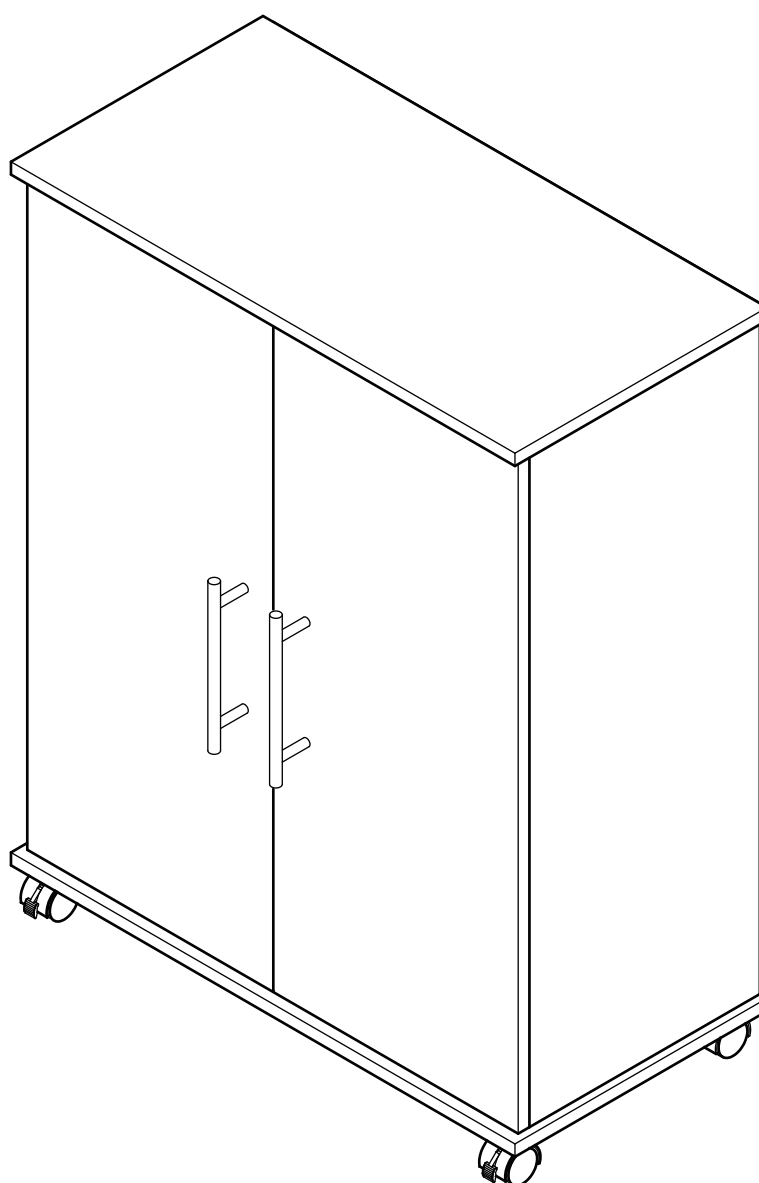

Dimensions

Width - 70.1cm

Depth - 35cm

Height - 86.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

 


Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not use this item if any components are missing or damaged.

- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

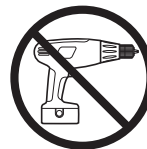

- We do not recommend the use of power drill/drivers **for inserting screws**,

as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.

Care and maintenance

 
- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

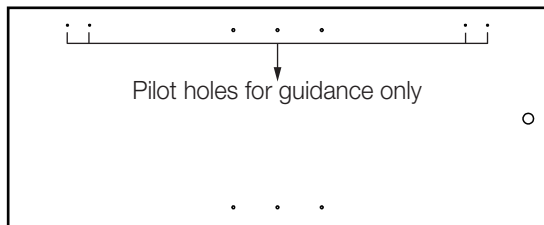

1 Left side panel (78 x 32cm)

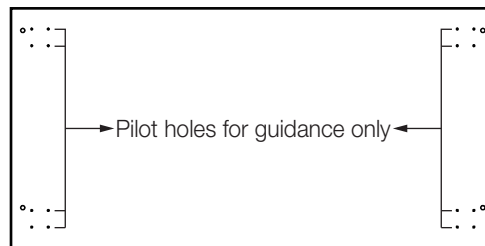

5 Bottom panel (70 x 34.6cm)

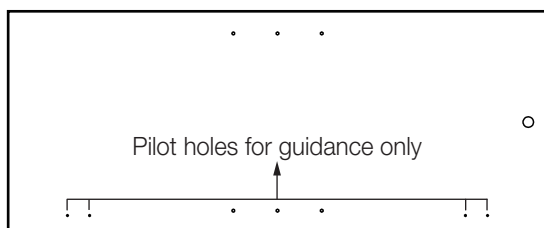 

2 Right side panel (78 x 32cm)



 
6 Shelf (65 x 31.9cm)



3 Top panel (70 x 34.6cm)



7 Back panel (80.7 x 67.6cm)

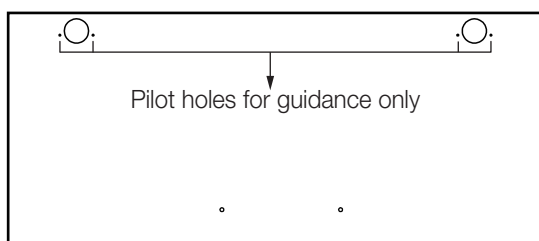




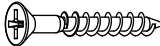












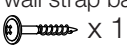
4 Door panel x 2 (77.4 x 33.8cm)

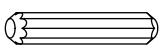


Components - Fittings

Please check you have all the fittings listed below

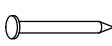
Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.

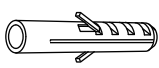A  (This screw is included in the door hinge bag) 15mm Screw x 16	B  Door hinge x 4	C  14mm Screw x 17
D  30mm Screw x 4	E  50mm Screw x 4	F  39mm Locking pin x 2
G  30mm Dowel x 4	H  15mm Locking nut x 2	I  Shelf support x 4
J  Support cover x 4	K  Handle x 2	L  Nail x 20
M  Front castor x 2	N  Castor x 2	O  Wall plug x 1
P  (This screw is included in the wall strap bag) Wall strap x 1  x 1		

 Tools required



Phillips screwdriver
(medium & large)

 


Flatblade screwdriver
(medium)



Bradawl
(or sharp point)



 Small
hammer




Ruler/tape
measure



Eye protection
(when using a
hammer or glue)

 Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Attaching hinges

Insert Dowels **G** into the Left side panel **1** and Right side panel **2**.

 Use Screws **A** to fix the Door hinges **B** 'back plates' onto the Left side panel **1** and Right side panel **2**.

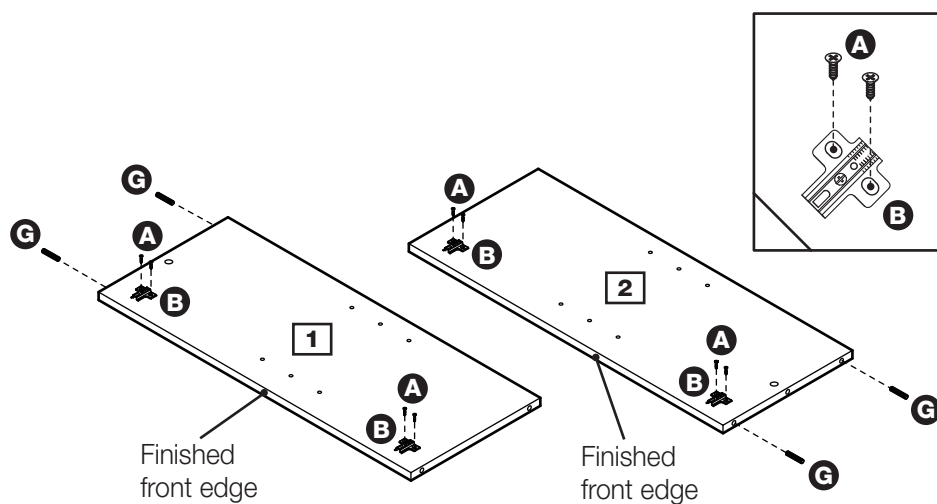

Step 2

 
Attaching top panel

a: Screw Locking pins **F** into the Top panel **3**.

Note: Insert Locking pins as far as shown.

Do not over tighten.

a:

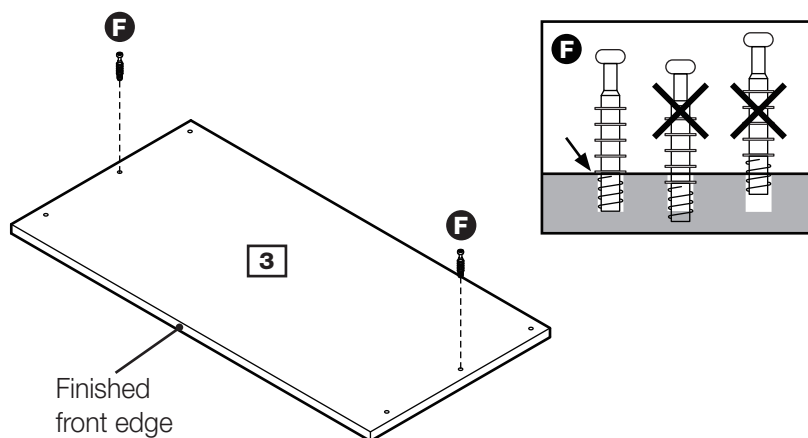


b: Carefully place the Top panel **3** onto the unit.

Insert 2 Locking nuts **H** into the Left side panel **1** and Right side panel **2**.

Use a screwdriver to turn Locking nuts **H** clockwise to lock.

 b:

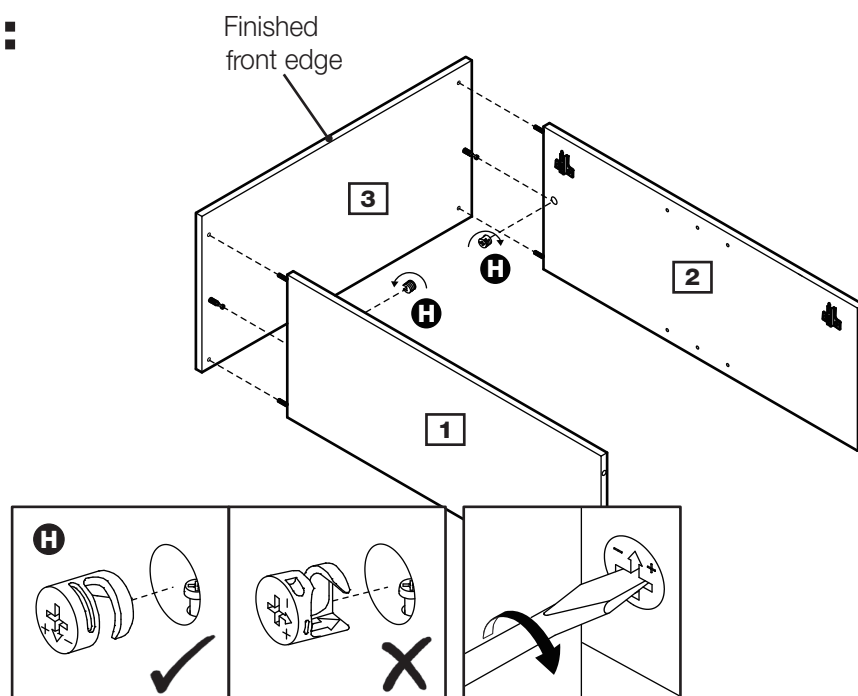


Assembly Instructions

Step 3

Attaching bottom panel

 Use Screws **E** to fix the Bottom panel **5** onto the unit.

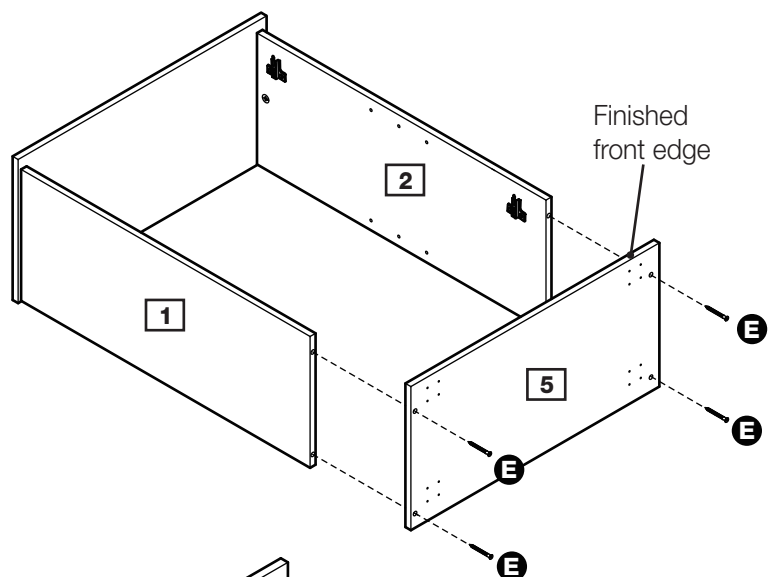


Step 4

Fixing castors

Use Screws **C** to fix the Front castors **M** and Castors **N** onto the unit.

 Note: The Front castors **M** feature a locking arm. We recommend you lock the castors when you have finally positioned the unit in place.

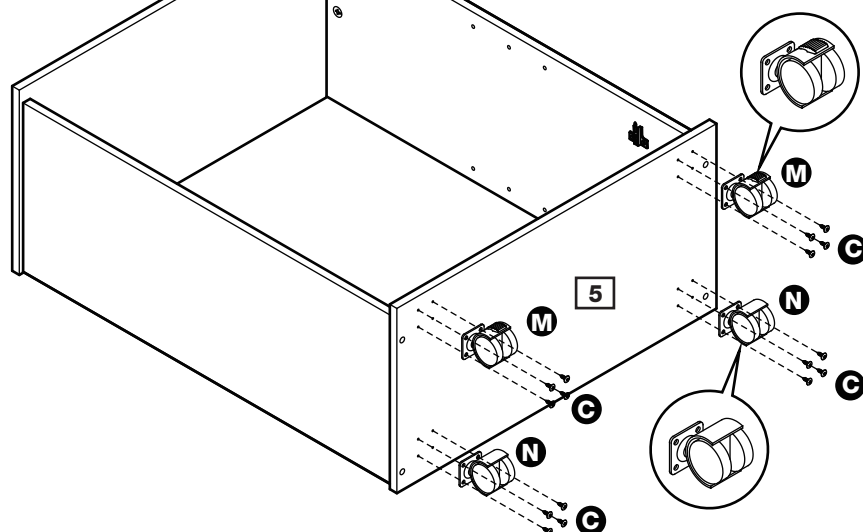

Step 5

 
Fixing back panel

Use Nails **L** to fix the Back panel **7** onto the unit.



Important:

The cabinet **MUST** be 'square' when the back is attached.

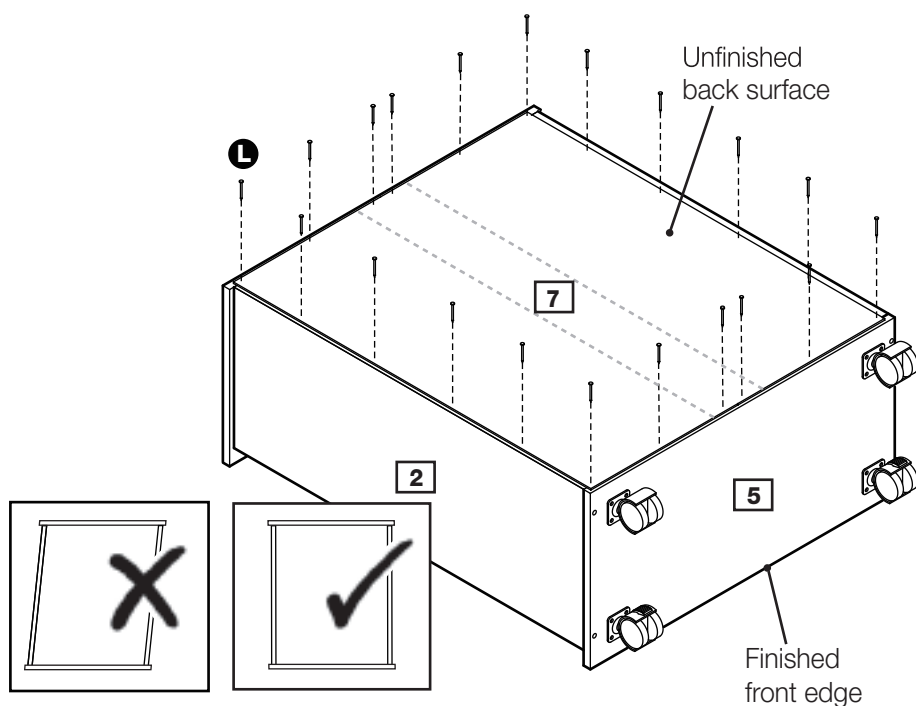


Assembly Instructions

Step 6

Attaching door hinges

 Fix 2 Door hinges **B** to each Doors **4** using Screws **A**.

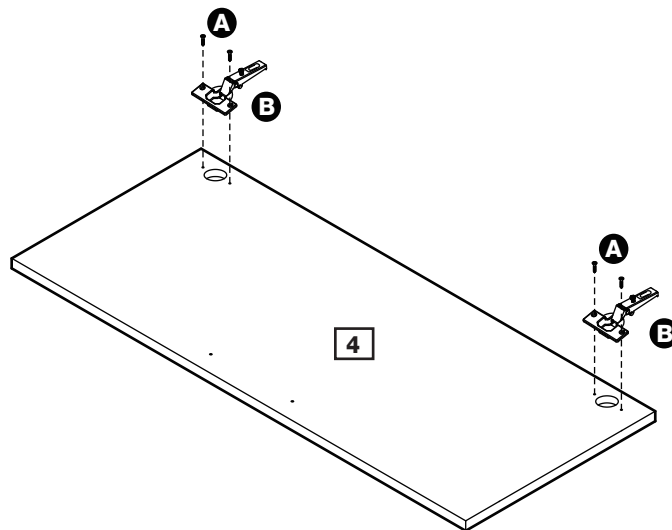

X 2

Step 7

 
Hanging doors

a: With help, slot Door hinges **B** onto 'hinge plates'.




b: Tighten screw shown to lock hinges in position.

Repeat **a** and **b** for opposite door.

See 'Hinge adjustment' in step 9 if the doors need adjusting.

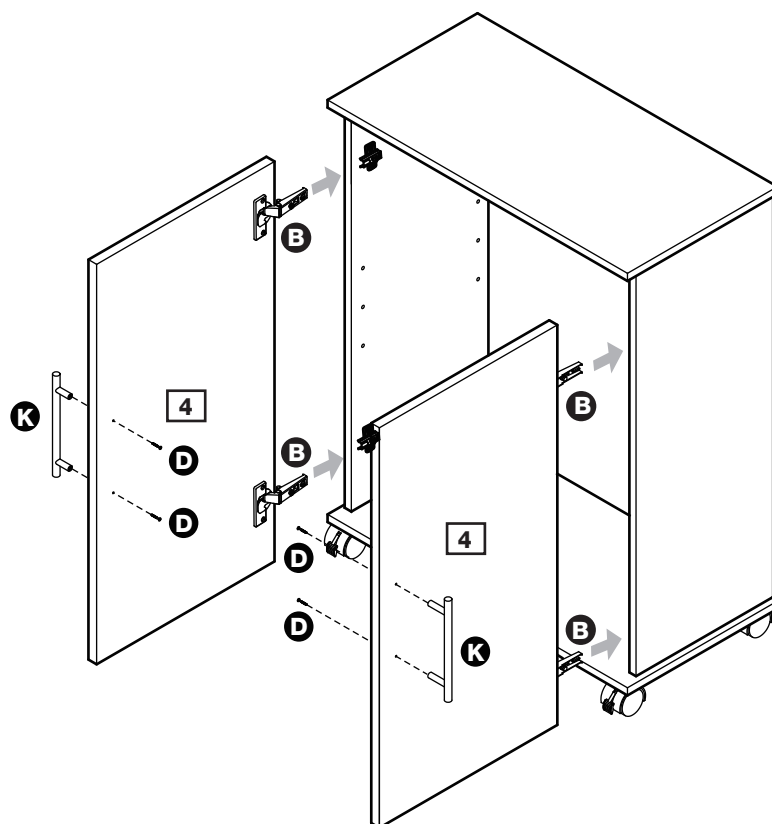

   c: Attach Handles **K** to the outside of the Doors **4** using Screws **D**.

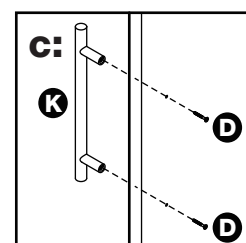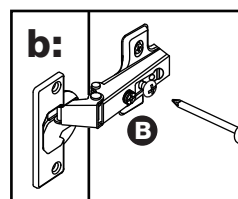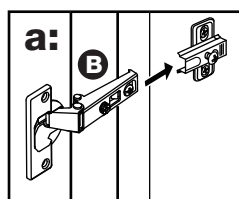

Assembly Instructions

Step 8

 
 
Attaching shelf

a: Slide Support covers **J** onto Shelf supports **I**.

Insert Shelf supports **I**
(Support covers **J** are included) into the unit. Ensure they are well fitted before inserting the Shelf.


Note: Set the shelf supports to the desired height.

a:

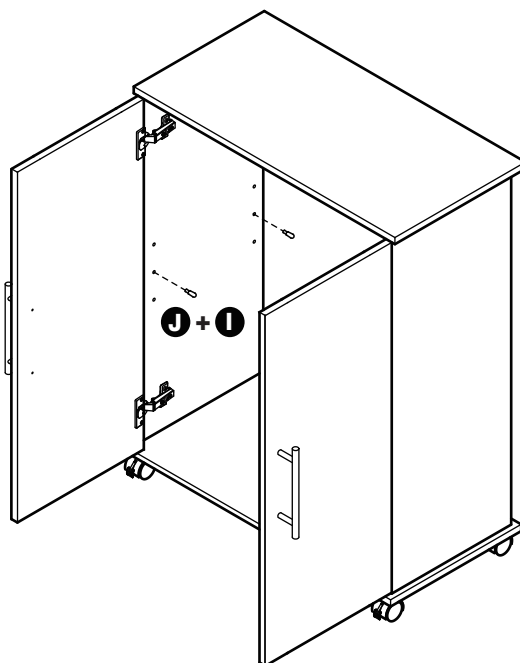

b: Slide the Shelf **6** into the unit.

 b:

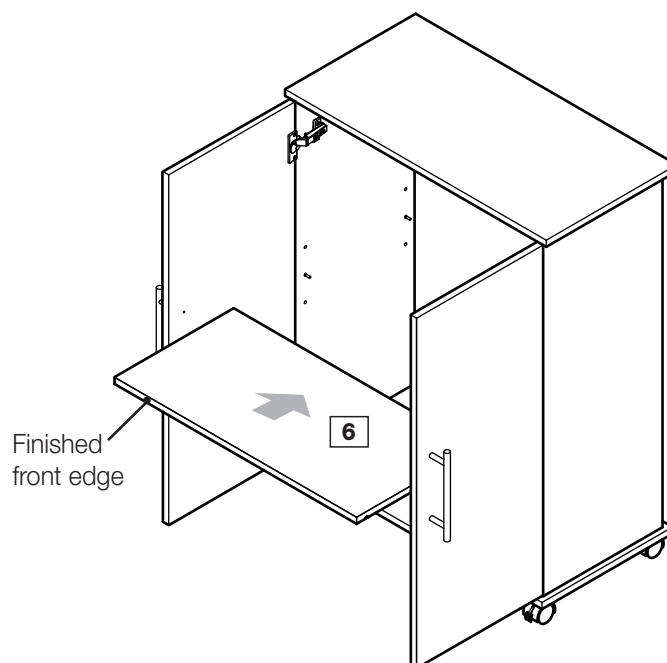

Assembly Instructions

 
 
Step 9

Hinge adjustment

a: To move doors up or down: loosen screws shown and move doors to suit.

once doors are aligned, re-tighten Screws **A**.



a:

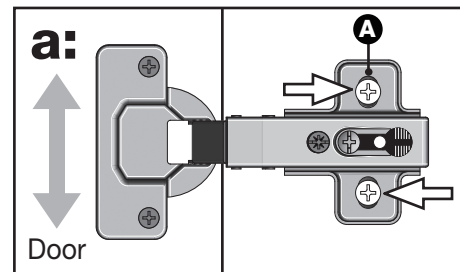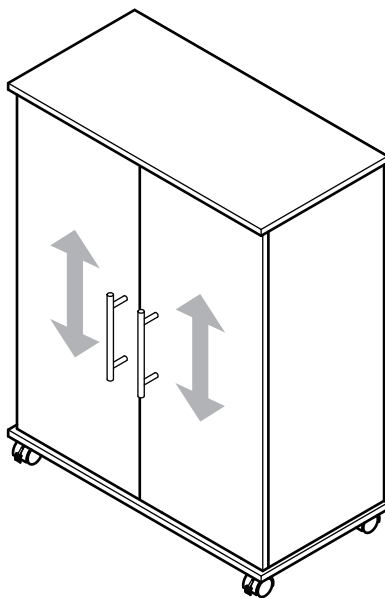

b: To move doors in or out: loosen screw shown and move doors to suit.

Re-tighten screws.

 
 
b:

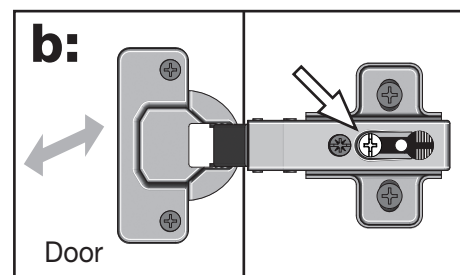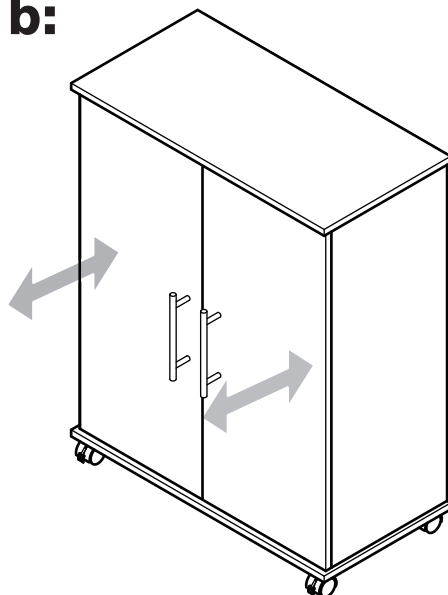

c: To move doors left or right: loosen screw shown and move doors to suit.

Re-tighten screws.

  c:

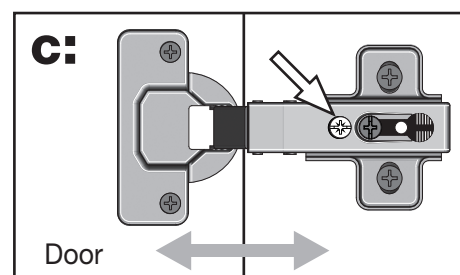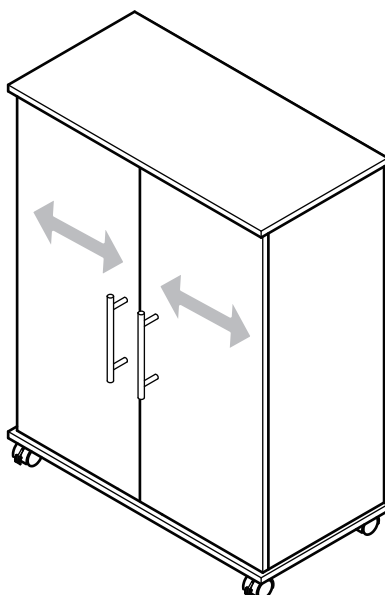

Assembly Instructions

Step 10

Fixing to wall

It is recommended that the storage cupboard is fixed to a wall.

Fix Wall strap **P** to back of top panel using Screws **C**.

With help, move storage cupboard into position.



Warning:
The storage cupboard is heavy.
Lift with care.

Mark fixing hole on wall and remove storage cupboard.

 
Drill a hole and insert Wall plug **O**.





Warning:
Before drilling, check wall for hidden pipes and cables.

Reposition storage cupboard and fix wall strap using Screw **P**.

Assembly is complete.

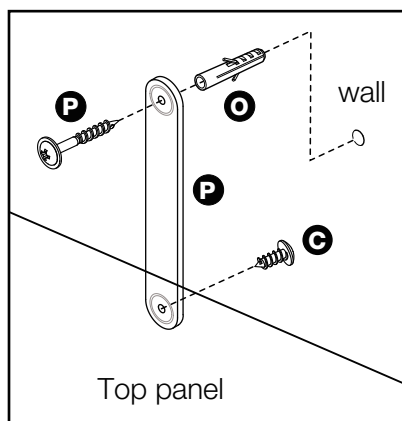

  Note: Wall plugs supplied are for solid wall only.
The correct type of fixing must be used for your wall, seek professional advice if in doubt

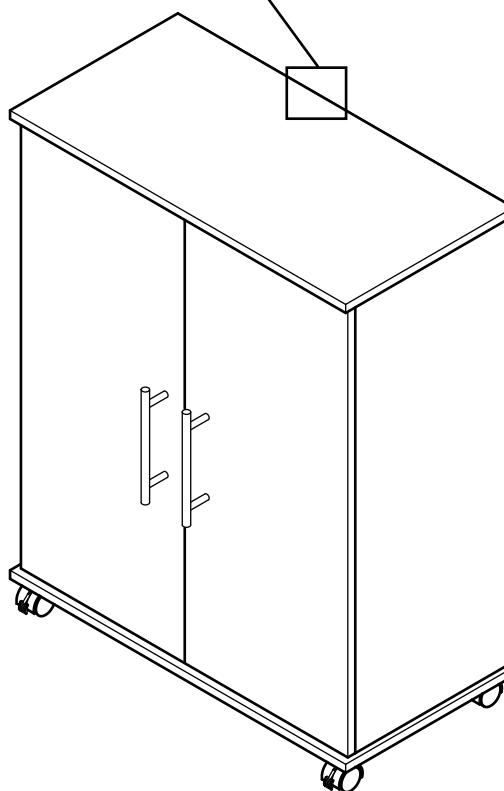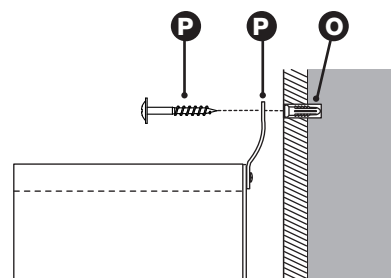

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

- 1: General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

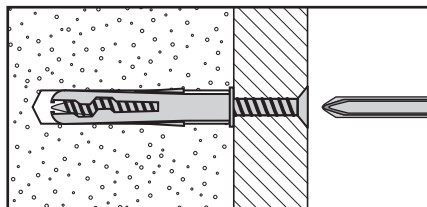


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug

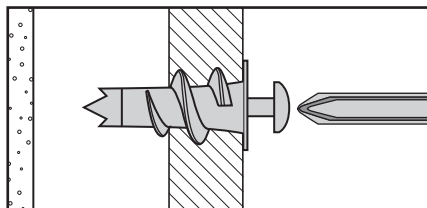


For use when attaching light loads on to plasterboard partitions.

 No.3 "Cavity Fixing" wall plug

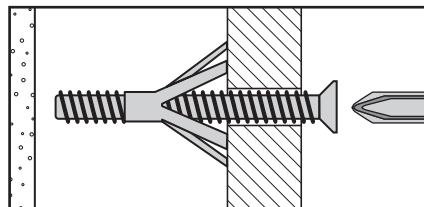


For use with plasterboard partitions or hollow wooden doors.

 No.4 "Cavity Fixing-Heavy Duty" wall plug

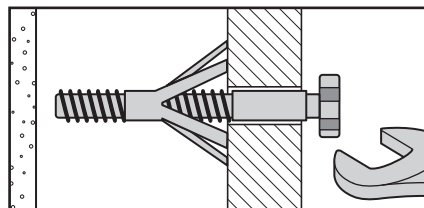


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer Fixing" wall plug

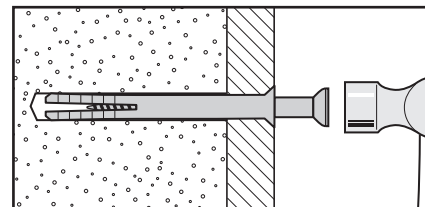

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads

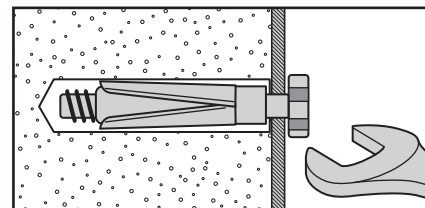

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.