

Assembly Instructions

Stage 3 - Fitting the Bottom Shelf

fig 8
Use 3 screws **k** and 3 spring washers **x** to fix the other shelf **c** and 3 Rails **f** to the Left Hand Side Frame **A** with Allen Key **i**.

fig.8


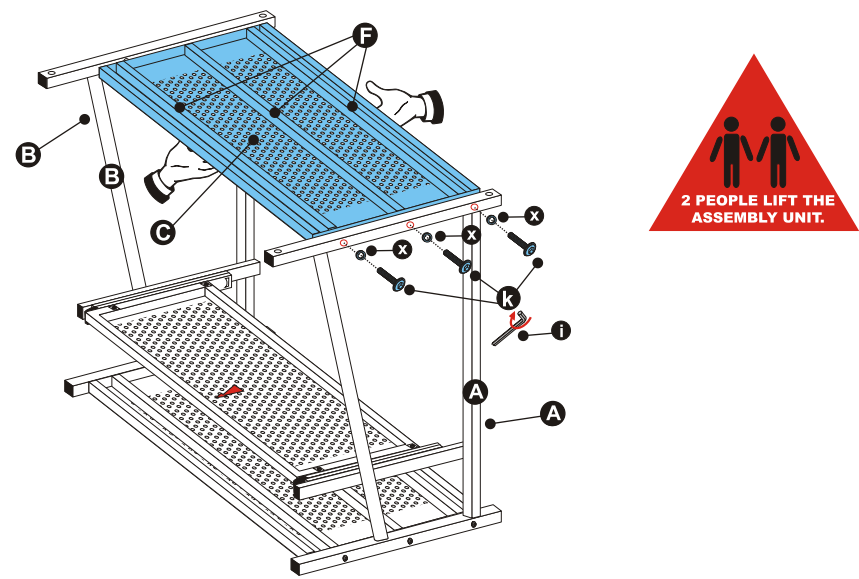


fig 9
Use 3 screws **k** and 3 spring washers **x** to fix the other end of shelf **c** and Rails **f** to the Right Hand Side Frame **B** with Allen Key **i**.


fig.9

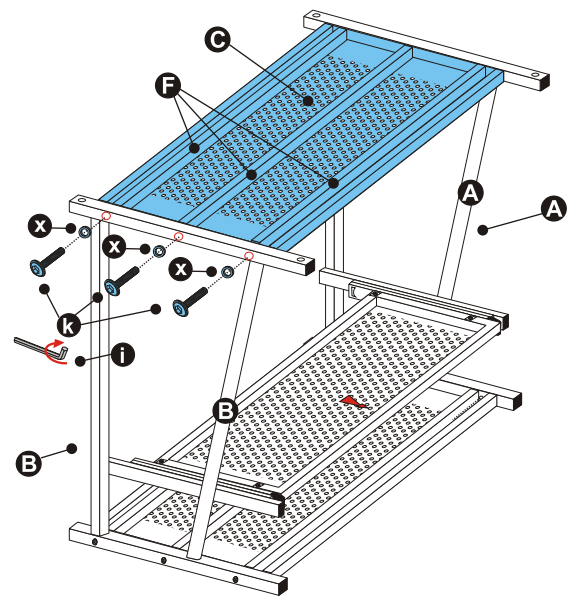

Stage 4 - Fitting the Castors

fig 10
Fix 2 brake castors **f** and 2 castors **g** to the unit with spanner **h**.

fig.10

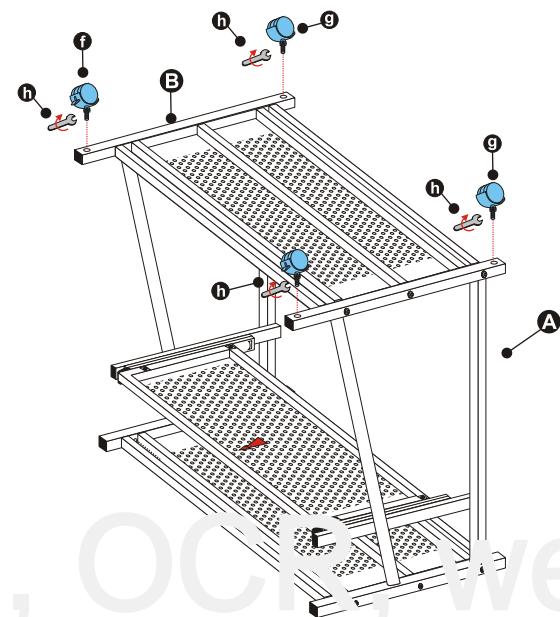

Assembly Instructions

Stage 5 - Fitting the Back Panel

fig 11
Use 4 screws **c** and 4 spring washers **x** to fix the back panel **E** to the unit with Allen Key **i**.

fig.11


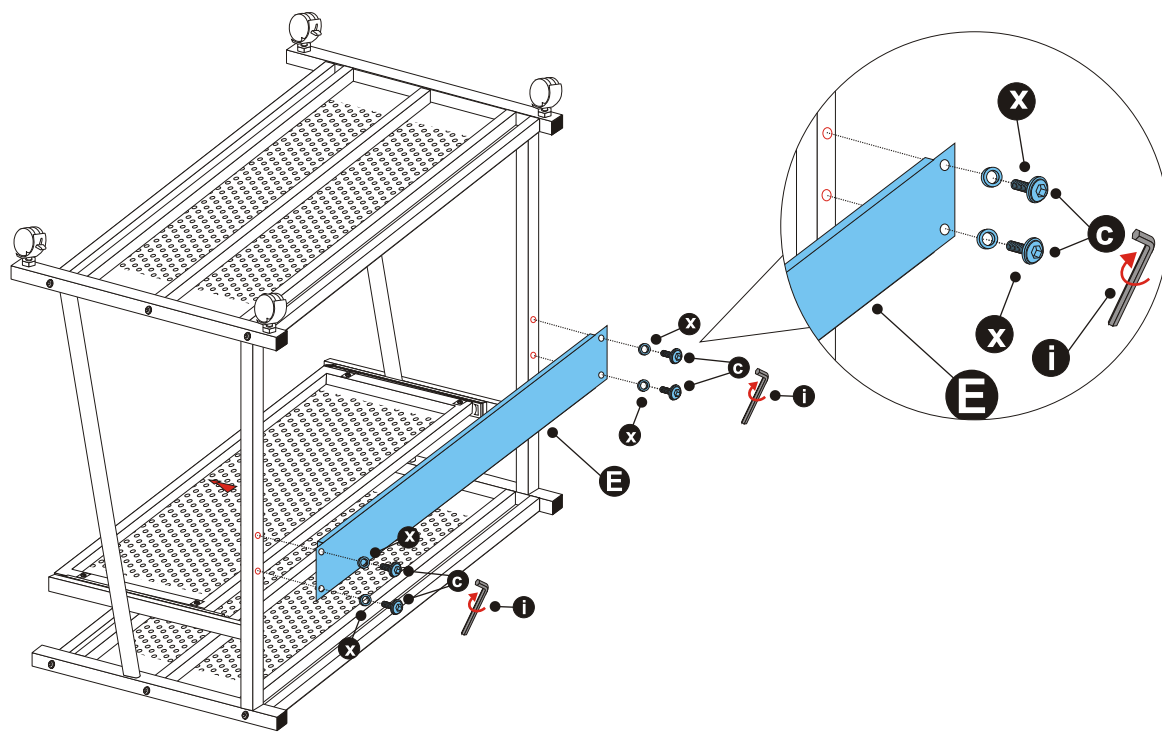


fig 12
Turn the unit over and you have completed the assembly.

fig.12

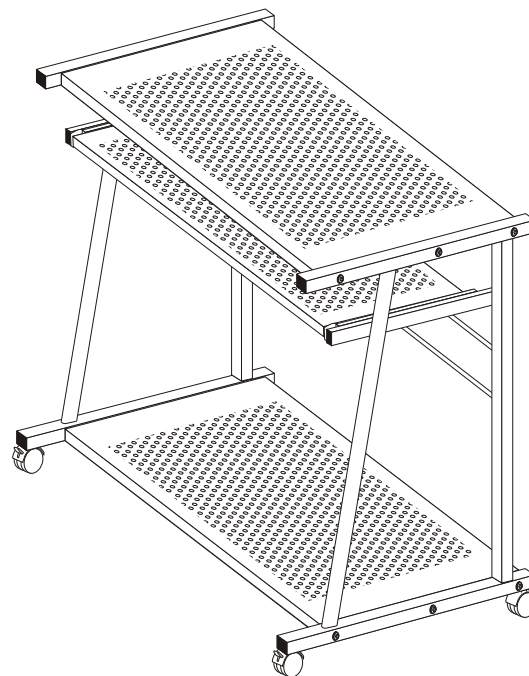

Care and Maintenance



Cleaning
Clean all surfaces with a damp cloth and mild detergent. Do not use bleach or abrasive products.

Fitting
From time to time check that screws and nuts remain firm

PC TROLLEY

Assembly Instructions - Please keep for future reference


Suitable for most monitors up to 43cm / 17inches. (Version-II)

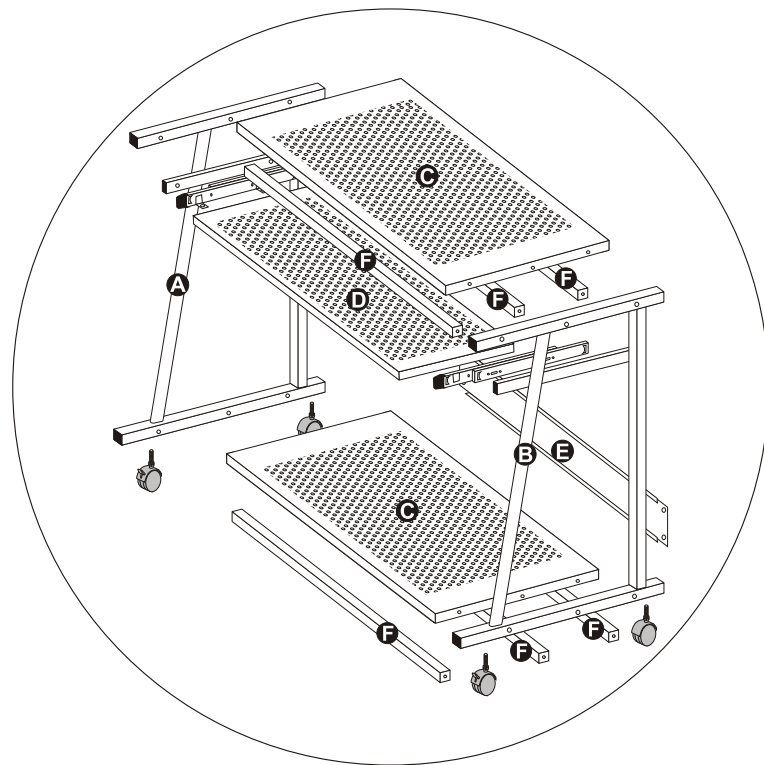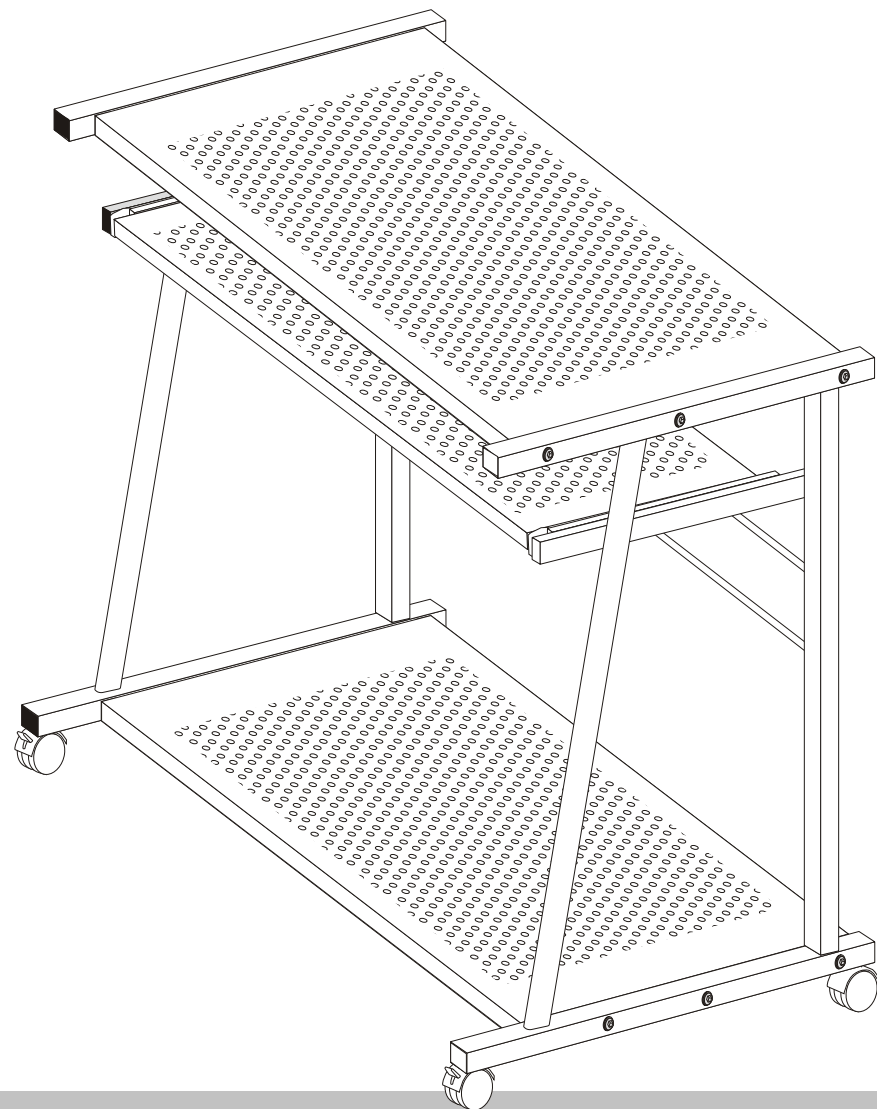


IMPORTANT

1. Read these instructions carefully to familiarise yourself with the five stages of assembly.
2. Check that you have all of the component parts. Follow the list on the back cover to identify each part before starting.
3. Take all of the fittings out of the plastic bag and separate them into their groups.
4. Ensure you have enough space to lay out all of the parts before assembly.
5. To avoid scratches. It is recommended that you assemble the unit on a soft level surface.

Components

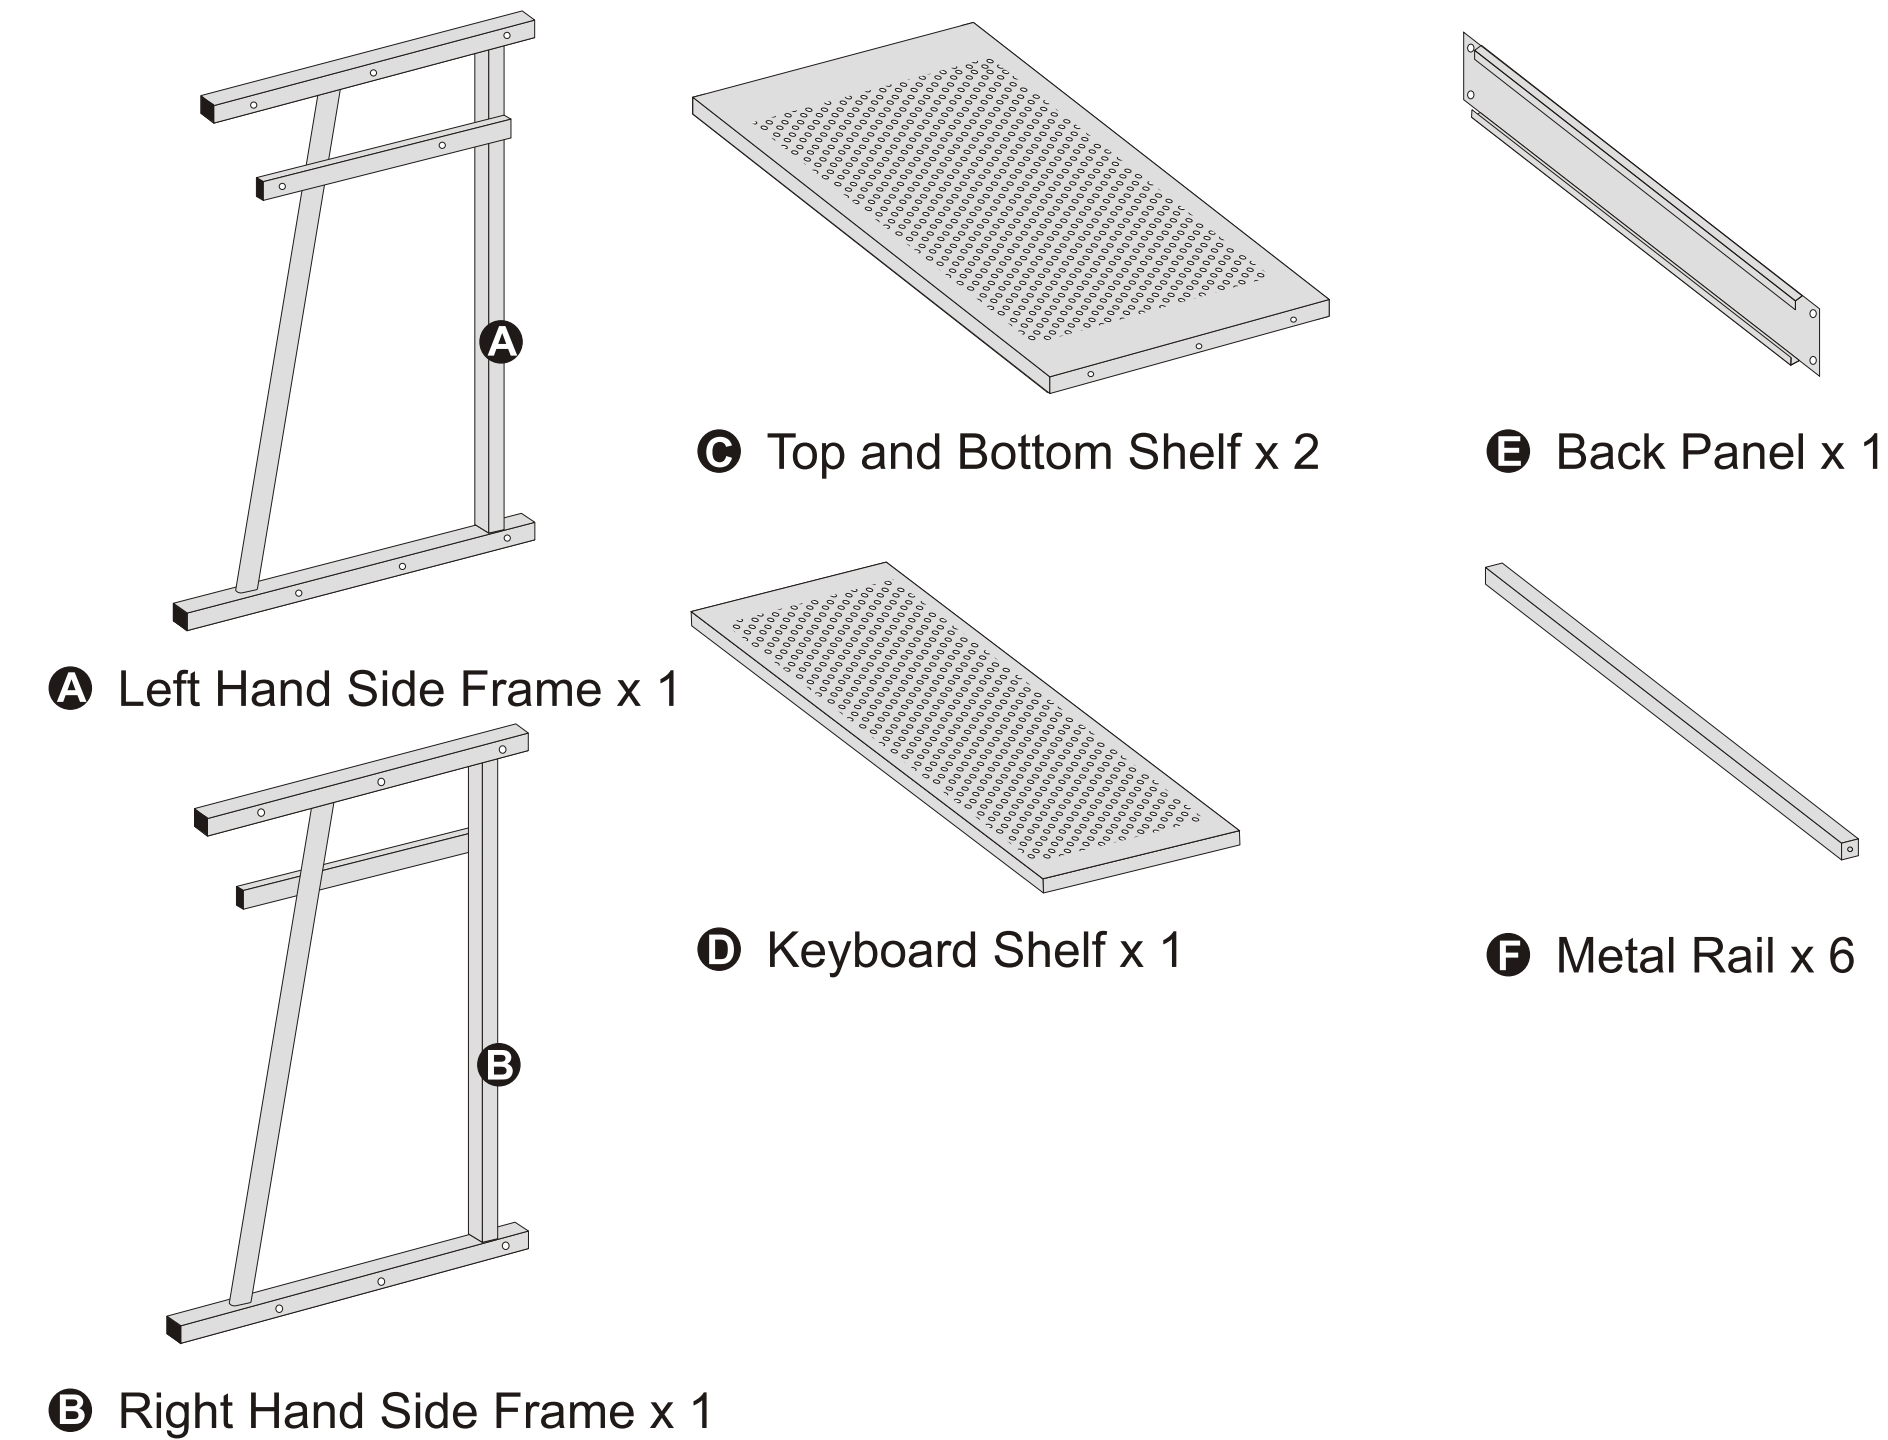

Fittings

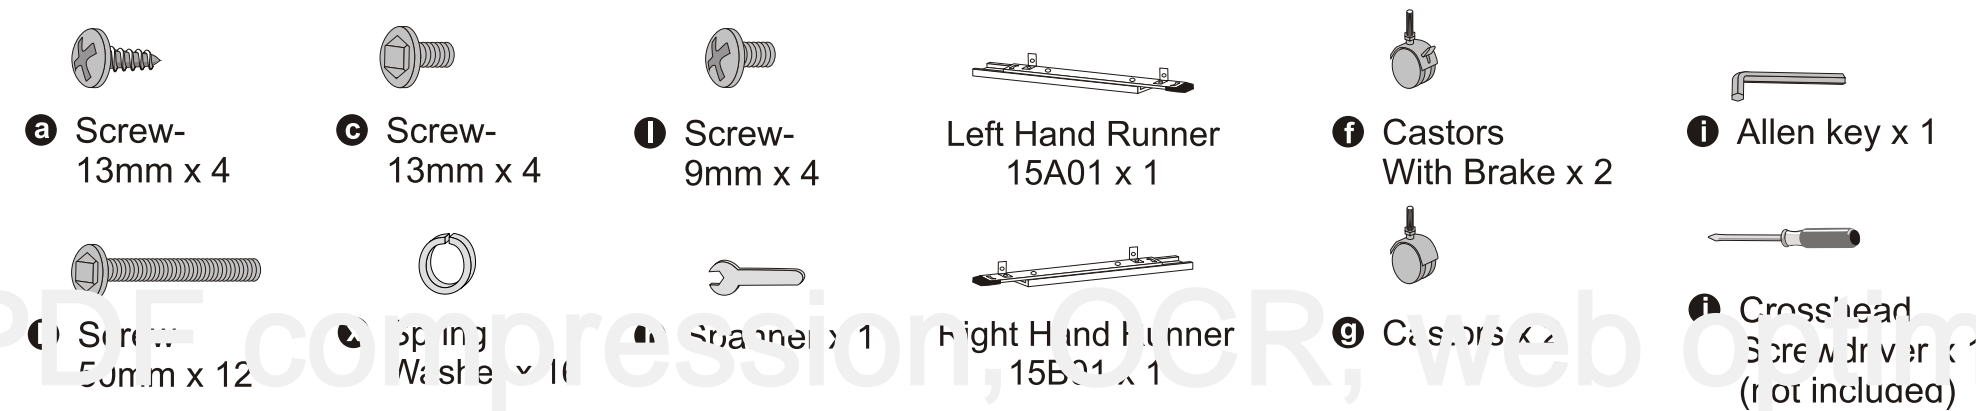

Assembly Instructions

Stage 1 - Fitting the Sides

Carefully identify the right and left hand runners, and put them with their respective side frames.

fig 1
Ensure the left hand runner **15A01** is selected and attach as shown. Slide the runner forward and fasten the runner onto section **A** , using a screw **i** .

fig.1
Please make sure runner used is from **15A01** is selected and attach as shown.

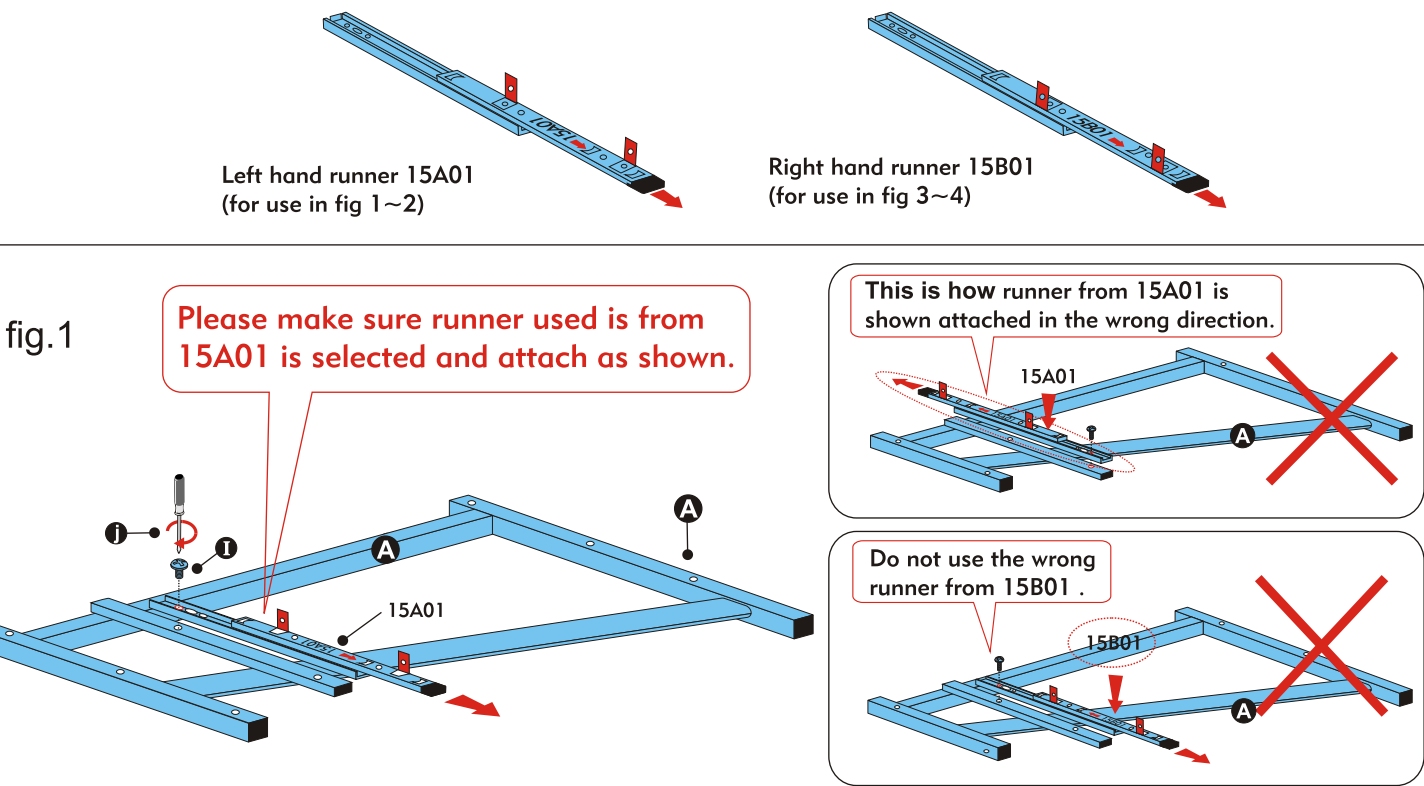


fig 2
Slide the runner **15A01** backward and fasten it onto section **A** ,using a screw **i** .

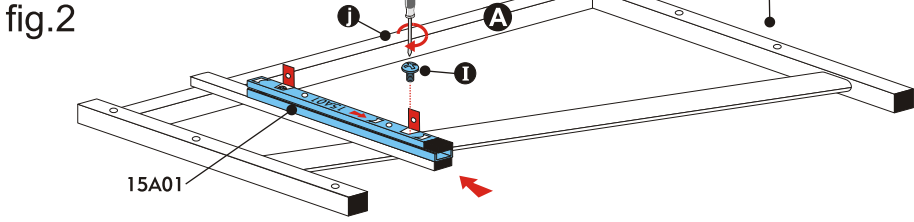


fig 3
Ensure the right hand runner **15B01** is selected. Slide the runner forward and fasten the runner onto section **B** , using a screw **i** .


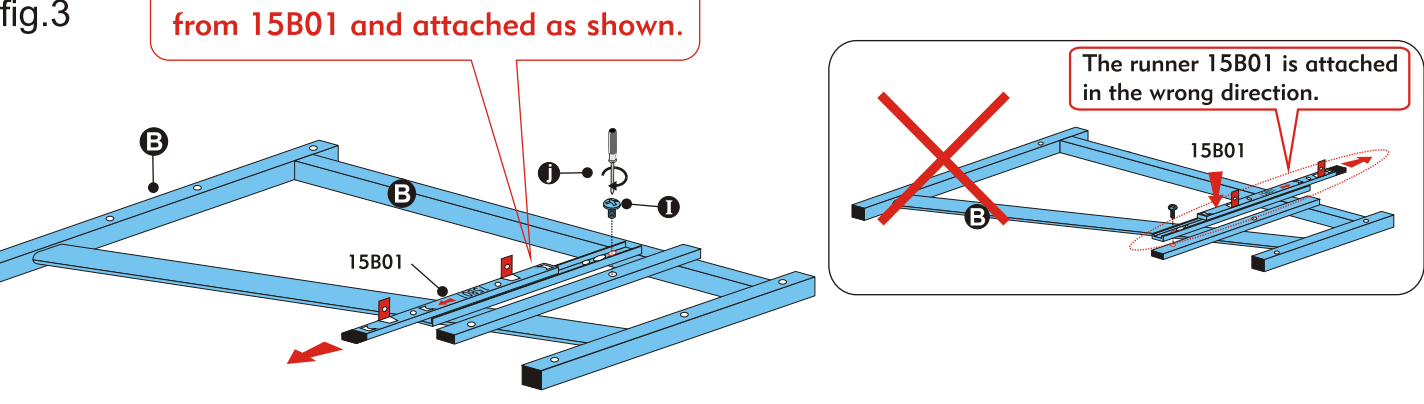


fig 4
Slide the runner **15B01** backward and fasten it onto section **B** ,using a screw **i** .

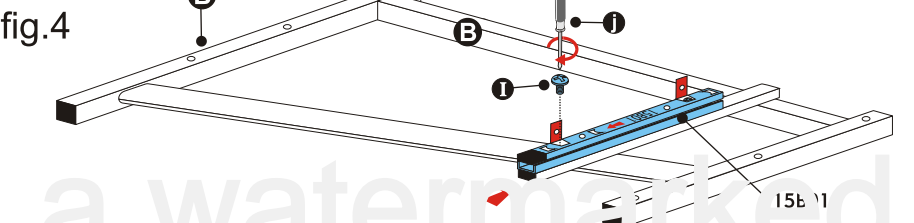

Assembly Instructions

Stage 2 - Fitting the Top Shelf and Keyboard Shelf

fig 5
Use 3 screws **k** and 3 spring washers **x** to fix one of the shelves **C** and 3 Rails **F** to the top of the Right Hand Side Frame **B** with Allen Key **i** .

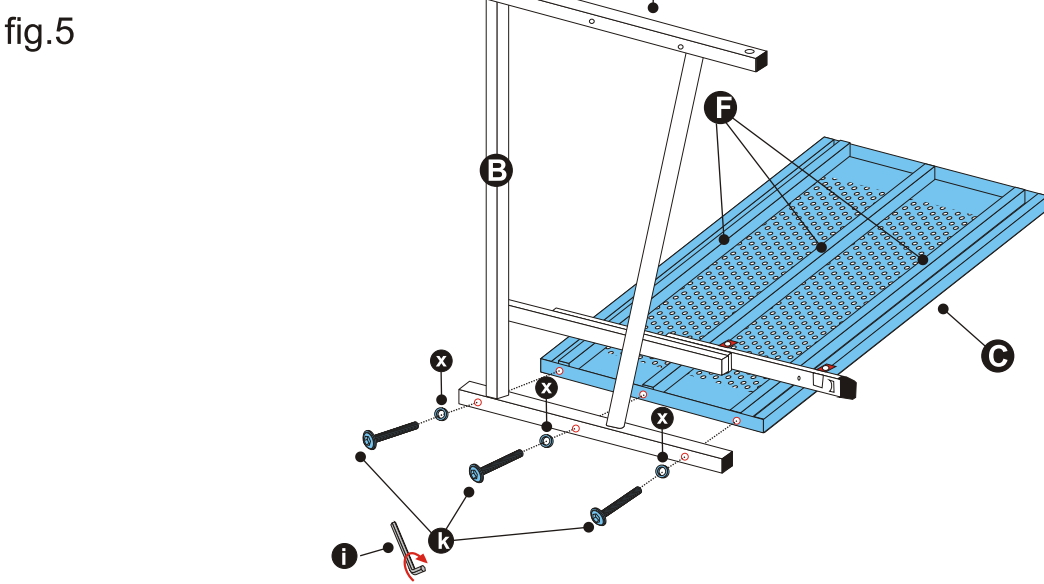


fig 6
Use 3 screws **k** and 3 spring washers **x** to fix the other end of the shelf **C** to the Left Hand Side Frame **A** with Allen key **i** .

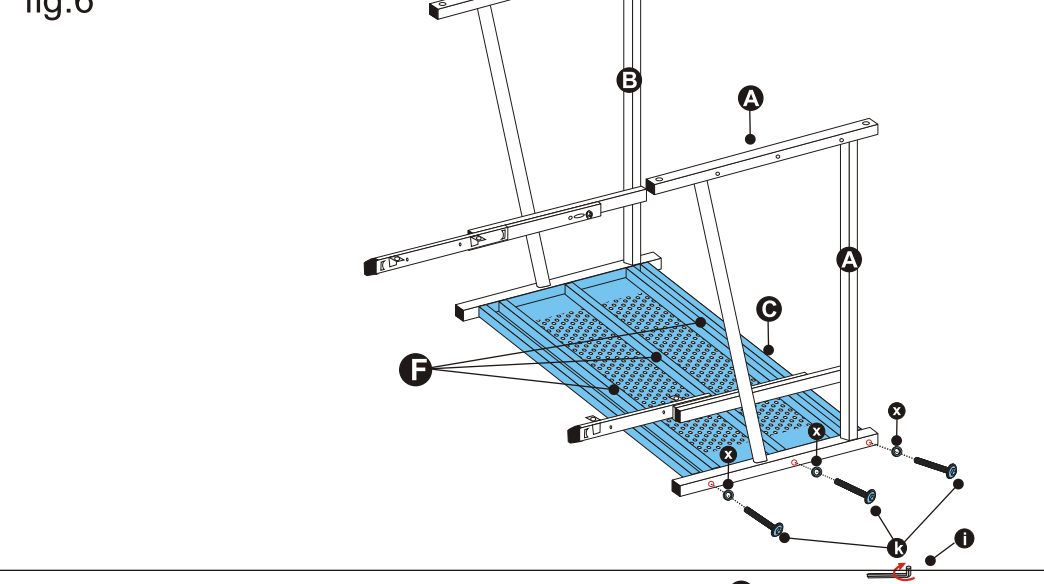


fig 7
Use 4 screws from **a** to fix the keyboard shelf **D** to the runners.

