

# cookworks

## INSTRUCTION MANUAL Model No. :MK-17S19C



Read all the instructions carefully before using and please retain this instruction manual for further reference.



## Safety Warnings

- Please read these instructions carefully before using the kettle for the first time.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out reach of children less than 8 years.
- Before you connect the kettle to the mains supply, make sure that the voltage indicated on the rating plate, located on the bottom of the kettle matches the mains voltage in your home. If it does not, contact your dealer and do not use the kettle.
- The kettle will switch off automatically when the water has boiled. You may switch the kettle off before the boiling process is complete by using the on/off switch.
- After the kettle has switched off automatically (or has been switched off manually) it may need time to cool down. After 15-20 secs, the kettle can be switched on again.
- If the kettle ever boils dry, allow 15 minutes to cool before refilling with cold water. The safety cutout will automatically reset during this time.
- Place the kettle on a stable flat surface.
- Insure that the kettle is switched off before removing it from its stand.
- Never immerse the kettle or cord in water or any other liquid. Do not allow liquid to penetrate the electrical parts of this kettle.
- Prevent children from pulling on the mains cord or knocking the kettle over.
- Before cleaning the kettle disconnect from the power supply and wait until it has cooled down.
- The kettle may be cleaned with a damp cloth.

- ❑ Pour away the first lot of water boiled in this kettle.
- ❑ Only use the cord supplied with this kettle. If a replacement is required, only approved components may be used.
- ❑ The outside surface of the kettle may get hot during use, please take care when using the kettle.
- ❑ Never fill in water more than the maximum acceptable water level.
- ❑ If the supply cord is damaged, it must be replaced by the manufacture, its service agent or similarly qualified persons in order to avoid a hazard.
- ❑ Do not remove lid while the water is boiling.
- ❑ If the kettle is overfilled, boiling water may be ejected.
- ❑ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- ❑ Children should be supervised to ensure that they do not play with the appliance.
- ❑ This appliance is intended to be used in household and similar environments such as : staff kitchen areas in shops, offices and other working environments, farm houses:  
by clients in hotels, motels and other residential type environments bed and breakfast type environments.
- ❑ **WARNING! This kettle is designed for boiling water only. NEVER USE IT FOR HEATING UP OTHER LIQUIDS SUCH AS MILK. It will stop kettle from switching off automatically and result to overheating and product damage.**

 
# Know your appliance

Capacity: 1.7L

Power: 220-240V ~ 50/60Hz 1850-2200W

## PARTS



1. Lid
2. Lid release button
3. Handle
4. On / off switch
5. Stand
6. Body
7. Water gauge
8. Spout

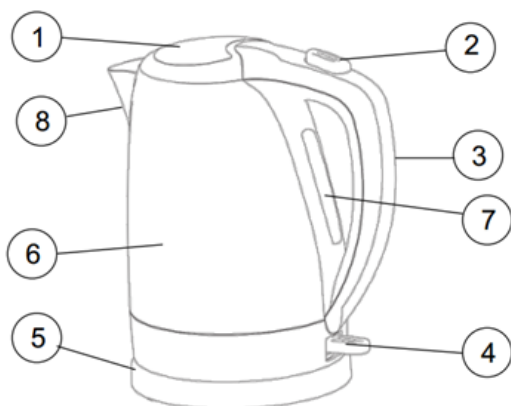

## Using the kettle

### Filling

  Take up the kettle from the base before filling.

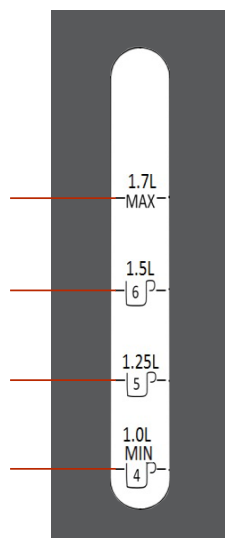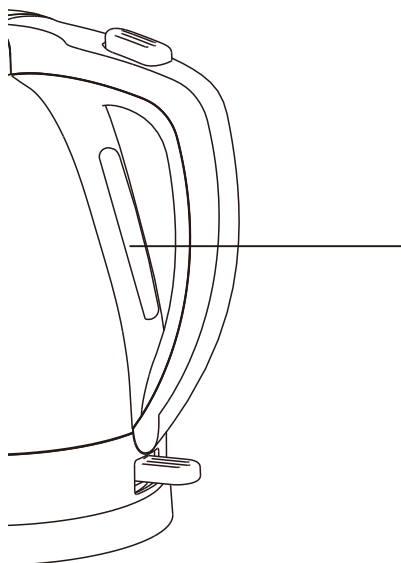

- ❑ To fill the kettle, open the cover by push the button
- ❑ Fill to the desired level (Min 1.0L~Max.1.7L)
- ❑ Close the lid by pressing it down until it clicks into place.

## Switching on

- ❑ Plug the power supply cord into the mains.
- ❑ To switch on the jug kettle, press the On/Off switch downwards. The power indicator lights up.

## Switching off

- ❑ When the water has boiled the kettle will automatically switch itself off.
- ❑ You can stop the boiling process at any time by lifting the On/Off switch. The power indicator will go out.

Note: Do not open the lid when steam is coming out of the spout.  
Kettle is only to be used with the stand provided.

## Cleaning

- ❑ First read the instructions in the section titled “SAFETY WARNINGS”.
- ❑ Avoid using abrasive cleaning agents.

## Descaling

The major cause of damage to kettles is **limescale** and your kettle will require regular maintenance to ensure that it continues to work properly. Limescale deposits build up over time, blocking important parts of the kettle and stopping it from working properly.

### Remember:

- Descale every few months
- Don't wait for limescale to build up before you descaler
- You can buy descaler from us at [www.argosspares.co.uk](http://www.argosspares.co.uk) or in many high street shops
- Clean the limescale filter if your kettle has one

**Types of problems caused by limescale build-up:**

- Colour – Limescale will discolour your kettle.
- Performance – your kettle will take longer to boil (wasting electricity) and eventually will switch off before it has boiled.
- Taste – limescale can give the water a chalky taste and limescale flakes will give a gritty texture.

**Other care tips:**

 
- To clean the outside of your kettle use a soft, wet cloth.
- The first time you use your kettle the water may taste of plastic. Always boil your kettle a couple of times before you use it to make drinks. If the taste persists add 2 teaspoons of bicarbonate of soda to the full kettle, boil and discard the water.
- Most kettles will cut-out if they boil dry. If this happens, consult your instruction manual.

## Connection to Power

- Before connecting, check that the voltage indicated on the appliance corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This appliance may be fitted with a non-rewirable plug. If you need to change the fuse in a non-rewirable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained (available from the appliance manufacturer).
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.
- This unit must be earthed. This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

**For your own safety read the following instructions carefully before attempting to connect this unit to the mains.**

You should only plug the appliance into a 230V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance.

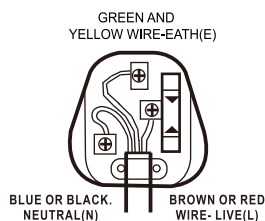

The wires in this mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL  
BROWN = LIVE  
GREEN + YELLOW = EARTH

## IMPORTANT

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:





### Caution

To prevent electric shock disconnect from the mains before removing the cover

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- The green and yellow wire must be connecting to the terminal marked with the letter E or the earth symbol. ( $\perp$ ).

If a 13 Amp (BS1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved.

If in doubt contact a qualified electrician

## Disposal Information



**DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.**

This appliance is labeled in compliance with European directive 2002/96/EC for Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is disposed of correctly, you will help prevent any possible damage to the environment and to human health, which might otherwise be caused if it were disposed of in the wrong way.

The symbol on the product indicates that it may not be treated as normal household waste. It should be taken to a collection point for the recycling of electrical and electronic goods.

This appliance requires specialist waste disposal. For further information regarding the treatment, recover and recycling of this product please contact your local council, your household waste disposal service, or the shop where you purchased it.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.





## PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this instruction manual can be obtained from [www.argos-support.co.uk](http://www.argos-support.co.uk)
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd  
489 - 499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW  
[www.argos-support.co.uk](http://www.argos-support.co.uk)

