 


Beech Effect Book Tidy

Assembly Instructions - Please keep for future reference

719/0023

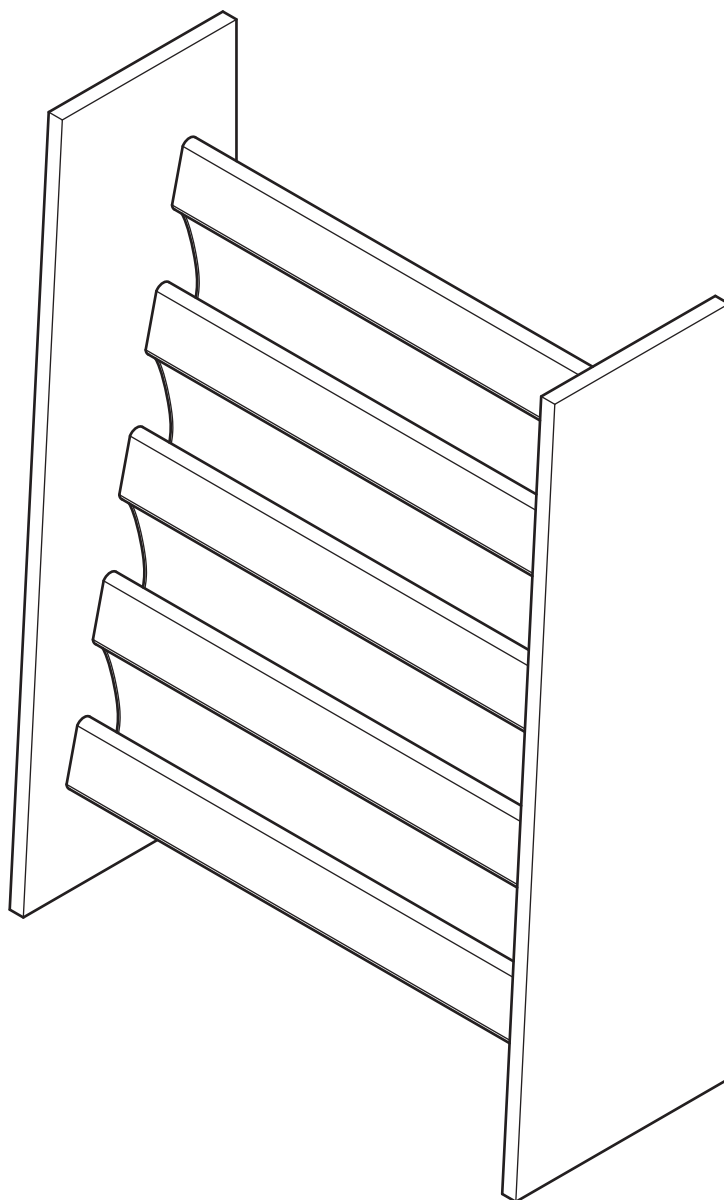

Dimensions

Width - 63.1cm

Depth - 23.5cm

Height - 74cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not use this item if any components are missing or damaged.

- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Assembly to be carried out by the competent adult only.
- During assembly children should be kept away from the product due to the potential risk of injury.



- We do not recommend the use of power drill/drivers **for inserting screws,**

as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.
- **Note:** Only apply the glue once you are sure of the assembly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

 
- Argos Ltd. MK9 2 NW.
- This product is suitable for children in the age 6 or above, or the maximum weight of 15 kgs.
- Regularly check all fastenings to ensure that they are properly tightened.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components,
call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

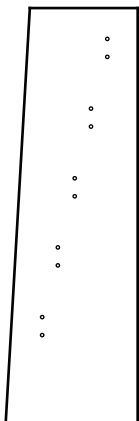

1 Side panel x 2
(74 x 23.5cm)

 

2 Support x 5 (60 x 6cm)

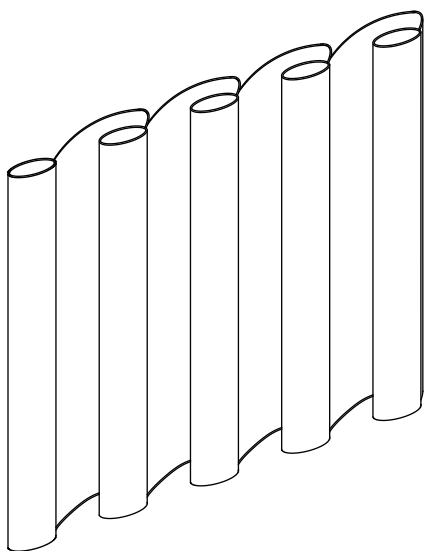 







3 Nonwoven
(138.3 x 59.8cm)


Components - Fittings

Please check you have all the fittings listed below

 Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.

| | | |
|---|--|--|
| A  50mm Screw x 20 | B  Screw cover x 20 | C  14mm Screw x 1 |
| D  (This screw is included in the wall strap bag) Wall strap x 1  x 1 | E  Wall plug x 1 | |

 
Tools required



Phillips screwdriver
(medium & large)



 
Bradawl
(or sharp point)



Small
hammer




 Ruler/tape
measure



Eye protection
(when using a
hammer or glue)

 Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

 
Step 1

Fitting the support

Note: It would be useful to ask someone to help you at the stage.

Use Screws **A** to fix the Supports **2** onto the Side panel **1**.


Use Screw covers **B** to cover the Screw heads.

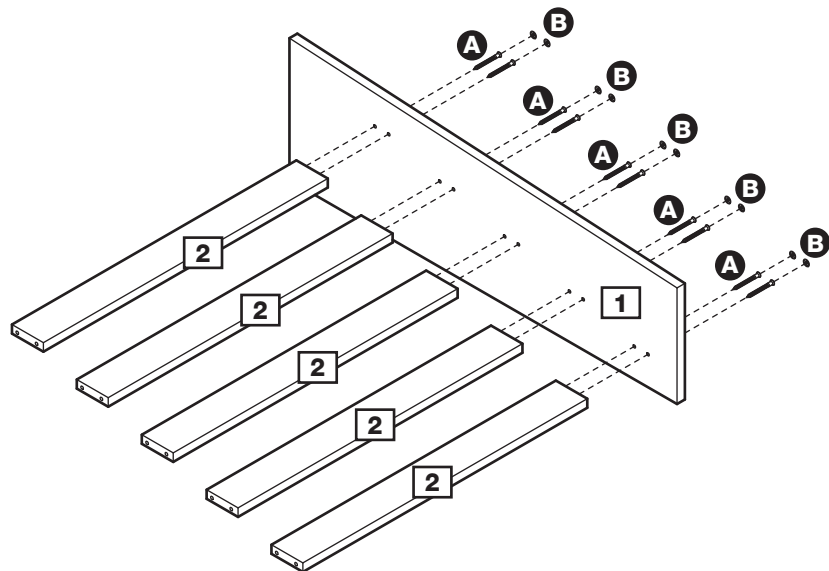

Step 2

Fitting the nonwoven

 Use Nonwoven **3** fit into the unit.

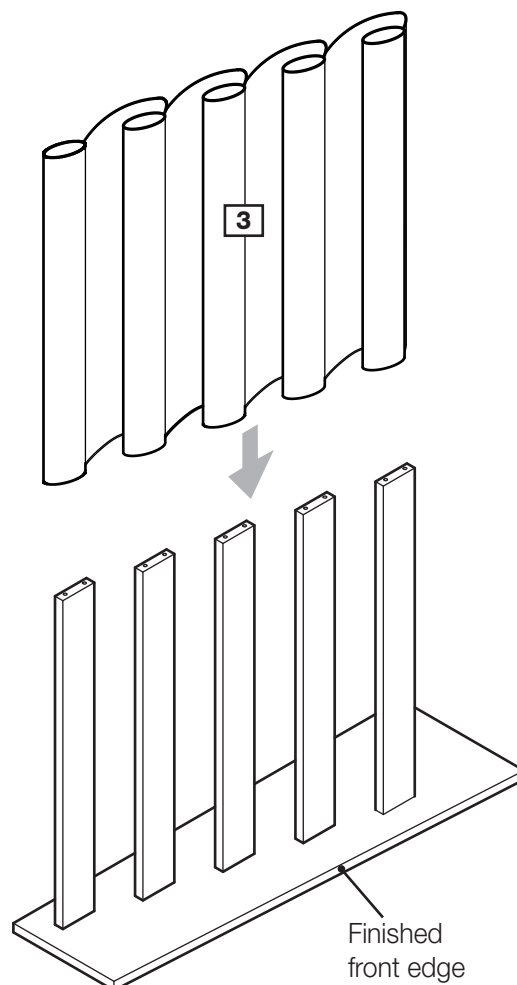


Assembly Instructions

Step 3

Attaching right side panel

Use Screw **A** to fix Side panel **1** onto unit.

 Use Screw covers **B** to cover the Screw heads.

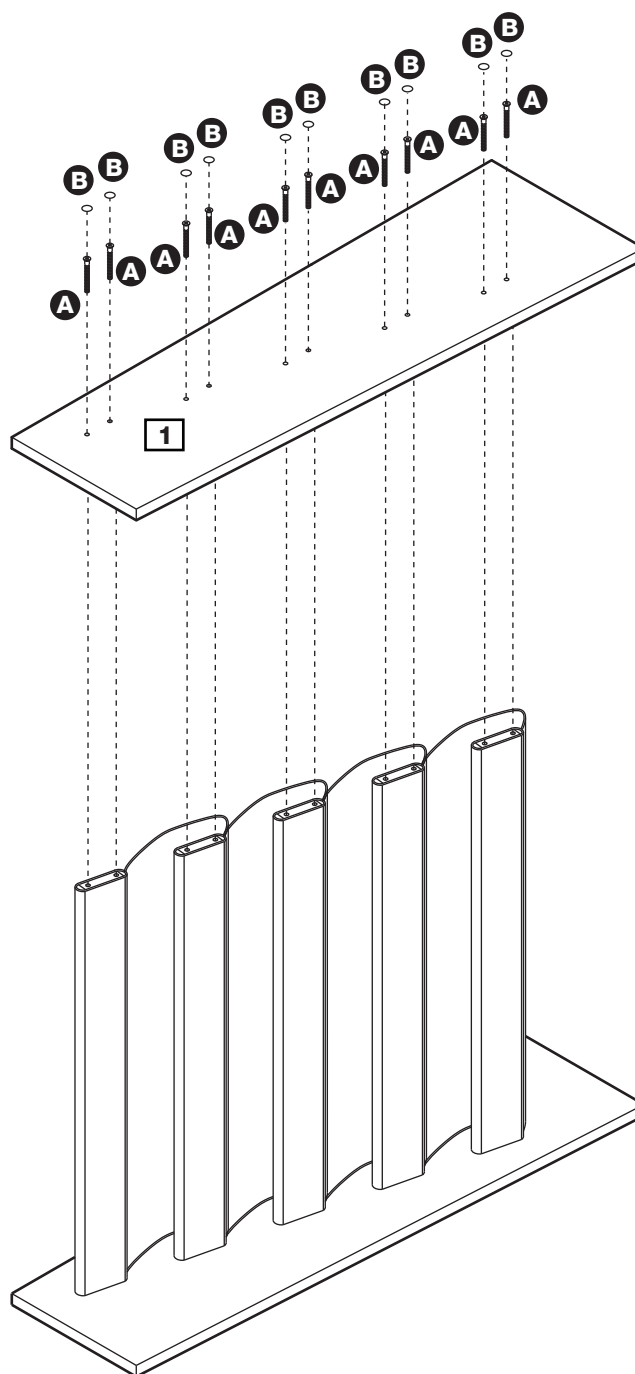

Assembly Instructions

Step 4

Fixing to wall

It is recommended that the Book tidy is fixed to a wall.

Use Screw **C** to fix the Wall strap **D** onto the top panel.

With help, move Book tidy into position.



Warning:

The Book tidy is heavy.

Lift with care.

Mark fixing hole on wall and remove Book tidy.

Drill a hole and insert Wall plug **E**.

 


Warning:

Before drilling, check wall for hidden pipes and cables.



Reposition media tower and fix wall strap using Screw **D**.

Assembly is complete.

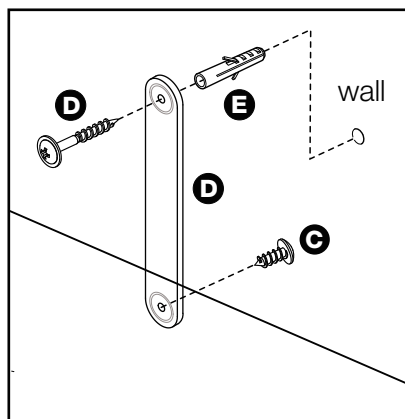

Note: Wall plugs supplied are for solid wall only.

  The correct type of fixing must be used for your wall, seek professional advice if in doubt

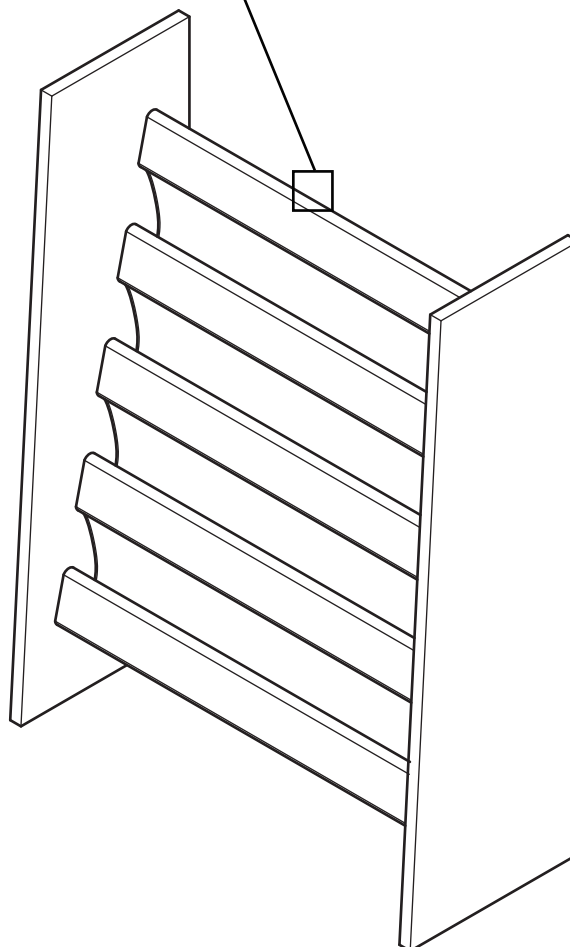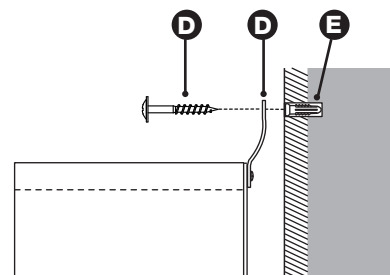

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**