
Shelving With Hooks

Assembly Instructions - Please keep for future reference

719/3484

719/3477

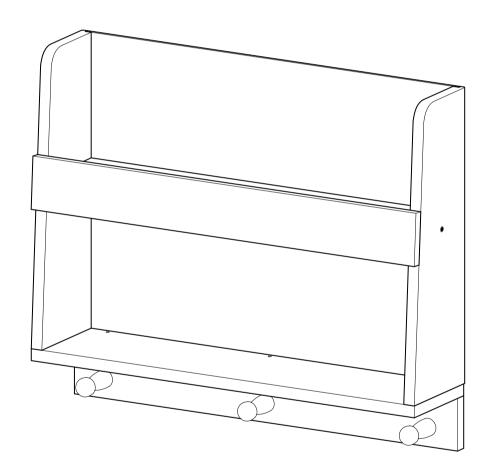

Dimensions

Width - 65cm Depth - 15cm Height - 54.8cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Assembly to be carried out of by a competent adult only.
- Do not use this item if any components are missing or damaged.

- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- The maximum child weight or load for which the product is 10 kgs.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.
- The registered trade name or trademark of the manufacturer or supplier:
 Argos I TD

Argos LTD 489-499 Avebury Boulevard, Saxon Gate West, Milton Keynes MK9 2NW, England

Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the panels listed below

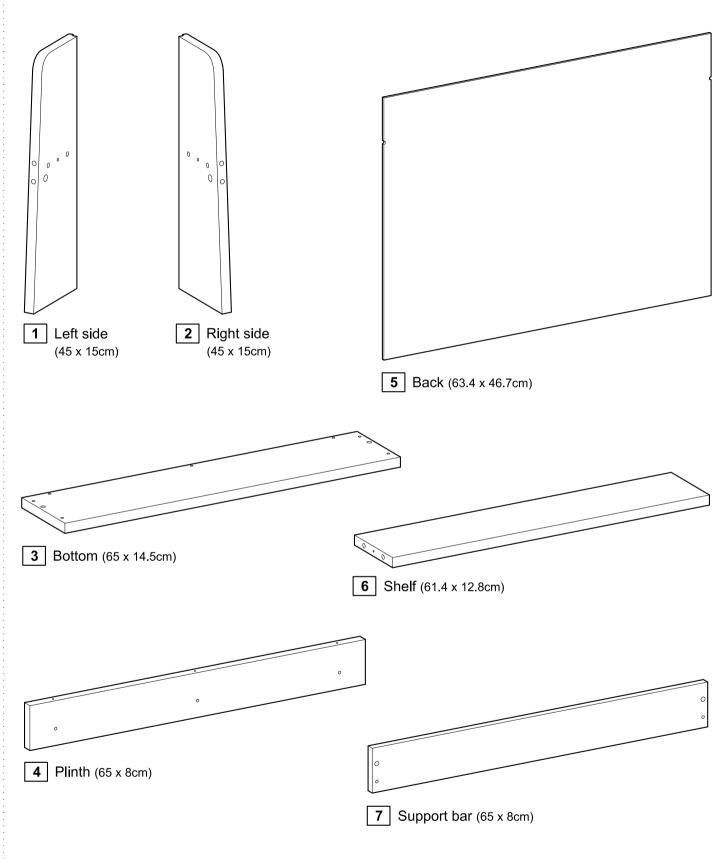





Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

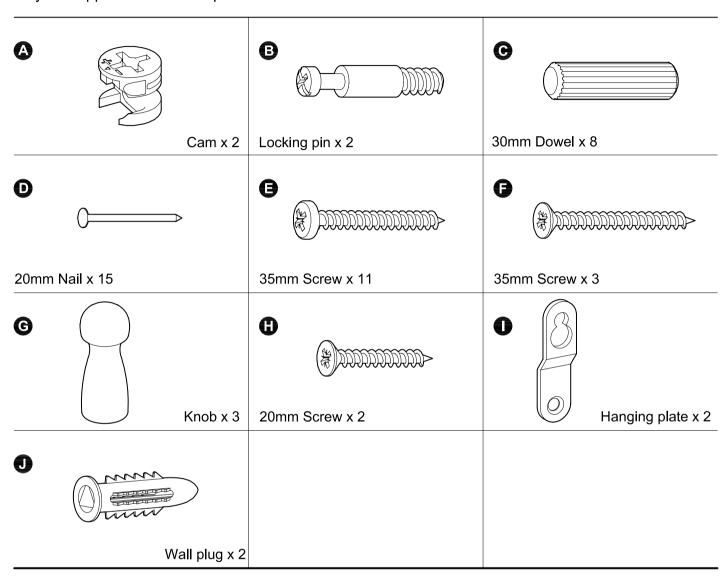


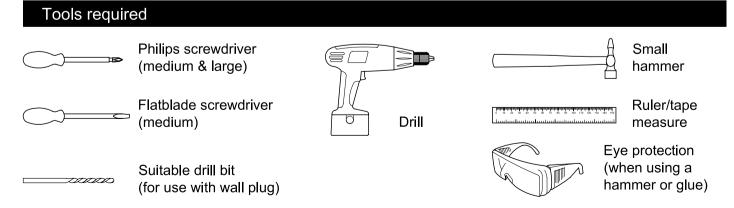

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Components - Key Diagram

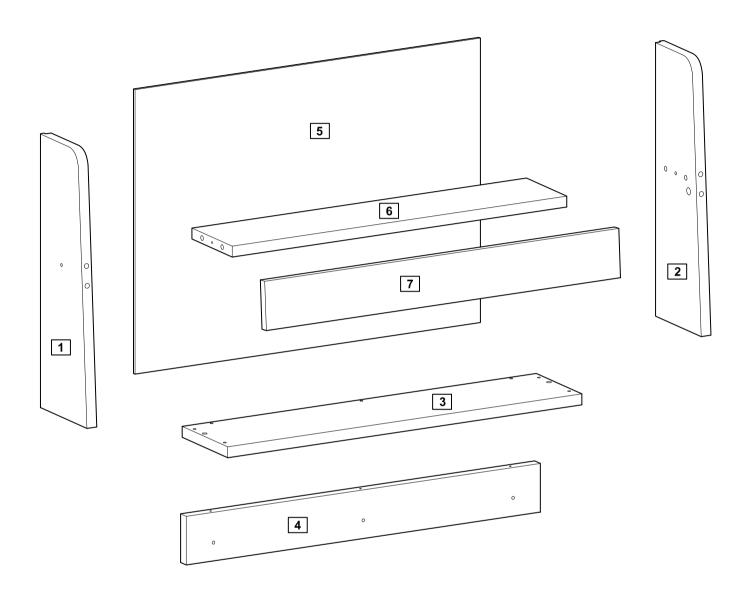

Function of Cam and Locking Pin


Step 1: Fix the locking pin to the wooden panel.


Step 2: Push the wooden panel with the attached locking pin onto the other wooden panel.


3

Step 3: Place the cam into the hole, arrow pointing towards the locking pin.

Step 4: Tighten: Turn the cam to the right.

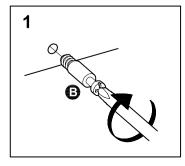

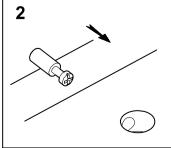


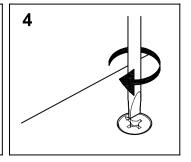

Step 1

Inserting the dowels to the sides and the shelf.

Insert the dowels **©** into the holes indicated on the sides **1** and **2**, the shelf **6**.

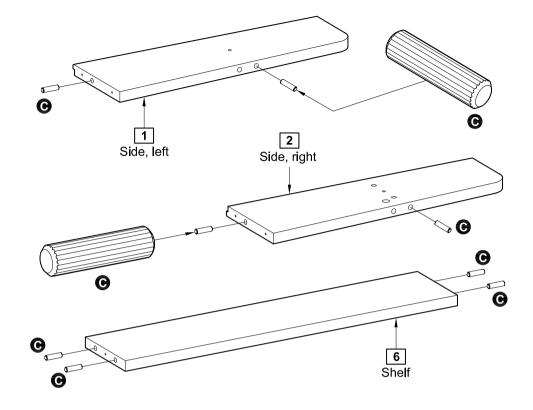

Step 2

Mounting the locking pins to the support bar.


Screw the locking pins
into the holes
indicated on the support
bar 7.

Note: Insert locking pins **3** as far as shown. **Do not over tighten.**

Step 3

Mounting the knobs to the plinth.

Fix the knobs **G** to the plinth **4** using screws **G**.

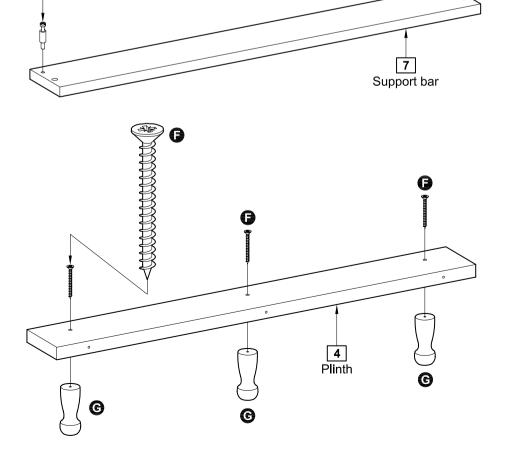

Step 4

Mounting the bottom to the plinth.

Press the bottom 3 onto the plinth 4.


Fix the bottom using screws **(a)** through the holes indicated.


Step 5

Mounting the sides to the shelf.

Press the sides 1 and 2 onto the shelf 6.

Fix the sides using screws
through the holes indicated.

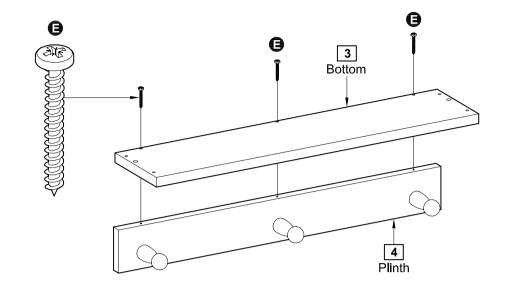

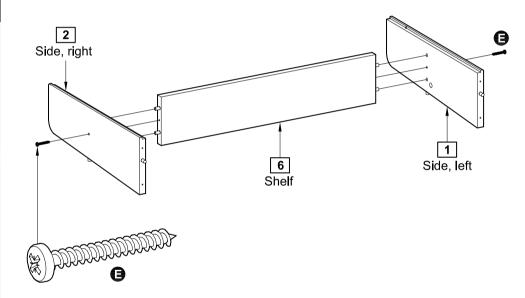


Step 6

Mounting the bottom to the sides.

Press the bottom 3 onto the sides 1 and 2.

Fix the bottom using screws **(a)** through the holes indicated.

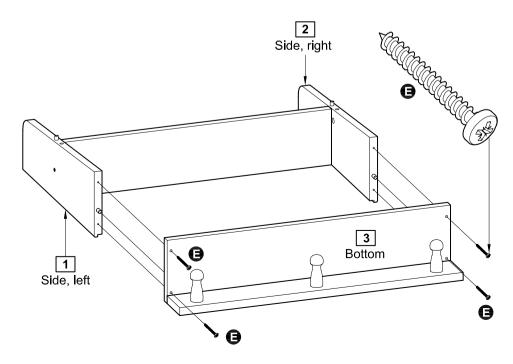

Step 7


Adding the support bar to the sides.

Fit the support bar 7 onto the sides 1 and 2.

See page 4 "Function of cam and locking pin".

Place the cams into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

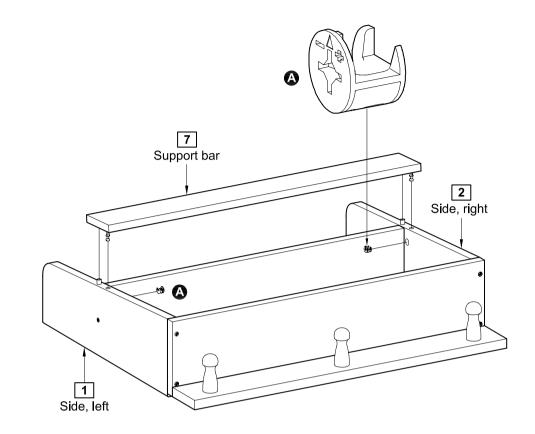

Step 8

Nailing the back to the sides and the bottom.

Place the back 5 into the rabbet of the sides 1 and 2, the bottom 3.


Ensure that there is no gap between the right hand side 2 and the back 5.

Fasten the back with nails **①** along the sides.

The angle between the back and the side must be 90 degrees.

To accomplish this, ensure that there is no gap between the right hand side 2 and the back 5.


Fasten the back with nails **D** along the bottom.

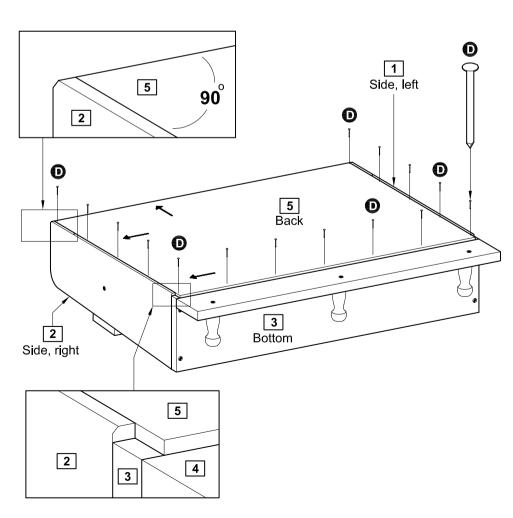

Step 9

Mounting the hanging plates to the sides.

Fix the hanging plates to the sides 1 and 2 using screws 1.

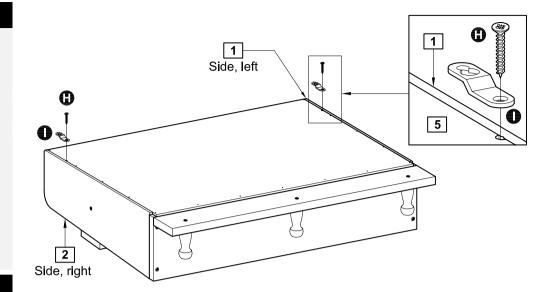

Step 10

Fixing to wall.

It is recommended that the shelving with hooks is fixed to a wall.

With help, move shelving with hooks into position.



Warning:

The shelving with hooks is heavy. **Lift with care.**

Mark fixing holes on wall and remove shelving with hooks.

Drill 7mm holes and insert wall plugs ① .




Warning:

Before drilling, check wall for hidden pipes and cables.

Reposition shelving with hooks and fix wall onto screws **(E)** .

Assembly is complete.

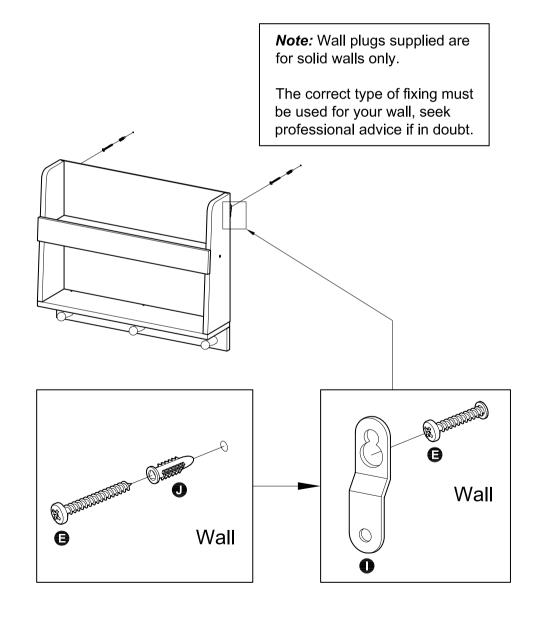

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

Dear Customer.

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is place in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.

Any flexing that has occurred during transport will re-correct it self once this product is correctly assembled.

Tighten all joints of the furniture after six months.

Please keep these instructions in a safe place for future use.