


BUSH

Instruction manual

CSPK200

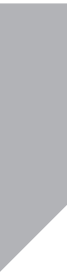



You'll soon be enjoying your new Party Speaker.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Party Speaker. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Contents

1 Safety information

Safety information	6
--------------------	---

2 Getting to know your Party Speaker

Ready? Let's begin	10
Accessories	10
Front and rear features	11
Control panel features	12
Remote control features	13
Preparing the remote control	14
Installing batteries in the remote control	14
Remote control range	14
Connecting the mains power cable	15
Extending the handle	15
Line/Aux-in input connection	16
Mic connection	17
Guitar connection	17
Standby mode	17
Switching input modes	17
Volume function	18
Mute function	18
Bass/ treble adjustments	18
Light effect	18

Contents

3 Using your Party Speaker

FM radio operation	20
Playing MP3's from a USB flash drive or SD card	20
USB/MP3 information	20
Connecting a Bluetooth device	21
Controlling a connected device	22

4 Other information


Care & maintenance	24
Technical specification	24

5 Product support

Troubleshooting	26
Help and assistance	27
Disposal	28
Guarantee	29

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

 Safety information 1

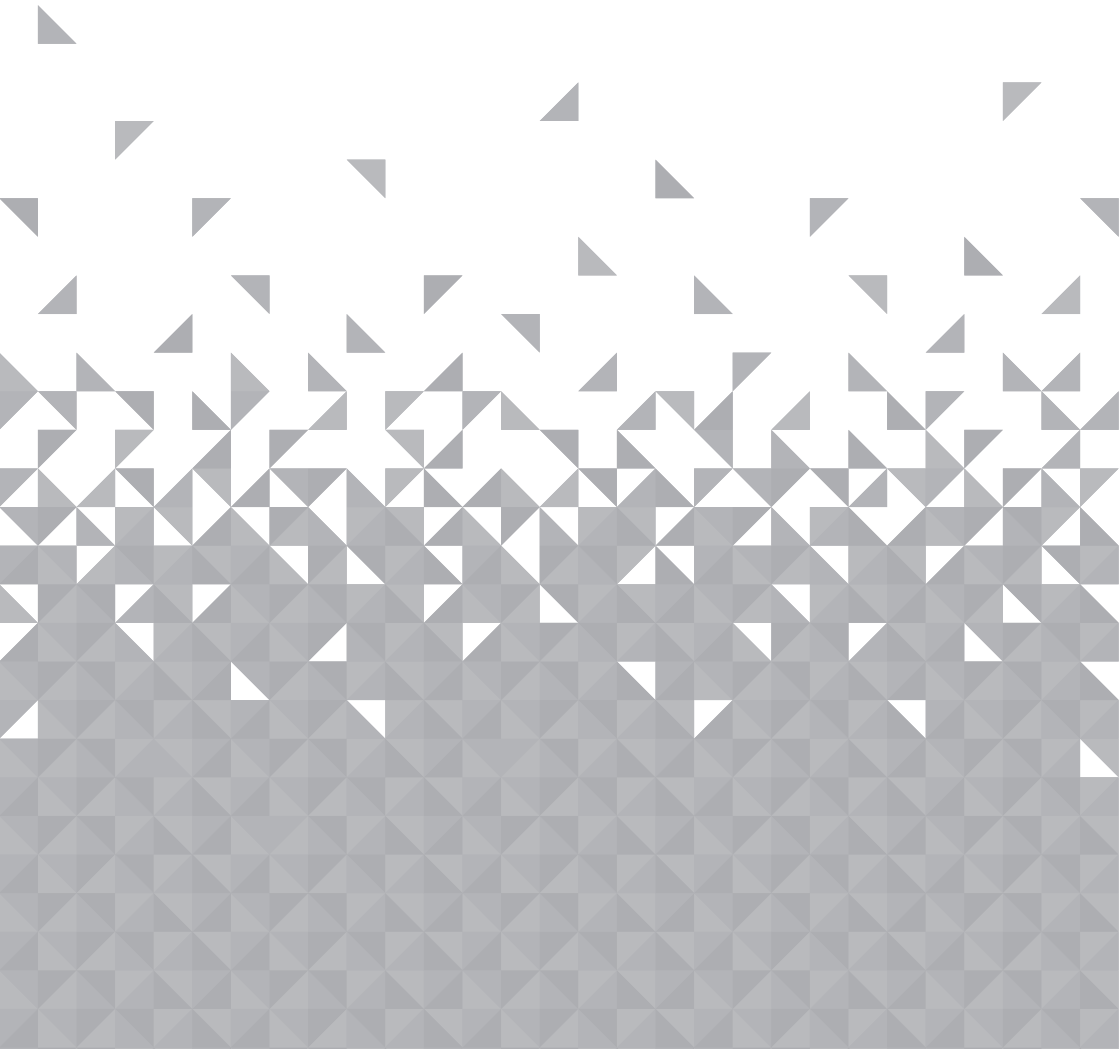



Safety information

Important - Please read these instructions fully before installing or operating

Power source



- This symbol means that this unit is double insulated. An earth connection is not required.
- The appliance must be connected to a 220-240 volt 50/60Hz AC supply by means of a three pin socket.
- Unplug this apparatus during lightning storms or when unused for long periods of time - to prevent damage to this product.



- Opening or removing covers may expose you to dangerous voltages or other hazards.



- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
- Use suitable power sources - Plug the product into a suitable power source, as described in the operating instructions or as marked on the product.
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- In order to disconnect the apparatus from the mains completely, switch off the outlet and remove the mains plug completely.



- Do not bend, stretch or pull the supply cable in order to avoid electric shock.
- When installed, the power socket must be within easy reach.

Moisture and water

- Do not use this apparatus near water or moisture.
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Safety information

Important - Please read these instructions fully before installing or operating

Heat sources and flames



- Batteries shall not be exposed to excessive heat such as sun, fire or the like
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.

Servicing and repairs

- Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped

This page is left intentionally blank

Getting to know your Party Speaker

2



Getting to know your Party Speaker

You'll be up and running in no time

 
 
 
Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Accessories


1. Party Speaker unit
2. Remote control
3. Mains cable

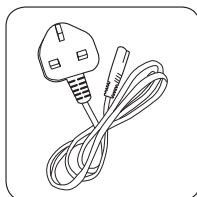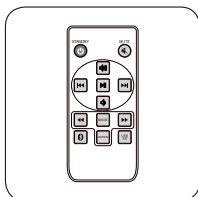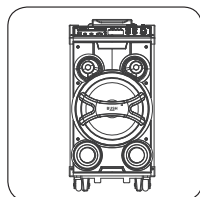

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Party Speaker

 You'll be up and running in no time

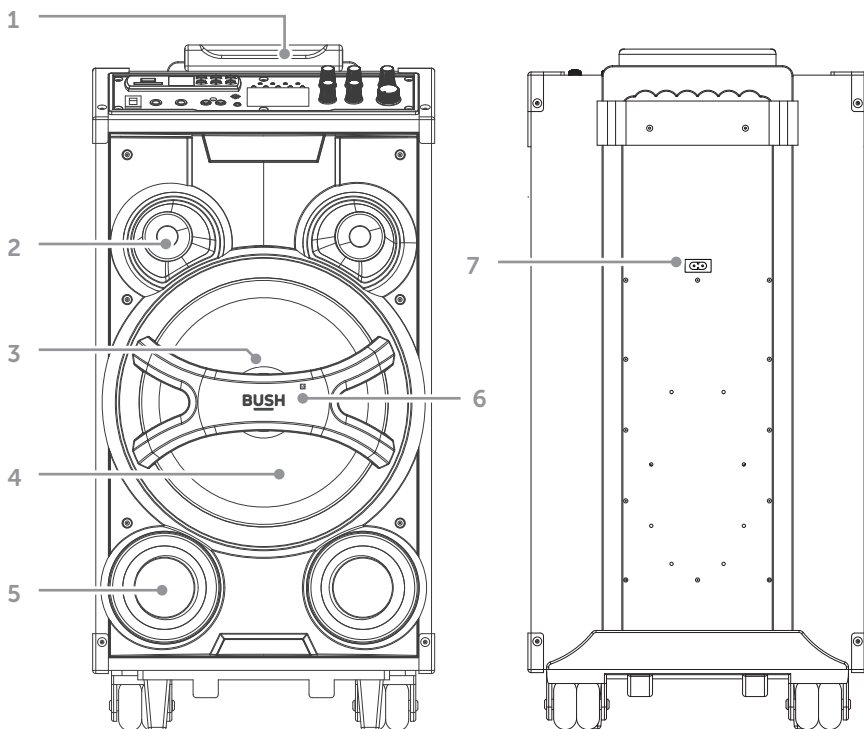


- | | |
|----------------------------|-------------------|
| 1. Extendible Carry handle | 5. Bass ports |
| 2. Tweeter speakers | 6. Remote sensor |
| 3. Light effects | 7. DC mains input |
| 4. Woofer speaker | |

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021.

Getting to know your Party Speaker

 You'll be up and running in no time

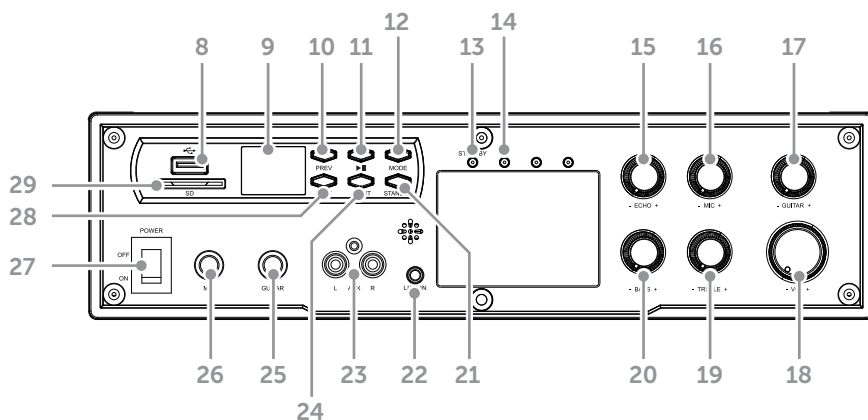


- | | |
|------------------------------------|------------------------------|
| 8. USB input port | 19. TREBLE control knob |
| 9. LED display | 20. BASS control knob |
| 10. PREVIOUS track button | 21. STANDBY button |
| 11. PLAY/ PAUSE button | 22. LINE-IN 3.5mm socket |
| 12. MODE button | 23. STEREO AUX input sockets |
| 13. POWER LED | 24. LIGHT effect button |
| 14. BT LED | 25. GUITAR 1/4" input socket |
| 15. ECHO control knob | 26. MIC 1/4" input socket |
| 16. MIC input volume level knob | 27. POWER switch |
| 17. GUITAR input volume level knob | 28. NEXT track button |
| 18. MASTER volume level knob | 29. SD card input slot |

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Party Speaker

 You'll be up and running in no time

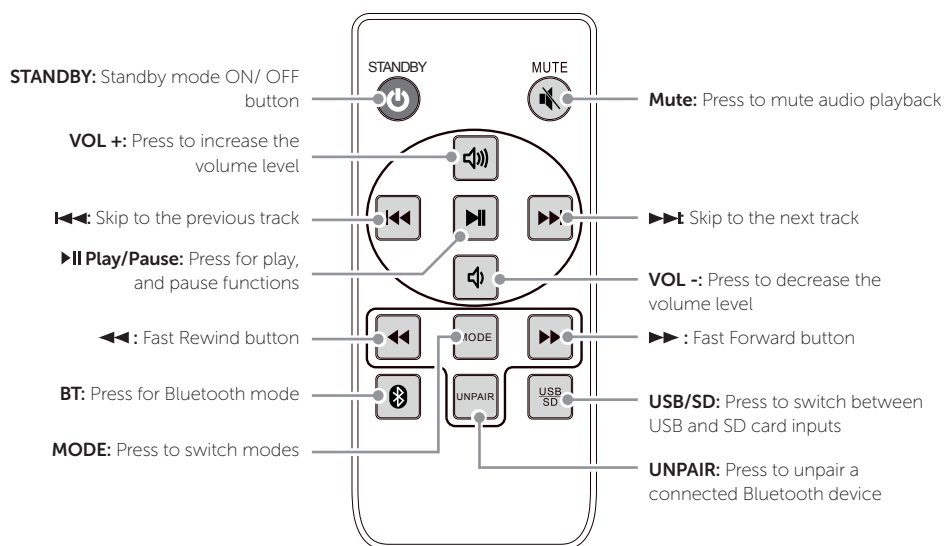


section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021.

Getting to know your Party Speaker

You'll be up and running in no time

Preparing the remote control

 
1. Before use remove the plastic tab inserted into the battery compartment on the rear of the remote control. **(Fig 1)**. Once remove the remote will be functional.

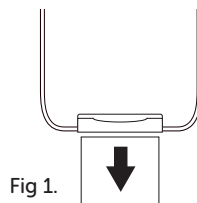

Installing batteries in the remote control

As the battery becomes exhausted the operating distance will shorten. When the remote no longer operates the unit, replace the battery with a new CR2025 lithium battery.

 
- Dispose of used batteries with regard to the recycling regulations in your area.
- Do NOT short circuit batteries or throw them into water, the general rubbish or in a fire. Weak batteries can leak and damage the remote control. Replace them in good time!
- Keep coin-sized button batteries out of sight and out of the reach of children. Coin lithium batteries can cause serious injury when swallowed.

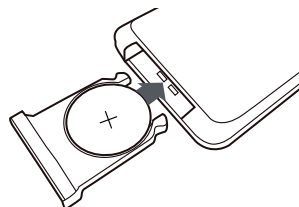

Dispose of used batteries with regards to the recycling regulations in your area. Do NOT short circuit batteries or throw them into water, the general rubbish or in a fire. Weak batteries can leak and damage the remote control. Replace them in good time.

Remote control range

 1. When using the remote control always point the top end towards the IR sensor on the front of the party speaker.
2. Ensure you are within approx 8M range and there are no objects covering the IR sensor on the front of the party speaker.
3. If the remote usage becomes intermittent or the operating distance is shortened, replace the CR2025 battery as outlined above.

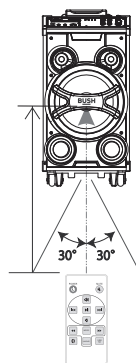

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Party Speaker

You'll be up and running in no time

Connecting the mains power cable

1. Insert the 'figure 8' shaped plug into the mains socket (7) on the rear of the unit.
2. Connect the mains plug to a wall outlet and switch on. (Fig 2)
3. Set the POWER switch (27) to the '1' ON position. The POWER LED (13) will illuminate.
4. Press the STANDBY button on the main unit or remote control to wake from standby. (Fig 2)


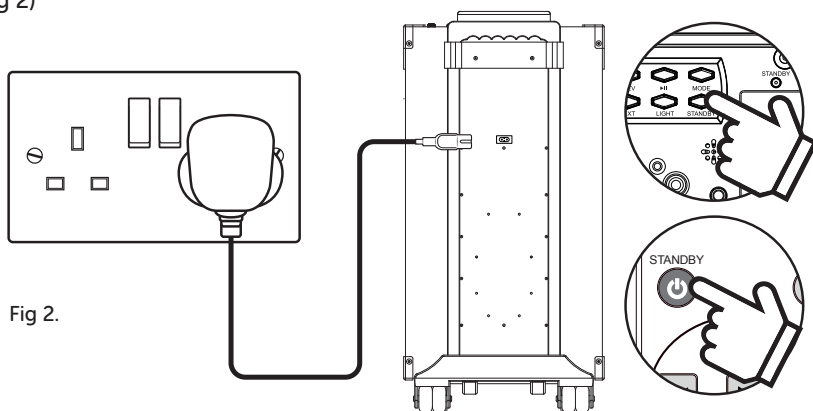 


Fig 2.

Extending the handle.

 1. Press the button on top of the handle and pull the handle upwards as shown.
2. Push the handle down as far as it will go to retract.

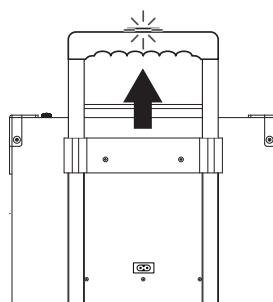

Getting to know your Party Speaker

You'll be up and running in no time

Line/AUX-in input connection

Follow the steps below to connect an external audio source (such as a smartphone) for playback through the party speaker..

You will need a 3.5mm audio cable or a 3.5mm to RCA cable (not supplied) to connect a device to the LINE IN (22) or AUX (23) input socket.

1. Connect one end of the 3.5mm audio cable to the LINE IN input socket (22) or RCA sockets (23) on top of the unit. (Fig 3) Connect the other end to an earphone or line-out socket on the audio device (such as a smartphone).
2. Switch to LINE IN input (LINE IN socket 22) or AUX input (AUX IN sockets 23) mode by pressing the MODE button on the main unit or remote repeatedly until you see LINE or AU IN on the display.
3. Press PLAY on the audio device.
4. Adjust the volume to your desired level.

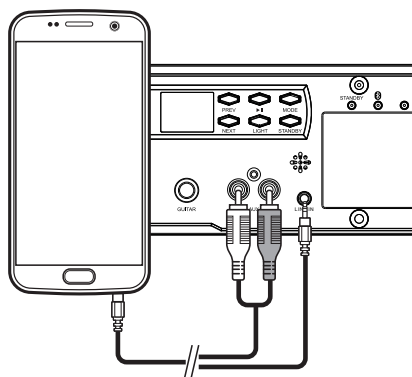 


Fig 3.

When connecting via the headphone output the volume of the mini system is affected by the volume control on the player. Ensure that the audio source (such as an MP3 player) is set to about 70-80% to avoid distortion.

When connecting to the AUX input sockets, take care to match the red socket to the red plug and the which socket to the white plug.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Party Speaker

You'll be up and running in no time

Mic connection

Follow the steps below to connect a microphone with a 1/4" jack plug.

1. Connect the 1/4" (6.3mm) plug to the MIC input **(26)** on top of the unit.
2. Once connected the volume is adjusted with the MIC volume control knob **(16)**.
3. The mic input also as an ECHO control. Rotate the ECHO control knob **(15)** to adjust the amount of echo on the mic output.

Guitar connection

Follow the steps below to connect a guitar using a 1/4" (6.3mm) jack cable (not supplied).

1. Connect one end of the 1/4" (6.3mm) jack cable to the guitar output and the other end to the GUITAR input **(25)** on top of the unit.
2. Once connected the volume is adjusted with the GUITAR volume control knob **(17)**.

Standby mode

This unit is designed to enter STANDBY mode automatically after 20 MINUTES (approximately) of inactivity. Press the STANDBY button on the unit or remote to wake the unit.

1. Press the STANDBY button on the unit or remote to put the system into standby.
2. To resume normal operation press either button again.

Switching input modes

Follow the below instructions to switch between Bluetooth, FM radio, AUX in and LINE in input modes.



1. Press the MODE button on the main unit **(12)** or remote repeatedly to cycle between Bluetooth, FM radio, AUX in and LINE in input modes.
2. Alternatively press the BT button on the remote for direct access to Bluetooth. And the U/SD button to switch between USB and SD card inputs.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on **0345 600 3021**.

Getting to know your Party Speaker

You'll be up and running in no time

Volume function

1. Rotate the VOLUME control dial **(18)** clockwise or press the  button on the remote control to increase the volume output.
2. Rotate the VOLUME control **(18)** anti-clockwise or press the  button on the remote control to decrease the volume output.

Mute function

Activating the mute function disables audio output from the speakers. Bluetooth, Radio etc will remain playing while mute is activated.

1. Press the MUTE button on the remote control to silence audio playback.
2. Press again to resume audio output once more.

Bass / Treble adjustments

Using the bass and treble control knobs you can adjust the sound output.

- Rotate each knob to increase or decrease the treble **(19)** / bass **(20)** level for the audio output.

 
Light effect

1. Press the LIGHT effect button **(24)** to begin the light show.
2. Press the LIGHT button to change the lighting effect. Up to 8 preset styles.
3. The 9th press of the LIGHT button will turn off the light effect.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Party Speaker

3

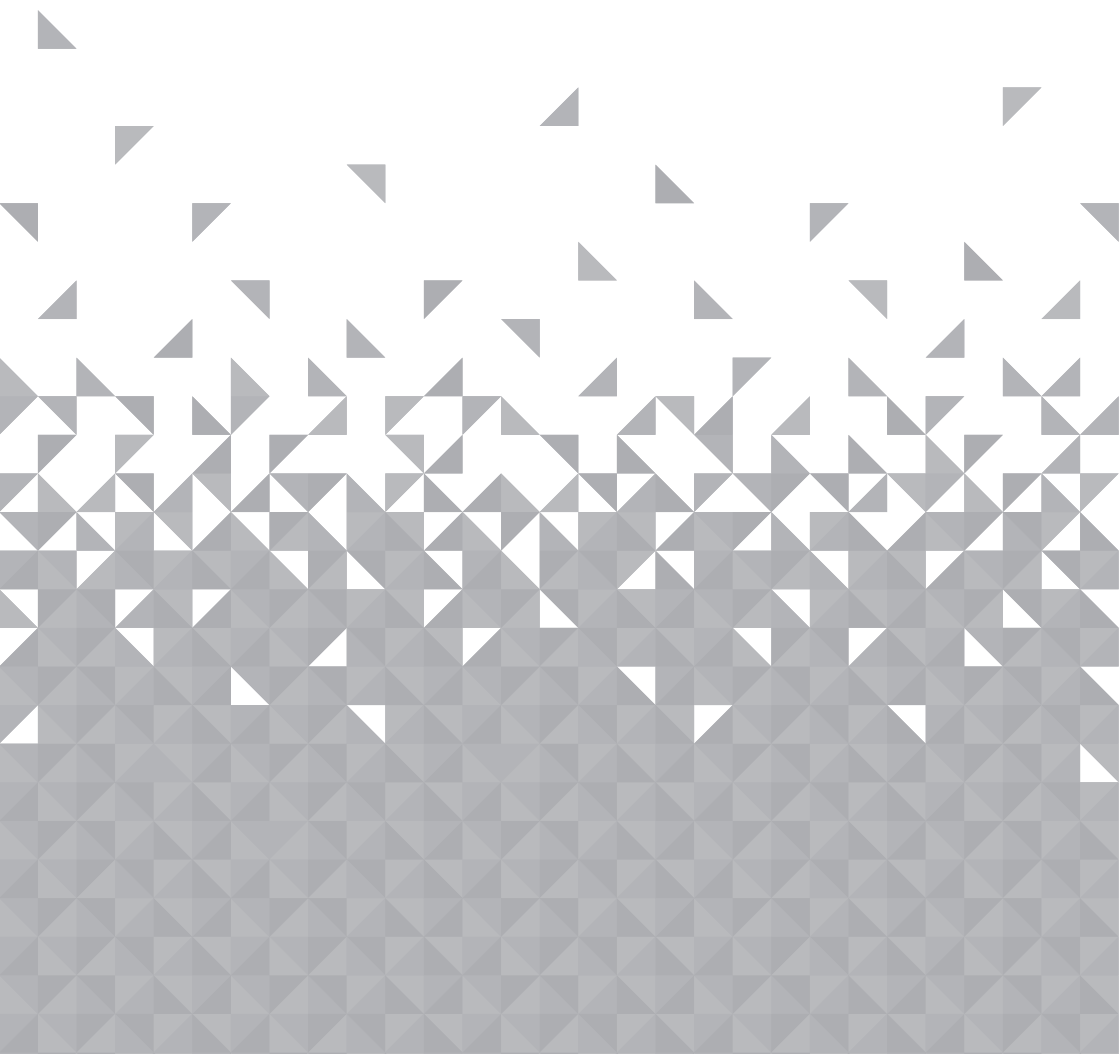

Using your Party Speaker

Let's get started

FM radio operation


1. Press the MODE button on the main unit or remote until you reach the FM radio mode. The display will show 'Fn' momentarily then change to an FM frequency.
2. Press the ►|| button on the main unit or remote control to begin an auto scan of the Fm band. Every station that is detected is saved to a preset location.
3. Use the NEXT ►► / PREV ◄◄ buttons to cycle between the saved station presets.

The position of the party speaker is important for a good FM reception. If you can't receive a station you know you should be able to; move the party speaker to a different location and try the scan again.

Playing MP3's from a USB flash drive or SD card

Follow the steps below to connect a USB flash drive or SD card and play mp3 files.

1. Insert a compatible USB flash drive or SD card into the USB input socket (8) or SD card input slot (29) on top of the unit. (Fig 4)
2. The device will be automatically detected and the first track in folder 01 or the root of the USB/SD card will begin playback automatically.
3. To pause playback press the ►|| button on the main unit (11) or remote control during playback. To resume playback press once more.
4. To skip to the next or previous track use the NEXT ►► / PREV ◄◄ buttons.

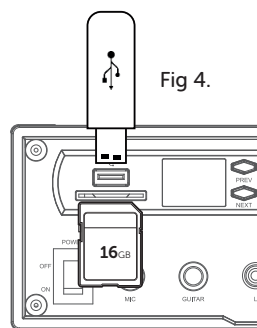 

USB/ MP3 information

- Do not remove the USB/SD card device during playback.
- Max 999 tracks and 99 folders can be recognised
- FAT 16, 32 formats only. Up to 64GB in size.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Party Speaker

Let's get started

Connecting a Bluetooth device

When using the Bluetooth connection, you can listen to audio wirelessly from a Bluetooth audio device (For example an MP3 player) within 10 metres of the Party Speaker unit.

1. When in Bluetooth mode you will see 'bt' appear on the display and the unit searches for previously paired devices or becomes available for new connections (indicated by the BT LED flashing)..
2. Enable Bluetooth on your audio device (For example a smartphone) and search for available bluetooth connections. Select the 'BUSH PARTY SPEAKER' from the list. If you are asked for a pass code enter '0000'. The BT LED will stop flashing once connected.

If you turn off either device before pairing is complete the process will need to be repeated when powered ON again.

3. Once paired an audible sound is heard through the speakers.

Each time you switch the Party Speaker on and select BLUETOOTH mode the device will automatically connect, unless you have un-paired the device on your bluetooth audio device.

4. You can now begin playback from the audio device and the output will playback through the Party Speaker.
5. When using a mobile phone as an audio source and you receive a phone call the audio playback stops while you receive the call. When you hang up the audio is restored.

The volume output is effected by the volume level on the audio source EG: Phone or laptop, so make sure that is set to about 70-80% (not too loud to avoid distortion).

6. To un-pair (disconnect) a bluetooth device, press the UNPAIR button on the remote control. The party speaker will now revert to search mode, and be available for new connections.

Using your Party Speaker

Let's get started

Controlling a connected device


Once connected you can either use the controls on the audio device to begin playback, skip tracks etc. Or you can use the control buttons on the unit/remote control.

1. The ►|| button on the main unit (**11**) or remote control when pressed will begin playback of the selected track on the audio device. Press again to pause playback.
2. To skip to the next track press the NEXT/ ►► button on the main unit or remote control.
3. To skip to the previous track press the PREV/ ◀◀ button on the main unit or remote control.

All other general audio functions such as MUTE, BASS, TREBLE & VOLUME work as described in this manual.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

 Other information 4

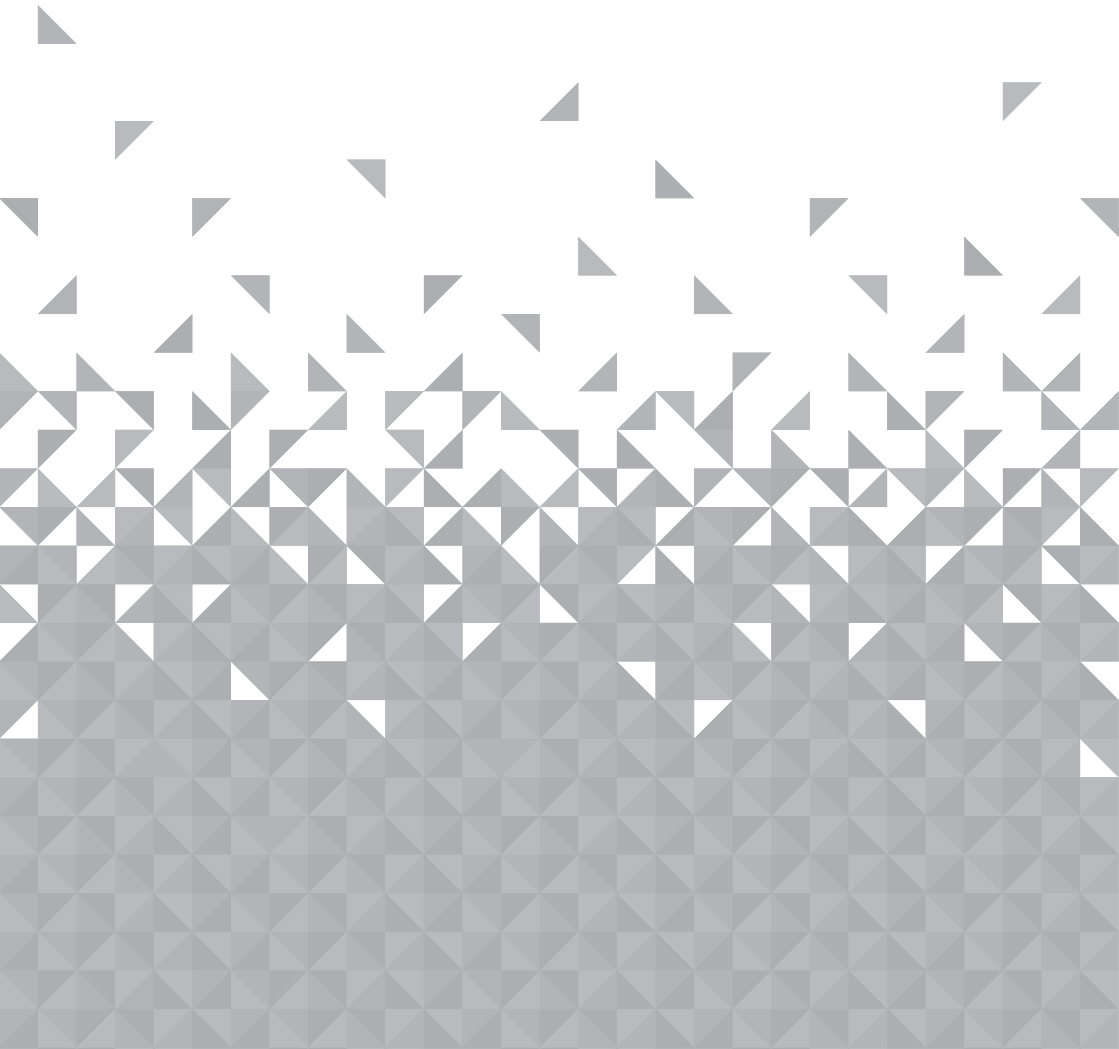

Other information

Helpful technical information

Care & maintenance

After using the Party Speaker

- Set to Standby.
- Switch the unit off at the mains and unplug it if you are leaving it unattended for a long period (holidays etc).
- Avoid leaving the battery fitted in the remote control. If you leave the unit unattended for long periods. They may leak and damage the remote control.

Care & cleaning


- All care and cleaning operations should be carried out with the unit unplugged from the mains power.
- Occasionally wipe the cabinet with a lint free duster. Never clean the unit with liquids or solvents.

Technical specification

Specification	Rating
Supply voltage	220-240V~50Hz
Max. power consumption	180W
Speaker power	200 MAX watts, 120w RMS @ 10% THD
FM	87.5-108 MHz
Bluetooth compatibility	EDR, A2DP, AVRCP
Bluetooth version	V3.0
Unit dimensions	327 x 360 x 635 mm

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

 Product support 5

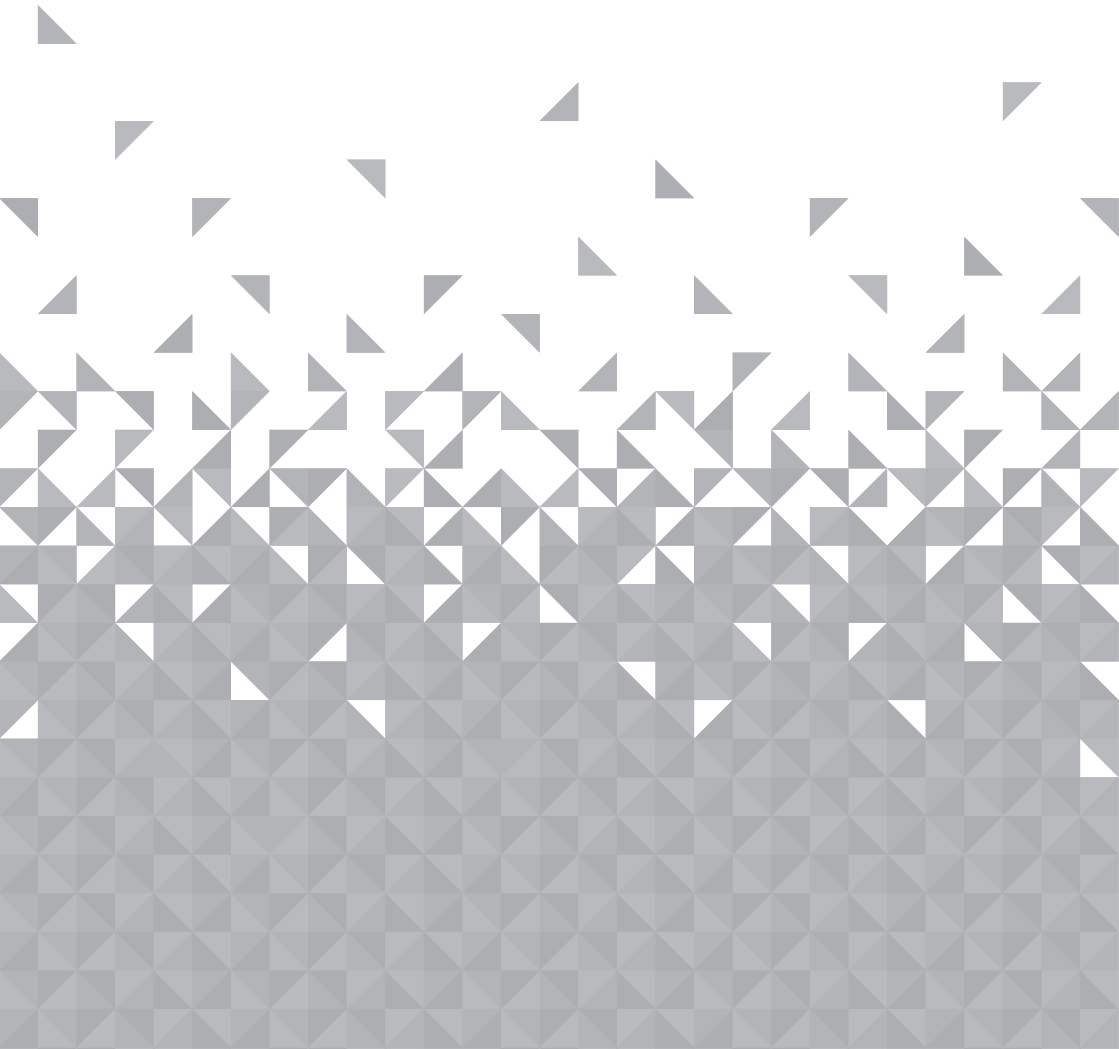

Product support

Help is always at hand

Troubleshooting

Problem	Reason(s)	Solution(s)
No power	Power cable not connected to wall socket.	Make sure the plug is connected.
	Power socket is not switched on.	Switch the power on.
No Sound	Volume is too low.	Increase the volume.
	LINE IN/AUX/BT source volume is too low.	Increase the output volume of the LINE IN/AUX/BT source.
	Microphone/Guitar input volume is too low.	Increase the volume of either mic or guitar input.
Sound is distorted	Volume is too high.	Reduce the volume.
Sound is distorted from LINE IN/AUX input	LINE IN/AUX source volume is too high.	Reduce the output volume of the LINE IN/AUX source.
The remote control is not working	The battery is flat	Replace the remote control battery
Bluetooth connection with an android device does not output sound.	Some older android builds may have incompatibility issues.	Use the volume buttons on the remote control only to bypass the incompatibility.
Unit switches off after 20 minutes of inactivity	Auto standby mode in operation.	This unit is designed to enter STANDBY mode automatically after 20 MINUTES of inactivity. Press the STANDBY button to wake the unit.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Party Speaker is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.	<div>CSPK200</div>	You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.
Serial number	<div></div>	
Date of purchase	<div></div>	This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Product support

Help is always at hand

Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license.

This product is intended for use within the UK.

Declaration of Conformance

Hereby Argos LTD declares that the radio equipment type Bush CSPK200 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <http://www.argos-support.co.uk>

Bluetooth Frequency Band 2.4Ghz.

Maximum radio-frequency power transmitted within above frequency band: 20dBm EIRP.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection **Officer, Domestic & General, Leicester House** 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at **www.argos-support.co.uk** If you still require further assistance, call one of our experts on **0345 600 3021**.

BUSH

Contact:

www.argos-support.co.uk

Helpline: 0345 600 3021

