



motorola



User's Guide

Digital Video Baby Monitor

Models: MBP35S, MBP35S-2, MBP35S-3, MBP35S-4

The features described in this User's Guide are subject to modifications without prior notice.

Welcome...

to your new Motorola Video Baby Monitor!

Thank you for purchasing the Motorola Video Baby Monitor. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their playroom.

Please retain your original dated sales receipt for your records.

For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please call:

UK 0844 557 0890

ROI 08187 62092

This User's Guide provides you with all the information you need to get the most from your product.


Before you can use the baby monitor, we recommend you insert and fully charge the battery in the parent unit, so that it continues to work if you disconnect it from the power supply to carry it to another location. Please read the Safety Instructions on pages 6 - 8 before you install the units.

Got everything?

- 1 x Parent unit
- 1 x Baby unit (Camera)
- 1 x Rechargeable Ni-MH battery pack
- 1 x Power adapter for the Parent unit
- 1 x Power adapter for the Baby unit

In multi-camera packs, you will have the additional camera and power adapter units.

Overview of the Parent Unit

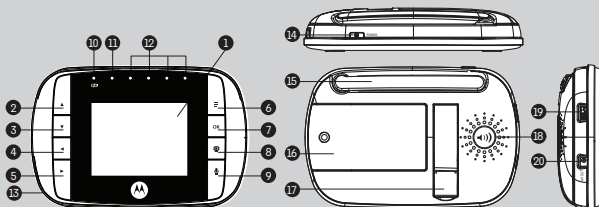










1. Display (LCD screen)
2. Up Key ▲
Normal Mode: Tilt Up
Menu Mode: Up
3. Down Key ▼
Normal Mode: Tilt Down
Menu Mode: Down
4. Left Key ◀
Normal Mode: Pan Left
Menu Mode: Left
5. Right Key ▶
Normal Mode: Pan Right
Menu Mode: Right
6. Menu Key ≡
Press to open the Menu options
7. OK Key **OK**
8. Video ON/OFF Key
Press to turn OFF the LCD display
Press again to turn ON the LCD display
9. Talk Key
Press and hold to speak to your baby
10. Power Indicator LED
BLUE when mains adapter power on.
RED when battery low.
11. Unit ON/OFF LED (Green)
12. Audio Level LED (Green, Orange, Red, Red)
13. Microphone
14. Power Key
Press and Hold to turn the unit ON/OFF
15. Antenna
Lift the antenna for optimal reception
16. Battery compartment cover
17. Stand
18. Speaker
19. USB power adapter socket
20. AV out / Audio out


Parent unit menu icons

	Signal Level (4 Levels + OFF)
	Night Vision Mode (Screen changes to Black/White)
	Talk Mode
	Battery Level Indication (4 Levels)
	Pan Left
	Pan Right
	Tilt Up
	Tilt Down

Parent unit menu icons (cont'd)

	Volume Level Control (8 Levels)
	Zoom Level Control (1X, 2X)
	Brightness Level Control (8 Levels)
	Lullaby Control (5 Song Selections)
	Alarm Setting (6h, 4h, 2h, Off)
	Temperature scale select (°C / °F). Readings display in BLUE, but turn RED if > 29 °C / 84 °F or < 14 °C / 57 °F. Displays HH °C / °F if > 36 °C / 97 °F. Displays LL °C / °F if < 1 °C / 34 °F.
	Camera Selection (scan, view, add, delete)
	View multiple cameras on screen (Picture in Picture). Available when you have more than 1 Baby Unit (Camera).
	Set Video On Timer (5 min, 30 min, 60 min)

Overview of Your Baby Unit

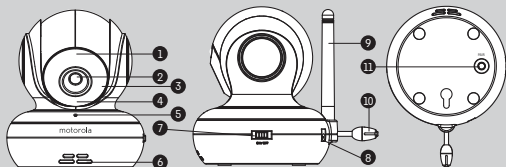

- | | |
|-------------------------------------|-------------------------|
| 1. Photo Sensor (Night Vision Mode) | 7. ON/OFF Switch |
| 2. Camera Lens | 8. Power Adapter Socket |
| 3. Infrared LED | 9. Antenna |
| 4. Power LED | 10. Temperature Sensor |
| 5. Microphone | 11. Pair Key |
| 6. Speaker | |

Important guidelines for installing your Baby Monitor

- To use your Video Monitor Baby and Parent Units together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete between the Baby and Parent Unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth™ systems, or microwave ovens, may cause interference with this product, so keep the baby monitor away at least 5ft (1.5m) from these types of products, or turn them off if they appear to be causing interference.
- If the signal is weak, try lifting up the Parent Unit Antenna, or move the Parent and/or the Baby Unit to different positions in the rooms.



Table of contents


1. Safety Instructions	6
2. Getting Started	9
2.1 Baby Unit Power Supply	9
2.2 Parent Unit Battery Installation	9
2.3 Parent Unit Power Supply	10
2.4 Registration (Pairing)	11
2.5 View Video Through TV	11
3. Using the Baby Monitor	12
3.1 Setting up	12
3.2 Pan and Tilt	12
3.3 Night Vision Mode	12
3.4 Talk Mode	12
3.5 Video ON/OFF	12
3.6 Temperature Display (HH °C / °F or LL °C / °F)	13
4. Parent Unit Menu Options	14
4.1 Volume	14
4.2 Brightness	14
4.3 Lullaby	14
4.4 Zoom	14
4.5 Alarm	14
4.6 Camera Control	15
4.6.1 Add (pair) a camera	15
4.6.2 View a camera	15
4.6.3 View multi-cameras on screen	15
4.6.4 Delete a camera	16
4.6.5 Scan camera	16
4.6.6 View multiple cameras on screen	16
4.7 Temperature	17
4.8 Power Saving mode	17
5. Disposal of The Device (environment)	18
6. Cleaning	19
7. Help	20
8. General Information	22

1. Safety Instructions



WARNING:

Strangulation Hazard. Children have **STRANGLED** in cords. Keep this cord out of the reach of children (more than 1m away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.

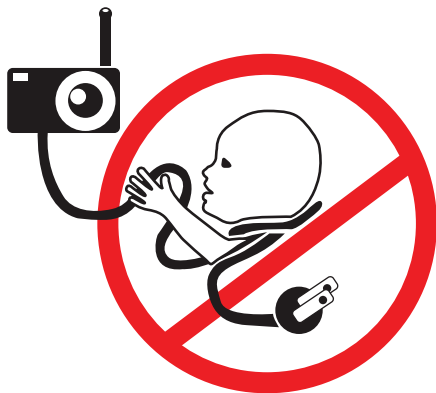

BABY UNIT SET UP & USE:

- Determine a location for the Baby Unit that will provide the best view of your baby in his/her cot.
- Place the BABY UNIT on a flat surface, such as a dresser, bureau, or shelf or mount the Unit to a wall securely using the keyhole slot in the underside of its stand.
- NEVER place the Baby Unit or cords within the cot.
- Do not place the Baby Unit or cords in the cot or within reach of the baby (the unit and cords should be more than 1 metre away).

WARNING

This digital video baby monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This baby monitor is not a substitute for responsible adult supervision.
- Keep this user's guide for future reference.
- Do not place the baby unit or cords in the cot or within reach of the baby (the unit and cords should be more than 1 metre away)
- Keep the cords out of reach of children.
- Do not cover the baby monitor with a towel or blanket.
- Never use extension cords with power adapters. Only use the power adapters provided.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the baby monitor near water.
- Do not install the baby monitor in extreme cold or heat, direct sunlight or close to a heat source.



- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.
- Only insert a battery pack of the same type.
- Do not touch the plug contacts with sharp or metal objects.

CAUTION


There is a risk of fire or explosion if the parent unit battery is replaced by an incorrect type.

Only use a Ni-MH rechargeable battery pack with rating: 3.6V, 900mAh.

Dispose of used batteries according to their instructions.

2. Getting Started

2.1 Baby Unit Power Supply

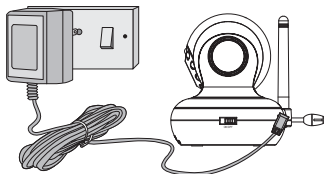


1. Connect the small plug of the power adapter to the baby unit (camera) and the other end to a suitable mains power socket.

NOTE


Only use the enclosed power adapter (5V DC / 1000mA).

2. Slide the ON/OFF switch to the ON position. The power LED will light up in green.
3. Slide the ON/OFF switch to the OFF position to turn the Baby Unit off.

2.2 Parent Unit Battery Installation

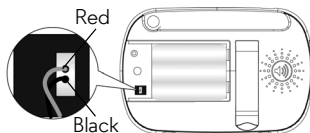


1. Insert the wire tab of the rechargeable battery pack into the contact slot as shown above and fit the battery pack into the compartment.

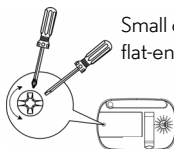

Small cross-head or flat-end screwdriver.




2. Replace the battery cover over the compartment and gently tighten the screw in a clockwise direction using a small cross-head or flat-end screwdriver.

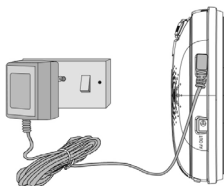2.3 Parent Unit Power Supply

 


IMPORTANT

Installing the rechargeable battery pack and charging it fully before use is recommended, to allow temporary battery operation if the unit is moved.

1. Connect the small plug of the power adapter to the parent unit and the other end to a suitable mains power socket. Only use the enclosed power adapter (5V DC / 600mA) with the micro-USB style plug.
2. Press and hold the  POWER ON/OFF button for more than 1 second to turn ON the parent unit.
3. Once the baby and parent units are switched on, the display on the parent unit will show the video captured by the baby unit.
4. If there is no connection or you are out of range, the video display will be replaced by a  symbol and the unit will beep every 5 seconds. Move the parent unit closer to the baby unit until the link is re-established.
5. Press and hold the  POWER ON/OFF button, until the progress bar finishes scrolling, to turn OFF the parent unit.

NOTE

The battery icon  turns RED to indicate that the battery is low, and it gives a beep every 16 seconds. The battery needs to be recharged. The battery pack takes about 12 hours to charge fully.

 
 




 






 



When charging

1. During charging, the battery icon at the top right of the screen indicates that it is charging. If the parent unit is turned off while charging, a plug icon shows for 5 seconds, followed by a battery icon for 45 seconds. The Blue LED at the top left indicates the mains adapter is plugged in.

2.4 Registration (Pairing)

The Baby monitor is pre-registered to your Parent Unit. You do not need to register it again unless the Baby Unit loses its link with the Parent Unit.




To re-register your Baby Unit, or register a new Baby Unit, follow the procedure below:

1. Press the  button of the parent unit and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, and the  /  /  /  menu will pop up.
3. Press the  UP button or  DOWN button to select , and press the **OK** button to confirm.
4.  /  /  /  will pop up, press the  UP button or  DOWN button to select the desired camera position and press the **OK** button to start searching for a camera unit. The green audio level LED will flash rapidly while searching.
5. Press the **OK** button to confirm.
6. Press and hold the PAIR button underneath the baby unit until the parent unit finds the camera, beeps and the video from the camera appears.

NOTE

If a particular Baby Unit was registered previously, registering this current Baby Unit again will overwrite the old registration.

2.5 View Video Through TV

Connect a suitable AV cable into the AV OUT socket on the side of the Parent Unit and into the AV input of the TV. Press the  LEFT button or  RIGHT button to select  on the Parent unit. Select the AV input on the TV menu until the Baby monitor picture is visible. AV cable is an optional accessory, which is to be purchased separately.

NOTE

You can hear also your baby in mono mode by connecting the 3.5mm plug wired headset to the AV OUT socket.

3. Using the Baby Monitor

3.1 Setting up

- Place the baby unit in a convenient location (e.g. on a table) and point the camera lens towards the area you want to monitor.
- Adjust the baby unit's head angle by panning or tilting the camera up, down, left and right until you are satisfied with the image in the parent unit.

NOTE

Do not place the baby unit within the baby's reach! If there is interference with the picture or sound, try moving the units to different locations, and ensure they are not close to other electrical equipment.

3.2 Pan and Tilt

The camera can be remotely controlled from the parent unit.

1. Press the ▲ UP button or ▼ DOWN button to tilt upward or downward.
2. Press the ◀ LEFT button or ▶ RIGHT button to pan left or right.

3.3 Night Vision Mode

The baby unit has 8 high-intensity infrared LEDs for picking up clear images in the dark. When the built-in photo sensor on the top of the unit detects a low level of ambient light, the LEDs will automatically activate and the screen on the parent unit will display in black and white. The 🌙 icon will be displayed at the top of the screen.

3.4 Talk Mode

Press and hold the 🗣️ TALK button on the parent unit to talk to your baby through the baby unit's loudspeaker. The 🗣️ icon will be displayed at the top of the LCD screen.

3.5 Video ON/OFF

Press the 📺 VIDEO ON/OFF button to turn the LCD display on or off, but still leave the audio monitor on.

3.6 Temperature Display (HH °C / °F or LL °C / °F)

The temperature reading from the temperature sensor at the back of the Baby Unit will be displayed at the top of the Parent Unit LCD screen.

The readings will turn RED if the temperature goes above 29°C / 84°F or below 14°C / 57°F.

 





The reading will change to HH °C / °F if the temperature goes above 36°C / 97°F.

The reading will change to LL °C / °F if the temperature goes below 1°C / 34°F.





4. Parent Unit Menu Options

 




 

 
4.1 Volume

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select the desired volume level from level 0 ~ 8. (The default volume level setting is level 4.)

 




 
4.2 Brightness

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select the desired brightness level from level 1 ~ 8. (The default brightness level setting is level 5.)

 





4.3 Lullaby

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select the desired song from the 5 lullabies available, or the cycle option to play all 5 songs in turn. (The default setting is lullaby OFF)
4. Press **OK** on the selected lullaby, and then press the  UP button or  DOWN button to select the desired song sound level.

4.4 Zoom

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select the 1X or 2X Zoom. (The default setting is 1X.)

4.5 Alarm

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select the alarm time (6h, 4h, 2h). (The default setting is Alarm OFF.)
4. If an alarm time is selected, the parent unit will beep for about 45 seconds after every 6, 4 or 2 hour period.



4.6 Camera Control

4.6.1 Add (pair) a camera

1. Press the button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted, and the / / / menu will pop up.
3. Press the UP button or DOWN button to select , and press the **OK** button to confirm.
4. / / / will pop up, press the UP button or DOWN button to select the desired camera position, and press the **OK** button to start searching for a camera unit. The green audio level LED will flash rapidly while searching.
5. Press and hold the PAIR button underneath the baby unit until the parent unit finds the camera, beeps and the picture from the camera appears.

NOTE

A camera can only be registered to one parent unit at any one time.

4.6.2 View a camera

1. Press the button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted and the / / / menu pops up.
3. Press the UP button or DOWN button to select , and press the **OK** button to confirm.
4. / / / will pop up, press the UP button or DOWN button to select desired camera, and press the **OK** button to view the picture from that camera.

TIP

Quick Method to View Cameras instead of entering into the menu bar.

*Directly press **OK** repeatedly to select 1, 2, 3, 4, .*



4.6.3 Delete a camera

1. Press the button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted, and the / / / menu will pop up.
3. Press the UP button or DOWN button to select , and press the **OK** button to confirm.
4. / / / will pop up, press the UP button or DOWN button to select the desired CAM, and press the **OK** button to delete that registration.

Note:

You are not allowed to delete the camera if there is only one registered camera in the system.

4.6.4 Scan camera

1. Press the button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted, and the / / / menu will pop up.
3. Press the UP button or DOWN button to select , and press the **OK** button to confirm.
4. The screen will then display images from different registered cameras in a loop of / / / , changing about every 12 seconds.

TIP

Quick Method to View Cameras instead of entering into the menu bar.

Directly press **OK** repeatedly to select .







4.6.5 View multiple cameras on screen

This function is only available when you have more than 1 Baby Unit (Camera). When the Picture in Picture function is On, you can view multiple cameras on the screen.







1. Press the button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted.
3. Press the **OK** button to select Picture in Picture On/Off.
4. When the Picture in Picture function is On, you can press the LEFT button / RIGHT button / UP button / DOWN button to switch between cameras.



4.7 Temperature

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select °C or °F.

4.8 Power Saving mode

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select auto video off after 5 mins, 30 mins or 60 mins if not in charging mode.

5. Disposal of The Device (environment)

At the end of the product lifecycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be reused if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

6. Cleaning

Clean the Baby Monitor with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals – this may cause permanent damage to the product which is not covered by the warranty.
- Keep the Baby Monitor away from hot, humid areas or strong sunlight, and don't let it get wet.
- Every effort has been made to ensure high standards of reliability for your Baby Monitor. However, if something does go wrong, please do not try to repair it yourself – contact Customer Service for assistance.



IMPORTANT

Always switch off and disconnect the power adapter before cleaning your baby monitor.

7. Help

Display

No display

- Try recharging or replacing the battery pack.
- Reset the units. Disconnect the battery pack of the parent unit and unplug both the units' electrical power, then plug them back in.
- Is the unit turned on?
Press and hold the ON/OFF button  on the Parent Unit to turn it ON.
Slide the ON/OFF switch on the Baby Unit to ON.
- Is the correct camera selected?
Change the camera number, if necessary.
- Is the video display turned on?
Press the VIDEO ON/OFF button  to turn it on.
- When operating using batteries only, the Display will go blank after 5 minutes or 30 minutes or 60 minutes to save power (depending on video on setting). The unit is still active and will give you audio alerts. You can reactivate the screen by pressing any button.

Registration

If the Baby Unit has lost its link with the Parent Unit

- Try recharging or replacing the battery pack.
- If the Baby Unit is too far away it may be going out of range, so move the Baby Unit closer to the Parent Unit.
- Reset the units by disconnecting them from the battery and electrical power. Wait about 15 seconds before reconnecting. Allow up to one minute for the Baby Unit and the Parent Unit to synchronise.
- See 2.4 Registration (Pairing), if there is a need to re-register the units.

Interference

Noise interference on your parent unit

- Your baby and parent units may be too close. Move them farther apart.
- Make sure there is at least 1m to 2m (3 to 6 feet) between the 2 units to avoid audio feedback, and reduce the volume of the Parent Unit.
- If the baby unit is too far away it may be out of range, so move the baby unit closer to the parent unit.
- Make sure the baby and parent units are not near other electrical equipment, such as a television, computer or cordless/mobile telephone.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth™ systems, or microwave ovens, may cause interference with this product, so keep the baby monitor away at least 1.5m (5ft) from these types of products, or turn them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or Baby Unit to different positions in the rooms.

8. General Information

If your product is not working properly....

1. Read this User's Guide or the Quick Start Guide.
2. Contact Customer Service:
UK 0844 557 0890
ROI 08187 62092

To order a replacement battery pack, contact customer service.

Consumer Products and Accessories Limited Warranty ("Warranty")

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

What Does this Warranty Cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

What will BINATONE do?

BINATONE or its authorised distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for Ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorised Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorised service centres, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

UK 0844 557 0890

ROI 08187 62092

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorised Repair Centre.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent, employee or staff of BINATONE, that may have been made in connection with the said purchase.



motorola

BINATONE TELECOM PLC

1 Apsley Way London NW2 7HF, United Kingdom.
Tel: +44(0) 20 8955 2700 Fax: +44(0) 20 8344 8877
e-mail: binatoneuk@binatonetelecom.co.uk

EC Declaration of Conformity

We the manufacturer / Importer : Binatone Telecom Plc
1 Apsley Way London
NW2 7HF, United Kingdom.

Declare under our sole responsibility that the following product

<u>Type of equipment:</u>	<u>Digital Video Baby Monitor</u>
<u>Model Name:</u>	<u>MBP35S, MBP35S-2, MBP35S-3, MBP35S-4</u>
<u>Country of Origin:</u>	<u>China</u>
<u>Brand:</u>	<u>Motorola</u>

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to **Radio Spectrum Matters**, the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to **electromagnetic compatibility (EMC)** and the European Community Directive 2006/95/EC relating to **Electrical Safety**. Directive 2011/65/EC on the restriction of use of hazardous substances (RoHS) and 2009/125/EC relating to ecodesign requirement for Energy-Related Products (ErP).

Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standard:

Radio Spectrum:	EN300328 V1.7.1 (2006-10)
EMC:	EN301489-17 V2.2.1 (2012-09), EN301489-1 V1.9.2 (2011-09)
Electrical Safety:	IEC60950-1:2005(Second Edition) + Am 1:2009
RF Safety:	EN62311: 2008

The product is labelled with the European Approval Marking CE as show. Any Unauthorised modification of the product voids this Declaration.



Manufacturer / Importer
(Signature of authorised person)

Karl Heinz Mueller / Chief Technical Officer

London, 10 March, 2015

Place & Date

Technical Specifications

Baby unit

Frequency	2.4 GHz to 2.48 GHz
Image sensor	colour CMOS 0.3M Pixels
Lens	f 2.5mm, F 2.8
IR LED	8 pcs
Power	<p>Adapter: Ten Pao International Ltd. S005ANB0500100; Input: 100-240V, 50/60HZ 300mA; Output: 5.0V, 1000mA</p> <p>OR</p> <p>Adapter: Kuantech Incorporated Company KSAS0050500100VKD; Input: 100-240V, 50/60Hz 300mA; Output: 5.0V, 1000mA</p> <p>WARNING Use only with supplied power supply.</p>

Parent unit

Frequency	2.4 GHz to 2.48 GHz
Display	2.8" diagonal TFT LCD
Display colours	16.7M colour LCD
Brightness control	8 steps
Volume control	8 steps
Power	<p>Adapter: Ten Pao International Ltd. S003GB0500060; Input: 100-240V, 50/60Hz 150mA; Output: 5.0V, 600mA</p> <p>OR</p> <p>Adapter: ShenZhen Frecom Electronic Co., LTD F05W-050060SPAB Input: 100-240V, 50/60Hz 150mA; Output: 5.0V, 600mA</p> <p>WARNING</p> <p>Use only with provided power supply.</p> <p>Battery: GPI GPRHCH93C021 Ni-MH AAA 3.6V 900mAh rechargeable battery pack</p> <p>OR</p> <p>JUSTHIGH Ni-MH AAA 3.6V 900mAh rechargeable battery pack</p> <p>WARNING</p> <p><i>Do not use non-rechargeable batteries for the Parent Unit. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.</i></p>

Specifications are subject to change without prior notice.



motorola

Manufactured, distributed or sold by
Binatone Electronics International LTD.,
official licensee for this product.
MOTOROLA and the Stylised M Logo,
are trademarks or registered trademarks
of Motorola Trademark Holdings, LLC.
and are used under license. All other
trademarks are the property of their
respective owners. © 2015 Motorola
Mobility LLC. All rights reserved.



UK_EN Version 6.0

Printed in China