# LARGE TV UNIT


Assembly Instructions - Please keep for future reference

798/2578

752/8891

760/5367



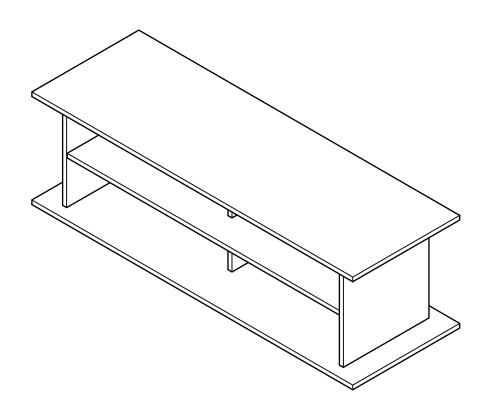

#### **Dimensions**

Width - 120cm

Depth - 40cm

Height - 38cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800



# Safety and Care Advice

#### Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the panels during assembly, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 We do not recommend the use of power drill/driver for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.


#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
  Take to your local authority waste disposal centre.

**Note:** If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

# Components - Panels

### Please check you have all the panels listed below

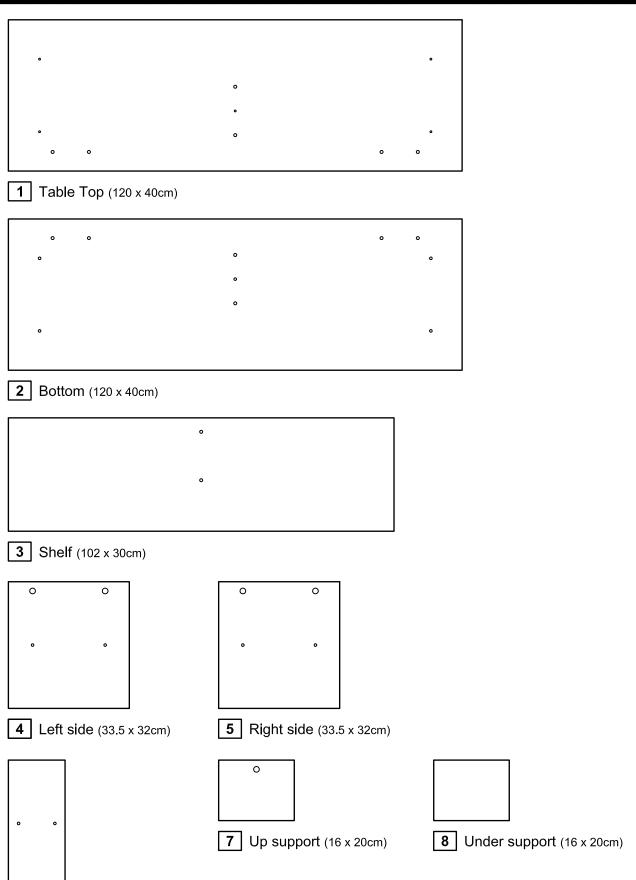



**6** Back x 2 (33.5 x 15cm)


# Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** 

 
#### Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

	<b>B</b>	<b>G</b>
Locking pin x 5	Locking nut x 5	30mm Dowel x 12
57mm Screw x 13	Foot x 5	17mm Screw x 5
G T		0
13mm Plastic plug x 4	16mm Plastic plug x 5	50mm Dowel x 2

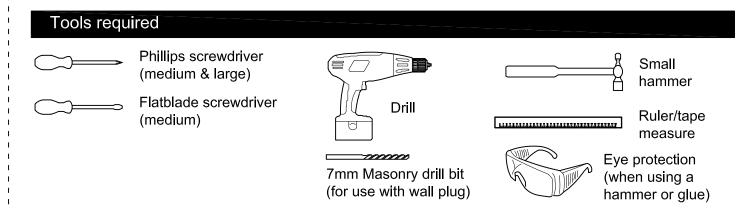





Ruler - Use this ruler to help correctly identify the screws

## Step 1


#### Fitting the shelf


a: Insert dowels @into the panels 6 x2 and 7.


the panel 3.

**b:** Insert dowels **1** into

**C:** Use screws **D** to fix back panels 6 onto shelf 3.

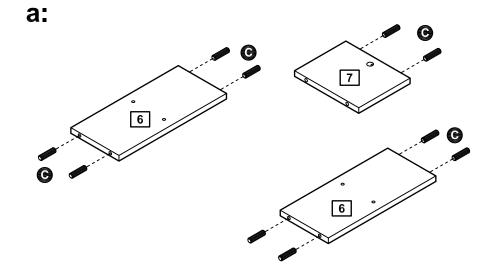

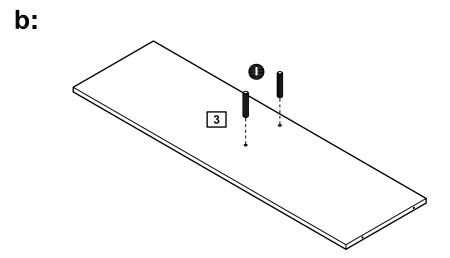

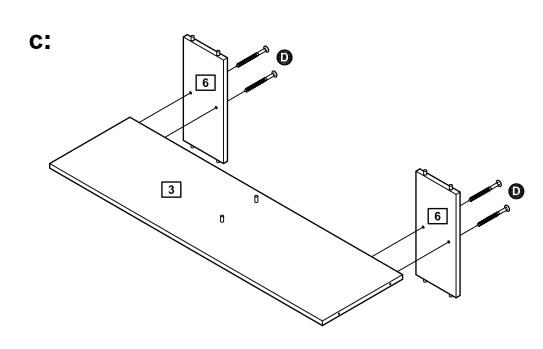

### Step 1 - continued

#### Fitting middle part

**d:** Fit up support 7 and under support 8 into the unit.


d: 3

**e:** Use screws **①** to fix right panel **5** and left panel **4** onto the unit.

# Step 2

#### Fitting the table top


a: Screw locking pins a into table top 1. Insert locking pins as far as shown.

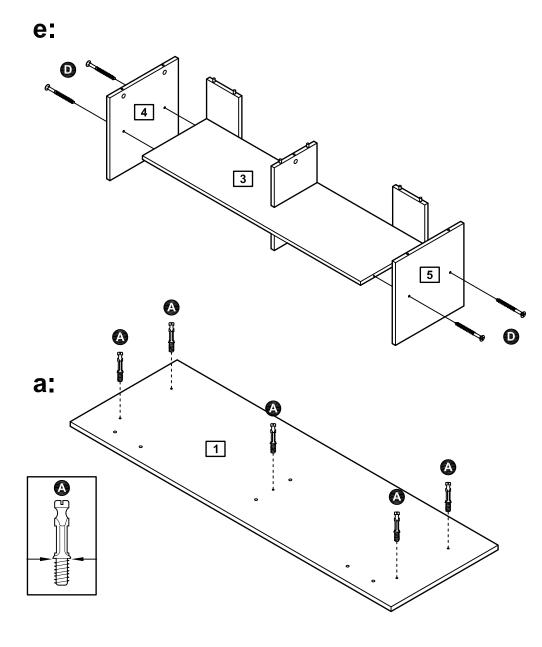

### Step 2 - continued

**b:** Attach table top 1 onto the unit.


c: Insert locking nuts into left side panel 4 and right side panel 5, then use a screwdriver to turn locking nuts clockwise to lock.

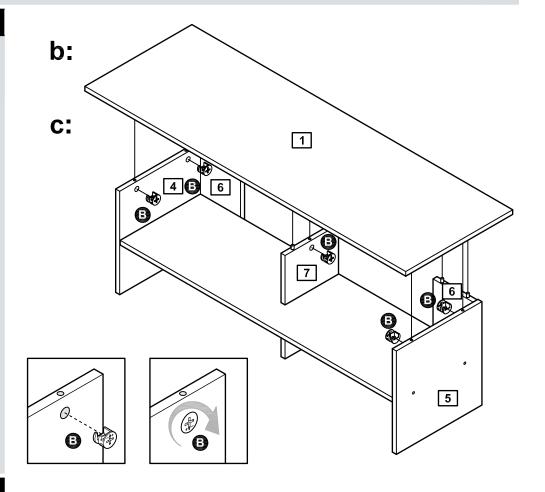

## Step 3

#### Fitting the bottom panel

**a:** Use screws **D** to fix bottom panel **2** onto the unit.

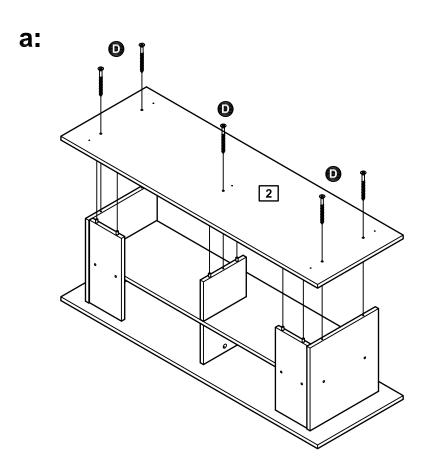

### Step 3 - continued


#### Fitting the feet


**b:** Use screws to fix the feet onto the unit.

## Step 4

#### Finishing the unit

**a:** Use plastic plugs **G** and **()** to cover the screw heads.

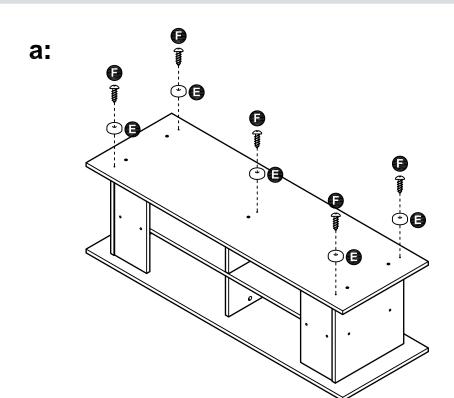

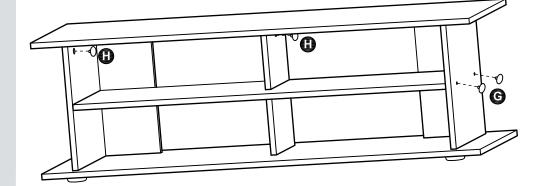

Assembly is complete.

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800