
 
You should have these items

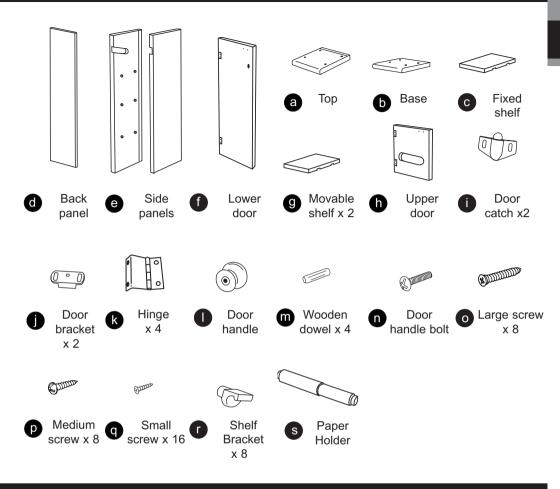


You will also need



Tidy cupboard

Assembly instructions - Please read carefully

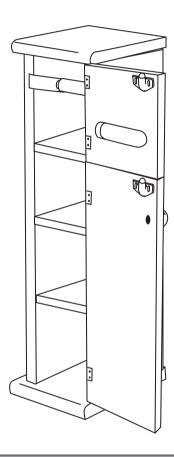


IMPORTANT

- Read these instruction carefully and familiarise yourself with the procedure before assembling your Tidy Cupboard.
- **2.** Please check that you have all the parts required these are listed on the back of this guide.
- **3.** You will need a small crosshead screw driver to assemble this product.
- **4.** To avoid damage, it is recommended that while you assemble your Tidy Cupboard it is placed on a soft, level surface.

Assembly instructions

Stage 1 - Assembling the body


- Attach the door bracket to the underside of the fixed shelf using the medium screws. See fig 1.
- Insert the doweling rods into the holes in the sides of the fixed shelf. See fig 1.
- Use the doweling rods to fit the fixed shelf to the side panels. The shelf should attach to the upper set of holes. This may be a tight fit. See fig 2.
- 4. Lay the cupboard on it's back and use four of the large screws to attach the base. See fig 3.
- Slide the rear panel into the channels at the rear of the cupboard. See fig 4.
- Attach a door bracket to the underside of the top using two medium screws. See fig 5.
- 7. Use the remaining four large screws to secure the top of the cupboard. See fig 6.

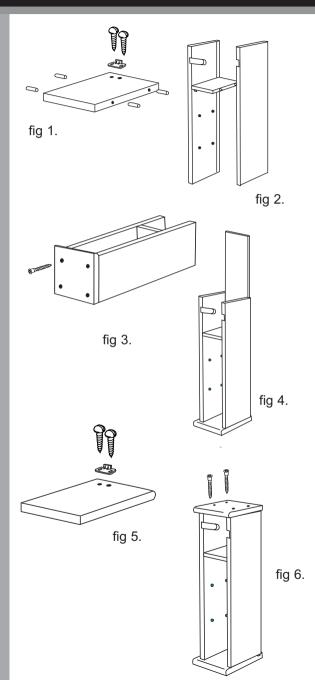

Assembly instructions

Stage 2 - Attaching the doors

- 8. Attach the fixed section of two hinges to the upper door using the small screws. Attach a door catch to the top, using two medium screws. See fig 7.
- Do the same for the lower door.
 Remember to also attach the door handle using the door handle bolt.
 See fig 8.
- Attach the doors to the main body of the cupboard using two small screws for each hinge. See fig 9.
- Insert the shelf brackets in the holes in the side panels.
 See fig 10.
- 12. Place the shelves on the shelf brackets.
- 14. Insert the paper holder.
- 13. To finish the assembly of your tidy cupboard, insert the screw covers over the screw holes on the outside of the tidy cupboard, top and base. See fig 11.

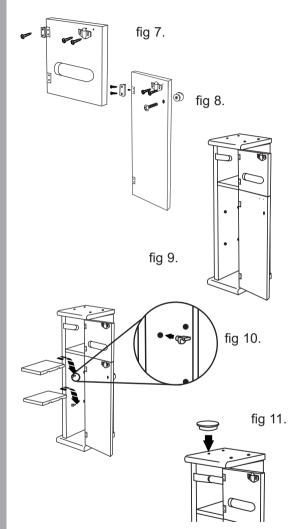

Safety Instructions

- 1. This Tidy Cupboard should be assembled by an adult.
- 2. Keep all small parts out of the reach of children.