
# Tallboy

Assembly Instructions- please keep for future reference

833/4448

# hygena

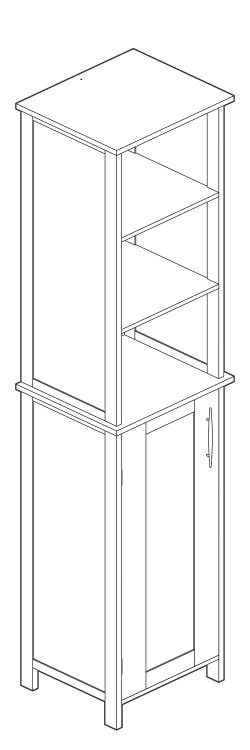

#### **Dimensions**

Width - 35cm

Depth - 30cm

Height - 169.5cm

### Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 0800



# Safety and Care Advice

#### Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 1 and 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- · Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.


 Dispose of all packaging carefully and responsibly.

#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

# Components - Panels

### Please check you have all the panels listed below

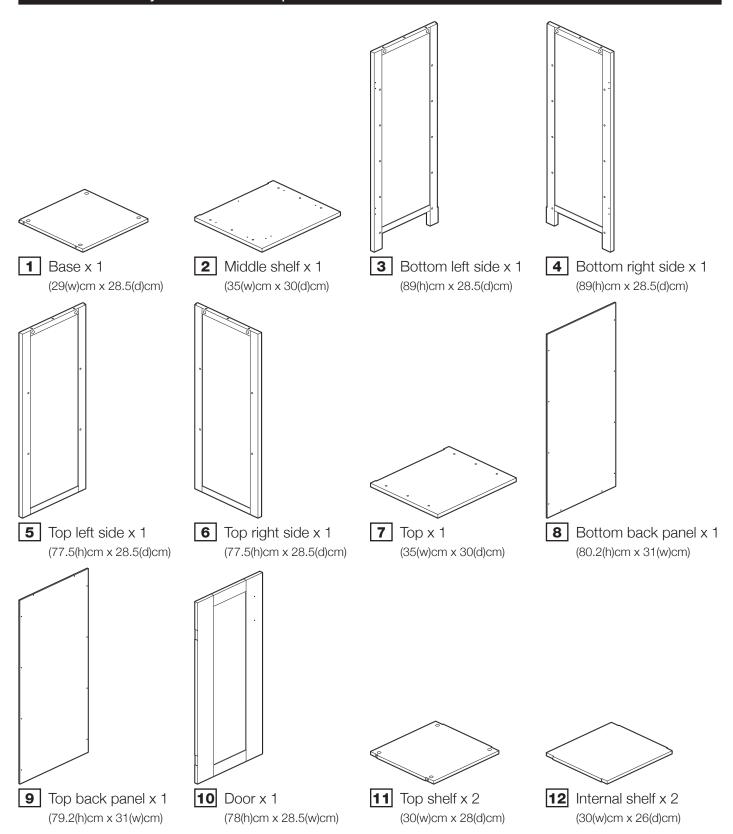


# Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800** 

### Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

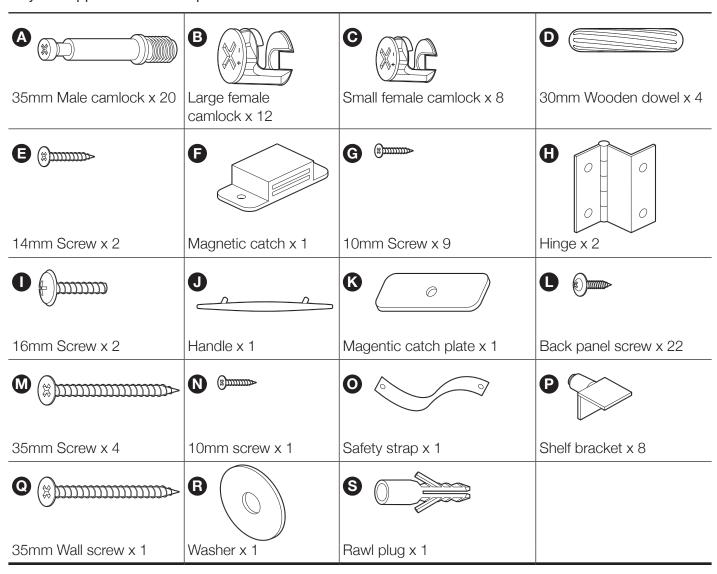

#### Tools required





Drill (for wall drilling only)


#### Ruler – Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

# **Using Camlocks**


### Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

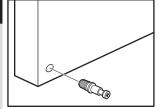

### Step 3


Push the male camlock into the entry hole.

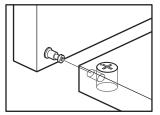

### Step 2

Insert the female camlock as shown in the instructions.

**Note:** ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

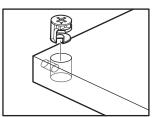


#### Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

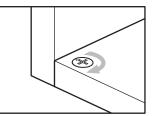

# **Assembly Instructions**

### Step 1

Fix 4 x large female camlock **3** into base **1** as shown.

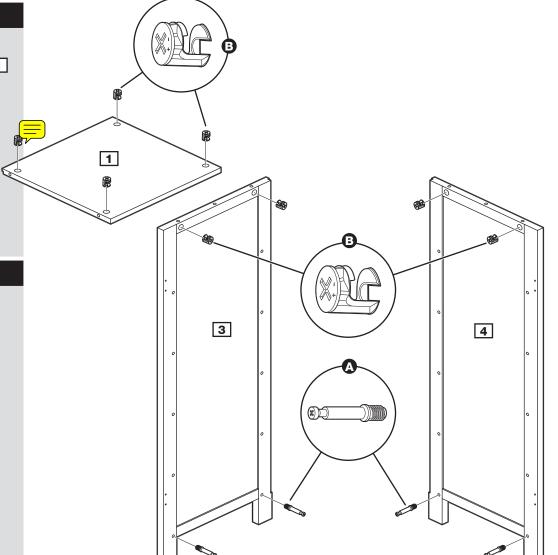

### Step 2

Insert 2 x large female camlock 3 into bottom left side 3 and right side 4 as shown.

Fix 2 x 35mm male camlock (1) into bottom left side (3) and right side (4) as shown.

### Step 3

Fix 4 x small female camlock **©** into underside of 2 x top shelf **11** as shown.

### Step 4

Fix 4 x 35mm male camlock **(A)** and 2 x 30mm wooden dowel **(D)** into underside of top **(7)** as shown.

### Step 5


Fix 4 x 35mm male camlock **(A)** and 2 x 30mm wooden dowel **(D)** into underside of middle shelf **(2)** as shown.


Connect magnetic catch
to underside of top
using 2 x 14mm
screw as shown (a:).

### Step 6

Insert 2 x large female camlock **3** into top left side **5** and top right side **6** as shown.

Fix 4 x 35mm male male camlock (A) into top left side (5) and top right side (6) as shown.

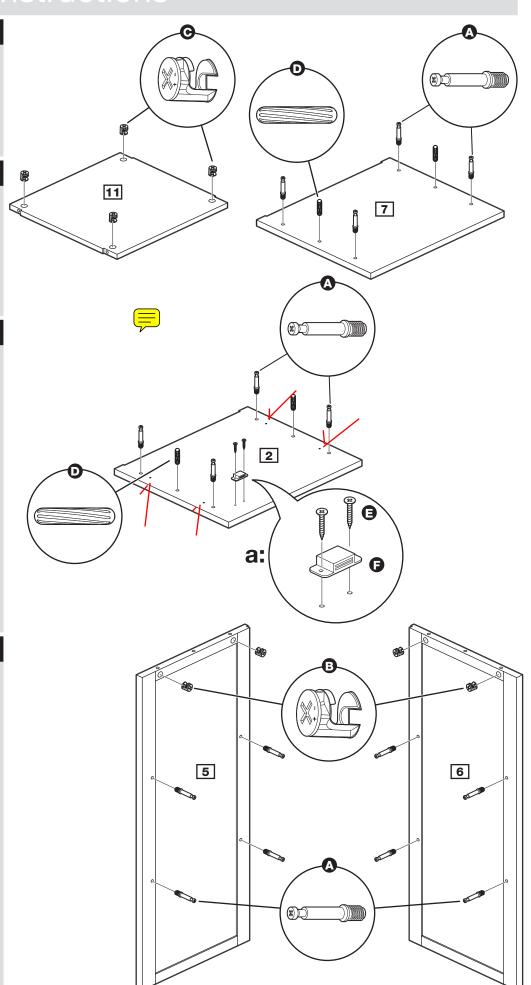

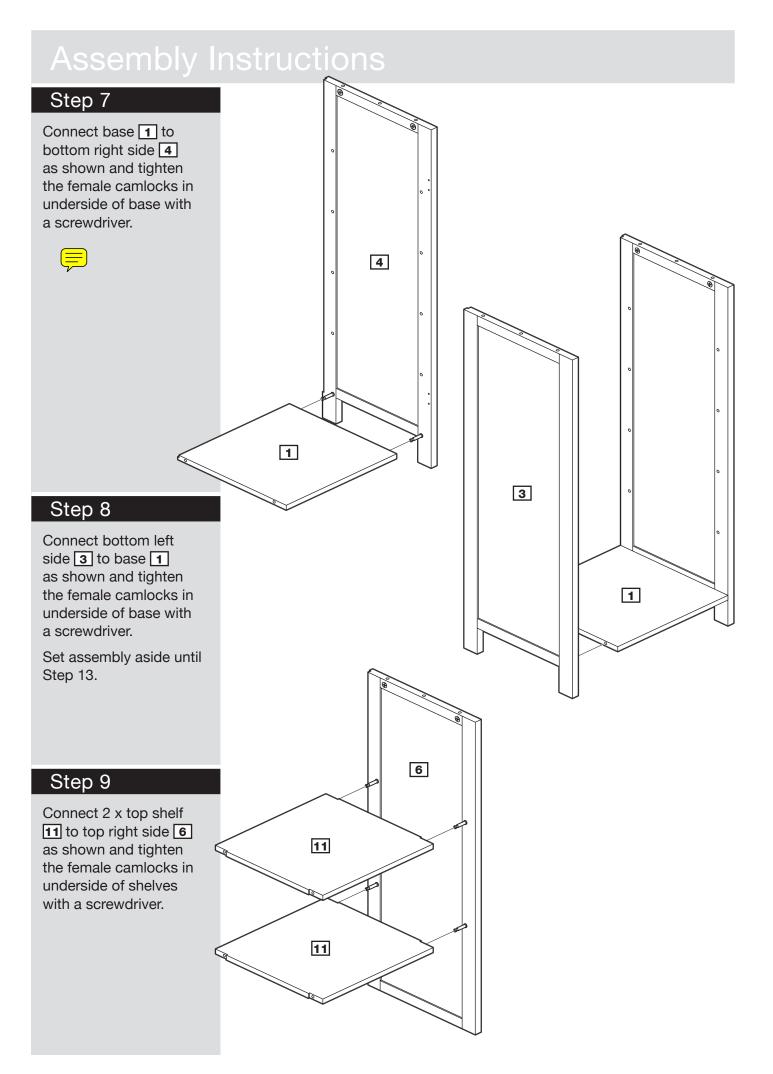


# Step 10

Connect top left side 5 to exposed ends of top shelves 11 as shown and tighten the female camlocks in underside of shelves with a screwdriver.

### Step 11

Fix assembly completed at Step 10 to middle shelf **2** as shown using 4 x 35mm screw **M**.


**Note:** the male camlocks and wooden dowels inserted into middle shelf **2** at Step 5 must be pointing downwards.

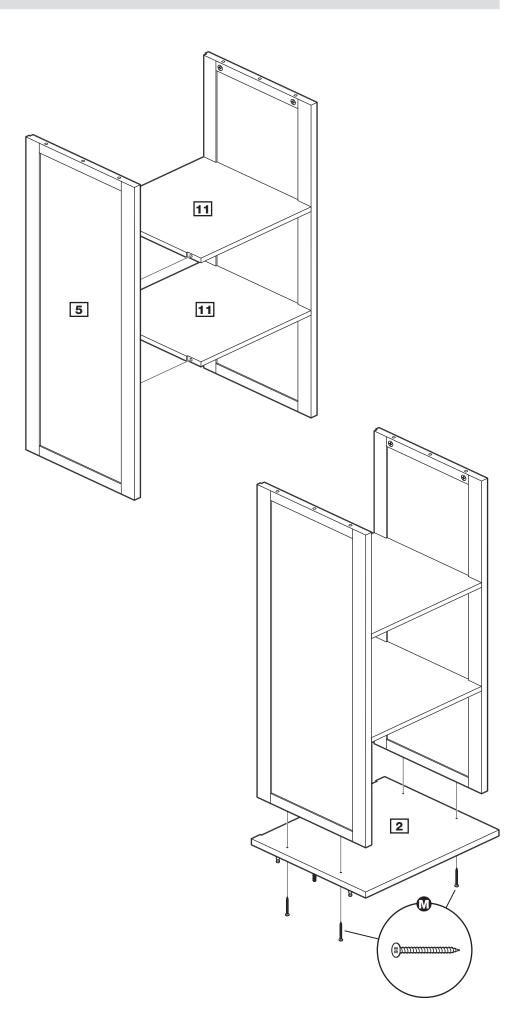

# Step 12

Connect top 7 to assembly completed at Step 11 as shown. Tighten the female camlocks inside the unit with a screwdriver.

**Note:** the groove in the edge of top 7 must be pointing to the rear

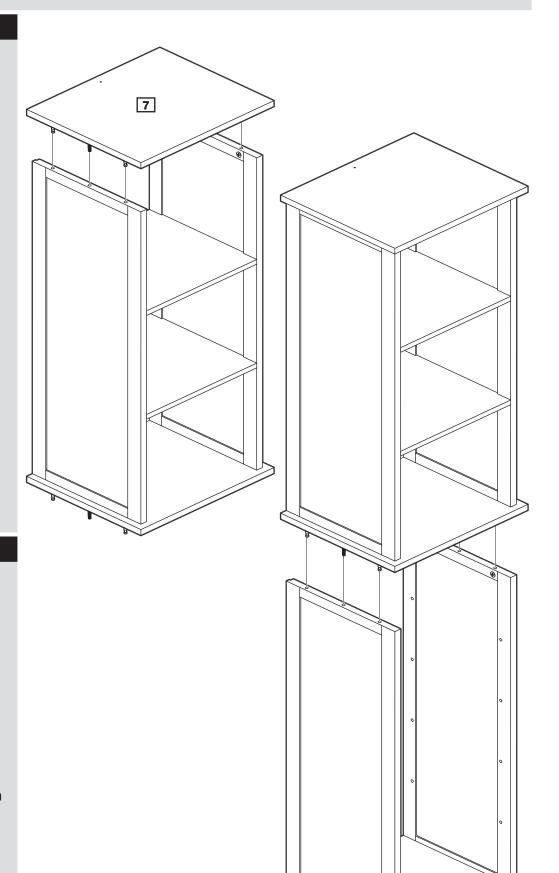

### Step 13

Connect assembly completed at Step 12 to assembly completed at Step 8 as shown.

Tighten the female camlocks inside bottom left and bottom right sides with a screwdriver.




Warning: the unit is heavy.
Ask someone to help you with this step.

# Step 14

- Fix bottom back panel

  and top back panel
- 9 to the rear of the unit using back panel screws
- as shown.

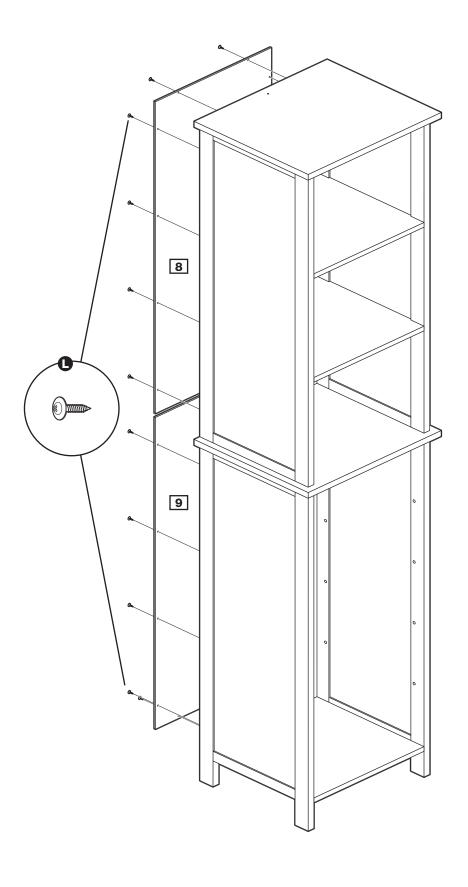


# Step 15

Connect door 10 to the unit using 2 x hinge 1 and 8 x 10mm screw 3 as shown (b:).

Connect handle ① to door using 2 x 16mm bolt ① as shown (C:).

Connect catch plate to door using 1 x 10mm screw **G**.

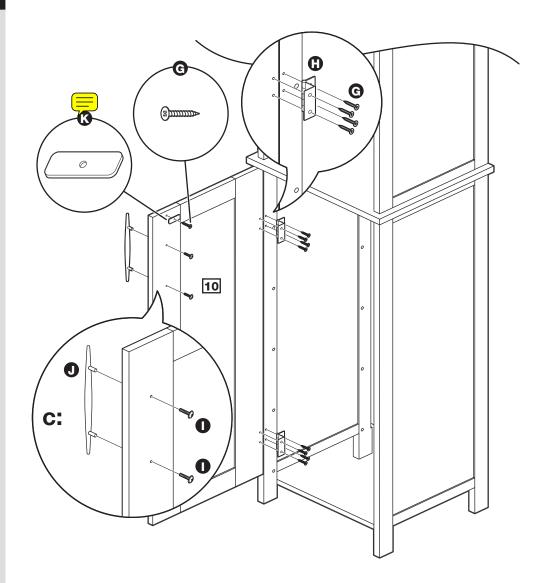


# Step 16

Insert 8 x shelf bracket into holes inside the unit at the desired heights ensuring that each set of shelf brackets are level with each other.

Set 2 x internal shelf **12** onto shelf brackets as shown.

0

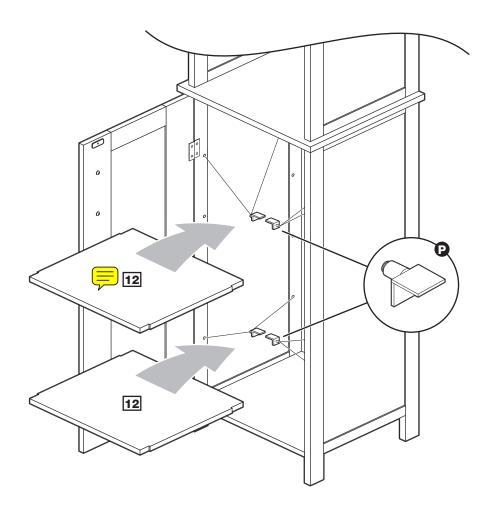

### Step 17

To prevent accidental toppling it is strongly recommended to fix the unit to a wall.

Connect safety strap

to the top of the unit using 1 x 10mm screw

.

Fix the other end of the safety strap to a wall using 1 x rawl plug **S**, 1 x washer **1** and 1 x 35mm wall screw **2**.

**Note:** see the back cover for more information on wall mounting and the suitable use of the supplied rawl plugs.





Warning: Before drilling, check wall for hidden pipes and cables.




Warning: the unit is heavy.
Ask someone to help you with this step.


Assembly complete.

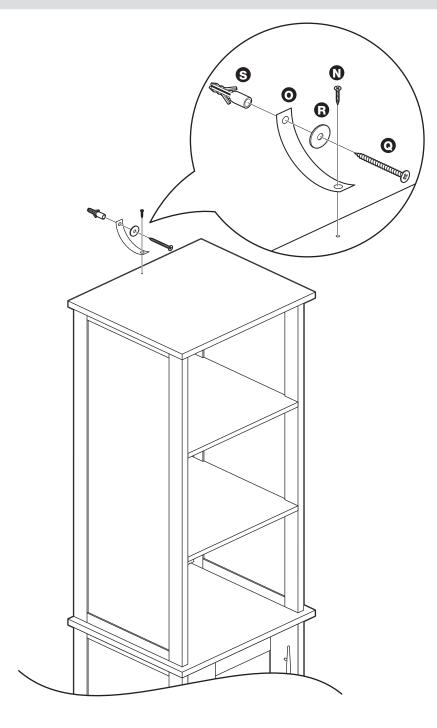

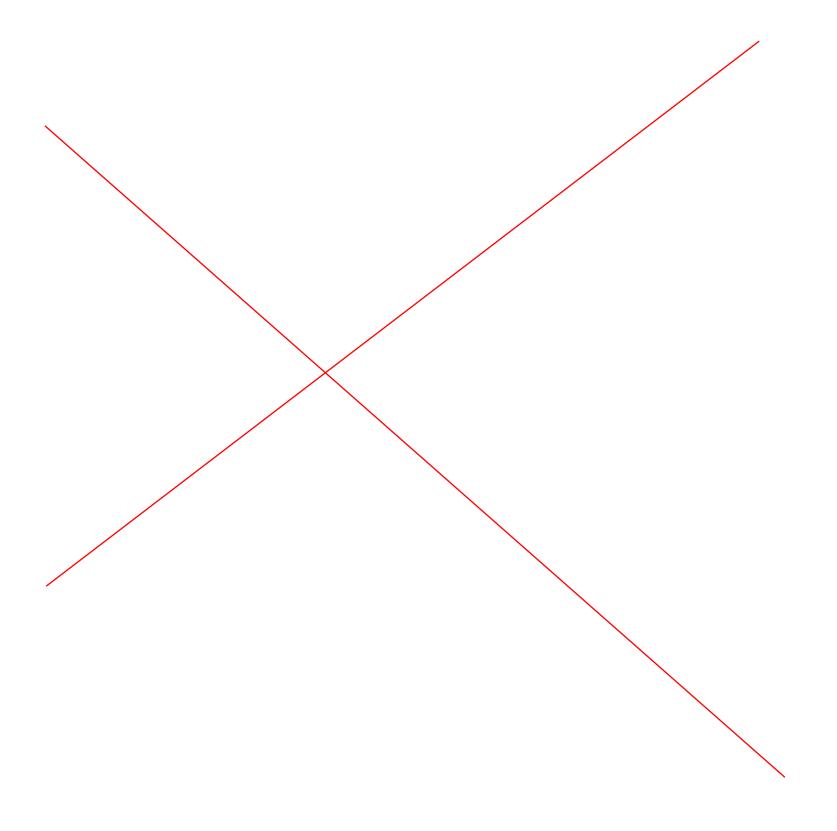

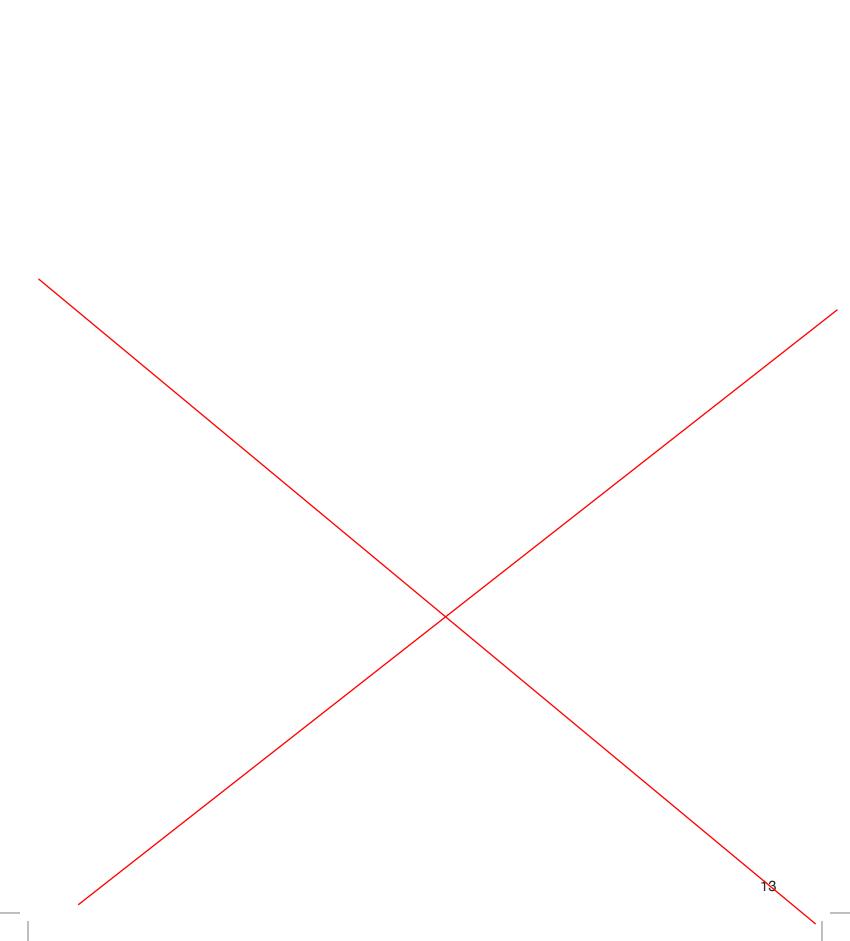

# A Guide to Wall Mounting & Fixings

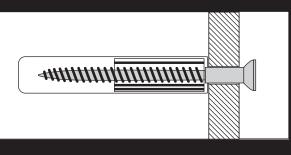

#### **IMPORTANT:**

When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

#### **HINTS:**


- 1) General Rule Always use a larger screw and wall plug if you are not sure.
- 2) Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3) Ensure you drill the hole horizontally, do not force the drill or enlarge the holes.
- 4) Take extra care when drilling high walls, ceilings and ceramic tiles.

  Ensure the plus is fitting below the ceramic tile to avoid splitting or cracking.
- 5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

#### **Types of Wall**


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

#### No.1 "Standard" Wall Plug General Wall Materials

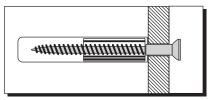

These come in various sizes and are made from plastic or sometimes wood fiber.


#### No.2 "General Purpose" Wall Plug Aerated / Breeze Block

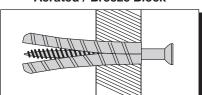

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.


For light loads, a General Purpose Plug can be used.

#### No.3 "Shield Anchor" Wall Plug Heavy loads

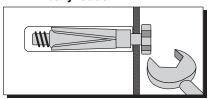


For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.

#### No.4 "Cavity Fixing" Wall Plug

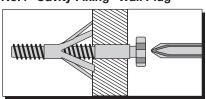


For use with plaster board partitions or hollow wooden doors.

### No. 5 "Cavity Fixing - Heavy Duty" Wall Plug

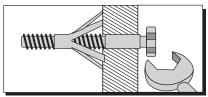

For use when fitting or supporting heavy loads such aas shelving wall cabinets, coat racks.

#### No.6 "Hammer Fixing" Wall Plug

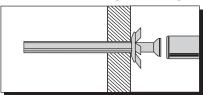

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

#### **CARE AND MAINTENANCE**



#### !\ SAFETY

Always check the fitting and location to ensure your safety in and around the home.



#### ! FITTING

From time to time check the fitting to ensure the wall plugs or screws do not become loose.

If you need help or have damaged or missing parts, call the **Customer Helpline:** 0845 640 0800 Home Retail Group, 489-499 Avebury Boulevard, Saxon Gate West, Central Milton Keynes, Bucks, MK9 2NW